




Easy Rack

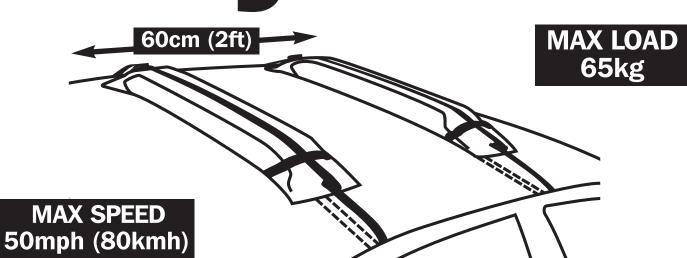

Fitting Instructions:

- 1. Open all doors on the vehicle. Place Easy Racks on to the roof of the vehicle at least 60cm (2ft) apart and parallel to each other.
- 3. Pass the straps through the vehicle.
- 4. Run the straps (A) through the buckles (B) on the opposite side of the vehicle and pull VERY tight to secure the Easy Racks to the vehicle.
- 5. Pass the straps under the webbing (C). Ensure the straps run under the webbing (C) as this will prevent the load moving when secured.
- 6. Place load on the vehicle, Ensuring that the load is distributed evenly (✓), pass the straps over the load and place under the webbing (C) on the opposite side of the vehicle. Now run the straps through the buckles (B) and pull VERY tight to secure the load.
- 7. Straps should be secured inside the vehicle ensuring that they do not interfere with driver or any passengers.

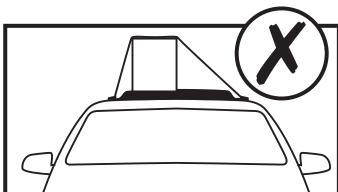

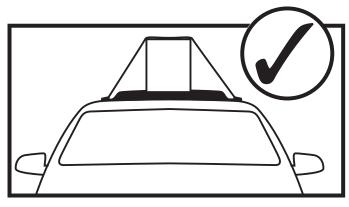

B

PLEASE NOTE: Loads that extend past the Easy Rack need to be secured with the extra straps provided.

IT IS RECOMMEND TO LIMIT USE OF SWRB6 IN WET WEATHER, HOWEVER SPRAYING THE STRAPS WITH A WATERPROOF SPRAY, CAN REDUCE THE RISK OF WATER INGRESS INTO VEHICLE VIA THE STRAPS.

WARNING: Please ensure the maximum load does not exceed 65kg (including the Easy Rack) and that all loads are tightly secured & distributed evenly. It is further recommended NOT to exceed 50mph (80kmh) MAXIMUM speed. Streetwize Accessories accept no responsibility for any damage to vehicles, loss of load or personal injury if the "Easy Rack" has not been fitted in accordance with the manufacturers instructions and vehicle weight recommendations.

Streetwize Accessories:

Unit 1, Royce Trading Estate, Ashburton Road West, Trafford Park, Manchester M17 1RY

Sales enquiries: sales@streetwizeaccessories.com

Technical enquiries: support@streetwizeaccessories.com

www.streetwizeaccessories.com