




Installation Manual



FRONT

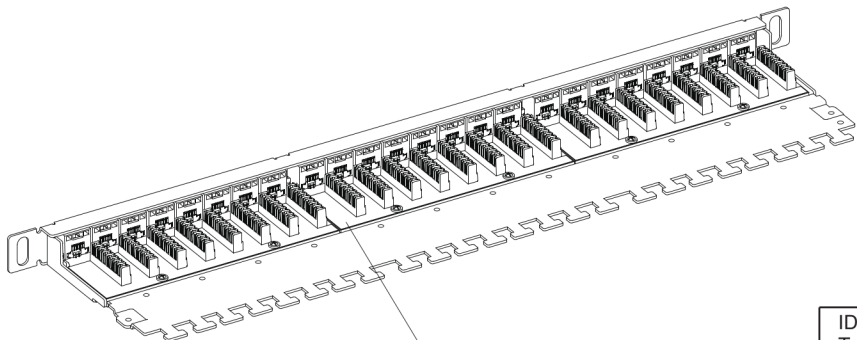

Wiring Label



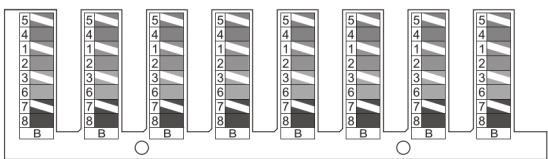


IDC Terminals		T568B Pair/Wire Color
Pin 5 Pin 4	1	White/Blue Blue
Pin 1 Pin 2	2	White/Orange Orange
Pin 3 Pin 6	3	White/Green Green
Pin 7 Pin 8	4	White/Brown Brown

- 1. Step 1:**
Strip off 80mm cable jacket. Following TIA 568B wiring label, allocate the cores to the appropriate IDC. **Keep cores twisted as much as possible.**

- 2. Step 2:**
Punch down each core into IDC slot until termination is completed.

- 3. Step 3:**
Use the supplied cable ties to secure the cable and finish installation.

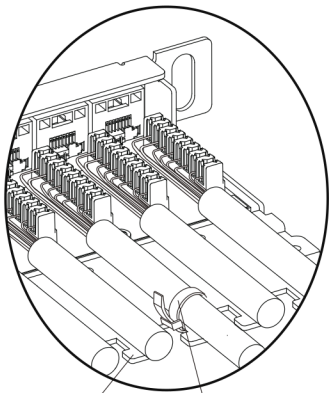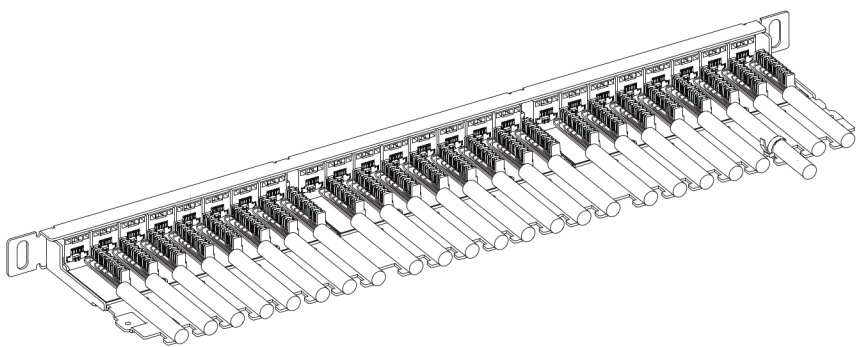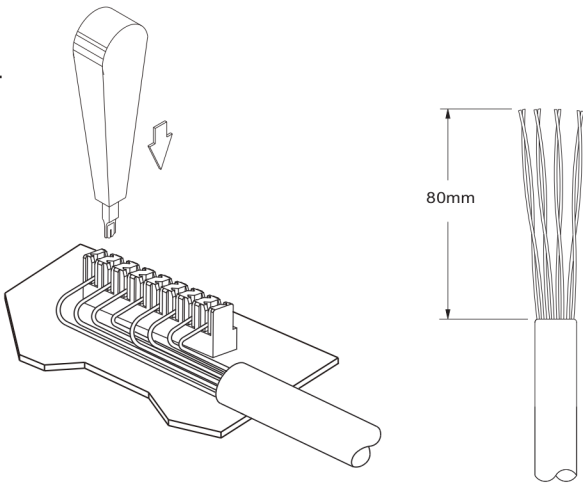

Cable Fixture Hole Cable Tie



SF24mc0.5

