















Installation

Install in parallel, within the power distribution board or directly (via fuses) on to the supply feeding equipment.

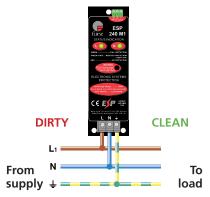

Parallel connection of single phase protectors ESP 240 M1, ESP 120 M1 or ESP 277 M1 (fuses not shown for clarity)

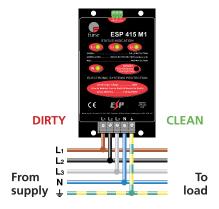

Parallel connection of ESP 415 M1, ESP 208 M1 or ESP 480 M1 to three phase star (4 wire and earth) supplies (fuses not shown for clarity)

At distribution boards, the protector can be installed either on the load side of the incoming isolator, or on the closest outgoing way to the incoming supply. Connect, with very short connecting leads, to phase(s), neutral and earth.

For TT installations, contact Furse.

Accessories

Weatherproof enclosures

WBX 3

Use with single phase protectors

WBX 4

Use with three phase protectors

Combined Type 1, 2 and 3 tested protector (to BS EN 61643) for use on mains power distribution systems primarily to protect connected electronic equipment from transient overvoltages on the mains supply, e.g. computer, communications or control equipment. For use at boundaries up to LPZ $\theta_{\rm B}$ to protect against flashover (typically the main distribution board location, with multiple metallic services entering) through to LPZ 3 to protect sensitive electronic equipment.

Features and benefits


- Very low let-through voltage (enhanced protection to BS EN 62305) between all sets of conductors (phase to neutral, phase to earth, neutral to earth - Full Mode protection)
- ✓ Full mode design capable of handling partial lightning currents as well as allowing continual operation of protected equipment
- Repeated protection in lightning intense environments
- Innovative multiple thermal disconnect technology for safe disconnection from faulty or abnormal supplies (without compromising protective performance)
- Three way visual indication of protection status and advanced pre-failure warning so you need never be unprotected
- Remote indication facility allows pre-failure warning to be linked to a building management system, buzzer or light
- Changeover active volt-free contact enables the protector to be used to warn of phase loss (i.e. power failure, blown fuses etc)
- Flashing warning of potentially fatal neutral to earth supply faults (due to incorrect earthing, wiring errors or unbalanced conditions)
- Robust steel housing
- ✓ Base provides ultra-low inductance earth bond to metal panels
- Compact size for installation in the power distribution board
- ESP 120 M1 and ESP 240 M1 have Network Rail Approval PA05/02700 and PA05/01832 respectively. NRS PADS reference 086/000556 (ESP 120 M1) and 086/047149 (ESP 240 M1)



ESP 415 M1 installed within a control panel on the mains input to protect the panel's control systems. Note the remote indication connection (top of protector)

	Technical specification					
Electrical specification	ESP 120 M1	ESP 208 M1	ESP 240 M1	ESP 415 M1	ESP 277 M1	ESP 480 M1
Nominal voltage - Phase-Neutral <i>U</i> o (RMS)	120 V	120 V	240 V	240 V	277 V	277 V
Maximum voltage - Phase-Neutral <i>U</i> c (RMS)	150 V	150 V	280 V	280 V	350 V	350 V
Temporary Overvoltage TOV <i>U</i> T ¹	175 V	175 V	350 V	350 V	402 V	402 V
Short circuit withstand capability	25 kA, 50 Hz					
Working voltage (RMS)	90-150 V	156-260 V	200-280 V	346-484 V	232-350 V	402-600 V
Frequency range	47-63 Hz					
Max. back-up fuse (see installation instructions)	125 A					
Leakage current (to earth)	< 250 μA					
Indicator circuit current	< 10 mA					
Volt free contact ² - current rating - nominal voltage (RMS)	Screw terminal 1 A 250 V					
Transient specification	ESP 120 M1	ESP 208 M1	ESP 240 M1	ESP 415 M1	ESP 277 M1	ESP 480 M1
Type 1 (BS EN/EN), Class I (IEC)						
Nominal discharge current 8/20 µs (per mode) In	20 kA					
Let-through voltage <i>U</i> p at <i>I</i> n³	600 V	600 V	900 V	900 V	1 kV	1 kV
Impulse discharge current 10/350 µs limp (per mode) ⁴	4 kA					
Let-through voltage <i>U</i> p at <i>l</i> imp³	500 V	500 V	750 V	750 V	850 V	850 V
Impulse discharge current (per phase) <i>l</i> imp⁵	6.25 kA					
Type 2 (BS EN/EN), Class II (IEC)						
Nominal discharge current 8/20 µs (per mode) /n			20	kA		
Let-through voltage <i>U</i> p at <i>I</i> n³	600 V	600 V	900 V	900 V	1 kV	1 kV
Maximum discharge current /max (per mode) ⁴	40 kA					
Maximum discharge current Imax (per phase)	80 kA					
Type 3 (BS EN/EN), Class III (IEC)						
Let-through voltage at <i>U</i> oc of 6 kV 1.2/50 μs and <i>I</i> sc of 3 kA 8/20 μs (per mode) ⁶	390 V	390 V	600 V	600 V	680 V	680 V
Mechanical specification	ESP 120 M1	ESP 208 M1	ESP 240 M1	ESP 415 M1	ESP 277 M1	ESP 480 M
Temperature range	-40 to +80 °C					
Connection type	Screw terminal					
Conductor size (stranded)	16 mm²					
Earth connection	Screw terminal					
Volt free contact	Connect via screw terminal with conductor up to 2.5 mm ² (stranded)					
Degree of protection (IEC 60529)	IP20					
Case material	Steel					
Weight - unit - packaged	0.6 kg 0.7 kg	1.0 kg 1.1 kg	0.6 kg 0.7 kg	1.0 kg 1.1 kg	0.6 kg 0.7 kg	1.0 kg 1.1 kg
Dimensions				-	-	

If you desire a protector with an extra high maximum surge current use the ESP M2 or ESP M4 series. If your supply is fused at 16 amps, or less, the in-line protectors (ESP 240 or 120-5A (or -16A) and their ready-boxed derivatives) may be more suitable. If you need to mount the display panel separately from the main protector unit, use the ESP M1R series.

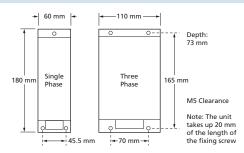



¹ Temporary Overvoltage rating is for a maximum duration of 5 seconds tested to BS EN/EN/IEC 61643.
² Minimum permissable load is 5 V DC, 10 mA to ensure reliable operation.
³ The maximum transient voltage let-through of the protector throughout the test (±5%), phase to neutral, phase

to earth and neutral to earth.

4The electrical system, external to the unit, may constrain the actual current rating achieved in a particular installation.

Rating is considered as the current capability of the protector for equipotential bonding near the service entrance. Combination wave test within BS EN/IEC 61643, IEEE C62.41-2002 Location Cats C1 & B3, SS 555:2010, AS/NZS 1768-2007, UL 1449 mains wire-in.