


# RGS00TS65HR

650V 50A Field Stop Trench IGBT

V <sub>CES</sub>	650V
I <sub>C (100°C)</sub>	50A
V <sub>CE(sat) (Typ.)</sub>	1.65V
P <sub>D</sub>	326W

#### Outline TO-247N

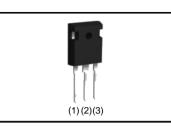

#### Inner Circuit



- 1) Low Collector Emitter Saturation Voltage
- 2) Short Circuit Withstand Time 8µs
- 3) Qualified to AEC-Q101
- 4) Pb free Lead Plating ; RoHS Compliant

#### Application

Heater for Automotive

	(2)
(1) O-	
	(3)



#### Packaging Specifications

(3)

	Packaging	Tube
Туре	Reel Size (mm)	-
	Tape Width (mm)	-
	Basic Ordering Unit (pcs)	450
	Packing Code	C11
	Marking	RGS00TS65

## •Absolute Maximum Ratings (at T<sub>C</sub> = 25°C unless otherwise specified)

Parameter		Symbol	Value	Unit
Collector - Emitter Voltage		V <sub>CES</sub>	650	V
Gate - Emitter Voltage	V <sub>GES</sub>	±30	V	
Callester Current	$T_{\rm C} = 25^{\circ}{\rm C}$	Ι <sub>C</sub>	88	Α
Collector Current	$T_c = 100^{\circ}C$	۱ <sub>C</sub>	50	А
Pulsed Collector Current	I <sub>CP</sub> *1	150	Α	
$T_c = 25^{\circ}C$		P <sub>D</sub>	326	W
Power Dissipation	$T_{\rm C} = 100^{\circ}{\rm C}$	P <sub>D</sub>	163	W
Operating Junction Temperature		T <sub>j</sub>	-40 to +175	°C
Storage Temperature		T <sub>stg</sub>	-55 to +175	°C

\*1 Pulse width limited by T<sub>imax.</sub>

#### •Thermal Resistance

Parameter	Symbol	Values			Linit
Falameter	Symbol	Min.	Тур.	Max.	Unit
Thermal Resistance IGBT Junction - Case	$R_{\theta(j\text{-}c)}$	-	-	0.46	°C/W

#### ●IGBT Electrical Characteristics (at T<sub>i</sub> = 25°C unless otherwise specified)


Parameter	Symbol	Conditions	Values			Unit
r arameter	Symbol Conditions		Min.	Тур.	Max.	
Collector - Emitter Breakdown Voltage	BV <sub>CES</sub>	I <sub>C</sub> = 10μΑ, V <sub>GE</sub> = 0V	650	-	-	V
		$V_{CE} = 650V, V_{GE} = 0V,$				
Collector Cut - off Current	$I_{CES}$	T <sub>j</sub> = 25°C Tj = 175°C <sup>*2</sup>	-	-	10	μA
		Tj = 175°C <sup>*2</sup>	-	-	5	mA
Gate - Emitter Leakage Current	I <sub>GES</sub>	$V_{GE} = \pm 30V, V_{CE} = 0V$	-	-	±200	nA
Gate - Emitter Threshold Voltage	$V_{GE(th)}$	V <sub>CE</sub> = 5V, I <sub>C</sub> = 2.5mA	5.0	6.0	7.0	V
		I <sub>C</sub> = 50A, V <sub>GE</sub> = 15V,				
Collector - Emitter Saturation Voltage	V <sub>CE(sat)</sub>	T <sub>j</sub> = 25°C	-	1.65	2.10	V
		T <sub>j</sub> = 175°C	-	2.15	-	V


# •IGBT Electrical Characteristics (at $T_j = 25^{\circ}C$ unless otherwise specified)

Deremeter	Cumhal	O an allthan a	Values				
Parameter	Symbol	Conditions	Min.	Тур.	Max.	- Unit	
Input Capacitance	C <sub>ies</sub>	V <sub>CE</sub> = 30V,	-	1568	-	pF	
Output Capacitance	C <sub>oes</sub>	$V_{GE} = 0V,$	-	134	-		
Reverse transfer Capacitance	C <sub>res</sub>	f = 1MHz	-	23	-		
Total Gate Charge	Qg	V <sub>CE</sub> = 300V,	-	58	-		
Gate - Emitter Charge	$Q_{ge}$	I <sub>C</sub> = 50A,	-	15	-	nC	
Gate - Collector Charge	$Q_{gc}$	V <sub>GE</sub> = 15V	-	24	-		
Turn - on Delay Time	t <sub>d(on)</sub>		-	36	-		
Rise Time	t <sub>r</sub>	I <sub>C</sub> = 50A, V <sub>CC</sub> = 400V, V <sub>GE</sub> = 15V, R <sub>G</sub> = 10Ω,	-	21	-	ns	
Turn - off Delay Time	t <sub>d(off)</sub>	$V_{GE} = 15^{\circ}$ , $N_{G} = 1002$ , $T_{i} = 25^{\circ}$ C	-	115	-		
Fall Time	t <sub>f</sub>	Inductive Load	-	91	-		
Turn - on Switching Loss	$E_{on}$	*E <sub>on</sub> include diode reverse recovery	-	1.46	-	mJ	
Turn - off Switching Loss	E <sub>off</sub>	,	-	1.29	-		
Turn - on Delay Time	t <sub>d(on)</sub>		-	37	-		
Rise Time	t <sub>r</sub>	$I_{C} = 50A, V_{CC} = 400V,$ $V_{GE} = 15V, R_{G} = 10\Omega,$	-	33	-		
Turn - off Delay Time	t <sub>d(off)</sub>	$T_i = 175^{\circ}C$	-	145	-	ns	
Fall Time	t <sub>f</sub>	Inductive Load	-	147	-		
Turn - on Switching Loss	$E_{on}$	*E <sub>on</sub> include diode reverse recovery	-	1.97	-	~	
Turn - off Switching Loss	E <sub>off</sub>		-	1.85	-	mJ	
Reverse Bias Safe Operating Area	RBSOA	$I_{C} = 150A, V_{CC} = 520V,$ $V_{P} = 650V, V_{GE} = 15V,$	FULL SQUARE		-		
		R <sub>G</sub> = 50Ω, T <sub>j</sub> = 175°C					
Short Circuit Withstand Time	t <sub>sc</sub>	$V_{CC} \le 360V,$ $V_{GE} = 15V, T_j = 25^{\circ}C$	8	-	-	μs	
Short Circuit Withstand Time	t <sub>sc</sub> *2	V <sub>CC</sub> ≤ 360V, V <sub>GE</sub> = 15V, T <sub>j</sub> = 150°C	6	-	-	μs	

\*2 Design assurance without measurement


#### Electrical Characteristic Curves

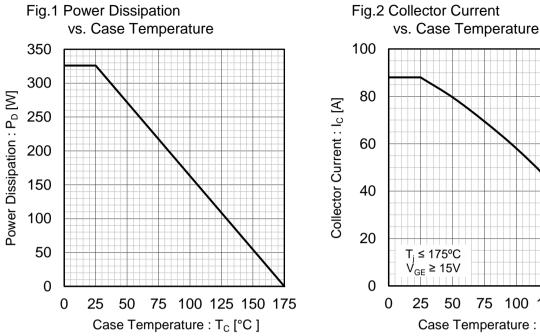


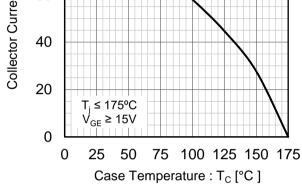

## Fig.3 Forward Bias Safe Operating Area



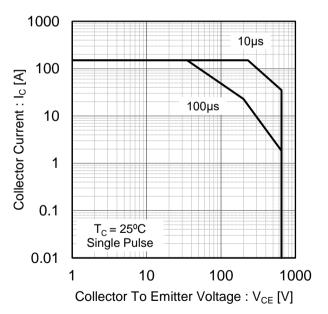

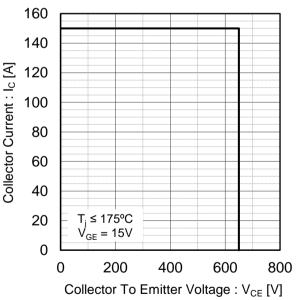

 $V_{GE} = 10V$ 

 $V_{GE} = 8V$ 

4

 $I_{\rm C} = 100 {\rm A}$ 

I<sub>C</sub> = 50A

 $I_{\rm C} = 25 {\rm A}$ 

5

3

#### Electrical Characteristic Curves


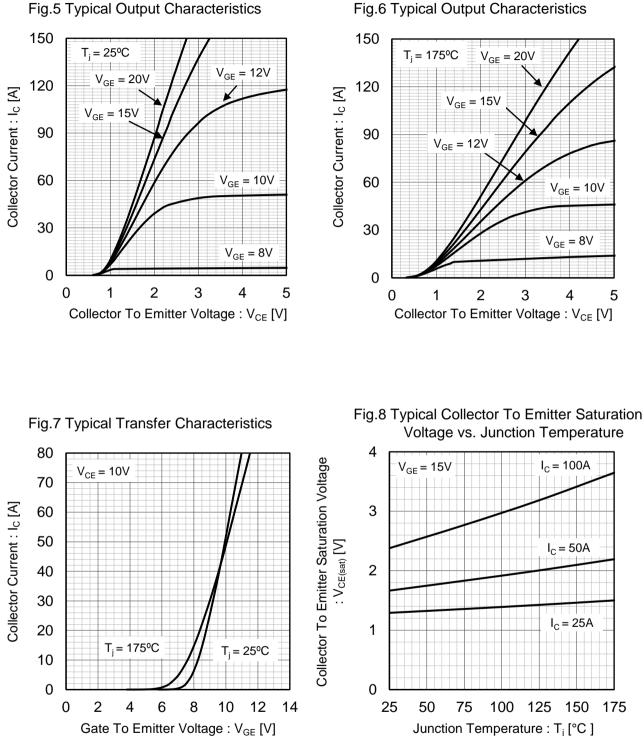



Fig.6 Typical Output Characteristics

175


#### •Electrical Characteristic Curves

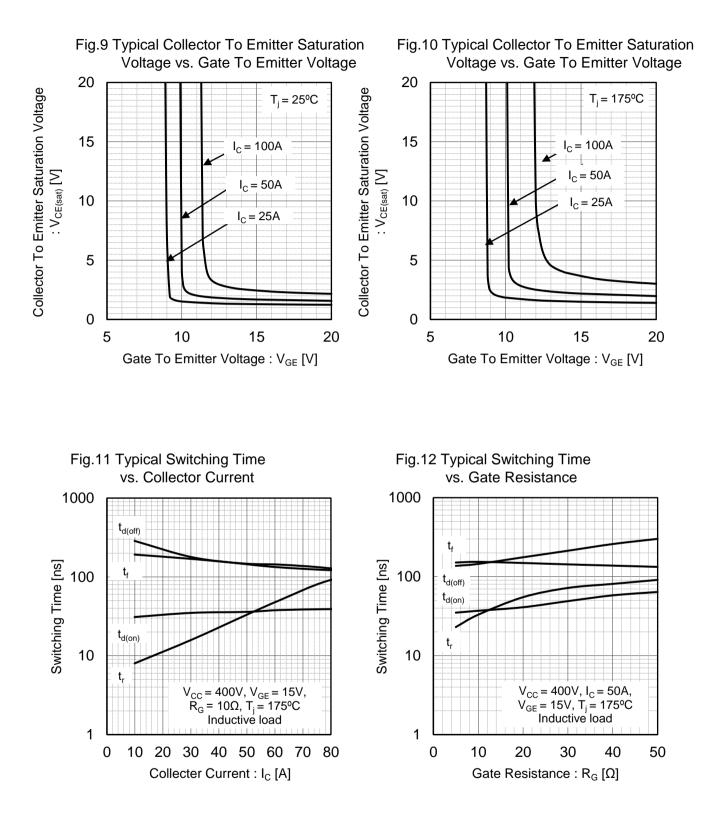


#### •Electrical Characteristic Curves

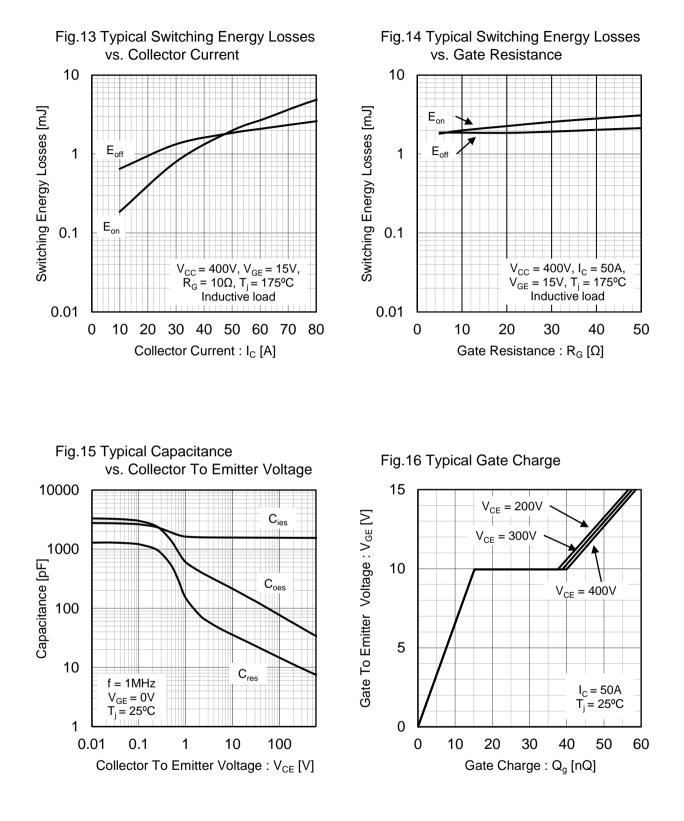


#### •Electrical Characteristic Curves

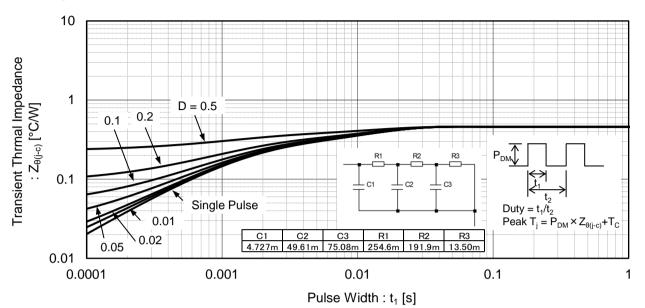

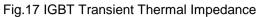



#### Inductive Load Switching Circuit and Waveform

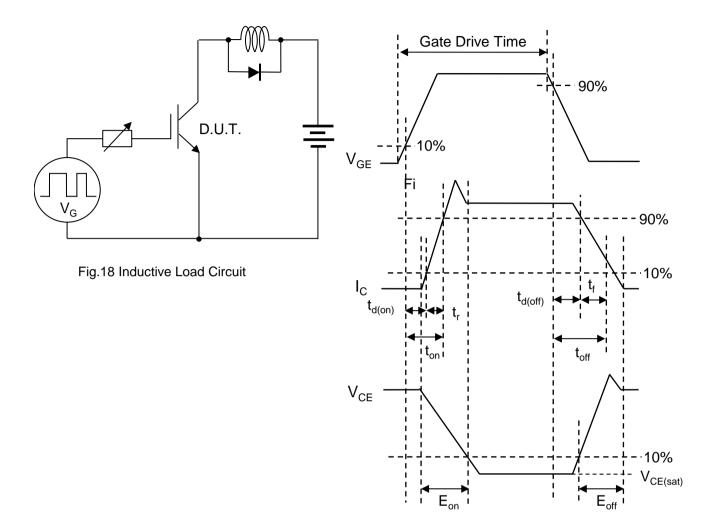





<ul> <li>tions :</li> <li>3) Although ROHM is continuously working to improve product reliability and quality, semic ductors can break down and malfunction due to various factors. Therefore, in order to prevent personal injury of fire arising from failure, please take sa measures such as complying with the derating characteristics, implementing redundant fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have responsibility for any damages arising out of the use of our Poducts beyond the rating specifier ROHM.</li> <li>4) Examples of application circuits, circuit constants and any other information contained herein provided only to illustrate the standard usage and operations of the Products. The periph conditions must be taken into account when designing circuits for mass production.</li> <li>5) The technical information specified herein is intended only to show the typical functions of examples of application circuits for the Products. ROHM does not grant you, explicitly or implic any license to use or exercise intellectual property or other rights held by ROHM or any o parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use such technical information.</li> <li>6) The Products specified in this document are not designed to be radiation tolerant.</li> <li>7) For use of our Products in applications requiring a high degree of reliability (as exempli below), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, nuclear power control systems, and submarine repeaters.</li> <li>8) Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>9) ROHM has used reasonable care to ensur the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and R</li></ul>		Notes
<ul> <li>tions :</li> <li>Although ROHM is continuously working to improve product reliability and quality, semic ductors can break down and malfunction due to various factors. Therefore, in order to prevent personal injury or fire arising from failure, please take sa measures such as complying with the derating characteristics, implementing redundant fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have responsibility for any damages arising out of the use of our Poducts beyond the rating specified ROHM.</li> <li>Examples of application circuits, circuit constants and any other information contained herein provided only to illustrate the standard usage and operations of the Products. The periph conditions must be taken into account when designing circuits for mass production.</li> <li>The technical information specified herein is intended only to show the typical functions of examples of application circuits for the Products. ROHM does not grant you, explicitly or implice any license to use or exercise intellectual property or other rights held by ROHM or any o parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use such technical information.</li> <li>The Products specified in this document are not designed to be radiation tolerant.</li> <li>For use of our Products in applications requiring a high degree of reliability (as exempli below), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, medical systems, and power transmission systems.</li> <li>Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>ROHM has used reasonable care to ensur the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibil</li></ul>	1)	The information contained herein is subject to change without notice.
<ul> <li>ductors can break down and malfunction due to various factors. Therefore, in order to prevent personal injury or fire arising from failure, please take sa measures such as complying with the derating characteristics, implementing redundant fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have responsibility for any damages arising out of the use of our Poducts beyond the rating specifier ROHM.</li> <li>4) Examples of application circuits, circuit constants and any other information contained herein provided only to illustrate the standard usage and operations of the Products. The periph conditions must be taken into account when designing circuits for mass production.</li> <li>5) The technical information specified herein is intended only to show the typical functions of examples of application circuits for the Products. ROHM does not grant you, explicitly or implic any license to use or exercise intellectual property or other rights held by ROHM or any o parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the us such technical information.</li> <li>6) The Products specified in this document are not designed to be radiation tolerant.</li> <li>7) For use of our Products in applications requiring a high degree of reliability (as exemplibelow), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, nuclear power control systems, and submarine repeaters.</li> <li>8) Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>9) ROHM shall have no responsibility for any damages or injury arising from non-compliance the recommended usage conditions and specifications contained herein.</li> <li>10) ROHM has used reasonable care to ensur the accuracy of the information contained in document. However, ROHM</li></ul>	2)	Before you use our Products, please contact our sales representative and verify the latest specifications :
<ul> <li>provided only to illustrate the standard usage and operations of the Products. The periph conditions must be taken into account when designing circuits for mass production.</li> <li>5) The technical information specified herein is intended only to show the typical functions of examples of application circuits for the Products. ROHM does not grant you, explicitly or implic any license to use or exercise intellectual property or other rights held by ROHM or any o parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use such technical information.</li> <li>6) The Products specified in this document are not designed to be radiation tolerant.</li> <li>7) For use of our Products in applications requiring a high degree of reliability (as exemplic below), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, medical systems, and power transmission systems.</li> <li>8) Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>9) ROHM shall have no responsibility for any damages or injury arising from non-compliance of the recommended usage conditions and specifications contained herein.</li> <li>10) ROHM has used reasonable care to ensure the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>11) Please use the Products in accordance with any applicable environmental laws and regulatid such as the RoHS Directive. For more details, including RoHS compatibility, please contar ROHM sales office. ROHM shall have no responsibility for any damages arising tor any damages or losses resul non-compliance with any applicable laws or regulations.</li> <li>12) W</li></ul>	3)	Therefore, in order to prevent personal injury or fire arising from failure, please take safety measures such as complying with the derating characteristics, implementing redundant and fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have no responsibility for any damages arising out of the use of our Poducts beyond the rating specified by
<ul> <li>examples of application circuits for the Products. ROHM does not grant you, explicitly or implic any license to use or exercise intellectual property or other rights held by ROHM or any or parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use such technical information.</li> <li>6) The Products specified in this document are not designed to be radiation tolerant.</li> <li>7) For use of our Products in applications requiring a high degree of reliability (as exemplible), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, medical systems, and power transmission systems.</li> <li>8) Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>9) ROHM shall have no responsibility for any damages or injury arising from non-compliance of the recommended usage conditions and specifications contained herein.</li> <li>10) ROHM has used reasonable care to ensur the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>11) Please use the Products in accordance with any applicable environmental laws and regulated such as the ROHS Directive. For more details, including ROHS compatibility, please contate ROHM sales office. ROHM shall have no responsibility for any damages or losses resul non-compliance with any applicable laws or regulations.</li> <li>12) When providing our Products and technologies contained in this document to other country</li> </ul>	4)	Examples of application circuits, circuit constants and any other information contained herein are provided only to illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.
<ol> <li>For use of our Products in applications requiring a high degree of reliability (as exempli below), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, medical systems, and power transmission systems.</li> <li>Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>ROHM shall have no responsibility for any damages or injury arising from non-compliance of the recommended usage conditions and specifications contained herein.</li> <li>ROHM has used reasonable care to ensure the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>Please use the Products in accordance with any applicable environmental laws and regulation such as the RoHS Directive. For more details, including RoHS compatibility, please contain ROHM sales office. ROHM shall have no responsibility for any damages or losses result non-compliance with any applicable laws or regulations.</li> <li>When providing our Products and technologies contained in this document to other country.</li> </ol>	5)	The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM or any other parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use of such technical information.
<ul> <li>below), please contact and consult with a ROHM representative : transportation equipment cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, sa equipment, medical systems, and power transmission systems.</li> <li>8) Do not use our Products in applications requiring extremely high reliability, such as aerosp equipment, nuclear power control systems, and submarine repeaters.</li> <li>9) ROHM shall have no responsibility for any damages or injury arising from non-compliance of the recommended usage conditions and specifications contained herein.</li> <li>10) ROHM has used reasonable care to ensur the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>11) Please use the Products in accordance with any applicable environmental laws and regulation such as the RoHS Directive. For more details, including RoHS compatibility, please contact ROHM sales office. ROHM shall have no responsibility for any damages or regulations.</li> <li>12) When providing our Products and technologies contained in this document to other countril and the submarker with any applicable laws or regulations.</li> </ul>	6)	The Products specified in this document are not designed to be radiation tolerant.
<ul> <li>equipment, nuclear power control systems, and submarine repeaters.</li> <li>9) ROHM shall have no responsibility for any damages or injury arising from non-compliance of the recommended usage conditions and specifications contained herein.</li> <li>10) ROHM has used reasonable care to ensure the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>11) Please use the Products in accordance with any applicable environmental laws and regulation such as the RoHS Directive. For more details, including RoHS compatibility, please contain ROHM sales office. ROHM shall have no responsibility for any damages or losses result non-compliance with any applicable laws or regulations.</li> <li>12) When providing our Products and technologies contained in this document to other countril</li> </ul>	7)	For use of our Products in applications requiring a high degree of reliability (as exemplified below), please contact and consult with a ROHM representative : transportation equipment (i.e. cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, safety equipment, medical systems, and power transmission systems.
<ul> <li>the recommended usage conditions and specifications contained herein.</li> <li>10) ROHM has used reasonable care to ensur the accuracy of the information contained in document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>11) Please use the Products in accordance with any applicable environmental laws and regulations such as the RoHS Directive. For more details, including RoHS compatibility, please contact ROHM sales office. ROHM shall have no responsibility for any damages or losses result non-compliance with any applicable laws or regulations.</li> <li>12) When providing our Products and technologies contained in this document to other countril</li> </ul>	8)	Do not use our Products in applications requiring extremely high reliability, such as aerospace equipment, nuclear power control systems, and submarine repeaters.
<ul> <li>document. However, ROHM does not warrants that such information is error-free, and RO shall have no responsibility for any damages arising from any inaccuracy or misprint of s information.</li> <li>11) Please use the Products in accordance with any applicable environmental laws and regulated such as the RoHS Directive. For more details, including RoHS compatibility, please contact ROHM sales office. ROHM shall have no responsibility for any damages or losses result non-compliance with any applicable laws or regulations.</li> <li>12) When providing our Products and technologies contained in this document to other countril</li> </ul>	9)	ROHM shall have no responsibility for any damages or injury arising from non-compliance with the recommended usage conditions and specifications contained herein.
<ul> <li>such as the RoHS Directive. For more details, including RoHS compatibility, please contac ROHM sales office. ROHM shall have no responsibility for any damages or losses result non-compliance with any applicable laws or regulations.</li> <li>12) When providing our Products and technologies contained in this document to other countril</li> </ul>	10)	document. However, ROHM does not warrants that such information is error-free, and ROHM shall have no responsibility for any damages arising from any inaccuracy or misprint of such
	11)	such as the RoHS Directive. For more details, including RoHS compatibility, please contact a ROHM sales office. ROHM shall have no responsibility for any damages or losses resulting
	12)	you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the US Export Administration Regulations and the Foreign
<ol> <li>This document, in part or in whole, may not be reprinted or reproduced without prior conser ROHM.</li> </ol>	13)	This document, in part or in whole, may not be reprinted or reproduced without prior consent of ROHM.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

# ROHM Customer Support System

http://www.rohm.com/contact/



# RGS00TS65HR - Web Page

Part Number	RGS00TS65HR
Package	TO-247N
Unit Quantity	450
Minimum Package Quantity	30
Packing Type	Tube
Constitution Materials List	inquiry
RoHS	Yes