

# **Datasheet**

BT85x Series

Bluetooth v5.0 Dual-Mode USB HCI Module

Version 1.6



## **REVISION HISTORY**

Version	Date	Notes	Contributor	Approver
1.0	12 Jan 2018	Initial Release	Jacky Kuo Raj Khatri	Jonathan Kaye
1.1	05 Feb 2018	Updated moisture sensitivity level from 4 to 3	Connie Lin	Jonathan Kaye
1.2	11 Apr 2018	Removed inbuilt Bluetooth stack reference; updated template	Raymond Au	Jonathan Kaye
1.3	05 Dec 2018	Added BT851 mechanical drawing; updated dongle measurements	Maggie Teng	Jonathan Kaye
1.4	18 Feb 2019	Updated logos and URLs; Updated BT SIG section; Add KC regulatory information	Sue White	Jonathan Kaye
1.5	26 Sept 2019	Added Section 8.5 Reset and POR (Power on Reset)	Andrew Chen	Jonathan Kaye
1.6	02 Oct 2019	Fixed tolerance error – changed ±1.3 to ±0.15 in the Mechanical Drawing section	Maggie Teng	Jonathan Kaye



## **CONTENTS**

1	;	Scope4				
2	(	Operational Description	4			
3	-	Block Diagram and Descriptions	5			
4	;	Specifications	6			
5		Pin Definitions	7			
6		DC Electrical Characteristics	8			
7		RF Characteristics	9			
8		Interface	10			
	8.1	1 Global Coexistence Interface	10			
	8.2	2 USB Interface	10			
	8.3	PCM Interface	10			
	8.4	4 I <sup>2</sup> S Interface	16			
9		Antenna Performance	19			
10	ļ	Mechanical Dimensions and Land Pattern	21			
11		Implementation Note	23			
	11.	.1 PCB Layout on Host PCB	23			
12		Application Note for Surface Mount Modules	25			
	12.	.1 Introduction	25			
	12.	.2 Shipping	25			
	12.	.3 Reflow Parameters	27			
13	,	Japan (MIC) Regulatory	28			
14	-	FCC Regulatory	28			
15		Industry Canada Regulatory	29			
16		European Union Regulatory	31			
17	1	Korea (KC) Regulatory	32			
18	(	Ordering Information	32			
19		Bluetooth SIG Approvals	33			
20		Additional Assistance				



### 1 SCOPE

This document describes key hardware aspects of the Laird BT85x Bluetooth HCI module and Adapter. This document is mainly intended to assist device manufacturers and related parties with the integration of this module into their host devices. Data in this document are drawn from several sources including data sheets for the Cypress CYW20704A2.

Because the BT850-Sx is currently in development stage, this document is preliminary and the information in this document is subject to change. Please contact Laird Connectivity or visit the product page on the Laird website to obtain the most recent version of this document.







BT850-SA

BT850-ST

**BT851** 

### 2 OPERATIONAL DESCRIPTION

The BT85x series of USB HCI modules and Adapter leverage the Cypress CYW20704 A2 chipset to provide exceptionally low power consumption with outstanding range for OEMs needing both Classic Bluetooth and Bluetooth Low Energy support. The Bluetooth v5.0 core specification shortens your development time and provides enhanced throughput, security and privacy.

The BT850 modules are ideal when designers need both performance and minimum size. For maximum flexibility in integration, they support a host USB interface, I<sup>2</sup>S and PCM audio interfaces, GPIO, and Cypress'GCI coexistence (2-wire). The modules provide excellent RF performance and identical footprint options for integrated antenna or an external antenna via a trace pin.

These modules present a Bluetooth standard HCI interface with native support for Windows, Linux and Android Bluetooth software stacks for operating system backed devices. The BT851 Pluggable USB Adapter simply plugs into any Windows, Android, or Linux device via external USB connection.

Additionally, Laird has partnered with Searan for support of their ultra small, flexible 'dotstack' platform for embedded Cortex M3 and M4 implementations.

## Features and Benefits 🚯 🗸 🕏 🕏 TROHS

- Bluetooth v5.0 Dual Mode (Classic Bluetooth and BLE)
- Compact footprint
- 2-wire Cypress Global Coexistence Interface (GCI)
- High antenna radiation gain and efficiency
- Good interference rejection for multi-com system (GSM/WCDMA)
- Class 1 output 8 dBm
- USB, I<sup>2</sup>S, and PCM
- Industrial temperature range
- 512 k EEPROM support
- Bluetooth Controller subsystem
- FCC, IC, CE, RCM, KC, and Giteki approvals

## **Application Areas**

- Medical devices
- ePOS terminals
- Barcode scanners
- Industrial cable replacement
- IoT Platforms Automotive Diagnostic Equipment
- Personal Digital Assistants (PDA)



## 3 BLOCK DIAGRAM AND DESCRIPTIONS

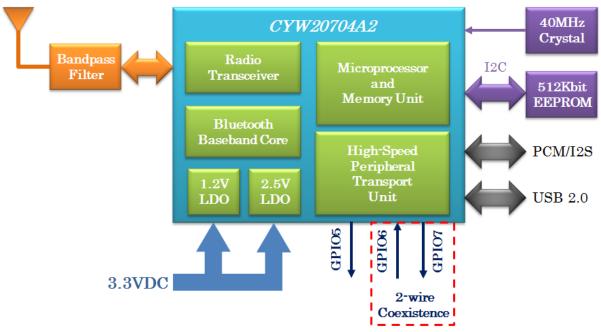


Figure 1: BT850 module block diagram

#### Table 1: Block diagram descriptions

CYW20704A2 (Main chip)	The BT85x is based on CYW20704A2 dual mode chip. The chip is a single-chip radio with on-chip LDO regulators and baseband IC for Bluetooth 2.4 GHz systems including EDR to 3 Mbps.
	Dedicated signal and baseband processing is included for full Bluetooth operation. The chip provides I <sup>2</sup> S/PCM and USB interfaces. There are two general purpose I/Os be configured for proprietary of Cypress GCI used and a general purpose I/O can be configured for scan/inquire/paging/data traffic of indicator. These three I/O pins are controlled by firmware.
Antenna	BT850-SA and BT851 – The antenna is a ceramic monopole chip antenna. BT850-ST – Trace Pad provision for use with a range of certified External Antennas
Band Pass Filter	The band pass filter filters the out-of-band emissions from the transmitter to meet the specific regulations for type approvals of various countries.
EEPROM	There are 512 k bits EEPROM embedded on the BT85x which can be used to store parameters, such as BD_ADDR, USB enumeration information, maximum TX power, PCM configuration, USB product ID, USB vendor ID, and USB product description.
Crystal	The embedded 40 MHz crystal is used for generating the clock for the entire module.



#### **SPECIFICATIONS** 4

Table 2: BT850 specificatio	ns				
Categories	Feature	Implementation			
	Bluetooth®	V5.0 Dual Mode – BR / EDR / LE			
	Frequency	2.402 - 2.480 GHz			
Winalaga	Maximum Transmit Power	Class 1			
Wireless Specification		+8 dBm from antenna			
<b>-</b>	Receive Sensitivity	-94 dBm			
	Range	Circa 100 meters			
	Data Rates	Up to 3 Mbps (over-the-air)			
Host Interface	USB	Full speed USB 2.0			
HOSt Interrace	GPIO	3.3V for all general purpose I/Os			
Operational Mode	HCI	Host Controller Interface over USB			
<b>EEPROM</b> 2-wire 512 K bits		512 K bits			
Coexistence 802.11 (Wi-Fi) 2-Wire		2-Wire Cypress Global Coexistence Interface (GCI)			
Supply Voltage Supply		3.0V - 3.6V			
Power Consumption	Current	Idle Mode ~8 mA			
Tower Consumption	Current	File Transfer ~43 mA			
Antenna Options	Internal	Multilayer ceramic antenna			
	External	Trace Pad			
		8.5 x 12.85 x 2.2 mm (BT850-SA)			
Physical	Dimensions	8.5 x 12.85 x 1.9 mm (BT850-ST)			
(Width x Length x Height)	Dimensions	16 x 43 x 11 (BT851 – USB dongle)			
		17.4 (± 0.2) x 46.75 (± 0.4) x 12 (± 0.15) mm (BT851 – USB Dongle)			
Environmental	Operating	-30° C to +85° C			
Livironinientai	Storage	-40° C to +85° C			
Miscellaneous	Lead Free	Lead-free and RoHS-compliant			
wiiscellalieous	Warranty	One-year warranty			
Approvals	Bluetooth®	Controller Subsystem Approved			
Approvais	FCC/IC/CE/RCM/Giteki/KC	All BT85x series			



## PIN DEFINITIONS

Pin No.	Pin Name	I/O	Supply Domain	Description	If Unused
1	NC	·			NC
2	NC				
3	GND	GND		Ground	GND
4	USB_D+	Bidirectional	3V3	USB data plus	N/A
5	USB_D-	Bidirectional	3V3	USB data negative	N/A
6	GND	GND		Ground	GND
7	NC				NC
8	RESET	Input	3v3	Active-low reset input	N/A
9	3v3	Input	3v3	Module main DC power supply, Input to internal 1.2V and 2.5V LDO	N/A
10	NC				NC
11	GND	GND		Ground	GND
12	GND	GND		Ground	GND
13	GND	GND		Ground	GND
14	GND	GND		Ground	GND
15	GND	GND		Ground	GND
16	GND	GND		Ground	GND
17	RF			BT850-ST RF signal output (50Ω) BT850-SA No connection	
18	GND	GND		Ground	GND
19	I2S_WS/PCM_SYNC	Bidirectional	3V3	PCM sync/I2S word select	NC
20	I2S_CLK/PCM_CLK	Bidirectional	3V3	PCM/I2S clock	NC
21	I2S_DI/PCM_IN	Bidirectional	3V3	PCM/I2S data input	NC
22	I2S_OUT/PCM_OUT	Bidirectional	3V3	PCM/I2S data output	NC
23	NC				NC
24	GND	GND		Ground	GND
25	BT_SECI_IN	Input	3V3	Coexistence data input	NC
26	BT_SECI_OUT	Output	3V3	Coexistence data output	NC
27	NC				NC
28	GPIO_5	Bidirectional	3V3	Programmable input/output line	NC



## 6 DC ELECTRICAL CHARACTERISTICS

Table 4: Absolute Maximum Rating

Rating	Min	Max	Unit
Storage temperature	-40	+150	°C
Operating Temperature	-30	+85	°C
ESD Contact Discharge	-4	+4	KV
ESD Air Discharge	-8	+8	KV
Moisture Sensitivity Level	3	-	-
3V3 Input	3.0	3.6	V

Table 5: Recommended operating conditions

Rating	Min	Max	Unit
Storage temperature	-40	+150	<sup>0</sup> C
Operating Temperature	-30	+85	°C
3V3 Input	3.0	3.6	V

Table 6: Digital I/O characteristics

Normal Operation	Min	Тур.	Max	Unit
V <sub>IL</sub> Input Low Voltage (VDDO* = 3V3)	-	-	0.8	V
V <sub>IH</sub> Input High Voltage (VDDO* = 3V3)	2.0	-	-	V
V <sub>OL</sub> Output Low Voltage	-	-	0.4	V
V <sub>OH</sub> Output High Voltage	3V3-0.4	-	-	V
I <sub>IL</sub> Input Low Current	-	-	1.0	μΑ
I <sub>IH</sub> Input High Current	-	-	1.0	μΑ
I <sub>OL</sub> Output Low Current (VDDO* = 3V3, V <sub>OL</sub> = 0.4V)	-	-	2.0	mA
I <sub>OH</sub> Output Low Current (VDDO* = 3V3, V <sub>OH</sub> = 2.9V)	-	-	2.0	mA
C <sub>IN</sub> Input Capacitance	-	-	0.4	pF

<sup>\*:</sup> The VDDO is denoted the digital I/O voltage and it's depended on the Pin9 (3V3) input of module.

Table 7: Current consumption

Normal Operation	Peak (8 dBm)	Unit
Idle	8	mA
Inquiry	23	mA
File Transfer	43	mA
BLE Connected (Master)	26	mA
BLE Scan (Master)	26	mA
BLE File Transfer	27	mA



## 7 RF CHARACTERISTICS

Table 8: BDR/EDR/LE transmitter characteristics (Input = 3V3 @ 25°C)

Parameter	Min	Тур.	Max	BT. Spec.	Unit	
Classic BT (BDR) - GFSK Maximum RF Transmit Power			8	10	20	dBm
Classic BT - EDR Maxim	um RF Transmit Power	2	4	6	20	dBm
BLE Maximum RF Trans	mit Power	6	8	10	20	dBm
RF power variation over	temperature range	-	2.0	-	-	dB
RF power variation over	BT band	-	2	-	-	dB
RF power control step		2	4	8	-	dB
Initial Carrier Frequency	Tolerance	-	10	-	±75	kHz
BLE Frequency Accurac	у		10		±150	kHz
20 dB Bandwidth		-	920	-	1000	kHz
	1.0 MHz <  M-N  < 1.5 MHz	-	-	-39	-26	dBc
In-Band Spurious Emissions	1.5 MHz <  M-N  < 2.5 MHz	-	-	-39	-20	dBm
Emiodiono	M-N  ≧ 2.5 MHz	-	-	-47	-40	dBm
BLE In-Band Emission	$f_{TX} \pm 2 \text{ MHz}$	-	-	-48	-20	dBm
DLE III-DANU EIIIISSION	f <sub>TX</sub> ± [3 + n] MHz	-	-	-47	-30	dBm
Drift rate		-	10	-	+/-25	kHz
ΔF <sub>1Avg</sub>		-	152	-	140<>175	kHz
ΔF <sub>2</sub> Max		100	-	-	99.9	%
ΔF <sub>2</sub> Avg / ΔF <sub>1</sub> Avg		-	1.0	-	≧ 0.8	
BLE ΔF1Avg		-	245	-	225<>275	kHz
BLE ΔF2Max		100	-	-	99.9	%
BLE ΔF2Avg / ΔF1Avg		-	1.0	-	≧ 0.8	

Table 9: BDR/EDR/LE receiver sensitivity (Input = 3V3 @ 25℃)

Parameter	Conditions	Min	Тур.	Max	BT. Spec.	Unit
	GFSK, 0.1% BER, 1 Mbps		-90		-70	dBm
Sensitivity	$\pi$ /4-DQPSK, 0.01% BER, 2 Mbps		-94		-70	dBm
Sensitivity	8-DPSK, 0.01% BER, 3 Mbps		-87		-70	dBm
	BLE GFSK, 30.8% PER, 1 Mbps		-94		-70	dBm
Sensitivity variation	All Modulations (Over BT band)		2			dB



#### 8 INTERFACE

#### 8.1 Global Coexistence Interface

The BT850-Sx supports the proprietary Cypress Global Coexistence Interface (GCI) which is a two-wire interface.

The following key features are associated with the interface:

- Enhanced coexistence data can be exchanged over GCI\_SECI\_IN and GCI\_SECI\_OUT a two-wire interface, one serial
  input (GCI\_SECI\_IN), and one serial output (GCI\_SECI\_OUT). The both pins are controlled by the configuration file that
  is stored in EEPROM from the host.
- It supports generic UART communication between WLAN and Bluetooth devices.
- To conserve power, it is disabled when inactive.
- It supports automatic resynchronization upon waking from sleep mode.
- It supports a baud rate of up to 4 Mbps.

Table 10 shows the two-wire BT coexistence interface assignments.

Table 10: BDR/EDR/LE receiver sensitivity (Input = 3V3 @ 25℃)

Coexistence Signal Name	Signal Assignment
BT_SECI_IN	GPIO_6
BT_SECI_OUT	GPIO_7

### 8.2 USB Interface

BT85x has a full-speed (12 Mbps) USB interface for communicating with other compatible digital devices. The USB interface on the BT85x acts as a USB peripheral, responding to requests from a master host controller.

BT85x supports the Universal Serial Bus Specification (USB v2.0 Specification) and USB Battery Charging Specification, available from <a href="http://www.usb.org">http://www.usb.org</a>. For more information on how to integrate the USB interface on BT85xd, see Figure 17 located in the following section: USB Dongle Design Example Using BT850.

The following USB interface features are supported:

- USB Protocol, revision 2.0, full-speed compliant with LPM support (up to 12 Mbps)
- Bluetooth HCI
- Integrated detach resistor
- USB termination when interface is not in use
- Internal modules, certification, and non-specification compliant operation

#### 8.3 PCM Interface

The BT850-Sx supports two independent PCM interfaces that share the pins with I<sup>2</sup>S interfaces. The PCM interface on the BT850-Sx can connect to linear PCM Codec devices in master or slave mode. In master mode, the BT850-Sx generates the PCM\_CLK and PCM\_SYNC signals; in slave mode, these signals are provided by another master on the PCM interface and are inputs to the BT850-Sx.

The configuration of the PCM interface may be adjusted by the host using vendor-specific HCI commands.

For additional information, refer to the DVK-BT85x-Sx User Guide available from the BT85x product page of the Laird website.



#### 8.3.1 Slot Mapping

The BT850-Sx supports up to three simultaneous full-duplex SCO or eSCO channels through the PCM interface. These three channels are time-multiplexed onto the single PCM interface by using a time-slotting scheme where the 8 kHz or 16 kHz audio sample interval is divided into as many as 16 slots. The number of slots is dependent on the selected interface rate of 128 kHz, 512 kHz, or 1024 kHz. The corresponding number of slots for these interface rates is 1, 2, 4, 8, and 16, respectively. Transmit and receive PCM data from an SCO channel is always mapped to the same slot. The PCM data output driver tristates its output on unused slots to allow other devices to share the same PCM interface signals. The data output driver tristates its output after the falling edge of the PCM clock during the last bit of the slot.

#### 8.3.2 Frame Synchronization

The BT850-Sx supports both short- and long-frame synchronization in both master and slave modes. In short-frame synchronization mode, the frame synchronization signals an active-high pulse at the audio frame rate that is a single-bit period in width and is synchronized to the rising edge of the bit clock. The PCM slave looks for a high on the falling edge of the bit clock and expects the first bit of the first slot to start at the next rising edge of the clock.

Figure 2 and Table 11 shows PCM Timing Diagram and Specifications for the master mode of short-frame.

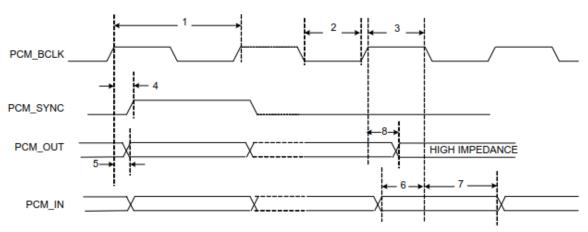


Figure 2: PCM timing diagram (Short-Frame Sync, Master Mode)

Table 11: PCM Interface timing specifications (Short-Frame Sync, Master Mode)

Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
1	PCM bit clock frequency	-	-	12	MHz
2	PCM bit clock LOW	41	-	-	ns
3	PCM bit clock HIGH	41	-	-	ns
4	PCM_SYNC setup	0	-	25	ns
5	PCM_OUT delay	0	-	25	ns
6	PCM_IN setup	8	-	-	ns
7	PCM_IN hold	8	-	-	ns
8	Delay from rising edge of PCM_BCLK during last bit period to PCM_OUT becoming high impedance	0	-	25	ns



Figure 3 and Table 12 shows PCM Timing Diagram and Specifications for the slave mode of short-frame.

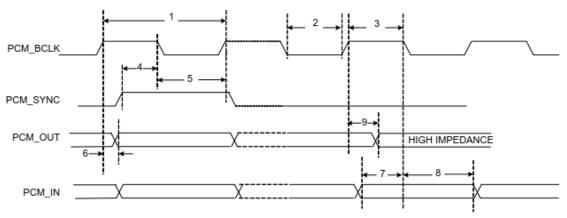


Figure 3: PCM timing diagram (Short-Frame Sync, Slave Mode)

Table 12: PCM Interface timing specifications (Short-Frame Sync, Slave Mode)

Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
1	PCM bit clock frequency	-	-	12	MHz
2	PCM bit clock LOW	41	-	-	ns
3	PCM bit clock HIGH	41	-	-	ns
4	PCM_SYNC setup	8	-	-	ns
5	PCM_SYNC_hold	8	-	-	ns
6	PCM_OUT delay	0	-	25	ns
7	PCM_IN setup	8	-	-	ns
8	PCM_IN hold	8	-	-	ns
9	Delay from rising edge of PCM_BCLK during last bit period to PCM_OUT becoming high impedance	0	-	25	ns

In long-frame synchronization mode, the frame synchronization signal is again an active-high pulse at the audio frame rate; however, the duration is three bit periods and the pulse starts coincident with the first bit of the first slot.

Figure 4 and Table 13 shows PCM Timing Diagram and Specifications for the master mode of long-frame.

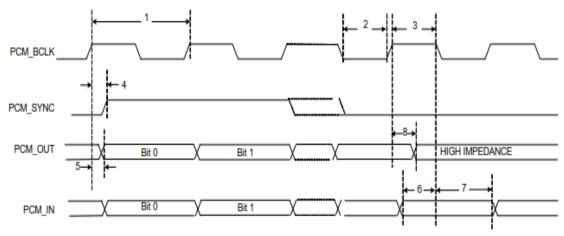


Figure 4: PCM timing diagram (Long-Frame Sync, Master Mode)



Table 13: PCM Interface timing specifications (Long-Frame Sync, Master Mode)

Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
1	PCM bit clock frequency	-	-	12	MHz
2	PCM bit clock LOW	41	-	-	ns
3	PCM bit clock HIGH	41	-	-	ns
4	PCM_SYNC delay	0	-	25	ns
5	PCM_OUT delay	0	-	25	ns
6	PCM_IN setup	8	-	-	ns
7	PCM_IN hold	8	-	-	ns
8	Delay from rising edge of PCM_BCLK during last bit period to PCM_OUT becoming high impedance	0	-	25	ns

Figure 5 and Table 14 shows PCM Timing Diagram and Specifications for the slave mode of long-frame.

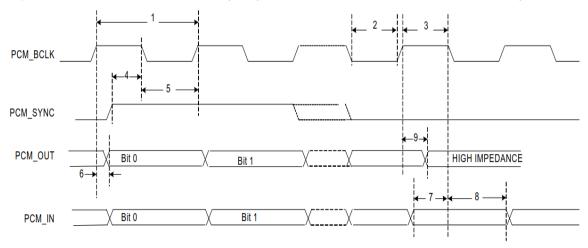


Figure 5: PCM timing diagram (Long-Frame Sync, Slave Mode)

Table 14: PCM Interface timing specifications (Long-Frame Sync, Slave Mode)

Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
1	PCM bit clock frequency	-	-	12	MHz
2	PCM bit clock LOW	41	-	-	ns
3	PCM bit clock HIGH	41	-	-	ns
4	PCM_SYNC setup	8	-	-	ns
5	PCM_SYNC_hold	8	-	-	ns
6	PCM_OUT delay	0	-	25	ns
7	PCM_IN setup	8	-	-	ns
8	PCM_IN hold	8	-	-	ns
9	Delay from rising edge of PCM_BCLK during last bit period to PCM_OUT becoming high impedance	0	-	25	ns



#### 8.3.3 Data Formatting


The BT850-Sx may be configured to generate and accept several different data formats. For conventional narrowband speech mode, the BT850-Sx uses 13 of the 16 bits in each PCM frame. The location and order of these 13 bits can be configured to support various data formats on the PCM interface. The remaining three bits are ignored on the input and may be filled with 0s, 1s, a sign bit, or a programmed value on the output. The default format is 13-bit 2's complement data, left justified, and clocked MSB first.

#### 8.3.4 Wideband Speech Support

When the host encodes Wideband Speech (WBS) packets in transparent mode, the encoded packets are transferred over the PCM bus for an eSCO voice connection. In this mode, the PCM bus is typically configured in master mode for a 4-kHz sync rate with 16-bit samples, resulting in a 64 Kbps bit rate. The BT850-Sx also supports slave transparent mode using a proprietary rate-matching scheme. In SBC-code mode, linear 16-bit data at 16 kHz (256 Kbps rate) is transferred over the PCM bus.

#### 8.3.5 Multiplexed Bluetooth Over PCM

Bluetooth supports multiple audio streams within the Bluetooth channel and both 16 kHz and 8 kHz streams can be multiplexed. This mode of operation is only supported when the Bluetooth host is the master. Figure 6 shows the operation of the multiplexed transport with three simultaneous SCO connections. To accommodate additional SCO channels, the transport clock speed is increased. To change between modes of operation, the transport must be halted and restarted in the new configuration.

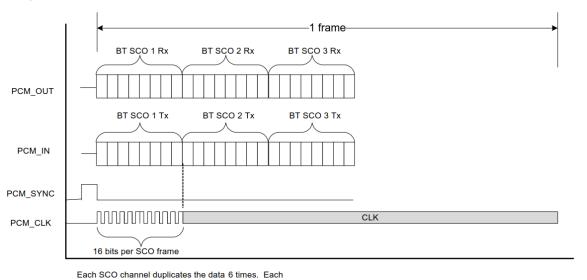

WBS frame duplicates the data 3 times per frame Figure 6: Functional multiples data diagram

#### 8.3.6 Burst PCM Mode

In this mode of operation, the PCM bus runs at a significantly higher rate of operation to allow the host to duty cycle its operation and save current. In this mode of operation, the PCM bus can operate at a rate of up to 24 MHz. This mode of operation is initiated with an HCI command from the host.

Figure 7 and Table 15 shows PCM Burst mode timing diagram and specifications for the receive-only mode of short-frame sync.



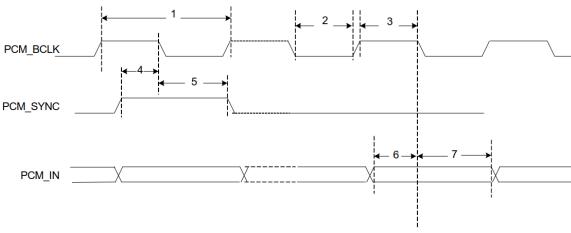


Figure 7: PCM burst mode timing (Receive Only, Short Frame Sync)

Table 15: PCM burst mode specifications (Receive Only, Short-Frame Sync)

Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
1	PCM bit clock frequency	-	-	24	MHz
2	PCM bit clock LOW	20.8	-	-	ns
3	PCM bit clock HIGH	20.8	-	-	ns
4	PCM_SYNC setup	8	-	-	ns
5	PCM_SYNC_hold	8	-	-	ns
6	PCM_IN setup	8	-	-	ns
7	PCM_IN hold	8	-	-	ns

Figure 8 and Table 16 shows PCM Burst mode timing diagram and specifications for the receive-only mode of long-frame sync.

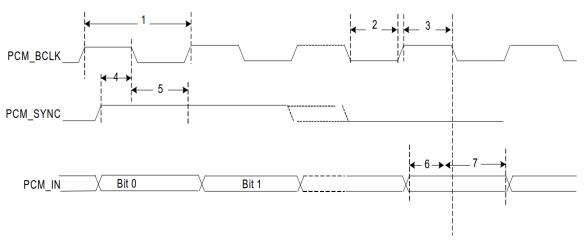


Figure 8: PCM burst mode timing (Receive Only, Long Frame Sync)

Table 16: PCM burst mode specifications (Receive Only, Long-Frame Sync)

Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
1	PCM bit clock frequency	-	-	24	MHz
2	PCM bit clock LOW	20.8	-	-	ns
3	PCM bit clock HIGH	20.8	-	-	ns



Ref No.	Characteristics	Minimum	Typical	Maximum	Unit
4	PCM_SYNC setup	8	-	-	ns
5	PCM_SYNC_hold	8	-	-	ns
6	PCM_IN setup	8	-	-	ns
7	PCM_IN hold	8	-	-	ns

#### 8.4 I<sup>2</sup>S Interface

The BT850-Sx supports two independent I<sup>2</sup>S digital audio ports. The I<sup>2</sup>S interface supports both master and slave modes. The I<sup>2</sup>S signals are:

I<sup>2</sup>S clock: I<sup>2</sup>S SCK
 I<sup>2</sup>S Word Select: I<sup>2</sup>S WS
 I<sup>2</sup>S Data Out: I<sup>2</sup>S SDO
 I<sup>2</sup>S Data In: I<sup>2</sup>S SDI

I<sup>2</sup>S SCK and I<sup>2</sup>S WS become outputs in master mode and inputs in slave mode, while I<sup>2</sup>S SDO always stays as an output. The channel word length is 16 bits and the data is justified so that the MSB of the left-channel data is aligned with the MSB of the I<sup>2</sup>S bus, per the I<sup>2</sup>S specification. The MSB of each data word is transmitted one bit clock cycle after the I<sup>2</sup>S WS transition, synchronous with the falling edge of bit clock. Left-channel data is transmitted when I<sup>2</sup>S WS is low, and right-channel data is transmitted when I<sup>2</sup>S WS is high. Data bits sent by the BT850 are synchronized with the falling edge of I2S\_SCK and should be sampled by the receiver on the rising edge of I2S\_SSCK.

The clock rate in master mode is either of the following:

48 kHz x 32 bits per frame = 1.536 MHz

48 kHz x 50 bits per frame = 2.400 MHz

The master clock is generated from the input reference clock using a N/M clock divider.

In the slave mode, any clock rate is supported to a maximum of 3.072 MHz.

### 8.4.1 I<sup>2</sup>S Timing

Timing values specified in Table 17 are relative to high and low threshold levels.


Table 17: Timing for I2S transmitters and receivers

		Trans	mitter				Notes		
	Lower	Limit	Upper	Limit	Lower	r Limit	Uppe	r Limit	
	Min	Max	Min	Max	Min	Max	Min	Max	
Clock Period T	T <sub>tr</sub>	-	-	-	Tr	-	-	-	
Master Mode: Clock gen	erated by	transmitte	er or receiv	/er					
HIGH t <sub>HC</sub>	0.35Ttr	-	-	-	0.35Ttr	-	-	-	
LOW t <sub>LC</sub>	0.35T <sub>tr</sub>	-	-	-	0.35T <sub>tr</sub>	-	-	-	
Master Mode: Clock gen	erated by	transmitte	er or receiv	/er					
HIGH t <sub>HC</sub>	-	0.35T <sub>tr</sub>	-	-	-	0.35T <sub>tr</sub>	-	-	
LOW t <sub>LC</sub>	-	0.35T <sub>tr</sub>	-	-	-	0.35T <sub>tr</sub>	-	-	
Rise time t <sub>RC</sub>	-	-	0.15T <sub>tr</sub>	-	-	-	-	-	
Transmitter									
Delay t <sub>dtr</sub>	-	-	-	0.8T	-	-	-	-	
Hold time t <sub>htr</sub>	0	-	-	-	-	-	-	-	



	Transmitter			Receiver				Notes	
Receiver									
Setup time t <sub>sr</sub>	-	-	-	-	-	0.2T <sub>r</sub>	-	-	
Hold time t <sub>hr</sub>	-	-	-	-	-	0	-	-	

The time periods specified in Figure 9 and Figure 10 are defined by the transmitter speed. The receiver specifications must match transmitter performance.

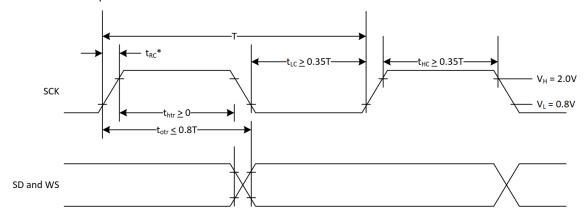


T = Clock period

 $T_{tr}$  = Minimum allowed clock period for transmitter

 $T = T_{tr}$ 

Figure 9: I2S transmitter timing

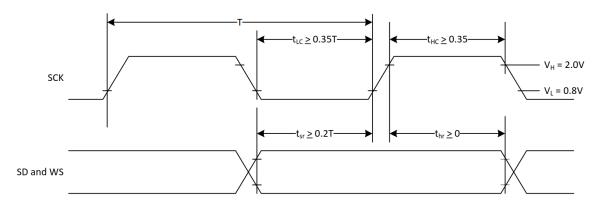

T = Clock period

T<sub>r</sub> = Minimum allowed clock period for transmitter

 $T > T_r$ 

Figure 10: I2S receiver timing

<sup>\*</sup> t<sub>RC</sub> is only relevant for transmitters in slave mode.



## 8.5 Reset and POR (Power on Reset)

A power on reset (POR) timing requirement is shown in Figure 11.

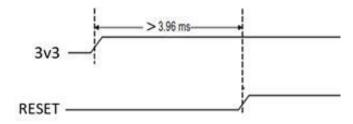


Figure 11: Power on reset (POR) timing

When the system requires a reset, you must hold the rest line in low state for longer than 3.96 milliseconds to complete the reset cycle.

#### **WARNING**

An improper low state on the reset line (such as a voltage glitch) causes a system error due to a crash on the EEPROM content.

A bypass cap such as 0.1uF placed on the reset line overcomes the issue caused by the glitch.

Europe: +44-1628-858-940 Hong Kong: +852 2923 0610



#### **ANTENNA PERFORMANCE** 9

Table 18, Figure 12, Figure 13, and Figure 14 shows the antenna gain and performance.

Table 18: Antenna gain

Unit in dBi @ 2440 MHz	XY-plane		XZ-plane		YZ-p	Efficiency	
AT3216-B2R7HAA	Peak	Avg.	Peak	Avg.	Peak	Avg.	Efficiency
A13210-D2R/HAA	0.1	-4.1	1.8	-3.3	-0.2	-6.8	41%

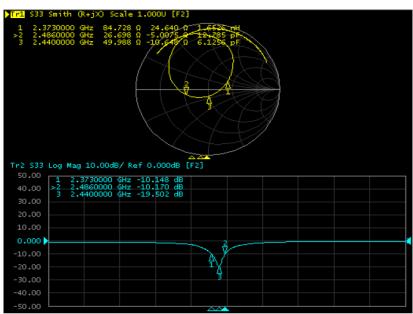


Figure 12: Antenna return loss

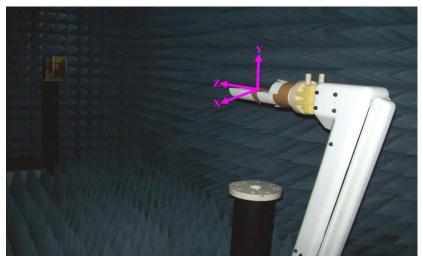


Figure 13: Measurement XYZ polarization


Hong Kong: +852 2923 0610



#### Table 19: Plane definitions

XY - Plane	Theta = 90°
XZ – Plane	Phi = 0°
YZ - Plane	Phi = 90°


## ♦XY-plane

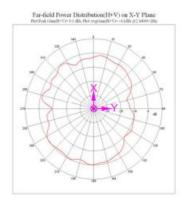

#### Unit: dBi

	Peak gain	Avg. gain
XY-plane	0.1	-4.1

## ♦XZ-plane

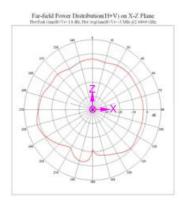

	Peak gain	Avg. gain
XZ-plane	1.8	-3.3

## ♦YZ-plane

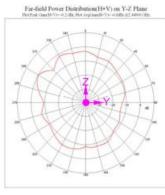



Figure 14: Antenna patterns

	Peak gain	Avg. gain
YZ-plane	-0.2	-6.8



## 10 MECHANICAL DIMENSIONS AND LAND PATTERN

## 10.1 BT850-Sx Mechanical Drawing

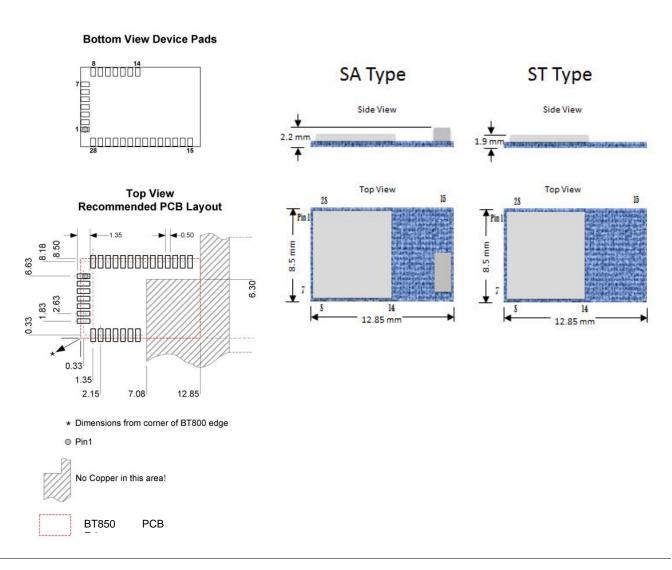

Note: Dimensions are in millimeters

Tolerances: .xx ±0.03 mm

.x ±0.15 mm



## 10.2 BT851 Mechanical Drawing

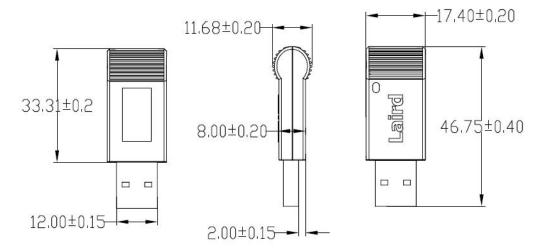


Figure 15: BT851 mechanical drawing



### 11 IMPLEMENTATION NOTE

## 11.1 PCB Layout on Host PCB

#### Checklist (for PCB):

- Must locate the BT850 module close to the edge of PCB.
- Use solid GND plane on inner layer (for best EMC and RF performance).
- Place GND vias close to module GND pads as possible
- Route traces to avoid noise being picked up on VCC supply.
- Antenna Keep-out area:
  - Ensure there is no copper in the antenna keep-out area on any layers of the host PCB.
  - Keep all mounting hardware and metal clear of the area to allow proper antenna radiation.
  - For best antenna performance, place the BT850 module on the edge of the host PCB, preferably in the corner with the antenna facing the corner.
  - A different host PCB thickness dielectric will have small effect on antenna.

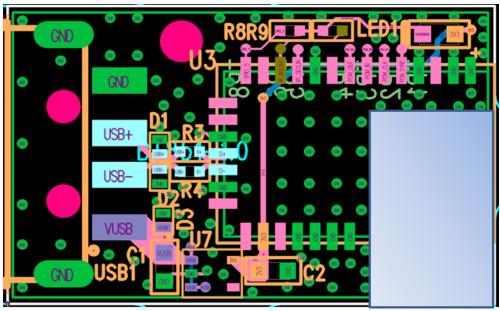


Figure 16: Recommend antenna keep-out area (in blue) used on the BT850

### 11.1.1 Antenna Keep-out and Proximity to Metal or Plastic

Checklist (for metal/plastic enclosure):

- Minimum safe distance for metals without seriously compromising the antenna (tuning) is 40 mm top/bottom and 30 mm left or right.
- Metal close to the BT850-SA chip monopole antenna (bottom, top, left, right, any direction) will have degradation on the
  antenna performance. The amount of degradation is entirely system-dependent which means some testing by customers
  is required (in their host application).
- Any metal closer than 20 mm starts to significantly degrade performance (S11, gain, radiation efficiency).
- It is best that the customer tests the range with mock-up (or actual prototype) of the product to assess effects of enclosure height (and material, whether metal or plastic).



### 11.1.2 USB Dongle Design Example Using BT850-SA

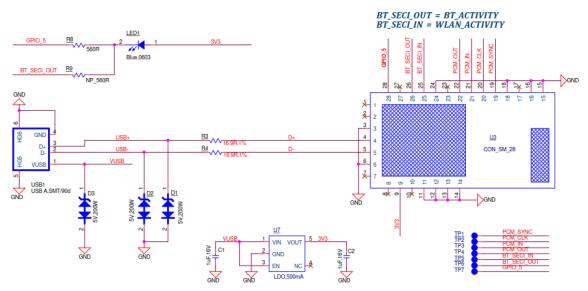


Figure 17: USB dongle design schematic

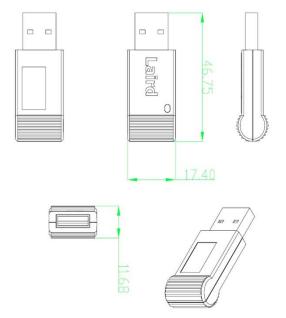


Figure 18: BT851 USB dongle, containing embedded BT850-SA



## 12 APPLICATION NOTE FOR SURFACE MOUNT MODULES

#### 12.1 Introduction

Laird surface mount modules are designed to conform to all major manufacturing guidelines. This application note is intended to provide additional guidance beyond the information that is presented in the user manual. This application note is considered a living document and is updated as new information is presented.

The modules are designed to meet the needs of a number of commercial and industrial applications. They are easy to manufacture and they conform to current automated manufacturing processes.

## 12.2 Shipping

#### 12.2.1 Tape and Reel Package Information

**Note:** Ordering information for Tape and Reel packaging is an addition of T/R to the end of the full module part number. For example, BT850-Sx becomes BT850-Sx-T/R.

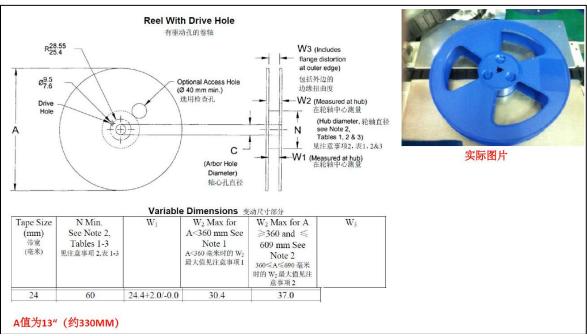


Figure 19: Reel specifications



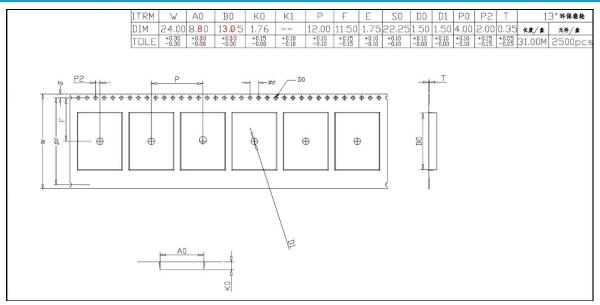


Figure 20: Tape specifications

There are 2500 BT850-Sx modules taped in a reel (and packaged in a pizza box) and five boxes per carton (12,500 modules per carton). Reel, boxes, and carton are labeled with the appropriate labels. See Figure 21.

### 12.2.2 Packaging Process

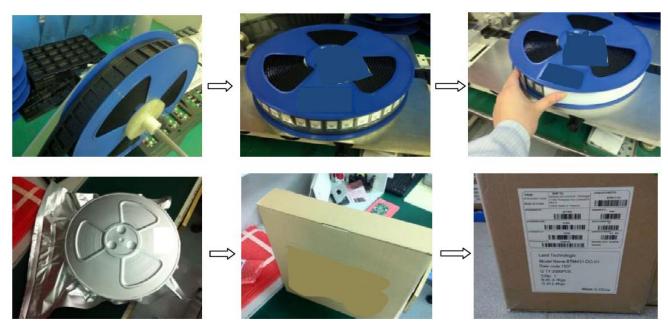


Figure 21: Packaging process



#### 12.3 Reflow Parameters

Laird surface mount modules are designed to be easily manufactured, including reflow soldering to a PCB. Ultimately it is the responsibility of the customer to choose the appropriate solder paste and to ensure oven temperatures during reflow meet the requirements of the solder paste. Laird's surface mount modules conform to J-STD-020D1 standards for reflow temperatures.

**Important**: During reflow, modules should not be above 260° and not for more than 30 seconds. In addition, strongly recommend doesn't let the module to go through the reflow over 1 time. Otherwise, it will to impact the soldering of module own.

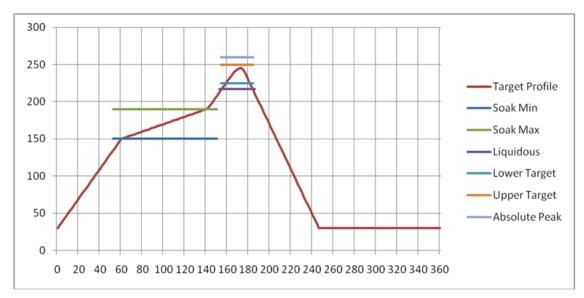


Figure 22: Recommended reflow temperature

Temperatures should not exceed the minimums or maximums presented in Table 20.

Table 20: Recommended maximum and minimum temperatures

Specification	Value	Unit
Temperature Inc./Dec. Rate (max)	1~3	°C / Sec
Temperature Decrease rate (goal)	2-4	°C / Sec
Soak Temp Increase rate (goal)	.5 - 1	°C / Sec
Flux Soak Period (Min)	70	Sec
Flux Soak Period (Max)	120	Sec
Flux Soak Temp (Min)	150	°C
Flux Soak Temp (max)	190	°C
Time Above Liquidous (max)	70	Sec
Time Above Liquidous (min)	50	Sec
Time in Target Reflow Range (goal)	30	Sec
Time at Absolute Peak (max)	5	Sec
Liquidous Temperature (SAC305)	218	°C
Lower Target Reflow Temperature	240	°C
Upper Target Reflow Temperature	250	°C
Absolute Peak Temperature	260	°C



## 13 JAPAN (MIC) REGULATORY

The BT85x is approved for use in the Japanese market. The part numbers listed below hold WW type certification. Refer to **ARIB-STD-T66** for further guidance on OEM's responsibilities.

Table 21: BT85x Japan regulatory information

Model	Product Name	Description	Certificate No.
BT850-SA	BT v5.0 Dual Mode USB HCI Module	Mounted with chipset antenna	
BT850-ST	BT v5.0 Dual Mode USB HCI Module	Trace Pad for External Antenna	201-170970
BT851	BT v5.0 Dual Mode USB Adapter	Mounted with chipset antenna	

#### 13.1 Antenna Information

The BT85x was tested with antennas listed below. The OEM can choose a different manufacturers antenna but must make sure it is of same type and that the gain is lesser than or equal to the antenna that is approved for use.

Table 22: BT85x antenna information

Part Number	Mfg.	Туре	Connector	Gain (dBi)
001-0030	Laird	PIFA	IPEX U.FL	2 dBi (2400 MHz-2480 MHz)
001-0014	Laird	PIFA	IPEX U.FL	2 dBi (2400 MHz-2480 MHz)
0600-00040	Laird	Dipole	IPEX U.FL	2 dBi (2.4 GHz-2.5 GHz)
MAF94045	Laird	PCB	IPEX U.FL	2 dBi (2.4 GHz-2.5 GHz)
AT3216-B2R7HAA_	ACX	Chip	N/A	0.5 dBi (2.4 GHz-2.5 GHz)

### 14 FCC REGULATORY

Model	US/FCC
BT850-Sx	SQGBT850
BT851	SQGBT850
DVK-BT850-Sx	SQGBT850

The BT85x modules were tested with the following antennas:

Table 23: BT85x antenna information

Part Number	Mfg.	Туре	Connector	Gain (dBi)
001-0030	Laird	PIFA	IPEX U.FL	2 dBi (2400 MHz-2480 MHz)
001-0014	Laird	PIFA	IPEX U.FL	2 dBi (2400 MHz-2480 MHz)
0600-00040	Laird	Dipole	IPEX U.FL	2 dBi (2.4 GHz-2.5 GHz)
MAF94045	Laird	PCB	IPEX U.FL	2 dBi (2.4 GHz-2.5 GHz)
AT3216-B2R7HAA_	ACX	Chip	N/A	0.5 dBi (2.4 GHz-2.5 GHz)

#### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in an installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.



- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference; and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

#### **IMPORTANT NOTE:**

FCC Radiation Exposure Statement:

The product complies with the US portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device is intended only for OEM integrators under the following condition:

1. The transmitter module may not be co-located with any other transmitter or antenna,

If the condition above is met, further <u>transmitter</u> testing is not required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

#### **IMPORTANT NOTE**

If this condition <u>cannot be met</u> (for example, certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID <u>cannot</u> be used on the final product. In these circumstances, the OEM integrator is responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

#### **End Product Labeling**

The final end product must be labeled in a visible area with the following: "Contains FCC ID: SQGBT850"

#### Manual Information to the End User

The OEM integrator must be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

## 15 INDUSTRY CANADA REGULATORY

Model	CANADA/IC
BT850-Sx	3147A-BT850
BT851	3147A-BT850
DVK-BT850-Sx	3147A-BT850

The BT85x modules were tested with the following antennas:

Table 24: BT85x antenna information

Part Number	Mfg.	Type	Connector	Gain (dBi)
001-0030	Laird	PIFA	IPEX U.FL	2 dBi (2400 MHz-2480 MHz)
001-0014	Laird	PIFA	IPEX U.FL	2 dBi (2400 MHz-2480 MHz)
0600-00040	Laird	Dipole	IPEX U.FL	2 dBi (2.4 GHz-2.5 GHz)
MAF94045	Laird	PCB	IPEX U.FL	2 dBi (2.4 GHz-2.5 GHz)
AT3216-B2R7HAA_	ACX	Chip	N/A	0.5 dBi (2.4 GHz-2.5 GHz)

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- 1. This device may not cause interference; and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.



Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. l'appareil ne doit pas produire de brouillage;
- 2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **Radiation Exposure Statement:**

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The minimum separation distance for portable use is limited to 15mm assuming use of antenna with 2dBi of gain. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

#### Déclaration d'exposition aux radiations:

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé. La distance de séparation minimale pour l'utilisation portative est limitée à 15mm en supposant l'utilisation de l'antenne avec 2dBi de gain. Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

This device is intended only for OEM integrators under the following conditions:

1. The transmitter module may not be co-located with any other transmitter or antenna.

If the condition above is met, further transmitter testing is not required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes:

1. Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 1 condition ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

#### **IMPORTANT NOTE:**

In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the Canada authorization is no longer considered valid and the IC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

#### **NOTE IMPORTANTE:**

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l'ID IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

#### **End Product Labeling**

The final end product must be labeled in a visible area with the following: "Contains IC: 3147A-BT850".

Plaque signalétique du produit final

Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante: "Contient des IC: 3147A-BT850 ".

#### Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

#### Manuel d'information à l'utilisateur final

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module.

Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.



This radio transmitter (IC: 3147A-BT850) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: 3147A-BT850) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés cidessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

### 16 EUROPEAN UNION REGULATORY

The BT85x has been tested for compliance with relevant standards for the EU market. BT850 module was tested with a 0.5 dBi chip antenna and 2dBi external antennas listed in the user manual.

The OEM should consult with a qualified test house before entering their device into an EU member country to make sure all regulatory requirements have been met for their complete device.

Reference the Declaration of Conformities listed below for a full list of the standards that the modules were tested to. Test reports are available upon request.

## 16.1 EU Declarations of Conformity

Manufacturer:	Laird			
Products:	BT850-SA, BT850-ST, BT851			
Product Description	BT850-SA, BT850- ST	BTv5.0 Dual Mode USB HCI Module	100	
	BT851	BTv5.0 Dual Mode USB Dongle		Laird
EU Directives:	2014/53/EU – Radio Equipment Directive (RED)			

#### Reference standards used for presumption of conformity:

Article Number	Requirement	Reference standard(s)
	Low voltage equipment safety	EN 60950-1:2006 +A11:2009 +A1:2010 +A12:2011 +A2:2013
3.1a	DE Eveneure	EN 62311:2008
	RF Exposure	EN 50385:2017
3.1b	Protection requirements with respect to electromagnetic compatibility	EN 301 489-1 v2.2.0 (2017-03) EN 301 489-17 v3.2.0 (2017-03)
3.2	Means of the efficient use of the radio frequency spectrum	EN 300 328 v2.1.1 (2016-11)

#### **Declaration:**

We, Laird, declare under our sole responsibility that the essential radio test suites have been carried out and that the above product to which this declaration relates is in conformity with all the applicable essential requirements of Article 3 of the EU Directive 2014/53/EU, when used for its intended purpose.

Birodiro Edi irodi Edi, milan deda idi i	te interiora parpece.		
	Laird		
Place of Issue:	W66N220 Commerce Court, Cedarburg, WI 53012 USA		
	tel : +1-262-375-4400fax: +1-262-364-2649		
Date of Issue:	January 4 <sup>th</sup> , 2018		
Name of Authorized Person:	Thomas T Smith, Director of EMC Compliance		
Signature of Authorized Person:	Thomas T. Smith		

© Copyright 2019 Laird. All Rights Reserved



## 17 KOREA (KC) REGULATORY

The BT85x is approved for use in the Korean market.

Model	Certificate Number
BT85x	R-C-LAI-BT850-SA

## **18 Ordering Information**

Part Number	Description
BT850-SA	BTv5.0 Dual Mode USB HCI Module – Integrated Antenna
BT851	BTv5.0 Dual Mode USB Dongle
BT850-ST	BTv5.0 Dual Mode USB HCI Module – External Antenna
DVK-BT850-SA	Development Kit for BT850-SA Module – Integrated Antenna
DVK-BT850-ST	Development Kit for BT850-SA Module – External Antenna

## 18.1 General Comments

This is a preliminary datasheet. Please check with Laird for the latest information before commencing a design. If in doubt, ask



### 19 BLUETOOTH SIG APPROVALS

## 19.1 Application Note: Subsystem Combinations

This application note covers the procedure for generating a new Declaration ID for a Subsystem combination on the Bluetooth SIG website. In the instance of subsystems, a member can combine two or more subsystems to create a complete Bluetooth End Product solution.

Subsystem listings referenced as an example:

Table 25: Subsystem combinations

Tubic 20. Gubby Stein Golfminations				
Design Name	Owner	Declaration ID	Link to listing on the SIG website	
BT85x – BTv4.2	Laird	D037603	https://www.bluetooth.org/tpg/QLI_viewQDL.cfm?qid=37603	
BT85x – BTv5	Laird	D043711	https://launchstudio.bluetooth.com/ListingDetails/78666	
Windows 8 (Host Subsystem)	Microsoft Corporation	B012854	https://www.bluetooth.org/tpg/QLI_viewQDL.cfm?qid=12854	

#### 19.1.1 Laird Customer Declaration ID Procedure

This procedure assumes that the member is simply combining two subsystems to create a new design, without any modification to the existing, qualified subsystems. This is achieved by using the Listing interface on the Bluetooth SIG website. Table 25 shows the basic subsystem combination of a controller and host subsystem. The Controller provides the RF/BB/LM and HCI layers, with the Host providing L2CAP, SDP, GAP, RFCOMM/SPP and any other specific protocols and profiles existing in the Host subsystem listing. The design may also include a Profile Subsystem.

The controller provides the RF/BB/LM and HCI layers, with the Host providing L2CAP, SDP, GAP, RFCOMM/SPP and any other specific protocols and profiles existing in the Host subsystem listing. The design may also include a Profile Subsystem.

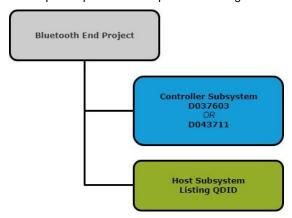


Figure 23: Basic subsystem combination of a controller and host subsystem

The Qualification Process requires each company to registered as a member of the Bluetooth SIG - http://www.bluetooth.org

The following link provides a link to the Bluetooth Registration page: https://www.bluetooth.org/login/register/

For each Bluetooth Design it is necessary to purchase a Declaration ID. This can be done before starting the new qualification, either through invoicing or credit card payment. The fees for the Declaration ID will depend on your membership status, please refer to the following webpage:

https://www.bluetooth.org/en-us/test-qualification/qualification-overview/fees

For a detailed procedure of how to obtain a new Declaration ID for your design, please refer to the following SIG document:

https://www.bluetooth.org/DocMan/handlers/DownloadDoc.ashx?doc\_id=283698&vld=317486

To start the listing, go to: https://www.bluetooth.org/tpg/QLI\_SDoc.cfm.



In step 1, select the option, **Reference a Qualified Design** and enter the Declaration IDs of each subsystem used in the End Product design. You can then select your pre-paid Declaration ID from the drop-down menu or go to the Purchase Declaration ID page, (please note that unless the Declaration ID is pre-paid or purchased with a credit card, it will not be possible to proceed until the SIG invoice is paid.

Once all the relevant sections of step 1 are finished, complete steps 2, 3, and 4 as described in the help document. Your new Design will be listed on the SIG website and you can print your Certificate and DoC.

For further information please refer to the following training material:

https://www.bluetooth.org/en-us/test-qualification/qualification-overview/listing-process-updates

### **20 ADDITIONAL ASSISTANCE**

Please contact your local sales representative or our support team for further assistance:

Laird Connectivity

Support Center: https://www.lairdconnect.com/resources/support

Email: support@lairdconnect.com

Phone: Americas: +1-800-492-2320

Europe: +44-1628-858-940 Hong Kong: +852 2923 0610

Web: https://www.lairdconnect.com/wireless-modules/bluetooth-modules/bluetooth-5-modules/bt850-series

© Copyright 2019 Laird. All Rights Reserved. Patent pending. Any information furnished by Laird and its agents is believed to be accurate and reliable. All specifications are subject to change without notice. Responsibility for the use and application of Laird materials or products rests with the end user since Laird and its agents cannot be aware of all potential uses. Laird makes no warranties as to non-infringement nor as to the fitness, merchantability, or sustainability of any Laird materials or products for any specific or general uses. Laird, Laird Technologies, Inc., or any of its affiliates or agents shall not be liable for incidental or consequential damages of any kind. All Laird products are sold pursuant to the Laird Terms and Conditions of Sale in effect from time to time, a copy of which will be furnished upon request. When used as a tradename herein, *Laird* means Laird PLC or one or more subsidiaries of Laird PLC. Laird™, Laird Technologies™, corresponding logos, and other marks are trademarks or registered trademarks of Laird. Other marks may be the property of third parties. Nothing herein provides a license under any Laird or any third party intellectual property right.

**Europe**: +44-1628-858-940 **Hong Kong**: +852 2923 0610