## Midi free-standing Beacons / EvoSIGNAL Midi TwinLIGHT 115-230VAC YE



ļ

Series:	: 261.310.60 EvoSIGNAL Midi	
Jelles.	LV03IGNAL MIGI	
-	NICAL DATA	
Height		130 mm
Diameter		85 mm
Materials		PC PC/ABS
Dome colour		Yellow
Housing colour		Grey
Protection category		IP66
Connection		Push-in terminal
cross-sectional area minimum		0,25mm² / 24AWG
cross-sectional area maximum		1,50mm² / 16AWG
Working temperature minimum		-30°C
Working temperature maximum		+60°C
Weight with packaging		189 g
Product weight		151 g
ELECTRIC	CAL DATA	
Operating voltage		115-230V
Operating voltage type		AC
Operating voltage frequency		50Hz at 230V 60Hz at 115V
Operating voltage tolerance		+/- 10%
Rated operational voltage		230 VAC
Rated operational current		65 mA
Rated inrush current		7A
Protection class		Protection class 2
Pollution degree		3
Overvolt	age category	II
Isolation voltage		Ui = 250V; Uimp = 2.500V
OPTICAL	. DATA	
Light sou	Irce	LED
Light colour		Yellow
Optical signal image		Blink Permanent TwinLight
Blink frequency (Hz)		1 Hz
Service life optical		50,000 h minimum
Pulse- & pause Duration [ms]		4230N, 4960FF

## APPROVAL DATA

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

ļ


## Midi free-standing Beacons / EvoSIGNAL Midi TwinLIGHT 115-230VAC YE

Conforms with CE	Yes
WEEE	Yes
Conform with ATEX-directive	No
Conforms with CCC	Yes
Conforms with UL	cULus
UL Type Rating	Type 12
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with AS-I	No
ICAO Certification	No
Conforms with GL	No
Conforms with RoHS CN	No
Conforms with VdS	No

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

i

Midi free-standing Beacons / EvoSIGNAL Midi TwinLIGHT 115-230VAC YE

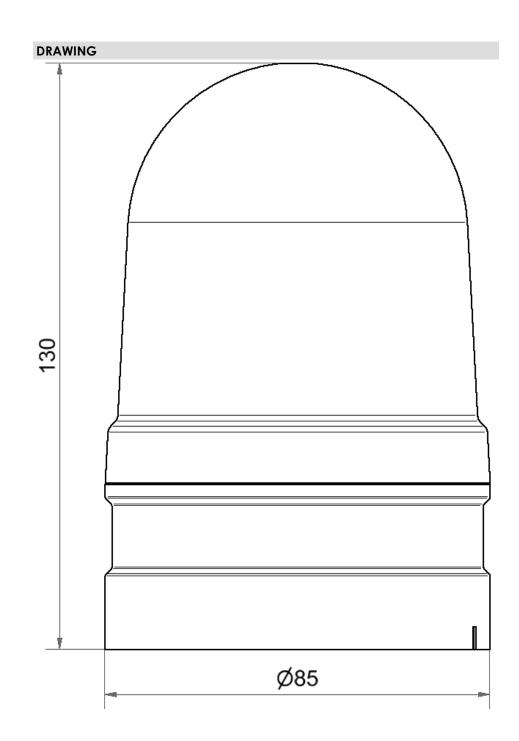

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.