




NEW

## High Performance Reliability

# 3GHz Is Here

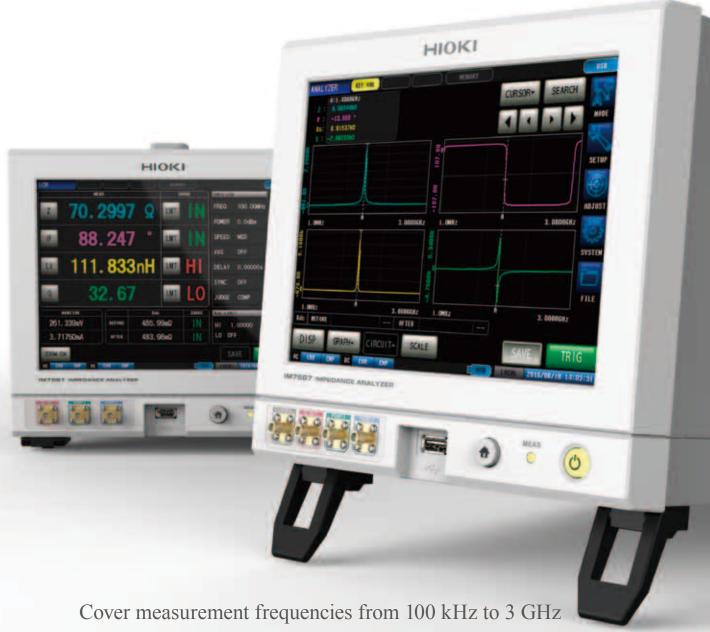

Choose from 5 Models

## High-stability Impedance Measurement up to 3 GHz\*

Cover a wide range of measurement frequencies, from 1 MHz to 3 GHz, with a single device. High-stability measurement with minimal variability delivers outstanding cost performance for research and development.

\* IM7587



## Advanced Design for Reliable Testing

### Stable measurement across a broad range



Test head for the IM7583, IM7585, and IM7587

To achieve favorable frequency characteristics, we painstakingly carried out design true to our basic principles for the individual circuits, board patterning, and case structure.

We also used numerical analysis and in-depth verification to optimize the shield structure and the shape of the internal board pattern, thus fitting all the technology necessary to achieve optimal frequency characteristics from 100 kHz to 3 GHz into a compact body.

For the test head measurement terminals, in order to improve their measurement accuracy over a wide range, we used 3.5 mm (0.14 in) connectors with a wide frequency range, which also boast better removability than other microwave connectors.


### Measurement technology that adds to superior stability



The measurement portion uses a high resolution A/D converter. By controlling the input signal's level and frequency, the A/D converter's dynamic range can be utilized to the fullest, achieving measurement with a wide impedance range and minimum variability.

In the sub FPGA, built into analog circuits, the digital filter applied optimally for each circuit shuts out noise. At the main FPGA, the 64-bit floating point computation is put through a multi-layered pipeline to achieve high-speed computational processing with little margin of error. This helps increase the stability and speed of measurements.

### Large solid shield for improved performance

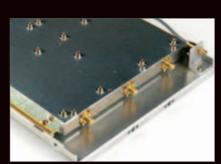

Each section uses a solid shield carved to match the on-board pattern or IC shape, thus reducing internal coupling. The shield

also reduces external radiation and improves noise resistance, meeting a high level of EMC, despite being the lightest in its class.



Inside the solid shield

## High-speed, highly stable measurement

Achieve measurement with both high speed and high stability. Cut takt time and increase productivity.



Measurement frequency 200 kHz

Analog measurement time [ms]


0.02

0.016

0.008

0.004

Repeatability (Z, 3CV) [%]

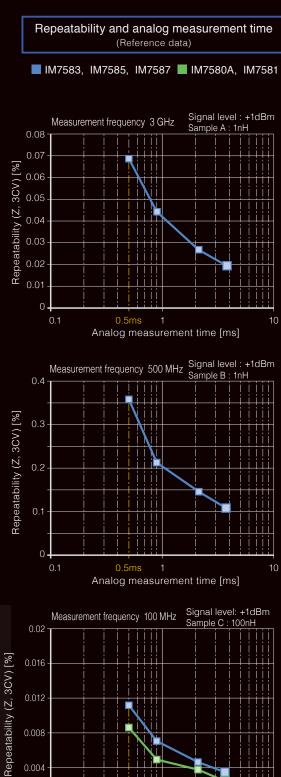

Analog measurement time [ms]

## Space-saving Half-rack Size

Compact form factor – 2 analyzers fit side-by-side on a full-size rack. Remarkably lightweight and compact for a measuring instrument of this class.







### Compact body for greater mobility

The half-rack compact body is light and fit not only for line use, but also when measuring various sites on the go.



### Test head fits in the palm of your hand

The slim profile of the test head lets you install it close to the measurement target to help minimize influence from noise and other effects and enabling more accurate measurement.



### Large display for easy operation

Customize the large screen according to desired brightness, color, and text size to fit your environment.

Highly responsive touch screen makes measurement settings and adjustments even easier.







Customizable text size



Customizable display color (Background and display colors)

## Select Your Testing Frequency from 5 Models



### IMPEDANCE ANALYZER IM7580A

Measurement frequency Measurement range

1 MHz to 300 MHz L: 0.0531 nH to .795 mH

C: 0.1061 pF to i.59 µF (Depending on the measurement frequency)

Measurement signal level Basic accuracy

-40.0 dBm to +7.0 dBm Z: 0.72% rdg. θ: 0.41°

### IMPEDANCE ANALYZER IM7581

Measurement frequency Measurement range

100 kHz to 300 MHz L: 0.00531 nH to 7.95 mH

C: 0.1061 pF to 15.9 µF (Depending on the measurement frequency)

Measurement signal level Basic accuracy

-40.0 dBm to +7.0 dBm

Z: 0.72% rdg. θ: 0.41°

### IMPEDANCE ANALYZER IM7583

Measurement frequency Measurement range

1 MHz to 600 MHz L: 0.0265 nH to 0.795 mH

C: 0.0531 pF to 1.59  $\mu$ F (Depending on the measurement frequency)

Measurement signal level -40.0 dBm to +1.0 dBm Basic accuracy Z: 0.65% rdg. θ: 0.38°



Measurement frequency

1 MHz to 1.3 GHz

Measurement range

L: 0.0123 nH to 0.795 mH

C: 0.0245 pF to 1.59 µF (Depending on the measurement frequency)

Measurement signal level

-40.0 dBm to +1.0 dBm

Basic accuracy

 $Z: 0.65\% \text{ rdg. } \theta: 0.38^{\circ}$ 



Measurement frequency

1 MHz to 3 GHz

Measurement range

L: 0.0053 nH to 0.795 mH

C: 0.011 pF to 1.59 µF (Depending on the measurement frequency)


Measurement signal level -40.0 dBm to +1.0 dBm

Basic accuracy

Z: 0.65% rda. θ: 0.38°



Photo: IM7585

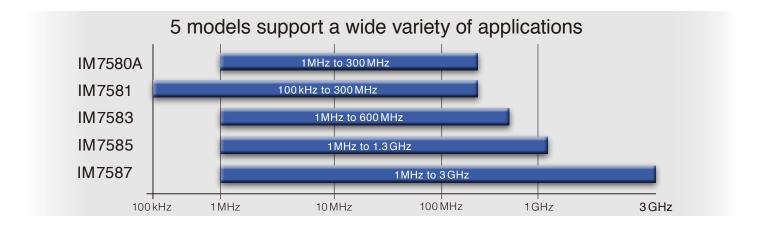

## Dual measurement modes

Display up to four measurement parameters simultaneously.

- Z Impedance
- Y Admittance
- θ Phase angle
- X Reactance
- G ConductanceB Susceptance

Q-factor

- ce Rp Equivalent parallel resistance
  - Ls Equivalent series inductance
  - Lp Equivalent parallel inductance
- Equivalent series resistance (ESR) Cs Equivalent series capacitance
- Cp Equivalent parallel capacitance
- D Loss factor  $\tan \delta$
- V Monitor voltage\*
  - Monitor current\*

\*Analyzer mode only

### LCR Mode

Use LCR Mode to make measurements by applying the desired frequency and level signal to the component being measured. This mode is ideal for evaluating passive samples such as capacitors and coils.

Comparator measurement: Yield a PASS/FAIL judgment for the target sample based on a single judgment criterion.






Upper and lower limit judgment: Set the upper and lower limits. Percentage judgment: Set the upper and lower limits as percentages of the reference value.

Deviation percentage judgment: Set the upper and lower limits as percentages of the reference value. The impedance analyzer will display deviation of the measured value from the reference value ( $\Delta$ %).

Bin measurement: Rank samples using multiple judgment criteria.






Set upper and lower limits for each bin. The impedance analyzer will rank components using up to 10 categories.

\*Upper and lower limit settings are the same as for comparator measurement.

#### Display zoom function



Display measured values using larger text for better visibility on production lines and in other field applications.

#### Monitor function




Display the measurement signal level being applied to components in real time.


Monitor voltage : 0.0 mV to 1000.0 mV Monitor current : 0.000 mA to 20.000 mA

## **Analyzer Mode**

Use Analyzer Mode to perform measurement while sweeping through a range of measurement frequencies and measurement signal levels. This mode is ideal for checking frequency characteristics and level characteristics.

Normal / segment sweep operation: Discover sample characteristics by sweeping through a range of frequencies and levels.





Perform measurement after setting the sweep parameter (frequency or level), sweep range, number of sweep points, and measurement conditions.

Set the sweep parameter, sweep range, number of sweep points, and measurement conditions on a segment-bysegment basis.

Sweep parameters	Frequency/signal level (power, voltage, current)
Number of sweep points/segments	Up to 801 points / Up to 20 segments (with a total of 801 points)
Measurement condition settings	Frequency, level, speed, average

Interval sweep operation: Discover element characteristics over time under set conditions.

Measurement condition settings	Frequency, level, speed, average
Time interval	0 sec. to 1,000 sec.
Number of sweep points/segments	Up to 801 points / Up to 20 segments (with a total of 801 points)

#### Display



The graph display can be switched based on the type of measurement being performed. (with a total of 7 layouts available)

Sweep graph display (1-graph/4-graph display), XY graph display (1-graph/2-graph display), Multi-display (simultaneous display of sweep and XY), List display, Peak display

## Intelligent measurement and analysis

Convenient functionality for performing measurement, reviewing measurement results, and judging measured values.

- Functions available in analyzer mode
- Functions available in LCR mode

## Continuous measurement function



Perform continuous measurement in the order of the measurement conditions saved with the panel save function.

Measurements can combine LCR and Analyzer Mode measurement conditions.



A: Panel numbers set for continuous measurement; B: Measured values; C: Parameter judgment results

Continuous measurement can be performed using up to 46 measurement condition combinations, and can be implemented from EXT I/O.



### Panel save and load function

Save or load the measurement conditions, compensation values, and compensation conditions set in LCR mode or analyzer mode.


Number of panels that can be saved

LCR Mode measurement conditions	30
Analyzer Mode measurement conditions	16

## Measured value search function



The cursor can be moved automatically to a userselected measured value point for one set of sweep measurement results.

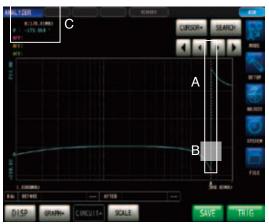

A: Cursor; B: Search result point; C: Measured values at result point

#### Search options

Maximum value	Moves the cursor to the maximum value.
Minimum value	Moves the cursor to the minimum value.
Target	Moves the cursor to a user-set measured value.
L-Max value	Moves the cursor to the local maximum value (a filter can be set).
L-Min value	Moves the cursor to the local minimum value (a filter can be set).

### **Auto search function**

Move the cursor automatically according to userconfigured settings once sweep measurement is complete.

## Area and peak comparison functions


Check whether measured values fall inside a previously configured judgment area. These functions are ideal for use in verifying non-defective products.



### Area judgment

Obtaining an overall judgment for each sweep

Define a range by setting upper and lower limits and display the judgment results as IN or NG.




IN judgment: Inside area

NG judgment: Outside area

#### **Peak judgment** Identifying resonance points

Define a range by setting upper, lower, left, and right limits and display the judgment results as IN or NG.




### Spot judgment

For multiple-frequency simultaneous judgments

This function makes a judgment at a pre-set point during sweeping. (Up to 16 points)


## **Equivalent circuit analysis** function



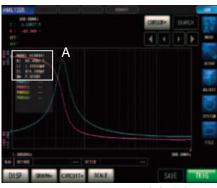

A: Analysis results


Analyze individual component values (L/C/R) for elements in the following five circuits based on measurement results.

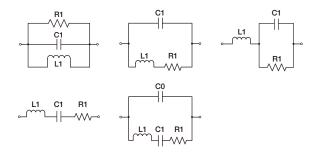

### Simulation function/residual error display $_{\rm Z}$

Perform simulations based on the result of equivalent circuit analyses, compare that to actual measured values, and check the validity of the analysis result.

Display the residual error to check the gap between the actual measurement and simulation numerically.




## Functions for Efficient, Accurate Measurement

Fully equipped with a range of built-in functions necessary for accurate and stable measurement.



To truly measure accurately, all analyzers should first be set up to their optimal state.



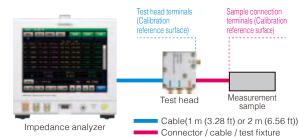

### Open, short, and load calibration

The compensation process involves calibrating the measurement setup, from the impedance analyzer to the reference surface (either the test head terminals or the sample connection terminals). Connect the calibration kit (standard for open, short, and load), measure each piece of calibration data, and remove the cause of the margin of error.

### **Electrical length compensation**

Enter the length of the electrical connection between the reference surface and the measurement sample connection surface to allow compensation of error caused by phase shift.

If mounting a fixture on the test head, it is necessary to enter the fixture's electrical length.

### Open and short compensation

Eliminate the causes of errors (such as fixtures or measurement cables) from the calibration standard surface to the sample connection terminal.

### **Contact check**

Monitor the connection between the measurement terminals and the sample.



Contact check / Hi-Z reject function

DCR measurement

### Hi-Z reject function

Judging the contact state based on measurement results

Activate this function in order to output a measurement terminal contact error if the impedance measured value is greater than a user-configured reference value.

Valid setting range	1 Ω to 10000 Ω
Output format	Screen error display or EXT I/O error output

### **DCR** measurement

Checking contact before and after measurement

This capability is ideal for carrying out contact checks of inductive components with low DC resistance values such as inductors, ferrite cores, and common-mode filters.

Judgments based on user-configured upper and lower contact resistance limits

Guaranteed accuracy range	0.1 Ω to 100 Ω
Measurement timing	Before measurement, after measurement, or before and after measurement
Output format	Screen display / EXT I/O Output



Measured value > Upper limit: Displays "HI." Upper limit ≥ Measured value ≥ Lower limit: Displays "IN." Measured value < Lower limit: Displays "LO."

### Waveform judgment Detecting chatter during function


measurement

Verify that components and terminals are in contact during measurement. The impedance analyzer will output an error if fluctuations in the RMS value exceed a user-configured range that has been set using the initially acquired RMS value waveform as the reference value.

Valid setting range	0.01% to 100.0% of the reference value
Output format	Screen error display or EXT I/O error output

### **Handler Interface**

Perform intricate external control.

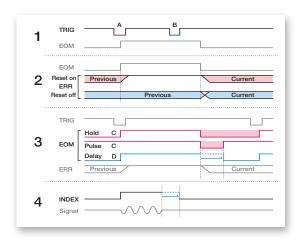

### 1. Trigger input Timing and enable/disable settings

- A Choose to enable or disable trigger input during measurement. By disabling input, you can prevent erroneous input caused by chatter.
- B Select whether to base input timing on the trigger's rising edge or falling edge.

### 2. Reset judgment result

You can set the timing at which judgment results are reset.

On: Reset the previous judgment results at the measurement complete signal's rising edge.

Off: Retain previous judgment until next judgment is output.

#### 3. Measurement complete signal

Output method and output delay

C Select whether to use pulse or hold output for the measurement complete signal.

Pulse: You can set the duration for which the measurement complete signal is placed in the "on" state.

Hold: The measurement complete signal switches from "on" to "off" at trigger input.

D You can set the duration of the delay from output of judgment results to output of the measurement complete signal.

#### 4. Analog measurement signal Output delay

When using trigger-synchronized output, you can ensure that the analog measurement signal is only output once the measurement signal has turned off.

Trigger-synchronized output: The measurement signal is only applied to the sample during measurement.

### Software Full Keyboard


The touch screen is equipped with a full keyboard function. Comfortably and reliably perform various input operations.




### Large Screen for Better Viewing and Control

Larger touch screen than legacy models for improved readability and comfort.

Screen size comparison for the IM3570 and IM7580 at the same ratio

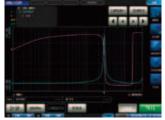



IM7580s screen

IM3570 screen

### Fast Measurement and Easy Screen Display

The multicore CPU achieves both high-speed measurement and high-speed communication, as well as easy screen operation. It is equipped with a display mode that, even with the measurement screen displayed, achieves the same high-speed response as if the screen were off.

## **Expansive Interface**



215 mm (8.46 in)

61 mm (2.40 in) 24 mm (0.94 in) 55 mm (2.17 in)

Test head included with the IM7580A / IM7581


200 mm

90 mm (3.54 in) (0.94 in) (0.94 in)

IM7581 Main unit front (Same as IM7580A)

IM7587 Main unit front (Same as IM7583 / IM7585)

Test head included with the IM7583 / IM7585 / IM7587

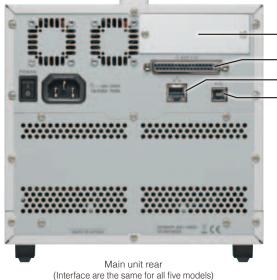

1. GP-IB \*The GP-IB and RS-232C

INTERFACE are optional

- 3. EXT I/O (Handler interface)
- 4 I AN

2. RS-232C

5. USB (for PC connectivity)



GP-IB INTERFACE Z3000



RS-232C INTERFACE Z3001



IM7580A / IM7581 Main unit side



IM7583 / IM7585 / IM7587 Main unit side



## Save measurement conditions and results in a USB flash drive

Use the front USB terminal to save the measurement data, screen shots, or measurement conditions saved to the unit's internal memory to a USB drive.



## Extensive range of interfaces for external control

Use the IM7580's LAN, USB, GP-IB, RS-232C, and EXT I/O interfaces to control the instrument from an external device.

\*The GP-IB and RS-232C INTERFACE are optional

### LAN

Connector	RJ-45 connector
Transmission method	10Base-T, 100Base-Tx, 1000Base-T
Protocol	TCP/IP

### USB (for PC connectivity)

Connector	USB Type B
Electrical specifications	USB 2.0 (High Speed)

### GP-IB (optional)

CONNECTOR	24-PIN
Standard	IEEE 488.1 1987
REFERENCE STANDARD	IEEE 488.2 1987
TERMINATOR	CR+LF, LF

### RS-232C (optional)

Connector	D-sub 9-pin
Flow control	Software
Transmission speed	9600 / 19200 / 38400 / 57600 bps

### EXT I/O

Connector	D-sub 37-pin
	Female #4-40 inch thread
Compatible connectors	DC-37P-ULR (solder)
	DCSP-JB37PR (crimp)
	Japan Aviation Electronics Industry, Ltd.

<sup>\*</sup>For more information, see page 15.

## **Applications**

### Common-mode filter measurement Panel save and continuous measurement

Carry out measurement smoothly, automatically switching compensation values and measurement conditions, such as when measuring a single part with two different measurement methods, or when using different compensation values/measurement conditions for each measurement point.

If measuring a single part with two measurement methods.






### Halve cycle times by using two instruments...

Compact design that fits two instruments into a full-size rack. Using two impedance analyzers simultaneously can dramatically reduce cycle times.



When compensation values and measurement conditions differ for each measurement point



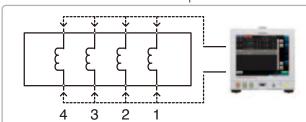

Progressive switching of compensation values and measurement conditions

 $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$ 

### PASS/FAIL judgments of power inductors Comparator function


By using the comparator function's area and peak judgment functions, you can easily differentiate between defective and non-defective components.





Area judgment

Set the judgment area and then check whether component measurement results fall inside that area. This approach is well suited to differentiating between defective and non-defective components.





As illustrated to the left, you can set a range around the peak value and use it to make judgments.





### SMD TEST FIXTURE IM9201 CALIBRATION KIT IM9905

All-in-One Fixture for 6 SMD Sizes - Definitive 3GHz High Frequency Analysis Made Easy.



#### SMD measurement procedure

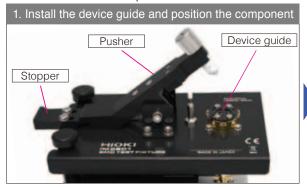

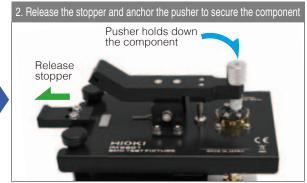

### Instrument / Options



SMD TEST FIXTURE IM9201

The following provisions are required when using the test fixture with the Hioki IM7580 series.



TEST FIXTURE STAND IM9200 (includes magnifying glass)



ADAPTER (3.5 mm to 7 mm) IM9906





### Specifications

-			
Frequency range	DC to 3 GHz		
Compatible package sizes (EIA)	0201, 0402, 0603, 0805, 1206, 1210		
Electrode structure	Bottom electrodes		
Maximum voltage	±42 Vpeak (AC+DC)		
Additional uncertainty	$\begin{split} & \text{Impedance}: \pm \text{Ze [\%]} \\ & \text{Phase}: \pm 0.58 \times \text{Ze [°]} \\ & \text{Ze} = \text{Ae} + (\text{Zse} / \text{Zx} + \text{Yoe} \times \text{Zx}) \times 100 \\ & \text{Zx}: \text{Measured impedance value [}\Omega\text{]} \\ & \text{Ae}: 4 \times \text{f}^2 \text{[\%]} \\ & \text{Zse}: (100 + 500 \times \text{f}) / 1000 \text{[}\Omega\text{]} \\ & \text{Yoe}: (10 + 100 \times \text{f}) / 1000000 \text{[S]} \\ & \text{f [GHz]} \end{split}$		

### Product / Order code

Product name	Order code
SMD TEST FIXTURE IM9201	IM9201
TEST FIXTURE STAND IM9200	IM9200
ADAPTER(3.5 mm to 7 mm) IM9906	IM9906
CALIBRATION KIT IM9905	IM9905

### Measurement parameters and measurement conditions

Measurem modes	nent	LCR mode: Measurement using a single set of conditions Analyzer mode: Sweep measurement and equivalent circuit analysis Continuous measurement mode: Continuous measurement using previously saved conditions				
Measurem parameter		Z Impedance Y Admittance Phase angle X Reactance G Conductance B Susceptance Q Q-factor	Rs Rp Ls Lp Cs Cp D	Equivalent series resistance (ESR) Equivalent parallel resistance Equivalent series inductance Equivalent parallel inductance Equivalent series capacitance Equivalent parallel capacitance Loss factor tan δ		
Display range		Z 0.00 m to 9.99999 GΩ Y 0.000 n to 9.99999 GS θ ±(0.000° to 180.000°) X ±(0.00 m to 9.99999 GΩ) G ±(0.000 n to 9.99999 GS) B ±(0.000 n to 9.99999 GS) Q ±(0.00 to 9999.99)	Rs Rp Ls Lp Cs Cp D	$ \begin{array}{l} \pm (0.00000  \text{n}   \text{to}  9.99999  \text{GH}) \\ \pm (0.00000  \text{n}  \text{to}  9.99999  \text{GH}) \\ \pm (0.00000  \text{p}  \text{to}  9.99999  \text{GF}) \\ \pm (0.00000  \text{p}  \text{to}  9.99999  \text{GF}) \\ \pm (0.00000  \text{to}  9.99999) \end{array} $		
Measurable r	range	100 mΩ to 5 kΩ				
Output imped	tput impedance Approx. 50 Ω					
Measurement frequency	Range	IM7580A 1 MHz to 300 MHz IM7581 100 kHz to 300 MHz IM7583 1 MHz to 600 MHz IM7585 1 MHz to 1.3 GHz IM7587 1 MHz to 3 GHz				
	Resolution	IM7580A  1.0000 MHz to 9.9999 MHz 100 Hz steps 10.000 MHz to 99.999 MHz 1 kHz steps 10.00 MHz to 300.00 MHz 10 kHz steps IM7581 100.00 kHz to 999.99 kHz 10 Hz steps (1.0000 MHz to 300.00 MHz same as IM7580A)				
		IM7583 / IM7585 / IM7587 100 kHz steps				
	Accuracy	±0.01% of setting or less	<u> </u>			
Measurement signal level	Range	IM7580A / IM7581 Power : -40.0 dBm to Voltage : 4 mV to 100 Current : 0.09 mA to 2 IM7583 / IM7585 / IM7585 / Power : -40.0 dBm to Voltage : 4 mV to 502 Current : 0.09 mA to 1	1 mV 20.02 7 5 +1.0 1 mV	rms mA rms ) dBm rms		
			*User-configured power, voltage, and current			
	Resolution					
	Accuracy	±2 dB(23 °C±5 °C), ±4 dB(0 °C to 40 °C)				

### LCR mode

Measurements	Bin measurement: 10 categories for 4 measurement parameters
Weasurements	Comparator measurement: Hi, IN, and Lo judgments for 4 parameters
Functionality	Monitor function Monitor voltage range: 0.0 mV to 1000.0 mV Monitor current range: 0.000 mA to 20.000 mA
Display	Zoom display function: Enlarged display of measured values

### Analyzer mode

Measurements	Sweep measurement Up to 801 sweep points with user-configurable point delay Normal sweep: Measurement of up to 801 points Segment sweep: Up to 20 segments (with a total of 801 points)
	Time interval measurement Interval of 0.00000 sec. to max. 1,000.00 sec., 801 points
Functionality	Equivalent circuit analysis: 5 circuit models Cursor function: Automatically search for maximum and minimum values, target, local maximum and minimum values Comparator function: Area, peak and spot judgment
Display	List display graph display, XY graph display, judgment results display Scaling: Linear or logarithmic

### Continuous measurement mode

Measurements	Continuous measurement using up to 46 combinations of the following measurement conditions:		
	30 LCR mode measurement conditions and 16 analyzer mode measurement conditions		

### Speed and accuracy

Measurement speed	FAST	MED	SLOW	SLOW2	
(analog measurement)	0.5 ms	0.9 ms	2.1 ms	3.7 ms	
Averaging	Valid setting range: 1 to 256 (in steps of 1)				
Pooio occursov	IM7580A / IM7581 Z : 0.72% rdg. θ : 0.41°				
Basic accuracy	IM7583 / IM7585 Z : 0.65% rdg. Θ : 0.38°				
Guaranteed accuracy range	100 m $\Omega$ to 5 k $\Omega$ (impedance)				
Accuracy guaranteed	1 year, Post-adjustment accuracy guaranteed for 1 year				
Terminal design	2-terminal design				

### Supplementary functionality

Trigger function	User-selectable internal or external trigger (EXT I/O, interface, manual) Trigger delay: 0 sec. to 9 sec. Trigger-synchronized output: Stabilization wait time of 0 sec. to 9 sec. INDEX signal delay time of 0 sec. to 0.1 sec. Trigger types: Sequential, repeat, step*1		
Compensation function	Open/short/load calibration: From Main unit to test head Open/load compensation: Compensation of fixture component Electrical length compensation: 0 mm to 100 mm Correlation compensation: Compensation of display values based on user-input compensation coefficient		
Contact check	DCR measurement, Hi-Z reject function, waveform judgment function		

\*1 Analyzer mode only

### Recording and interface

Number of measured values that can be stored in memory	LCR Mode: 32000 Analyzer Mode: 100 sweeps
Panel save and load functions	Measurement conditions: 30 sets for LCR mode, 16 sets for Analyzer mode Compensation values only: 30 sets for LCR mode
Interfaces	HANDLER, USB, LAN, GP-IB (optional), RS-232C (optional)
Command	HIOKI unique SCPI

### Display and sound

Key lock function	Lock operation of the instrument using the panel. Unlock by entering a passcode
Beep tone	Enable or disable for judgment results and key operation
Warm-up function	The instrument will display a message 60 minutes after it is powered on
Selection of number of display digits	3, 4, 5, or 6 digits
Display settings	LCD display on/off Backlight brightness adjustment Measurement screen background color (white or black) Switchable parameter colors
Display	8.4-inch color TFT with touch panel

### Other

Operating temperature and humidity range	0°C to 40°C (32°F to 104°F), 20% RH to 80% RH, non-condensing			
Storage temperature and humidity range	-10°C to 50°C (14°F to 122°F), 20% RH to 80% RH, non-condensing			
Operating environment	Use indoors at an elevation of 2,000 m or less in an environment with a maximum pollution level of 2			
Power supply and maximum rated power	100 V to 240 V AC (50/60 Hz), 70 VA			
Dielectric strength	1.62 kV AC for 1 min. between power line and ground line			
Standards compliance	EMC: EN 61326, EN 61000 Safety: EN 61010			
Dimensions and mass	IM7580A / IM7581 Approx. 215 W×200 H×268 D mm (8.46 W×7.87 H ×10.55 D in), approx. 6.5 kg (229.3 oz)			
	IM7583 / IM7585 / IM7587 Approx. 215 W×200 H×348 D mm (8.46 W×7.87 H ×13.7 D in), approx. 8.0 kg (282.3 oz)			
Accessories	Power cord ×1, Instruction manual ×1, Impedance analyzer application disc ×1			

### Measurement accuracy

### $Z : \pm (Ea + Eb) [\%] \quad \theta : \pm 0.58 \times (Ea + Eb) [\degree]$

Co		

Guaranteed accuracy temperature and humidity range	0°C to 40°C (32°F to 104°F), 20% rh to 80% rh (non-condensing) However, must be within ±5°C of the temperature at the time of calibration.
Guaranteed accuracy period	1 year (with open/short/load calibration enabled)
Open/short/load calibration enabled period	Within 24 hours after calibration
Warm-up time	At least 60 min.
Measurement conditions	Frequency, power, and speed points at which open, short, and load calibration have been performed

### IM7580A / IM7581

Ea = 1.0 + Er (Frequency: 100kHz to 999.99kHz) Ea = 0.5 + Er (Frequency: 1MHz to 300MHz)

F	Cianal laval	Г.	Er a			
Frequency	Signal level	E1	FAST	MED	SLOW	SLOW2
100 kHz to 999.99 kHz	-7 dBm to +7 dBm	α	0.24	0.18	0.15	0.12
100 KHZ 10 999.99 KHZ	-40 dBm to -7.1 dBm	3 × 10 (-0.043P + a)	-1.3	-1.4	-1.5	-1.6
1 MUIn to 100 MUIn	-7 dBm to +7 dBm	α	0.09	0.06	0.036	0.03
1 MHz to 100 MHz	-40 dBm to -7.1 dBm	3 × 10 (-0.046P + a)	-1.8	-2	-2.15	-2.3
100.01 MHz to 300 MHz	-7 dBm to +7 dBm	α	0.108	0.078	0.039	0.036
	-40 dBm to -7.1 dBm	3 × 10 (-0.048P + a)	-1.75	-1.9	-2.1	-2.25

P : Power setting [dBm]

$$Eb = \left( \left| \frac{Zs}{Zx} \right| + Yo \cdot \left| Zx \right| \right) \times 100 \, [\%] \quad (\left| Zx \right| : Z \text{ measured value in } [\Omega] )$$

$$Zs = \frac{(Zsk + Zsr + 0.5 \times F)}{1000} [\Omega] \quad (F: measurement frequency [MHz])$$

Frequency	Zsk
100 kHz to 999.99 kHz	50
1 MHz to 300 MHz	20

Fraguenov	Signal level	Zsr	α			
Frequency	Signal level	251	FAST	MED	SLOW	SLOW2
100 kHz to 999.99 kHz	-7 dBm to +7 dBm	α	36	27	21	15
	-40 dBm to -7.1 dBm	3 × 10 (-0.042P + a)	0.9	0.8	0.7	0.6
1 MHz to 300 MHz	-7 dBm to +7 dBm	α	13.5	9	5.1	3.9
	-40 dBm to -7.1 dBm	3 × 10 (-0.048P + a)	0.36	0.2	0	-0.15

P : Power setting [dBm]

$$Yo = \frac{(Yok + Yor + 0.15 \times F)}{1000000}$$
 [S] (F: measurement frequency [MHz])

Frequency	Yok
100 kHz to 199.99 kHz	120
200 kHz to 300 MHz	30

Fraguanay	Signal level	Yor	α			
Frequency	Signal level	101	FAST	MED	SLOW	SLOW2
100 kHz to 999.99 kHz	-7 dBm to +7 dBm	α	15	12	6.6	5.4
	-40 dBm to -7.1 dBm	6 × 10 (-0.043P + α)	0.6	0.5	0.4	0.3
1 MHz to 300 MHz	-7 dBm to +7 dBm	α	7.5	5.7	3.3	2.4
	-40 dBm to 7.1 dBm	3 × 10 (-0.046P + a)	0.1	0	-0.2	-0.4

P : Power setting [dBm]

### IM7583 / IM7585 / IM7587

#### Ea:

_	Cignal laval	Ea			
Frequency	Signal level	FAST	MED	SLOW	SLOW2
	+1 dBm	0.581	0.557	0.532	0.524
1 MHz to 100 MHz	-22.9 dBm to +0.9 dBm	1.005	0.815	0.71	0.63
	-40 dBm to -23 dBm	3.622	2.501	1.7	1.43
	+1 dBm	0.652	0.634	0.621	0.616
100.1 MHz to 500 MHz	-22.9 dBm to +0.9 dBm	0.858	0.769	0.71	0.678
	-40 dBm to -23 dBm	1.72	1.336	1.06	0.85
	+1 dBm	0.86	0.841	0.823	0.818
500.1 MHz to 1300 MHz	-22.9 dBm to +0.9 dBm	1.093	0.988	0.92	0.881
	-40 dBm to -23 dBm	2.068	1.625	1.31	1.16
	+1 dBm	2.066	2.037	2.025	2.02
1300.1 MHz to 1800 MHz	-22.9 dBm to +0.9 dBm	2.381	2.228	2.128	2.113
	-40 dBm to -23 dBm	5.773	4.156	3.423	3.133
	+1 dBm	4.539	4.5	4.46	4.437
1800.1 MHz to 3000 MHz	-22.9 dBm to +0.9 dBm	4.867	4.753	4.608	4.547
	-40 dBm to -23 dBm	9.748	7.682	6.468	5.874

$$Eb = \left( \left| \frac{Zs}{Zx} \right| + Yo \cdot \left| Zx \right| \right) \times 100 \ [\%] \quad (\left| Zx \right| : Z \text{ measured value in } [\Omega] )$$


$$Z_{S} = \frac{(Z_{ST} + 0.5 \times F)}{1000} [\Omega]$$
 (F: measurement frequency [MHz])


Fraguenau	Cianal laval	Zsr			
Frequency	Signal level	FAST	MED	SLOW	SLOW2
	+1 dBm	41.7	37.6	34.3	32.3
1 MHz to 300 MHz	-22.9 dBm to +0.9 dBm	75.4	62.9	49.4	43.1
	-40 dBm to -23 dBm	495.66	293.25	185.7	142.05
	+1 dBm	61.7	57.6	54.3	52.3
300.1 MHz to 1000.0 MHz	-22.9 dBm to +0.9 dBm	95.4	82.9	69.4	63.1
	-40 dBm to -23 dBm	515.66	313.25	205.7	162.05
	+1 dBm	111.7	107.6	104.3	102.3
1000.1 MHz to 1300 MHz	-22.9 dBm to +0.9 dBm	145.4	132.9	119.4	113.1
	-40 dBm to -23 dBm	565.66	363.25	255.7	212.05
	+1 dBm	112.8	108.7	104.7	103.9
1300.1 MHz to 1800 MHz	-22.9 dBm to +0.9 dBm	145.4	132.9	119.4	113.1
	-40 dBm to -23 dBm	565.66	363.25	255.7	212.05
	+1 dBm	212.8	208.7	204.7	203.9
1800.1 MHz to 3000 MHz	-22.9 dBm to +0.9 dBm	245.4	232.9	219.4	213.1
	-40 dBm to -23 dBm	665.66	463.25	355.7	312.05

$$Y_{0} = \frac{-(Yor + 0.15 \times F)}{1000000}$$
 [S] (F: measurement frequency [MHz])


Fraguanau	Cianal laval		Y	or	
Frequency	Signal level	FAST MED		SLOW	SLOW2
	+1 dBm	15.6	13.8	12.3	11.8
1 MHz to 300 MHz	-22.9 dBm to +0.9 dBm	48	35.6	25.5	21.7
	-40 dBm to -23 dBm	277.15	193.45	122.5	87.1
300.1 MHz to 1000.0 MHz	+1 dBm	35.6	33.8	32.3	31.8
	-22.9 dBm to +0.9 dBm	68	55.6	45.5	41.7
	-40 dBm to -23 dBm	297.15	213.45	142.5	107.1
	+1 dBm	45.6	43.8	42.3	41.8
1000.1 MHz to 1300 MHz	-22.9 dBm to +0.9 dBm	78	65.6	55.5	51.7
	-40 dBm to -23 dBm	307.15	223.45	152.5	117.1
	+1 dBm	75.6	73.8	72.3	71.8
1000.1 MHz to 1300 MHz	-22.9 dBm to +0.9 dBm	108	95.6	85.5	81.7
	-40 dBm to -23 dBm	337.15	253.45	182.5	147.1
	+1 dBm	143.2	140.2	135.9	134.6
1000.1 MHz to 1300 MHz	-22.9 dBm to +0.9 dBm	168	155.6	145.5	141.7
	-40 dBm to -23 dBm	397.15	313.45	242.5	207.1

### Basic measurement confirmation table

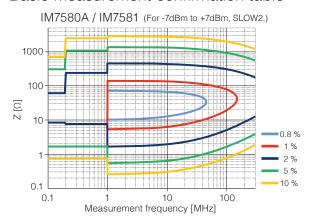

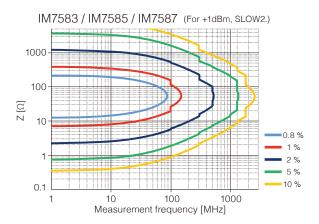


### Range of measurements

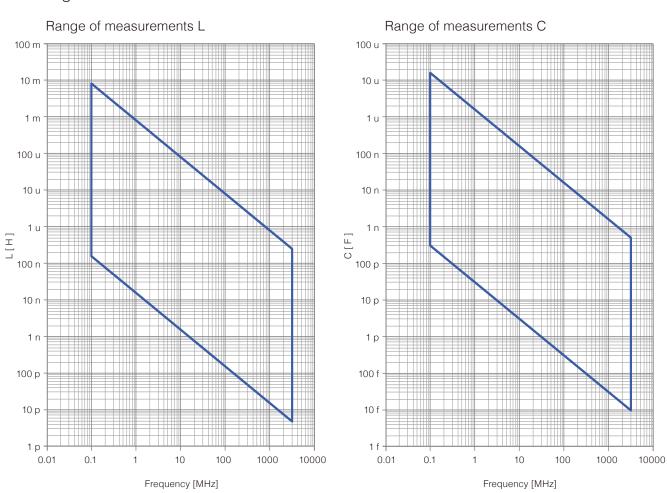

### External control

### List of EXT I/O handler interface signals


Pin	I/O	Signal
1	IN	TRIG
2	IN	Unused
3	IN	Unused
4	IN	LD1
5	IN	LD3
6	IN	LD5
7	IN	Unused
8	-	ISO_5V
9	-	ISO_COM
10	OUT	ERR
11	OUT	PARA1-HI,BIN1,PARA1-NG
12	OUT	PARA1-LO,BIN3,PARA2-NG
13	OUT	PARA2-IN,BIN5,PARA3-NG
14	OUT	AND,BIN7
15	OUT	PARA3-IN,BIN9,PARA4-IN
16	OUT	PARA4-HI
17	OUT	PARA4-LO
18	OUT	Unused
19	OUT	OUT_OF_BINS,CIRCUIT_NG
20	IN	Unused
21	IN	Unused
22	IN	LD0
23	IN	LD2
24	IN	LD4
25	IN	LD6
26	IN	LD_VALID
27	-	ISO_COM
28	OUT	EOM
29	OUT	INDEX
30	OUT	PARA1-IN,BIN2,PARA1-IN
31	OUT	PARA2-HI,BIN4,PARA2-IN
32	OUT	PARA2-LO,BIN6,PARA3-IN
33	OUT	PARA3-HI,BIN8,PARA4-NG
34	OUT	PARA3-LO,BIN10
35	OUT	PARA4-IN
36	OUT	Unused
37	OUT	Unused





Signal			Function			
TRIG		External trigge	External trigger			
LD0 to LD6	LD0 to LD6		Panel number selection			
EOM		Measurement	complete signal			
INDEX		Analog measu	rement complete signal			
ERR		Detection leve	l error			
LD_VALID		Panel load				
ISO_5V		Isolated power	r supply 5 V input			
ISO_COM		Isolated power	r supply common			
PARA1-HI to	PARA4-HI	Comparator jud	dgment result: HI judgment			
PARA1-IN to	PARA4-IN	Comparator jud	dgment result: IN judgment			
PARA1-LO t	to PARA4-LO	Comparator jud	Comparator judgment result: LO judgment			
OUT_OF_B	INS	Bin measurem	Bin measurement result			
BIN1-BIN10	)	Bin judgment a	Bin judgment allocation: Bin 1 to Bin 10			
CIRCUIT_N	G		Equivalent circuit analysis: Comparator judgment result			
PARA1-NG	to PARA4-NG	Peak judgmen	Peak judgment result			
PARA1-IN to	PARA3-IN	Peak judgmen	Peak judgment result			
AND		operation to jud measured valu	Result of applying a logical AND operation to judgment results for measured values for four parameters (output when all judgment results are IN)			
Connector	D-sub 37-pin	Compatible	DC-37P-ULR (solder)			
used	Female #4-40 inch	_ Compatible connectors	DCSP-JB37PR (crimp)			
	thread	_	Japan Aviation Electronics Industry, Ltd.			
Photocoupler-isolated no-voltage contact input						

	D-sub 37-pin			DC-37P-ULN (solder)			
Connector	Female #4-40		Compatible connectors	DCSP-JB37PR (crimp)			
useu	thread	J IIICH	connectors	Japan Aviation Electronics Industry, Ltd.			
			Photocoupler-isolated, no-voltage contact input				
	Input signals	Input "on" voltage: 0 V to 0.9 V / input "off" voltage: open or 5 V to 24 V					
	Output signals	Isolated NPN open collector output					
Electrical specifications		Maximum load voltage: 30 V / maximum output current: 50 mA/channel					
specifications		Residual voltage: 1 V or less (10 mA) or 1.5 V or less (50					
	Built-in isolated	Voltage: 4.5 V to 5 V / maximum output current: 100 mA					
	power supply	Floating relative	to protective ground	potential and measurement circuit			

### Timing chart

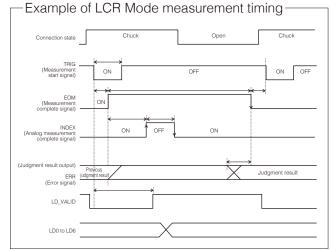



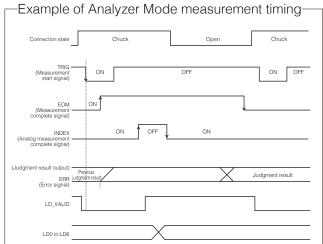

EOM: Off from trigger input to end of measurement processing INDEX: Off during probe chuck (probe cannot be removed from target)





### Product / Order code

Model (Measurement frequency)	Connection cable length	Order code
IMPEDANCE ANALYZER <b>IM7580A</b> (1 MHz to 300 MHz)	1 m (3.28 ft)	IM7580A - 1
	2 m (6.56 ft)	IM7580A - 2
IMPEDANCE ANALYZER <b>IM7581</b> (100 kHz to 300 MHz)	1 m (3.28 ft)	IM7581 - 01
	2 m (6.56 ft)	IM7581 - 02
IMPEDANCE ANALYZER <b>IM7583</b> (1 MHz to 600 MHz)	1 m (3.28 ft)	IM7583 - 01
	2 m (6.56 ft)	IM7583 - 02
IMPEDANCE ANALYZER <b>IM7585</b> (1 MHz to 1.3 GHz)	1 m (3.28 ft)	IM7585 - 01
	2 m (6.56 ft)	IM7585 - 02
IMPEDANCE ANALYZER <b>IM7587</b> (1 MHz to 3 GHz)	1 m (3.28 ft)	IM7587-01
	2 m (6.56 ft)	IM7587 - 02

Composition: Main unit, Test Head, Connection cable

Accessories: Power cord, Instruction manual, Impedance analyzer application disc

Test fixtures or probes are not included with the main unit. Dedicated test fixture required. (See page 14 in this catalog.)



Accuracy calculation with included software

Free software for automatically calculating measurement accuracy based on user-entered measurement conditions and measurement results can be downloaded from Hioki's website.

### **Options**

### Interfaces



GP-IB INTERFACE Z3000



GP-IB CONNECTION CABLE 9151-02 Cable length: 2 m (6.56 ft)



RS-232C INTERFACE Z3001



RS-232C CABLE 9637 Cable length: 1.8 m (5.91 ft)

\*Any interlink-compatible cross-cable can be used as the RS-232C CABLE.

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.

**DISTRIBUTED BY** 



#### **HEADQUARTERS**

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 http://www.hioki.com/E-mail: os-com@hioki.co.jp

HIOKI SINGAPORE PTE. LTD. TEL +65-6634-7677 FAX +65-6634-7477 E-mail: info-sg@hioki.com.sg

HIOKI (Shanghai) SALES & TRADING CO., LTD. TEL +86-21-63910090 FAX +86-21-63910360 http://www.hioki.cn / E-mail: info@hioki.com.cn

HIOKI KOREA CO., LTD. TEL +82-2-2183-8847 FAX +82-2-2183-3360 E-mail: info-kr@hioki.co.jp

HIOKI USA CORPORATION
TEL +1-609-409-9109 FAX +1-609-409-9108
http://www.hiokiusa.com / E-mail: hioki@hiokiusa.com