



Description

The product has taken the most popular ceiling speaker features, and put them together in a single, preassemble package, thus saving the installation time and money. Increased magnet size and power capacity, combined with six transformer taps from 1/3W to 10W, enables one package to work in a wide variety of applications.

This speaker is specifically designed to quickly install in conventional 2'x2' or 2'x4' drop ceilings. The included load support places the weight of the speaker on the tile grid, not the ceiling tile, preventing future issues with tiles sagging or breaking.

Features

- 8" dual cone full range speaker
- 10 oz. magnet
- 8Ω impedance (with transformer bypassed)
- Power capacity: 10W/20W RMS/program
- Frequency response: 50Hz ~ 16.5kHz
- Voice coil diameter: 1"
- Sensitivity: 86dB (W/M)

Transformer Connections		
Black:	Common (-)	
Red:	0.325W	15kΩ
Brown:	0.625W	7.8kΩ
Orange:	1.25W	3.9kΩ
Yellow:	2.5W	1.9kΩ
White:	5W	980kΩ
Blue	10W	490kΩ


Ceiling Speaker Contain Kit

- Ceiling baffle cover
- Tile grid load bearing support
- 8" Dual Cone Speaker
- 10W / 70V transformer
- Mounting screws

Drop Ceiling Speaker System **multicomp** PRO


Installation Instruction

Remove the ceiling tile section occupying the desired speaker location. Determine the desired location of the speaker within that tile.



24" x 24" Ceiling Tile


Draw two perpendicular lines to cross in the direct centre of the tile. In a 2' x 2' tile, the speaker must be located directly in the centre.

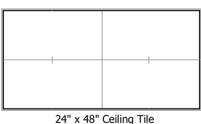

24" x 48" Ceiling Tile


Draw two perpendicular lines to cross in the direct centre of the tile.

Note that on a 24" x 48" tile, the speaker does not have to be in the exact centre, but must be centered within 12" of either side.

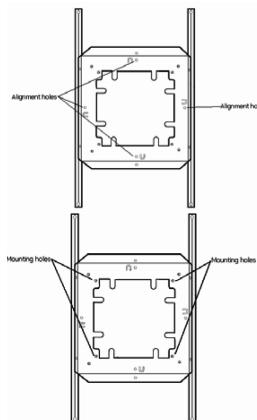

Lay the load bearing support on the back of the tile.

Look at the four alignment holes located on the support and make certain that your drawn perpendicular lines are centered on within all four of these holes.

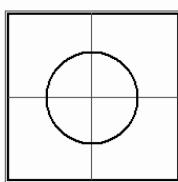

24" x 24" Ceiling Tile

On the back of the ceiling tile, once you have established the centerpoint for the speaker location, draw a 9" diameter circle (4.5" radius from the center point) on the tile surface.

Using a suitable cutting tool, such as a drywall saw, Rotozip™ type saw or other similar device, cut out the 9" diameter circle.

Placing the tile section face down on the top of a large trash can greatly eases this process. The sides of the trash can provide optimal support on all sides of the opening, the opening in the trash can allows plenty of room for the saw blade, and all debris falls directly into the trash can. With the tile section still facing down, place the speaker/baffle assembly directly over the hole to

Newark.com/multicomp-pro


Farnell.com/multicomp-pro

sg.element14.com/b/multicomp-pro

multicomp PRO

Drop Ceiling Speaker System **multicomp** PRO

ensure there is sufficient room for the speaker frame and attached transformer to fit through the opening. Remove the speaker baffle assembly and lay the "H-frame" load bearing support bracket on the back of the tile.

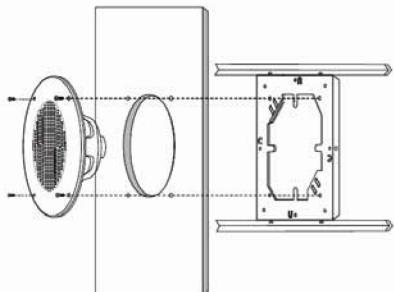

With the load bearing support on the back of the tile, place the speaker/baffle assembly on the front of the tile.

Using the four included machine screws, attach the speaker/baffle assembly to the load bearing support, with the ceiling tile sandwiched between them as shown.

Tighten the screws only enough for a snug fit. Over tightening may cause baffle to warp.

Part Number Table

Description	Part Number
Drop Ceiling Speaker 10W / 70V Transformer	555-9018

Important Notice : This data sheet and its contents (the "Information") belong to the members of the AVNET group of companies (the "Group") or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but the Group assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where the Group was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict the Group's liability for death or personal injury resulting from its negligence. Multicomp Pro is the registered trademark of Premier Farnell Limited 2019.