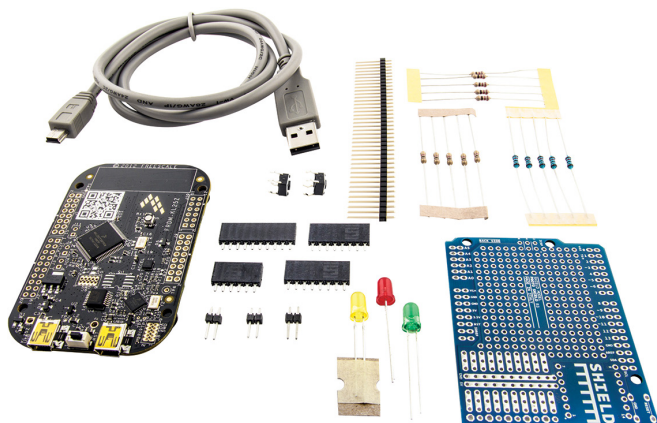# Eval Proto Kit
Kinetis KL25Z Freedom Platform

freescale™

Description:

The Freescale Freedom development platform is a low-cost evaluation and development platform featuring Freescale's newest ARM® Cortex™-M0+ based Kinetis KL25Z MCUs

Specifications:

Silicon Manufacturer	: Freescale
Core Architecture	: ARM
Core Sub-Architecture	: Cortex - M0+
Silicon Core Number	: MKL2
Silicon Family Name	: Kinetis - KL2

Features:

- KL25Z128VLK4-Cortex-M0+ MCU with:
  - 128kB flash, 16kB SRAM
  - Up to 48MHz operation
  - USB full-speed controller
- OpenSDA-sophisticated USB debug interface
- Tri-color LED
- Capacitive touch "slider"
- Freescale MMA8451Q accelerometer
- Flexible power supply options
  - Power from either on-board USB connector
  - Coin cell battery holder (optional population option)
  - 5V to 9V$_{VIN}$ from optional IO header
  - 5V provided to optional IO header
  - 3.3V to or from optional IO header
- Reset button
- Expansion IO form factor accepts peripherals designed for Arduino™-compatible hardware
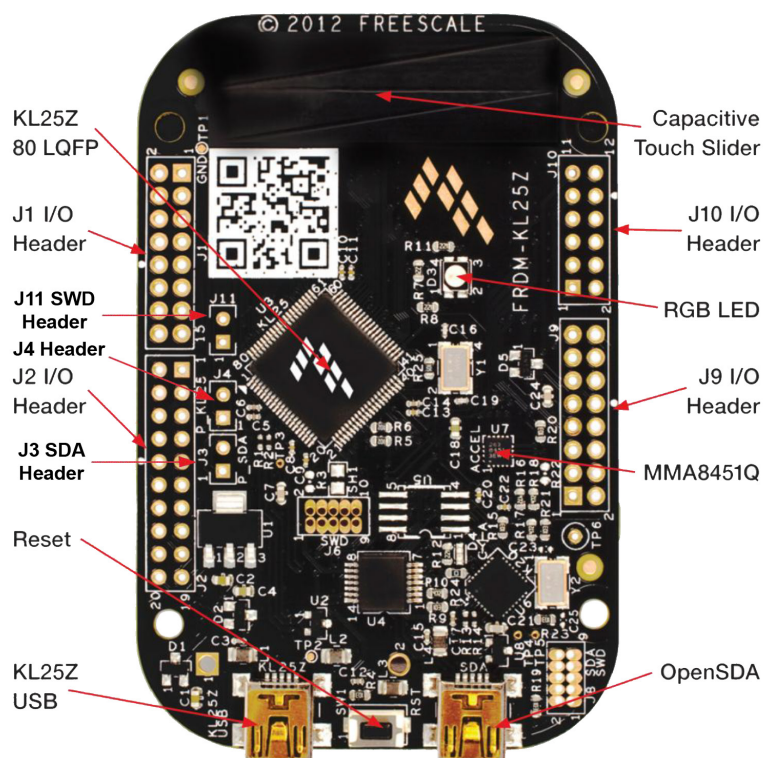
Kit Contents:

Description	Qty	Part Number
Samtec Socket, 2.54mm, 1 × 6 Pos	1	SSW-106-01-T-S
Samtec Socket, 2.54mm, 1 × 8 Pos	2	SSW-108-01-T-S
Samtec Socket, 2.54mm, 1 × 10 Pos	1	SSW-110-01-T-S
Samtec Header, 2.54mm, THT VERT, 2 Pos	3	TSW-102-07-T-S
Multicomp Mini USB cable	1	SPC20060
Freescale Freedom Platform	1	FRDM-KL25Z
Arduino Proto Shield Kit	1	A000083

Ordering Information

Description	Part Number
Eval Proto Kit, Kinetis KL25Z Freescale Freedom Platform	FRDMKL25Z PROTO BUNDLE

freescale™

Eval Proto Kit
Kinetis KL25Z Freedom Platform

freescale™

KL25Z
80 LQFP

J1 I/O
Header

**J11 SWD
Header**

J4 Header

J2 I/O
Header

**J3 SDA
Header**

Reset

KL25Z
USB

Capacitive
Touch Slider

J10 I/O
Header

RGB LED

J9 I/O
Header

MMA8451Q

OpenSDA

FRDM-KL25Z Single Row/Arduino Header Layout

NOTE: Mount headers
to outside row of
holes

KL25Z Signals
Arduino™ R3 Signals

	20 – PTE0	I2C_SCL
	18 – PTE1	I2C_SDA
	16 – VREFH	AREF
	14 – GND	GND
	12 – PTD1	D13
	10 – PTD3	D12
	8 – PTD2	D11
	6 – PTD0	D10
	4 – PTD5	D9
	2 – PTA13	D8

Not Used	SDA_PTD5 – 2	
IOREF	P3V3 – 4	
RESET	RESET – 6	
3.3V	P3V3 – 8	
5V	P5V_USB – 10	
GND	GND – 12	
GND	GND – 14	
Vin	P5-9V_VIN – 16	

	16 – PTC9	D7
	14 – PTC8	D6
	12 – PTA5	D5
	10 – PTA4	D4
	8 – PTA12	D3
	6 – PTD4	D2
	4 – PTA2	D1
	2 – PTA1	D0

A0	PTB0 – 2	
A1	PTB1 – 4	
A2	PTB2 – 6	
A3	PTB3 – 8	
A4	PTC2 – 10	
A5	PTC1 – 12	

Eval Proto Kit
Kinetis KL25Z Freedom Platform

freescale™
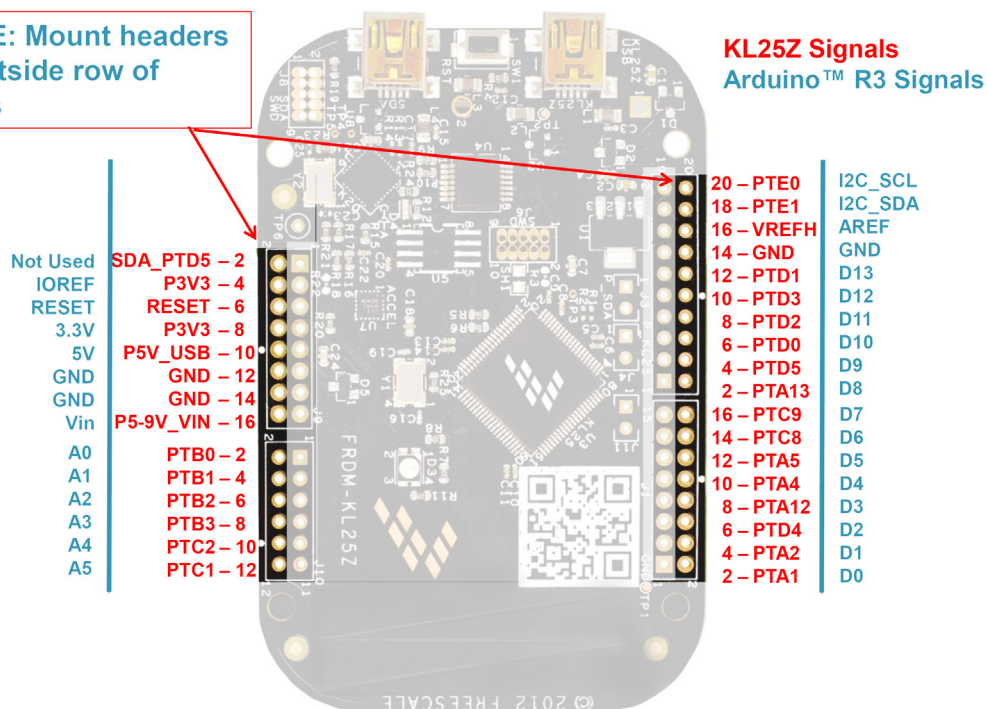
Attaching Single Row Headers to the Freedom Platform

This special bundle includes headers that can be soldered to the board to give you access to additional Arduino™-compatible hardware – commonly referred to as "Shields".

To attach the single row headers to the Freedom Platform, please reference the "FRDM-KL25Z Single Row/Arduino Header Layout" diagram. Attaching these headers to the outside row of I/O holes on the board give you access to the unlimited potential of access to peripherals designed for Arduino™-compatible hardware. Using optional dual row headers are also acceptable, but are not needed to use Arduino™-compatible hardware/ shields.

Header	Positions on Board
SAMTEC SSW-106-01-T-S	J10
SAMTEC SSW-108-01-T-S	J1,J9
SAMTEC SSW-110-01-T-S	J2
SAMTEC TSW-102-07-T-S	J3, J4, J11 *

* Three of these headers have been included for additional/ advanced features that are available on positions J3, J4, and J11 and are not necessary for use with Arduino™-compatible hardware/ shields . Details of their functionality can be found in the Freedom Platform documentation.

Arduino Proto Shield Kit Content:

Material	Qty
Straight single line pinhead connectors 40 × 1	1
Straight single line pinhead connectors 3 × 2	1
PCB Pushbutton	2
Red LED	1
Yellow LED	1
Green LED	1
10KΩ Resistors 1/4W	5
220Ω Resistors 1/4W	5
1KΩ Resistors 1/4W	5

On the Proto Shield PCB you will find:

• ICSP header
• Led1 and Led2 headers (with resistor headers)
• S1 Button header
• SOIC prototyping area up to 14-pin SOIC chip, narrow medium or wide package.
• 10 bigger holes for special needs
• Long and easy-to-solder ground / 5V rails

The 1.0 standard pinout consist in 4 additional pins: 2 of them placed near the AREF pin, that are used for TWI communication, and the other 2 are placed near the RESET pin. The IOREF pin is used to adapt the shield to the board on which is mounted. The last one is not connected and is reserved for future uses.

freescale™