


# **Ø22**mm **XW** Series Emergency Stop Switches

(Mechanical Indicator)

Normal/latched status can be checked from a distance with the mechanical indicator function. The smooth ridgeless button prevents dust build-up and assures comfortable operation.

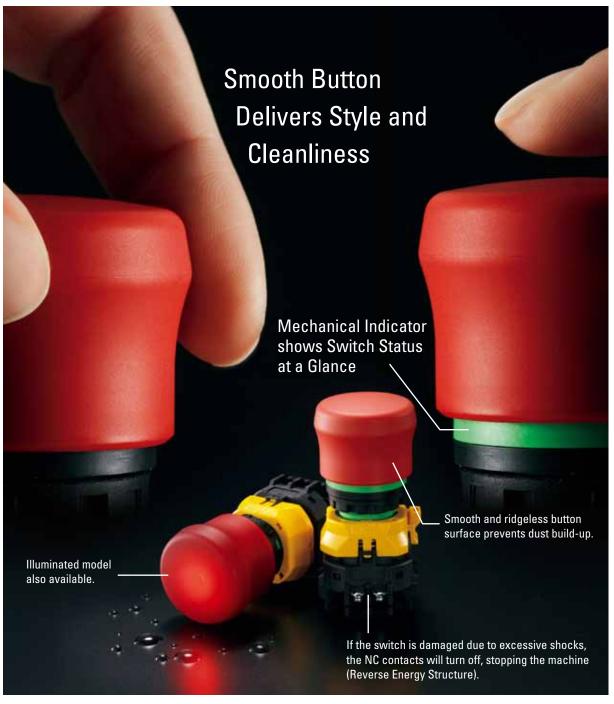

# XW Series

The safety mechanism ensures the XW contacts open (safe) even when damaged by excessive shocks (reverse energy structure, safe break

**Excellent safety mechanisms including a** mechanical indicator that shows contact status



The smooth and ridge-free button surface prevents dust build-up, and is also easy to clean. Ideal for applications such as food processing machines.

> IDEC's sleek, smooth design reduces operator stress and fatigue.

Mechanical Indicator – the operator body of the switch is green when the contacts are closed, the green is hidden when the switch is actuated.

NC contacts ON (button not pressed)


NC contacts OFF

(button latched)

Safety for operators, machines and systems

# Reverse Energy Structure

With XW series emergency stop switches, the potential energy level of the latched status is lower than that of the normal status. When the switch is damaged due to excessive shocks, the NC contacts will turn off, thus stopping the machine (patented design).

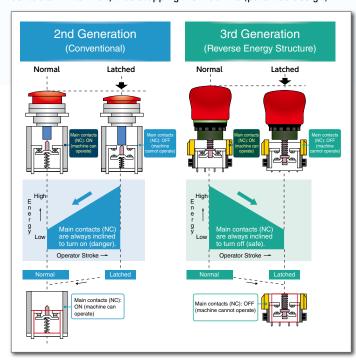

# Safe Break Action


When the contact block is detached from the operator, the NC contact opens (OFF).



When the contact block is detached from the operator, the cam directly opens the NC main contacts (contacts are off).

# Resetting

XW series can be reset easily either by pulling or turning.

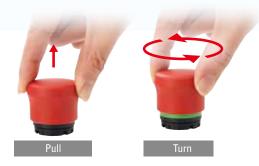

# **Complies with International Standards**

# Safety Lock Mechanism



The emergency stop signal shall be maintained until the emergency stop device is reset (disengaged). (IEC 60947-

Complies to international safety standards











# Direct Opening Action



All normally closed contact elements of an emergency stop devices shall have a direct opening action (positive opening action), according to annex K of IEC 60947-5-1. (IEC 60947-5-5; 5.2)

# **Ø22** XW Series Emergency Stop Switches (Mechanical Indicator)

# High level of safety with Safe Break Action. Mechanical indicator on the operator body shows the contact status - green when NC contacts are closed - reducing maintenance.

- IDEC's original "Safe Break Action" and "Reverse Energy Structure" ensure the safety of operator and system, when the switch is damaged due to excessive shocks.
- The mechanical indicator on the operator body shows the normal/latched status (green: normal). Reduces maintenance and improves operation
- Illuminated model also available (same size as non-illuminated)
- The depth behind the panel is only 46.4 mm (w/terminal cover).
- 1 to 4NC main contacts and 1 or 2NO monitor contact
- Push-to-lock, Pull or Turn-to-reset operator
- Direct opening action mechanism (IEC 60947-5-5, 5.2, IEC 60947-5-1, Annex K)
- Safety lock mechanism (IEC 60947-5-5, 6.2)
- Durable gold-plated contacts
- Finger-safe structure (IP20)
- UL, c-UL listed. EN compliant.
- UL NISD category



Applicable Standards	Mark	File No. or Organization
UL508 CSA C22.2 No. 14	CUL US	UL/c-UL Listing File No. E68961
IEC60947-5-5 UL991 NFPA79 EN418	EMERGENCY STOP DEVICE	UL Listing File No. E305148
EN60947-5-1	TOV	TÜV SÜD
EN60947-5-5 (Note)	CE	EU low voltage directive
GB14048.5	@	CCC No. 2012010305589649

# **Contact Ratings** (NC main contacts/NO monitor contact)

	ted Insulat Itage (Ui)	ion	Screw Terminal	250V			
Rated Thermal Current (Ith)			5A				
Rated Operating Voltage (Ue)			30V	125V	250V		
		AC	Resistive Load (AC-12)	_	5A	3A	
Operating Curren		50/60 Hz	Inductive Load (AC-15)	_	3A	1.5A	
			Resistive Load (DC-12)	2A	0.4A	0.2A	
			Inductive Load (DC-13)	1A	0.22A	0.1A	
	AC 50/60 F	AC	Resistive Load (AC-12)	_	1.2A	0.6A	
		50/60 Hz	Inductive Load (AC-14)	_	0.6A	0.3A	
	Contacts	DC	Resistive Load (DC-12)	2A	0.4A	0.2A	
	DC	Inductive Load (DC-13)	1A	0.22A	0.1A		

- Minimum applicable load: 5V AC/DC, 1 mA (reference value)
- (Operating area depends on the operating conditions and load types.)

   The rated operating currents are measured at resistive/inductive load types specified in JIS

# **Illumination Ratings**

Rated Voltage	Operating Voltage	Rated Current
24V AC/DC	24V AC/DC ±10%	15 mA

Note: An LED lamp is built into the contact block and cannot be replaced.



# **Specifications**

Specifications			
Applicable Standards	IEC60947-5-5, EN60947-5-5 JIS C8201-5-1, UL508, UL991, NFPA79, CSA C22.2 No. 14, GB14048.5		
Operating Temperature	Non-illuminated: -25 to +60°C (no freezing) LED illuminated: -25 to +55°C (no freezing)		
Storage Temperature	-45 to +80°C (no freezing)		
Operating Humidity	45 to 85% RH (no condensation)		
Operating Force	Push to lock:       32N         Pull to reset:       21N         Turn to reset:       0.27 N·m		
Minimum Force Required for Direct Opening Action	80N		
Minimum Operator Stroke Required for Direct Opening Action	4.0 mm		
Maximum Operator Stroke	4.5 mm		
Contact Resistance	50 m $Ω$ maximum (initial value)		
Insulation Resistance	100 $M\Omega$ minimum (500V DC megger)		
Overvoltage Category	II		
Impulse Withstand Voltage	2.5 kV		
Pollution Degree	3		
Operation Frequency	900 operations/hour		
Shock Resistance	Operating extremes: 150 m/s² Damage limits: 1000 m/s²		
Vibration Resistance	Operating extremes:10 to 500 Hz, amplitude 0.35 mm, acceleration 50 m/s <sup>2</sup> Damage limits: 10 to 500 Hz, amplitude 0.35 mm, acceleration 50 m/s <sup>2</sup>		
Mechanical Life	250,000 operations minimum		
Electrical Life	100,000 operations minimum 250,000 operations minimum (24V AC/DC, 100 mA)		
Degree of Protection	Panel front: IP65 (IEC 60529) Terminal Protection: IP20 (screw terminal, when using XW9Z-VL2MF)		
Short-circuit Protection	250V/10A fuse (Type aM, IEC60269-1/IEC60269-2)		
Conditional Short-circuit Current	1000A		
Terminal Style	M3 screw terminal		
Recommended Tightening Torque for Locking Ring	2.0 N·m		
Connectable Wire	0.75 to 1.25 mm <sup>2</sup> (AWG18 to 16)		
Recommended Tightening Torque for Terminal Screw	0.6 to 1.0 N·m		

# **Ø22** XW Series Emergency Stop Switches (w/Mechanical Indicator)

# **Mechanical Indicator Model**

Non-illuminated Pushlock Pull/Turn Reset (Screw Terminal with Terminal Cover)

Shape	NC Main Contact	NO Monitor Contact	Part Number	Button Color Code
ø38 mushroom with	1NC	_	XW1E-BV4TG01MR	
mechanical indicator	2NC	_	XW1E-BV4TG02MR	
A CONTRACTOR OF THE PARTY OF TH	3NC	_	XW1E-BV4TG03MR	
	4NC	_	XW1E-BV4TG04MR	D (rod)
	1NC	1N0	XW1E-BV4TG11MR	R (red)
C. UL US	2NC	1NO	XW1E-BV4TG12MR	
EMERGENCY STOP LETED DEVICE	3NC	1NO	XW1E-BV4TG13MR	
<b>⊕</b> (€ @ <del>)</del>	2NC	2N0	XW1E-BV4TG22MR	

<sup>•</sup> Pushlock pull/turn reset switches are locked when pressed, and reset when pulled or turned clockwise.


# Illuminated Pushlock Pull/Turn Reset (Screw Terminal with Terminal Cover)

Shape	Illumination	Rated Voltage	NC Main Contact	NO Monitor Contact	Part Number	Button Color Code
ø38 mushroom with mechanical indicator	LED 24V AC/DC		1NC	_	XW1E-LV4TG01Q4MR	D (rod)
mechanical mulcator			2NC	_	XW1E-LV4TG02Q4MR	
c(U <sub>1</sub> ) us UNTED EMERGENCY STOPPE LEYER DEVICE			3NC	_	XW1E-LV4TG03Q4MR	
			4NC	_	XW1E-LV4TG04Q4MR	
			1NC	1NO	XW1E-LV4TG11Q4MR	R (red)
			2NC	1NO	XW1E-LV4TG12Q4MR	
			3NC	1NO	XW1E-LV4TG13Q4MR	
			2NC	2N0	XW1E-LV4TG22Q4MR	

<sup>•</sup> Pushlock pull/turn reset switches are locked when pressed, and reset when pulled or turned clockwise.

# **Dimensions (mm)**

Screw Terminal (w/terminal cover)

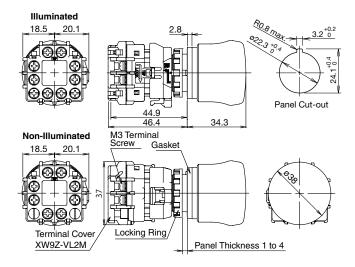

<sup>•</sup> LED lamp is not removable.


# **Mounting Hole Layout**

# <u>ø22.3</u> <sup>+0.4</sup>0 All dimensions in mm.

Screw Terminal 70 mm minimum

- The values shown above are the minimum dimensions for mounting with other ø22mm emergency stop switches.
- For other emergency stop switches of different sizes and styles, determine the values according to the dimensions, operation, and wiring convenience.

# **LED Internal Circuit**

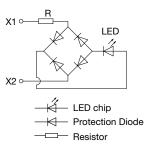

# **Terminal Arrangement (Bottom View)**

## Screw Terminal Non-illuminated

NC main contacts (black): Terminals 1-2

NC main contacts (black): Terminals 1-2 NO monitor contacts (blue): Terminals 3-4

With 2NO monitor contacts NC main contacts (black): Terminals 1-2 NO monitor contacts (blue): Terminals 3-4

# Screw Terminal Illuminated

NC main contacts (black) Terminals 1-2

With 1NO monitor contacts NC main contacts (black): Terminals 1-2 NO monitor contacts (blue): Terminals 3-4


With 2NO monitor contacts NC main contacts (black): Terminals 1-2 NO monitor contacts (blue): Terminals 3-4




Terminals on right 2NC: Terminals on right and Terminals on right, left,

TOF \*1 \*2 ş-<u>-</u> γ

Terminals on top Terminals on right and left

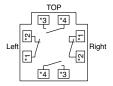


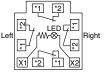


TOF

Terminals on right 2NC: Terminals on right and

3NC: Terminals on right, left and top

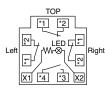

Terminals on top Terminals on right and left

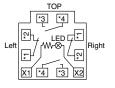

# **Accessories**

and top

Description & Shape	Material	Part Number	Remarks
Ring Wrench	Metal (nickel-plated brass) (weight: approx. 150g)	MW9Z-T1	Used to tighten the locking ring when installing the XW emergency stop switch onto a panel.      110     0
Terminal Cover	PPE	XW9Z-VL2M	Black     Used for screw terminals.     Attached to IP20 protection cover units.
IP20 Protection Cover	Polyamide	XW9Z-VL2MF	Black Used on terminals for IP20 finger protection. Only solid wires can be used. The IP20 protection cover cannot be removed once installed.


<sup>•</sup> Screw terminal model has a terminal cover or IP20 protection cover.

# Nameplate (for ø22 Emergency Stop Switches)

Description	Legend	Part Number	Material	Plate Color	Legend Color
For ø38/40mm Button	(blank)	HWAV-0-Y			_
	EMERGENCY STOP	HWAV-27-Y	Polyamide	Yellow	Dlook
	EMERGENCY OFF	HWAV-74-Y	Toryamiao		Black

# Dimensions (mm)

Nameplate for ø38/40 Button

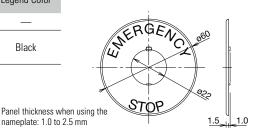

# **Ø22** XW Series Emergency Stop Switches (w/Mechanical Indicator)

# Shrouds

Appearance	Part Number	E-Stop Types	Applicable Standards	
C	HW9Z-KG1	40mm Mushroom Head	SEMI S2-0703, 12.5.1 Compliant	
	HW9Z-KG2	40mm, and 60mm Mushroom Head	SEMI S2-0703, 12.5.1 & SEMATECH Compliant	

Appearance	Part Number	E-Stop Types	Applicable Standards
1	HW9Z-KG3	40mm Mushroom Head	SEMI S2 Compliant (Approved by TUV)
1	HW9Z-KG4	40mm Mushroom Head	SEMI S2 Compliant (Approved by TUV) & SEMATECH

# **Safety Precautions**


- Turn off power to the XW series emergency stop switch before starting installation, removal, wiring, maintenance, and inspection of the relays. Failure to turn power off may cause electrical shock or fire hazard.
- For wiring, use wires of the proper size to meet the voltage and current require-

ments. Tighten the M3 terminal screw to a tightening torque of 0.6 to 1.0 N·m. Failure to tighten the terminal screws may cause overheating and fire

# Instructions

# **Removing the Contact Block**

Unlock the operator button. Pull the bayonet ring ① back until the latch pin clicks @, then turn the contact block counterclockwise and pull out 3.

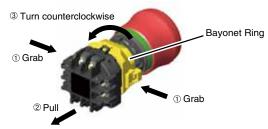


Notes for removing the contact block

- 1. When the contact block is removed, the monitor contact (NO contact)
- 2. While removing the contact block, do not exert excessive force, otherwise the switch may be damaged.
- 3. An LED lamp is built into the contact block for illuminated pushbuttons. When removing the contact block, pull the contact block straight out to prevent damage to the LED lamp. If excessive force is exerted, the LED lamp may be damaged and fail to light.


# **Panel Mounting**

Remove the locking ring from the operator. Insert the operator from panel front into the panel hole. Face the side without thread on the operator with the TOP marking upward, and tighten the locking ring using ring wrench MW9Z-T1 to a torque of 2.0 N·m maximum.

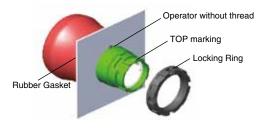


# **Installing the Contact Block**

Unlock the operator button. Align the small ▼ marking on the edge of the operator with the small  $\blacktriangle$  marking on the yellow bayonet ring. Hold the contact block, not the bayonet ring. Press the contact block onto the operator and turn the contact block clockwise until the bayonet ring clicks.

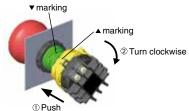

Notes for installing the contact block


Make sure that the bayonet ring is in the locked position. Check that the two projections on the bayonet ring are securely in place.

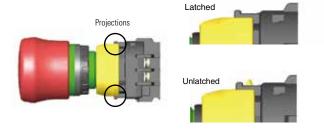

# Instructions (con't)

# Wiring

1. Wire thickness: 0.75 to 1.25 mm<sup>2</sup> (AWG18 to 16)

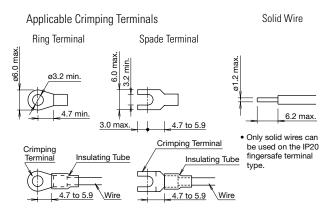


Be sure to install an insulating tube on the crimping terminal.


2. Tighten the M3 terminal screw to a tightening torque of 0.6 to 1.0

# **Installing & Removing Terminal Covers** (XW9Z-VL2M)

To install the terminal cover, align the TOP marking on the terminal cover with the TOP marking on the contact block. Place the two projections on the bottom side of the contact block into the slots in the terminal cover. Press the terminal cover toward the contact block.

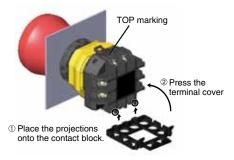


To remove the terminal cover, pull out the two latches on the top side of the terminal cover. Do not exert excessive force to the latches, otherwise the latches may break.

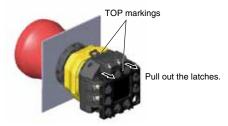

# **IP20 Protection Terminal Cover (XW9Z-VL2MF)**

To install the IP20 protection cover, align the TOP marking on the cover with the TOP marking on the contact block, and press the cover toward the contact block.

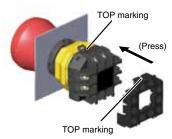

- 1. Once installed, the XW9Z-VL2MF cannot be removed.
- 2. The XW9Z-VL2MF cannot be installed after wiring.
- 3. With the XW9Z-VL2MF installed, crimping terminals cannot be used. Use solid wires.
- 4. Make sure that the XW9Z-VL2MF is securely installed. IP20 cannot be achieved when installed loosely, and electric shocks may occur.

# **Contact Bounce**


When the button is reset by pulling or turning, the NC main contacts will bounce. When pressing the button, the NO monitor contacts will bounce. When designing a control circuit, take the contact bounce time into consideration (reference value: 20 ms).

## **LED Illuminated Switches**

An LED lamp is built into the contact block and cannot be replaced.

# **Nameplate**

When anti-rotation is not required, remove the projection from the nameplate or switch guard using pliers.

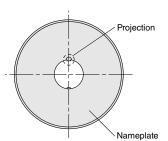

# Handling

Do not expose the switch to excessive shocks and vibrations, otherwise the switch may be deformed or damaged, causing malfunction or operation failure.



Specifications and other descriptions in this catalog are subject to change without notice.



# **IDEC CORPORATION**

7-31, Nishi-Miyahara 1-Chome, Yodogawa-ku, Osaka 532-8550, Japan Tel: +81-6-6398-2571, Fax: +81-6-6392-9731 E-mail: marketing@idec.co.jp

# IDEC CORPORATION (USA)

1175 Elko Drive Sunnyvale, CA 94089-2209, USA Tel: +1-408-747-0550 / (800) 262-IDEC (4332) Fax: +1-408-744-9055 / (800) 635-6246 E-mail: opencontact@idec.com

# IDEC CANADA LIMITED

3155 Pepper Mill Court, Unit 4 Mississauga, Ontario, L5L 4X7, Canada Tel: +1-905-890-8561 Toll Free: (800) 262-IDEC (4332) Fax: +1-905-890-8562 E-mail: sales@ca.idec.com

# IDEC AUSTRALIA PTY. LTD.

Unit 17, 104 Ferntree Gully Road, Oakleigh, Victoria 3166, Australia Tel: +61-3-8523-5900, Toll Free: 1800-68-4332 Fax: +61-3-8523-5999 E-mail: sales@au.idec.com

# IDEC ELECTRONICS LIMITED Unit 2, Beechwood, Chineham Business Park, Basingstoke, Hampshire RG24 8WA, UK Tel: +44-1256-321000, Fax: +44-1256-327755

E-mail: sales@uk.idec.com IDEC ELEKTROTECHNIK GmbH

# Wendenstrasse 331, 20537 Hamburg, Germany Tel: +49-40-25 30 54 - 0, Fax: +49-40-25 30 54 - 24 E-mail: service@idec.de

IDEC (SHANGHAI) CORPORATION Room 701-702 Chong Hing Finance Center, No. 288 Nanjing Road West, Shanghai 200003, PRC Tel: +86-21-6135-1515

# Fax: +86-21-6135-6225 / +86-21-6135-6226

E-mail: idec@cn.idec.com

# IDEC (BEIJING) CORPORATION Room 211B, Tower B, The Grand Pacific Building, 8A Guanghua Road, Chaoyang District, Beijing 100026, PRC

Tel: +86-10-6581-6131, Fax: +86-10-6581-5119

# IDEC (SHENZHEN) CORPORATION Unit AB-3B2, Tian Xiang Building, Tian'an Cyber Park, Fu Tian District, Shenzhen, Guang Dong 518040, PRC Tel: +86-755-8356-2977, Fax: +86-755-8356-2944

IDEC IZUMI (H.K.) CO., LTD.

Units 11-15, Level 27, Tower 1, Millennium City 1, 388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong Tel: +852-2803-8989, Fax: +852-2565-0171 E-mail: info@hk.idec.com

# **IDEC TAIWAN CORPORATION**

8F-1, No. 79, Hsin Tai Wu Road, Sec. 1, Hsi-Chih District, 22101 New Taipei City, Taiwan Tel: +886-2-2698-3929, Fax: +886-2-2698-3931 E-mail: service@tw.idec.com

# IDEC IZUMI ASIA PTE. LTD.

No. 31, Tannery Lane #05-01, HB Centre 2, Singapore 347788 Tel: +65-6746-1155, Fax: +65-6844-5995 E-mail: info@sg.idec.com

www.IDEC.com