

Intel® NUC Pro Board Element CMB1BB Product Specification

Revision 1.1

Regulatory Model: CM1BB

July 2020

Intel® NUC Pro Board Element CMB1BB may contain design defects or errors known as errata that may cause the product to deviate from published specifications. Current characterized errata, if any, are documented in this product specification.

Revision History

| Revision | evision Revision History Date | |
|----------|-------------------------------------------------------------|--------------|
| 1.0 | First release | October 2019 |
| 1.1 | Added back panel power connector section and vPro® section. | July 2020 |

Disclaimer

This product specification applies only to the standard Intel® NUC Pro Board Element CMB1BB.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL* PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER, AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. UNLESS OTHERWISE AGREED IN WRITING BY INTEL, THE INTEL PRODUCTS ARE NOT DESIGNED NOR INTENDED FOR ANY APPLICATION IN WHICH THE FAILURE OF THE INTEL PRODUCT COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR.

All Intel® NUC Pro Board Elements are evaluated as Information Technology Equipment (I.T.E.) for use in personal computers (PC) for installation in homes, offices, schools, computer rooms, and similar locations. The suitability of this product for other PC or embedded non-PC applications or other environments, such as medical, industrial, alarm systems, test equipment, etc. may not be supported without further evaluation by Intel.

Intel Corporation may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Intel may make changes to specifications and product descriptions at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Intel processor numbers are not a measure of performance. Processor numbers differentiate features within each processor family, not across different processor families: Go to:

Learn About Intel® Processor Numbers

Intel® NUC Pro Board Elements may contain design defects or errors known as errata, which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications before placing your product order

Intel, the Intel logo and Intel Core are trademarks of Intel Corporation in the U.S. and/or other countries.

* Other names and brands may be claimed as the property of others.

Copyright © 2020 Intel Corporation. All rights reserved.

Preface

This Product Specification specifies the layout, components, connectors, power and environmental features for the Intel® NUC Pro Board Element CMB1BB.

Intended Audience

This document is intended to provide technical information about Intel® NUC Pro Board Element CMB1BB and its components to the vendors, system integrators, and other engineers and technicians who need this level of information. It is specifically not intended for general audiences.

What This Document Contains

| Chapter | Description | |
|---------|-------------------------------------------------------------|--|
| 1 | A description of the NUC Pro Board Element CMB1BB | |
| 2 | A technical description of the NUC Pro Board Element CMB1BB | |

Typographical Conventions

This section contains information about the conventions used in this specification. Not all of these symbols and abbreviations appear in all specifications of this type.

Notes, Cautions, and Warnings



NOTE

Notes call attention to important information.



A CAUTION

Cautions are included to help you avoid damaging hardware or losing data.

Other Common Notation

| # | Used after a signal name to identify an active-low signal (such as USBPO#) | |
|-------|----------------------------------------------------------------------------------------------------------------|--|
| GB | Gigabyte (1,073,741,824 bytes) | |
| GB/s | Gigabytes per second | |
| Gb/s | Gigabits per second | |
| КВ | Kilobyte (1024 bytes) | |
| Kb | Kilobit (1024 bits) | |
| kb/s | 1000 bits per second | |
| МВ | Megabyte (1,048,576 bytes) | |
| MB/s | Megabytes per second | |
| Mb | Megabit (1,048,576 bits) | |
| Mb/s | Megabits per second | |
| TDP | Thermal Design Power | |
| Xxh | An address or data value ending with a lowercase h indicates a hexadecimal value. | |
| x.x V | Volts. Voltages are DC unless otherwise specified. | |
| * | This symbol is used to indicate third-party brands and names that are the property of their respective owners. | |

Intel® NUC Pro Board Element Information

NUC Pro Board Element CMB1BB Identification Information

| AA Revision | Product Code | Notes |
|-------------|--------------|-------|
| K53779-302 | BKCMB1BB | 1 |

Notes:

Specification Changes or Clarifications

The table below indicates the Specification Changes or Specification Clarifications that apply to the Intel® NUC Pro Board Element BKCMB1BB.

Specification Changes or Clarifications

| Date | Type of Change | Description of Changes or Clarifications |
|------|----------------|------------------------------------------|
| | | |
| | | |

Errata

Current characterized errata, if any, will be documented in Section 0 of this Product Specification.

^{1.} The AA number is found on the bottom of the board.

Contents

| Re | evision History | ii |
|----|-----------------------------------------------------|----------|
| | Disclaimer | ii |
| Pr | reface | iii |
| | Intended Audience | iii |
| | What This Document Contains | |
| | Typographical Conventions | iii |
| | Intel® NUC Pro Board Element Information | iv |
| | Specification Changes or Clarifications | iv |
| | Errata | iv |
| C | ontents | v |
| 1 | Product Description | 7 |
| | 1.1 Overview | 7 |
| | 1.2 Feature Summary | 7 |
| 2 | Technical Reference | 9 |
| | 2.1 Block Diagram | 9 |
| | 2.2 Features | 10 |
| | 2.3 USB 2.0 Headers | 11 |
| | 2.4 Embedded DisplayPort Connector | |
| | 2.5 Fan Headers | |
| | 2.6 Power Input Connector | |
| | 2.7 Front Panel Header | |
| | 2.8 Power Connector | |
| | 2.9 Wireless Enable/Disable Switch | |
| | 2.10 Intel® vPro® Technology | |
| | 2.11 Power | |
| | 2.12 Mechanical | |
| | 2.13 Thermal | |
| _ | | |
| 3 | Characterized Errata | 18 |
| c: | iguros | |
| | gures | • |
| - | gure 1. Block Diagram | |
| | gure 2. Features (Top) gure 3. Features (Bottom) | |
| | gure 4. Wireless Enable/Disable Switch Location | |
| | gure 5. CMP1PP Dimonsions | 14 15 |

Tables

| Table 1. | Feature Summary | 7 |
|----------|-----------------------------------------|----|
| | Features | |
| Table 3. | USB 2.0 Header Pinout | 11 |
| Table 4. | eDP Connector Pinout | 12 |
| Table 5. | Fan Header Pinout | 13 |
| Table 6. | Power Input Connector Pinout | 13 |
| Table 7. | Front Panel Header Pinout | 13 |
| Table 8. | Wireless Enable/Disable Switch Settings | 14 |
| Table 9. | Environmental Specifications | 17 |

1 Product Description

1.1 Overview

The Intel® NUC Pro Board Element CMB1BB is a board only solution for the Intel® NUC Compute Element and consists of a connector for the NUC Compute Element to plug into along with input/output connectors and headers.

The Intel® NUC Pro Board Element CMB1BB requires a compatible Intel® NUC Compute Element in order to operate.

For information on compatible devices for use with the Intel® NUC Pro Board Element CMB1BB see http://www.intel.com/NUCElements.



NOTE

The Intel® NUC Pro Board Element CMB1BB has been certified for use as a component in Information Technology Equipment in certain countries. The system integrator is responsible for testing and acquiring any additional country-specific regulatory approvals, including all systemwide certifications.

1.2 Feature Summary

Table 1 summarizes the major features of the Intel® NUC Pro Board Element CMB1BB.

Table 1. Feature Summary

| Board Size | 110 millimeters by 80 millimeters by 1.6 millimeters | |
|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|--|
| Graphics | One HDMI* 2.0a Connector on the back panel | |
| | One HDMI 2.0a Connector on the board edge | |
| | One eDP 1.4 Connector on the board edge | |
| | High-Bandwidth Digital Content Protection 2.2 support for content protection | |
| | Up to 4K @ 60 Hz Resolutions and refresh rates supported | |
| Audio | Intel® High Definition (Intel® HD) Audio via HDMI | |
| Storage A single M.2 2280 Connector supporting PCIe x4 NVMe or SATA SSD | | |
| • Four USB 3.x1 Ports on the back panel | | |
| | Two USB 2.0 headers | |
| Front Panel Header Single 1x10 header | | |
| Wired Network | Intel® Ethernet Connection i219-LM | |
| | One RJ-45 jack | |
| Support for Intel® vPro™ Technology (When using a vPro™ enabled Element) | | |
| Wireless LAN Intel® NUC Compute Element supplies the solution, antennas will be requ | | |
| Power Input | 12-24 V DC | |
| Compute Module Connector | Lotes APCI0468-P001A01 Edge Mount Connector | |

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

Intel® NUC Pro Board Element CMB1BB Product Specification

To find information about...

Intel® NUC Compute Element

Intel® NUC Pro Board Element Support

Intel® NUC Element Warranty Information

Available configurations for Intel® NUC Pro Board

Compute Element

Intel Processors

Intel Graphics

Intel Wireless
Intel Technologies

Visit this World Wide Web site:

https://www.intel.com/ComputeElements

https://www.intel.com/ComputeElementsSupport

http://www.intel.com/NUCWarranty

https://ark.intel.com

https://www.intel.com/processors

https://www.intel.com/graphics

https://www.intel.com/wireless

https://www.intel.com/technology

2 Technical Reference

2.1 Block Diagram

Figure 1 is a block diagram of the major functional areas of Intel® NUC Pro Board Element CMB1BB.

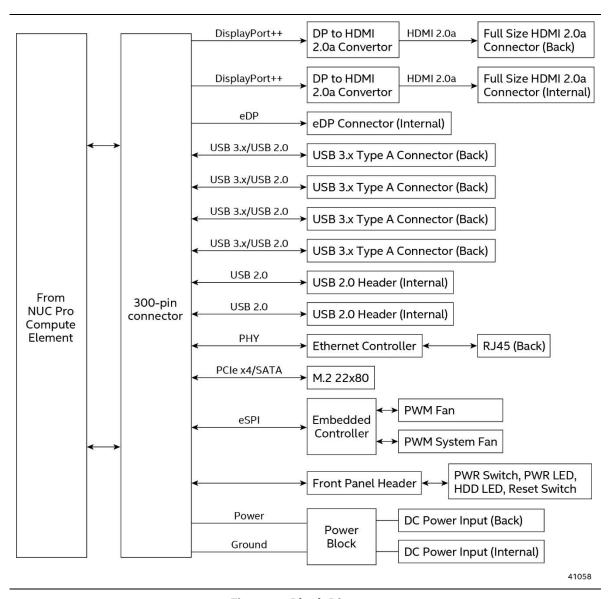


Figure 1. Block Diagram

2.2 Features

The NUC Pro Board Element CMB1BB has a 300-pin edge connector. Each side of the board and the back panel have input/output connectors and headers. See the below figures for the locations of the connectors, headers and switches.

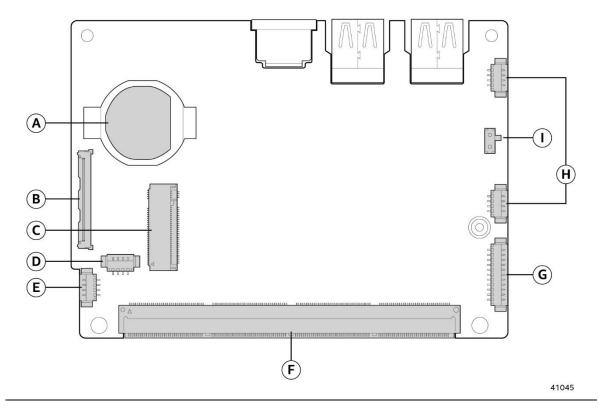


Figure 2. Features (Top)

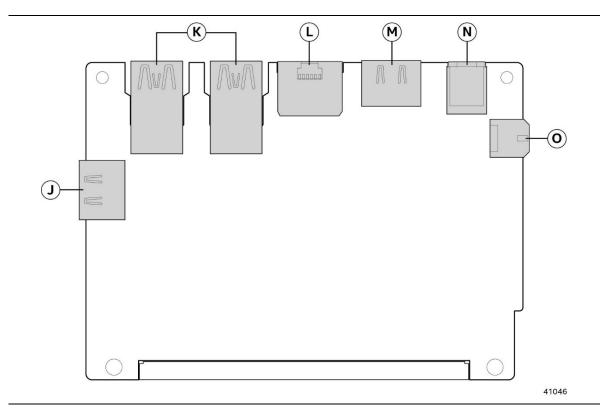


Figure 3. Features (Bottom)

Table 2. Features

| Item | Description | Item | Description |
|------|--------------------------------------|------|--------------------------------|
| Α | Battery | I | Wireless Enable/Disable Switch |
| В | Embedded DisplayPort (eDP) Connector | J | HDMI Port |
| С | M.2 Connector (NVMe/SATA | K | USB 3.x ¹ Ports |
| D | System Fan Header (black) | L | Ethernet Connector (RJ-45) |
| E | Thermal Solution Fan Header (black) | М | HDMI Port |
| F | 300-pin Connector | N | Power Input Jack |
| G | Front Panel Header | 0 | 2x2 Power Input Connector |
| Н | USB 2.0 Headers (white) | | |

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

2.3 USB 2.0 Headers

The NUC Pro Board Element CMB1BB has two white, 1x4, 1.25mm pitch right angled USB 2.0 headers.

Table 3. USB 2.0 Header Pinout

| Pin | Signal Name | Description |
|-----|-------------|---------------|
| 1 | +5 V DC | Voltage In |
| 2 | D- | Data Minus |
| 3 | D+ | Data Positive |
| 4 | GND | Ground |

2.4 Embedded DisplayPort Connector

The NUC Pro Board Element CMB1BB has a 1x40, 0.5mm pitch, right angled Embedded DisplayPort (eDP) connector.

Table 4. eDP Connector Pinout

| Pin | Signal Name | Description |
|-----|---------------|---------------------------------------|
| 1 | NC - RESERVED | Reserved for LCD manufacturer's use |
| 2 | H_GND | High Speed Ground |
| 3 | Lane3_N | Complement Signal Link Lane 3 |
| 4 | Lane3_P | True Signal Link Lane 3 |
| 5 | H_GND | High Speed Ground |
| 6 | Lane2_N | Complement Signal Link Lane 2 |
| 7 | Lane2_P | True Signal Link Lane 2 |
| 8 | H_GND | High Speed Ground |
| 9 | Lane1_N | Complement Signal Link Lane 1 |
| 10 | Lane1_P | True Signal Link Lane 1 |
| 11 | H_GND | High Speed Ground |
| 12 | Lane0_N | Complement Signal Link Lane 0 |
| 13 | Lane0_P | True Signal Link Lane 0 |
| 14 | H_GND | High Speed Ground |
| 15 | AUX_CH_P | True Signal Auxiliary Channel |
| 16 | AUX_CH_N | Complement Signal Auxiliary Channel |
| 17 | H_GND | High Speed Ground |
| 18 | LCD_VCC | LCD logic and driver power (Vcc3) |
| 19 | LCD_VCC | LCD logic and driver power (Vcc3) |
| 20 | LCD_VCC | LCD logic and driver power (Vcc3) |
| 21 | LCD_VCC | LCD logic and driver power (Vcc3) |
| 22 | NC | LCD Panel Self-Test Enable (Optional) |
| 23 | LCD_GND | LCD logic and driver ground |
| 24 | LCD_GND | LCD logic and driver ground |
| 25 | LCD_GND | LCD logic and driver ground |
| 26 | LCD_GND | LCD logic and driver ground |
| 27 | HPD | HPD signal pin |
| 28 | BL_GND | Backlight ground |
| 29 | BL_GND | Backlight ground |
| 30 | BL_GND | Backlight ground |
| 31 | BL_GND | Backlight ground |
| 32 | BL_ENABLE | Backlight On/Off |
| 33 | BL_PWM_DIM | PWM dimming control signal |
| 34 | NC - RESERVED | Reserved for LCD manufacturer's use |
| 35 | NC - RESERVED | Reserved for LCD manufacturer's use |
| 36 | BL_PWR | Backlight power (+Vin) |
| 37 | BL_PWR | Backlight power (+Vin) |
| 38 | BL_PWR | Backlight power (+Vin) |
| 39 | BL_PWR | Backlight power (+Vin) |
| 40 | NC - RESERVED | RESERVED for LCD manufacturer's use |

2.5 Fan Headers

The NUC Pro Board Element CMB1BB has two black, 1x4, 1.25mm pitch, right angled fan headers. One fan header is used for the NUC Compute Element thermal solution and the other fan header is used for a system fan.

Table 5. Fan Header Pinout

| Pin | Signal Name | Description |
|-----|-------------|----------------------------|
| 1 | GND | Ground |
| 2 | +VCC | Fan Power |
| 3 | FAN_TAC | Fan Speed |
| 4 | FAN_PWM | Fan Pulse Width Modulation |

2.6 Power Input Connector

The NUC Pro Board Element CMB1BB has a 2x2, 1.25mm pitch right angled power input connector. See section **Error! Reference source not found.** for information on power r equirements.

Table 6. Power Input Connector Pinout

| Pin | Signal Name | Description |
|-----|-------------|-------------|
| 1 | Vin | Voltage In |
| 2 | Vin | Voltage In |
| 3 | GND | Ground |
| 4 | GND | Ground |

2.7 Front Panel Header

The NUC Pro Board Element CMB1BB has a 1x11, 1.25mm pitch, right angle front panel header.

Table 7. Front Panel Header Pinout

| Pin | Signal Name | Description |
|-----|----------------|-------------------------------------------------------|
| 1 | POWER_SWITCH# | [In] Power Switch |
| 2 | GND | Ground |
| 3 | POWER_LED_MAIN | [Out] Front Panel LED (main color) |
| 4 | POWER_LED_ALT | [Out] Front Panel LED (alternate color) |
| 5 | RSVD | Reserved |
| 6 | +5V_DC | Power, 1A (Vcc) |
| 7 | RSVD | Reserved |
| 8 | HDD_LED- | [Out] HDD activity LED |
| 9 | HDD_LED+ | [Out] HDD activity LED with current limiting resistor |
| 10 | GND | Ground |
| 11 | RESET_SWITCH# | [In] Reset Switch |

2.8 Power Connector

The NUC Pro Board Element has a power connector on the back panel. The connector is a dual barrel connector, with a 2.5mm inner diameter and a 5.5mm outer diameter. See section **Error! R eference source not found.** for information on power requirements.

Wireless Enable/Disable Switch 2.9



A CAUTION

Do not change the switch with the power on. Always turn off the power and unplug the power cord from the carrier board before changing a switch setting. Otherwise, the board could be damaged. The 2-position switch determines whether the wireless module on the NUC Compute Element is enabled or disabled. Figure 4 shows the location of the switch. Table 8 describes the switch settings.

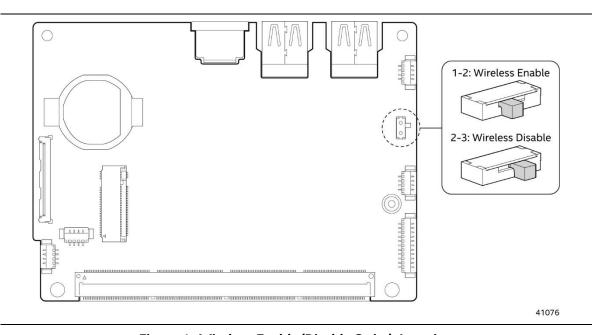


Figure 4. Wireless Enable/Disable Switch Location

Table 8. Wireless Enable/Disable Switch Settings

| Function/Mode | Switch Setting | Configuration | |
|---------------|----------------|------------------------------------------------------------------------|--|
| Enable | 1-2 | Wireless and Bluetooth will be enabled on the NUC Pro Compute Element | |
| Disable | 2-3 | Wireless and Bluetooth will be disabled on the NUC Pro Compute Element | |

Intel® vPro® Technology 2.10

Intel® vPro™ Technology is a collection of platform capabilities that support enhanced manageability, security, virtualization and power efficiency.

| For information about | Refer to | |
|-------------------------|----------------------------------------|--|
| Intel® vPro® Technology | http://support.intel.com/support/vpro/ | |



NOTE

Intel® vPro® Technology is only supported on the Intel® NUC Pro Board Element if an Intel NUC Compute Element with Intel® vPro® Technology support is connected.

2.11 Power

The NUC Pro Board Element requires a $12-24 \pm 8\%$ V DC input via the back-panel power jack or the internal power connector. Both inputs provide delayed AC start as well as transient voltage suppression (TVS) at 26 V.



NOTE

Total power required will need to take into account the NUC Pro Compute Element power requirements, the NUC Pro Board Element CMB1BB power requirements and any devices or peripherals that are plugged into the NUC Pro Board Element CMB1BB.

Â

CAUTION

It is strongly recommended to make sure that the NUC Pro Board Element CMB1BB is powered off and AC power is removed before removing the NUC Compute Element from the board connector. Removing the NUC Compute Element from the board connector while powered on may cause damage to the NUC Compute Element, operating system corruption, create a no boot condition or result in data loss. If the Blue LED on the board is illuminated, do not remove the NUC Compute Element from the board connector

2.12 Mechanical

The following figure illustrates the mechanical form factor for the Intel® NUC Pro Board Element CMB1BB. Dimensions are given in millimeters (mm).

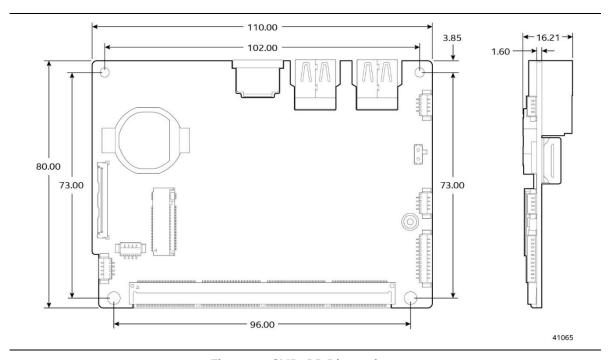


Figure 5. CMB1BB Dimensions

2.13 Thermal

The fundamental design of the Intel® NUC Compute Element relies on the chassis that the Intel® NUC Pro Board Element CMB1BB is installed into for proper cooling. Both internal components and external skin temperatures are critical parameters in proper cooling, and should be considered in any design. For best cooling performance, direct contact with a thermal management device to the bottom of the NUC Compute Element such as a heatsink or enclosure surface is recommended. This can be accomplished with active or passive cooling design approaches. Non-contact convection only cooling may be possible but will likely result in performance limitations or compromises in skin temperature levels relative to a conductive design approach.

The Integrated Heat Spreader side of the NUC Compute Element is the primary heat source. To provide adequate cooling of the NUC Compute Element while maintaining safe skin temperatures a thermal solution that contacts the entire metal portion of the Integrated Heat Spreader is recommended. Localized contact with the primary heat source on the NUC Compute Element bottom is not recommended as the location is subject to change with different generations of the NUC Compute Element. The Mylar side of the NUC Pro Compute Element does not typically require contact with a thermal solution, however proper air flow over the top of the NUC Compute Element is recommended.

For more detailed thermal design information, refer to the NUC Compute Element Carrier Board Design Guide available at <u>MyIntel.</u>

2.14 Environmental

Table 9 lists the environmental specifications for the Intel® NUC Pro Board Element CMB1BB.

Table 9. Environmental Specifications

| Parameter | Specification | | |
|-------------------|-------------------------------------------------------------------------|--------------------|--|
| Temperature | | | |
| Non-Operating | -40 °C to +60 °C | | |
| Operating (Board) | 0 °C to +50 °C | | |
| Shock (Board) | | | |
| Unpackaged | 25 g trapezoidal waveform | ezoidal waveform | |
| | Velocity change of 250 inches/s² | | |
| Packaged | Free fall package drop machine set to the height determined by the weig | | |
| | Product Weight (pounds) | Free Fall (inches) | |
| | <20 | 36 | |
| | 21-40 | 30 | |
| | 41-80 | 24 | |
| | 81-100 | 18 | |
| Vibration (Board) | | | |
| Unpackaged | 5 Hz to 20 Hz: 0.01 g²/Hz sloping up to 20 Hz @ 0.02 g²/Hz | | |
| | 20 Hz to 500 Hz: 0.02 g²/Hz (flat) | | |
| | Input acceleration is 3.13 g RMS | | |

Note: Before attempting to operate this Intel® NUC Pro Board Element CMB1BB, the overall temperature of the system must be above the minimum operating temperature specified. It is recommended that the NUC Pro Board Element CMB1BB temperature be at least room temperature before attempting to power on the system. The operating and non-operating environment must avoid condensing humidity.

3 Characterized Errata

This section of the document communicates product Errata for the Intel® NUC Pro Board Element CMB1BB.

Errata are design defects or deviations from current published specifications for a given product. Published errata may or may not be corrected. Hardware and software designed to be used with any given processor stepping must assume that all errata documented for that process stepping are present on all devices.

There are no known characterized errata.