


Datamate Connectors

Female Crimp

- ❖ Part numbers are for housings and the equivalent number of contacts.
- ❖ Contacts are rear insertable.
- ❖ For British Standard versions see pages 14 to 15.
- ❖ Hoods & cable assembly service available – contact datamate@harwin.com.
- ❖ Spare contacts are available – see page 16.

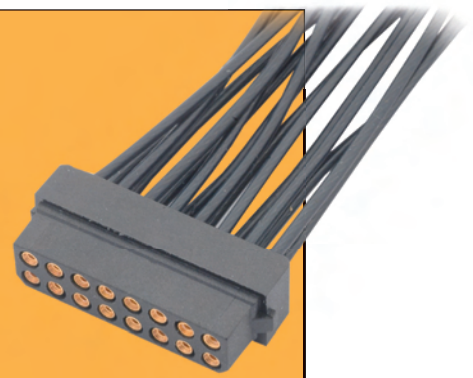

SINGLE ROW		CALCULATION		DOUBLE ROW		CALCULATION							
		A	$B + 5.15$			A	$B + 5.15$						
		B	$(\text{Total No. of contacts} - 1) \times 2$			B	$\text{Total No. of contacts} - 2$						
TOOLS				WIRE STRIPPING DETAILS									
<p>Recommended Crimp Tool – M22520/2-01 Positioner – T5747 Contact Insertion/Removal Tool – Z80-280 See pages 77 to 79 ❖ Instruction sheets available at www.harwin.com/downloads/instructions</p>													
HOW TO ORDER													
SERIES CODE		M80 - XXX XX 05				FINISH							
TYPE						<table border="1"> <tr> <td>01</td> <td>Gold + Tin</td> <td></td> </tr> <tr> <td>05</td> <td>Gold</td> <td></td> </tr> </table>		01	Gold + Tin		05	Gold	
01	Gold + Tin												
05	Gold												
888	Small Bore, Double Row					TOTAL NO. OF CONTACTS							
889	Large Bore, Double Row					Single Row	02 to 07, 17						
898	Small Bore, Single Row					Double Row	04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34						
899	Large Bore, Single Row												

All dimensions in mm.

www.harwin.com

