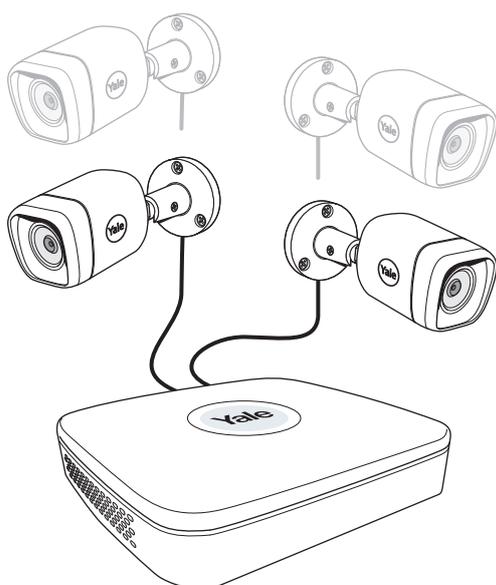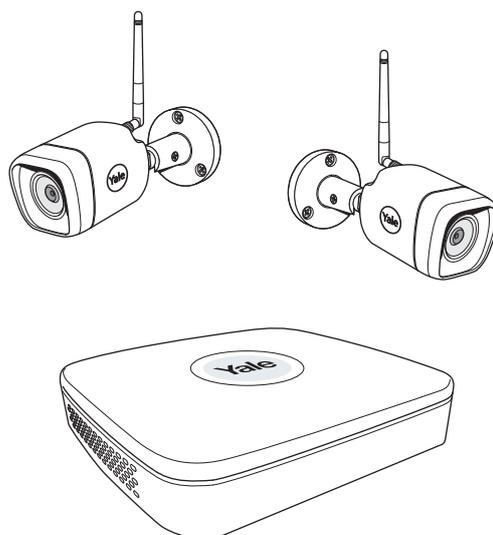# Yale smart Living

CCTV Menu Operations Manual

English

SV-4C-2ABFX / SV-8C-4ABFX

SV-4C-2DB4MX

Disclaimer: This Manual will guide you through the standard settings and operations for normal Residential CCTV usage.
The system is based on a professional system and may contain advanced features and settings that are not needed for residential use.
This manual will be continuously updated and available at www.yalelock.com/smart-living.
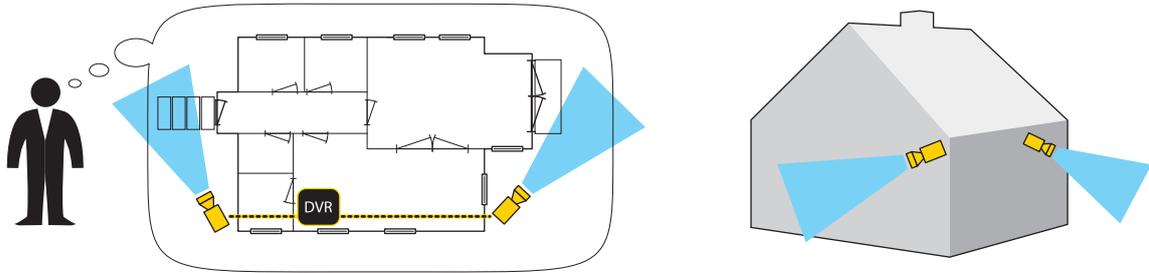
ASSA ABLOY

The smarter way to protect your home.

(GB) Index

Plan the camera location

Connect cables according to the manual that came with your Kit.

Not included
Nicht enthalten
Non inclusa
Non inclus
No incluido

Not included
Nicht enthalten
Non inclusa
Non inclus
No incluido

Not included
Nicht enthalten
Non inclusa
Non inclus
No incluido
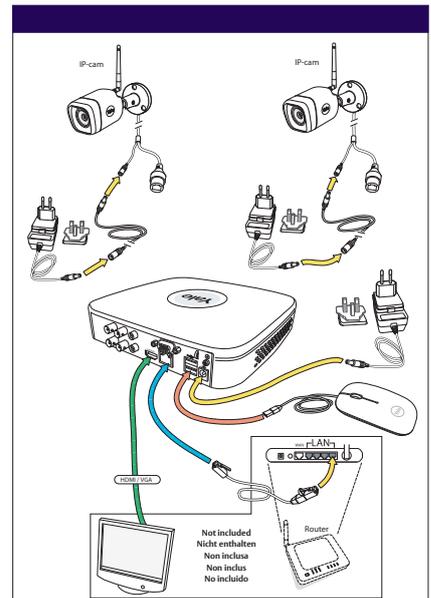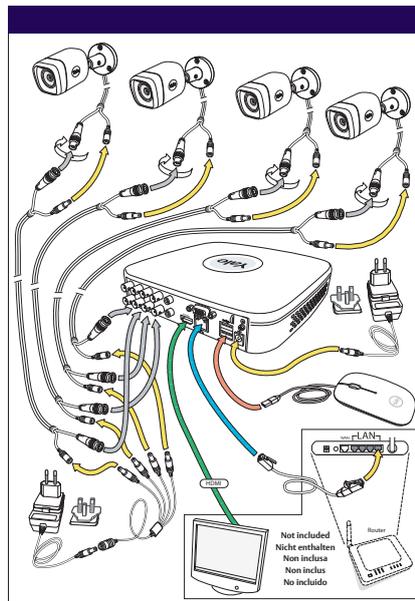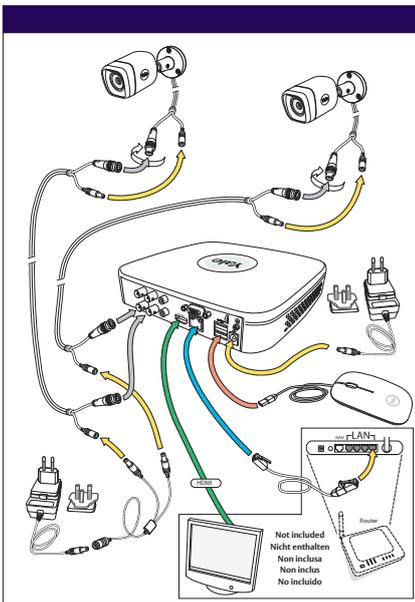
2   Download App - Personal registration in the App

Download App for Android or IOS: "Yale Smart Living VIEW"

Yale Smart Living VIEW 🔍

Download on the App Store

GET IT ON Google play

Yale smart Living VIEW

Personal registration in the App

📶 🕐 4G 📶 ▪ 19.11

Yale smart Living

Please enter username

Indtast adgangs... 👁
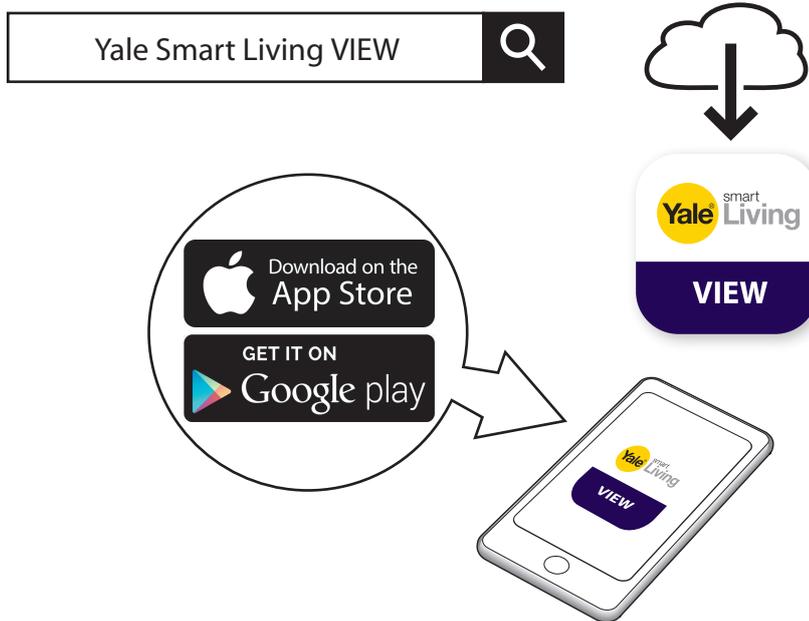
Log-in

Registrér Glemt adgangskode?

◁ ○ ☐

📶 🕐 4G 📶 ▪ 19.11

‹

Yale smart Living

Email Register

Please enter username

Indtast adgangs... 👁

Mail

Registrér

‹ Log-in

Easy4ip Privacy Policy

◁ ○ ☐

App Log-in page:

Initial setup:

1) Click Registrér

After registration/initial setup, you open from this page.

7) Enter username
8) Enter password
9) Click Log-in

E-mail Register page:

Initial setup:

2) Enter username
3) Enter password
4) Enter email
5) Click Registrér
6) Click Log-in   This will take you back to.

③ Initial setup - Wired Kit

Initial setup for system with wired cameras.

Device Initialization

1 Enter Password   2 Unlock Pattern   3 Password Protection

User   admin

Password   [   ]

Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them.(please do not use special symbols like ' " ; : &)

Confirm Password   [   ]

Prompt Question   [   ]
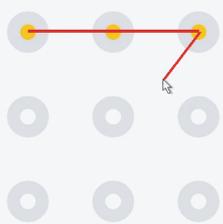
[Next]

1) Key in password

(Click in box and keybord display will appear)

2) Confirm password

3) Click NEXT

Device Initialization

1 Enter Password   2 Unlock Pattern   3 Password Protection

The unlock pattern shall at least contain 4 grids. Please draw again.

[Back]   [Skip]

**4) Draw unlock pattern
(Min. 4 dots)**

Draw again to confirm Draw unlock pattern

> **Remember this pattern!
> This will be your key to
> access the system.**

5) Click NEXT

Device Initialization

1 Enter Password   2 Unlock Pattern   3 Password Protection

☑ Email Address [   ] To reset password, please input properly or update in time

☑ Security Questions

Question 1 [What is your favorite children's book?   ▾]
Answer   [   ]

Question 2 [What was the first name of your first boss? ▾]
Answer   [   ]

Question 3 [What is the name of your favorite fruit?   ▾]
Answer   [   ]

[Save]

**6) write e-mail address and complete security Questions
(These are optional and can be switched OFF by "un-ticking" boxes)**

7) Security Questions:

8) Click SAVE

Startup Wizard

Welcome to the Setup Wizard. This startup wizard will help you set parameters. Click Next to continue.

☑ Auto-check for updates

Notify automatically when updates are available. The system will check for updates daily.
Online Upgrade is a service that provides you with firmware updates from the cloud. This service will collect device information in order to inform you about available firmware updates. Such information may include your device name, firmware version and device identification numbers. Such information is processed for the sole purpose of informing you about firmware updates.

[Next]

**9) As default leave Auto-check for update ticked.
(This will automatically keep your system up to date; but only if connected to the internet via Router)**

10) Click NEXT

③ Initial setup - Wired Kit

Initial setup for system with wired cameras.

Network connection

Auto ■ Manual ☐

IP Address	0	0	0	0
Subnet Mask	0	0	0	0
Default Gateway	0	0	0	0
Preferred DNS	8	8	8	8
Alternate DNS	8	8	4	4

Cancel   Refresh   Next

11) Click Refresh to update Network connection.

12) Click NEXT

Add New Yale WiFi Camera

Do you have any Yale Smart Home WiFi cameras to add to the system?

Back   No   Yes

13) If you have only wired cameras in your Kit click NO.
(WiFi cameras can be added later if needed)

Connect to Mobile App

The App needs to be installed and registered before scanning.

Yale smart Living

VIEW

Scan QR Code in the app to connect to your YALE DVR

Serial: 3M0213BYAZAD569

14) If you want access to your system via the Yale View App, scan the QR code to connect to your DVR system.
(If not click NEXT)

Back   Next

15) Click NEXT

Setup Complete

Congratulations, your Yale CCTV is now ready to use!

Please visit www.yalelock.com/smart-living for more information about your new CCTV system.

OK

16) Click OK

The DVR system is now turned ON and cameras are recording. System is as default running in "Regular Mode", which means that cameras are recording 24 hours a day and will overwrite the hard drive when full. Other "Modes" and backing up recorded video will be explained later in the manual.

④   **Initial setup - WiFi Kit**

📷 **Initial setup for system with WiFi cameras.**

Device Initialization

1 Enter Password   **2** Unlock Pattern   **3** Password Protection

User   admin

Password

Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them.(please do not use special symbols like ' " ; : &)

Confirm Password

Prompt Question

Next

1) Key in password

(Click in box and keybord display will appear)

2) Confirm password

3) Click NEXT

Device Initialization

1 Enter Password   **2** Unlock Pattern   **3** Password Protection

The unlock pattern shall at least contain 4 grids. Please draw again.

Back   Skip

4) Draw unlock pattern
(Min. 4 dots)

Draw again to confirm Draw unlock pattern

> **Remember this pattern!**
> **This will be your key to**
> **access the system.**

5) Click NEXT

Device Initialization

1 Enter Password   **2** Unlock Pattern   **3** Password Protection

☑ Email Address   To reset password, please input properly or update in time

☑ Security Questions

Question 1   What is your favorite children's book?
Answer

Question 2   What was the first name of your first boss?
Answer

Question 3   What is the name of your favorite fruit?
Answer

Save

6) write e-mail address and complete security Questions
(These are optional and can be switched OFF by "un-ticking" boxes)

7) Security Questions:

8) Click SAVE

Startup Wizard

Welcome to the Setup Wizard. This startup wizard will help you set parameters. Click Next to continue.

☑ Auto-check for updates

Notify automatically when updates are available. The system will check for updates daily.
Online Upgrade is a service that provides you with firmware updates from the cloud. This service will collect device information in order to inform you about available firmware updates. Such information may include your device name, firmware version and device identification numbers. Such information is processed for the sole purpose of informing you about firmware updates.

Next

9) As default leave Auto-check for update ticked.
(This will automatically keep your system up to date; but only if connected to the internet via Router)

10) Click NEXT

4   **Initial setup - WiFi Kit**

Initial setup for system with WiFi cameras.

Network connection

Auto ■ Manual ☐

IP Address	0 . 0 . 0 . 0
Subnet Mask	0 . 0 . 0 . 0
Default Gateway	0 . 0 . 0 . 0
Preferred DNS	8 . 8 . 8 . 8
Alternate DNS	8 . 8 . 4 . 4

Cancel   Refresh   Next
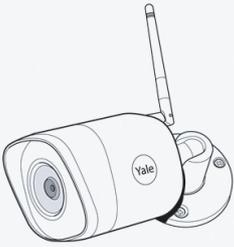
11) Click Refresh to update Network connection.

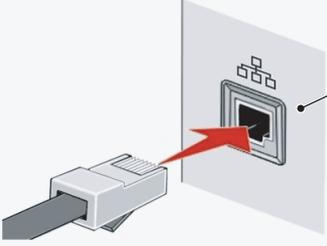12) Click Next

Add New Yale WiFi Camera

Do you have any Yale Smart Home WiFi cameras to add to the system?

Back   No   Yes

13) If you have WiFi cameras in your Kit (wiereless camera) click YES.

Connect Camera's Ethernet Cable

Connect each IP Camera to your home router using the Ethernet cable provided. If you have more cameras than available ports, or you have other types of camera to add, you can add more cameras later via the main menu.

Back   Next

14) Connect Ethernet cables as described in the Yale Quick guide included in the box with the DVR unit.

15) Click Next

4 Initial setup - WiFi Kit

Initial setup for system with WiFi cameras.

Press scan to search for new cameras

Back   Scan

16) Click Scan

New Yale Camera Found

IP Address	Type
192.168.1.10	SV-DB4MX-B
XXX.XXX.X.XX	SV-DB4MX-B
XXX.XXX.X.XX	SV-DB4MX-B
XXX.XXX.X.XX	SV-DB4MX-B

Note: Please check all your new Yale WIFI cameras are listed here and press Next.

Back   Scan again   Next

17) All your connected cameras (WiFi) should now show up on the list.
If all your cameras do not show up on the list, click Scan again.
If they still do not show up, check that they are all connected to power and camera Ethernet cables are connected to the same router as the DVR system.

17) Click Next

Set New Camera Passwords

☑ Use current recorder password

All cameras connected to this CCTV system will share the same password

Back   Next

18) Leave box ticked and all cameras will have the same password as you chose for the DVR system in the beginning.

19) Click Next

4   Initial setup - WiFi Kit

Initial setup for system with WiFi cameras.

New Yale Camera Found

Camera Passwords successfully updated

Back   Next   ●——— 20) Click Next

New Yale Camera Found

Do you want to add all these cameras in your system?

IP Address	Type
192.168.1.10	SV-DB4MX-B
xxx.xxx.x.xx	SV-DB4MX-B
xxx.xxx.x.xx	SV-DB4MX-B
xxx.xxx.x.xx	SV-DB4MX-B

Back   Next   ●——— 21) Click Next

Add WIFI Camera

3	SSID ▲
1	HomeBox-...
2	HomeBox-...
3	"Your Router WiFi"
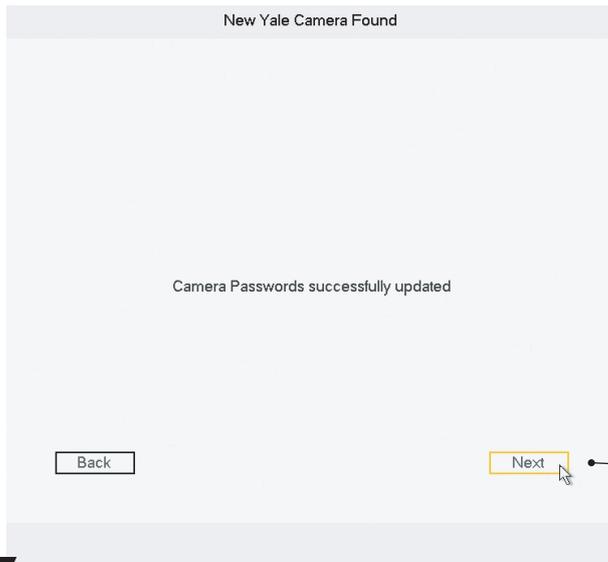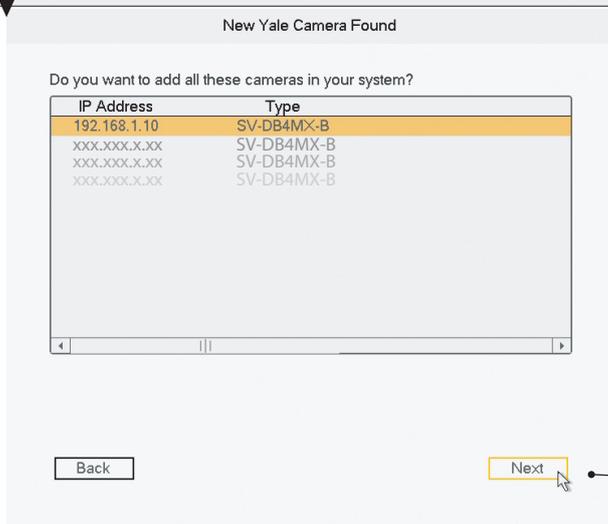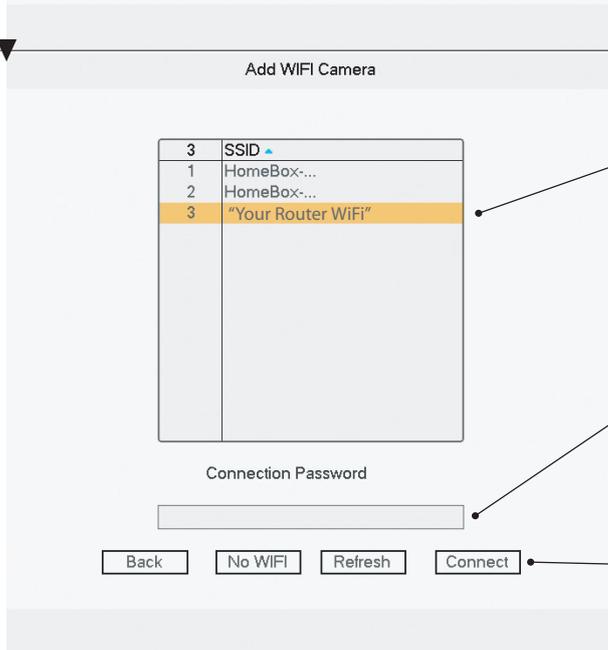
22) Select the router you want to connect to.

23) Write Connection Password for your Router.
(Same as when you connect any computer or smartphone to you lokal router/network.)

Connection Password

[   ]

Back   No WIFI   Refresh   Connect   ●——— 24) Click Connect

| 4 | |HomeBox-... | |

Message

Camera WiFi connection succeeded,You can now unplug the camera's ethernet cable
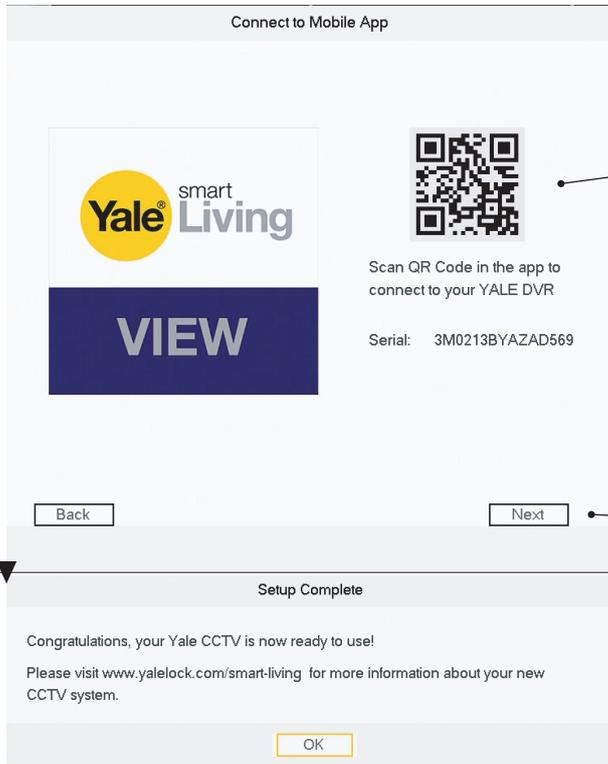
OK

Connection Password

25) Click OK
You can now unplug the ethernet/network cable from your WiFi camera. It is now wirelessly connected to your router.
Camera power can be unplugged and then plugged in again when mounted in the desired location, within range of the router.

Initial setup for system with WiFi cameras.

Connect to Mobile App

Yale smart **Living**

VIEW

Scan QR Code in the app to
connect to your YALE DVR

Serial: 3M0213BYAZAD569

Back   Next

**The App needs to be installed
and registered before scanning.**

26) If you want access to your system via the Yale View App, scan
the QR code to connect to your DVR system.
(If not click NEXT)

27) Click NEXT

Setup Complete

Congratulations, your Yale CCTV is now ready to use!

Please visit www.yalelock.com/smart-living for more information about your new
CCTV system.

OK

28) Setup is now complete.

**The DVR system is now turned ON and
cameras are recording. System is as default
running in "Regular Mode", which means
that cameras are recording 24 hours a day
and will overwrite the hard drive when full.
Other "Modes" and backing up recorded
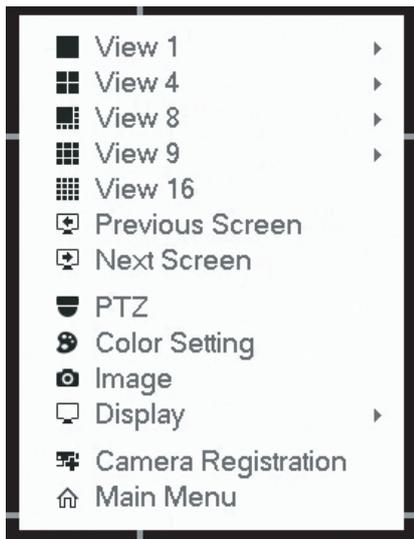video will be explained later in the manual.**

Menu overwiev
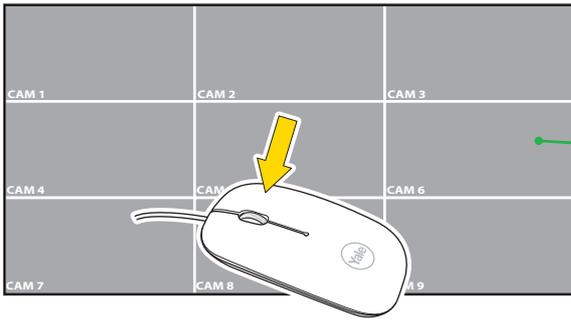
Right Click in the live view > brings up the top menu for the live view screen options.

Different view options for the live view screen.
(Example shown is an 8 channel system, 4 channel have less options.)
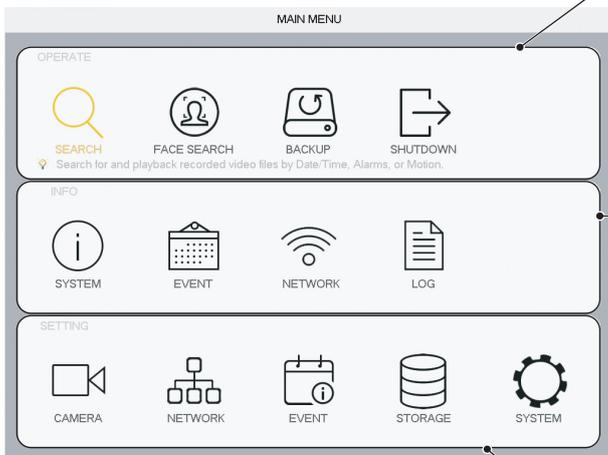
(PTZ and Image, not in use with this model)

Colour Setting and Display. Options for live view screen.

Camera Registration. Shortcut to Camera Registration in the Main Menu

Here you can find video recordings when you want to investigate or document events.

Main Menu
OPERATIONS, INFO, SETTING

OPERATE: SEARCH: Search for and playback recorded video by date and Time.
FACE SEARCH: Search and playback recorded video by face detection. (If feature is applied)
BACKUP: Plan backup of recorded video, to external media.
SHUTDOWN: Shutdown / Logout / Reboot

INFO: **SYSTEM**: HDD information, recording information.
EVENT: Lists of events, motion detection.
Network: List of Network activities.
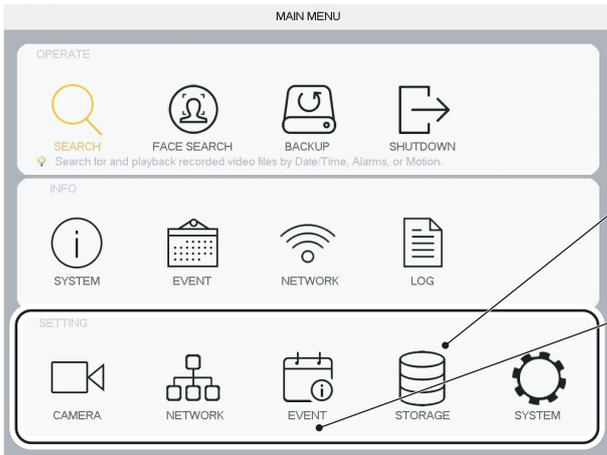**LOG**: List of operations / changes to the system.

Here you can personalise system settings and adjust recording event triggers.

SETTING: CAMERA: General camera setting.
Network: General network setting.
EVENT: Personal settings for recording triggers.
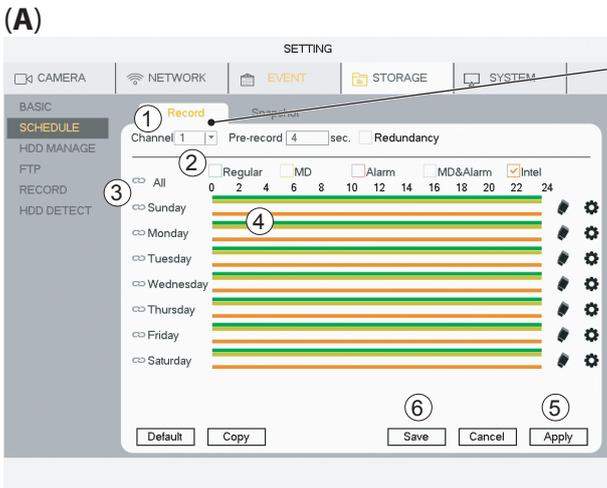**STORAGE**: Time planning for recording and HDD tools.
SYSTEM: System settings.

6 — Setting up recording and motion detection

Setting up recording schedule and recommended residential motion detection (MD)

MAIN MENU

OPERATE
- SEARCH — Search for and playback recorded video files by Date/Time, Alarms, or Motion.
- FACE SEARCH
- BACKUP
- SHUTDOWN

INFO
- SYSTEM
- EVENT
- NETWORK
- LOG

SETTING
- CAMERA
- NETWORK
- EVENT
- STORAGE
- SYSTEM

(**A**) Click **STORAGE**
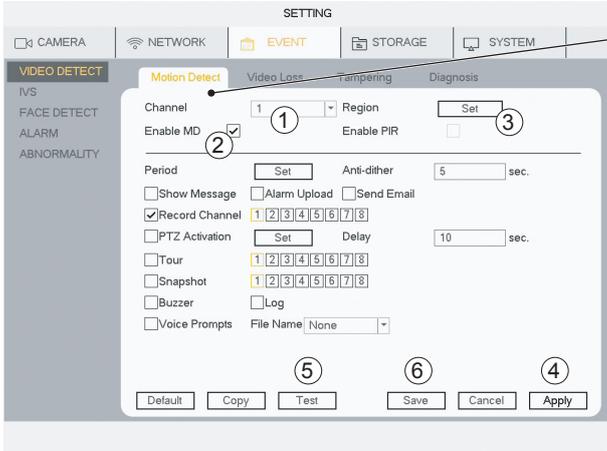Setting up **SCHEDULE** (week planning) for recordings and event triggers.

Click **Event**
Setting up movement-triggers for recordings.

Mode: (**B**) **VIDEO DETECT = MD** (Motion Detect)
(Detection of simple movement)

(**C**) **IVS** = INTEL (Detection of specific movement)

(**D**) **FACE DETECT** (Triggers when it detects a face-shape, ! not a specific face !)

(**A**)

SETTING
- CAMERA
- NETWORK
- EVENT
- STORAGE
- SYSTEM

BASIC
SCHEDULE
HDD MANAGE
FTP
RECORD
HDD DETECT

Record — Snapshot
Channel 1 — Pre-record 4 sec. — Redundancy

□ Regular □ MD □ Alarm □ MD&Alarm ☑ Intel
0 2 4 6 8 10 12 14 16 18 20 22 24

All
Sunday
Monday
Tuesday
Wednesday
Thursday
Friday
Saturday

Default — Copy — Save — Cancel — Apply

SCHEDULE - Record
1) Select Channel (Channel = Camera)
2) Select Mode : **Regular** (Continous video recording)
  MD (Detection of simple movement)
  Intel = IVS (Detection of specific movement)
3) Select Day(s) or All
4) Drag coloured bars to match periode(s) of the day(s) you want detected. (Drag again to delete bar)
5) When you have planned the week for the Channel - click **Apply** and continue to next Channel.
6) When all Channels have been planned and applied - click **Save**

Click **Default** will take you back to factory setting.

(**B**) MD (Mortion Detection) recommended residential motion detection (MD)

SETTING
- CAMERA
- NETWORK
- EVENT
- STORAGE
- SYSTEM

VIDEO DETECT
IVS
FACE DETECT
ALARM
ABNORMALITY

Motion Detect — Video Loss — Tampering — Diagnosis

Channel 1 — Region — Set
Enable MD ☑ — Enable PIR □

Period — Set — Anti-dither 5 sec.
□ Show Message □ Alarm Upload □ Send Email
☑ Record Channel 1 2 3 4 5 6 7 8
□ PTZ Activation — Set — Delay 10 sec.
□ Tour 1 2 3 4 5 6 7 8
□ Snapshot 1 2 3 4 5 6 7 8
□ Buzzer □ Log
□ Voice Prompts File Name None

Default — Copy — Test — Save — Cancel — Apply

VIDEO DETECT - Motion Detect
1) Select **Channel** (Channel = Camera)
2) Tick **Enable MD**
3) Click **Set** to change motion sensor area. Default is the whole field of view.
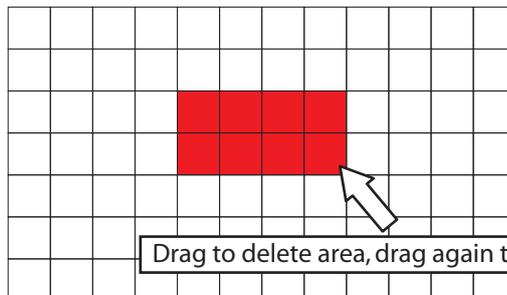
Drag to delete area, drag again to select new area(s)

4) Click **Apply**
5) Click **Test** to check motion detection is working as planned. (Buzzer can be activate to test motion detection)
6) When all Channels have been planned and applied - click **Save**

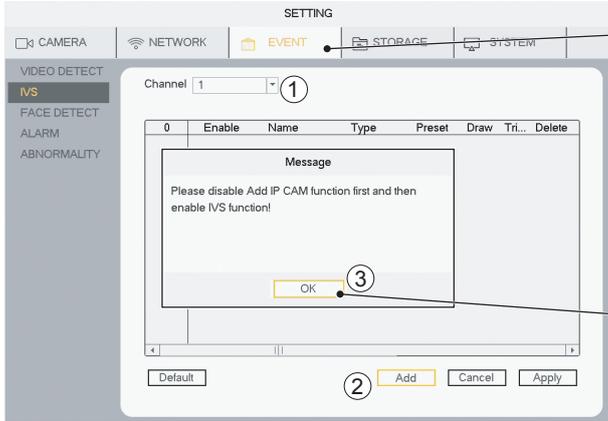Click **Default** will take you back to factory setting.

Standard residential motion detection (MD) is supported by both Wired and WiFi cameras.

6   Setting up recording and motion detection

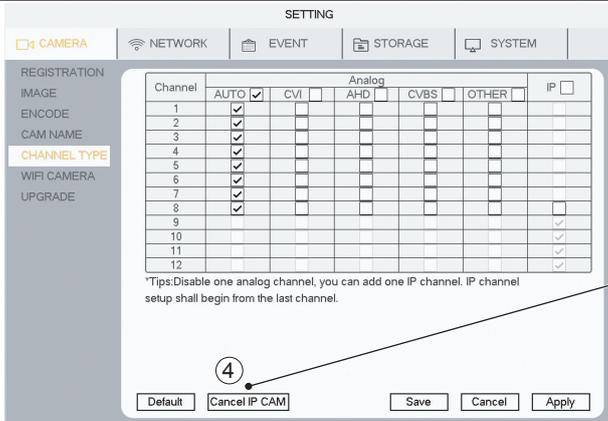**Setting up advanced IVS motion detection (wired cameras only).**
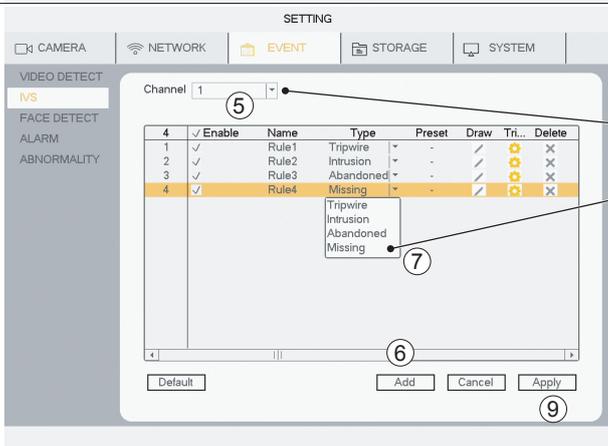
(**C**) IVS = Intel

EVENT- IVS = Intel
(To add IVS functionlity to your wired cameras go through the following steps.)

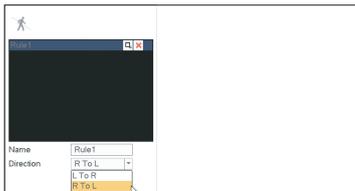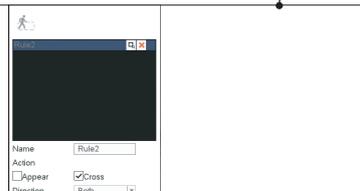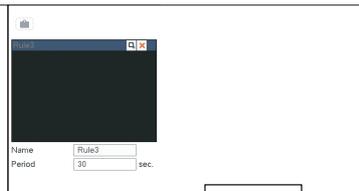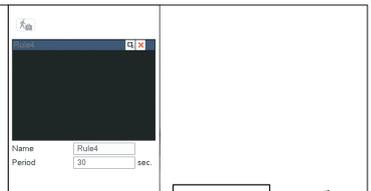1) Select Channel (Channel = Camera)
2) Click **Add**

Message
3) Click **OK**

Message dialog:
Please disable Add IP CAM function first and then enable IVS function!

4) Go to **CAMERA** menu - **CHANNEL TYPE**
Click **Cancel IP CAM**
(The WiFi cameras already installed (if any) will not be affected)
System will now reboot.

*Tips:Disable one analog channel, you can add one IP channel. IP channel setup shall begin from the last channel.

Open **EVENT- IVS** menu again
5) Select Channel (Channel = Camera)
6) Click **Add**
7) Choose Type: Tripwire/Intrusion/Abandoned/Missing
8) **Draw** "rule" for the type. (When drawing, right click to finish shape)
9) Click **Apply**
(Buzzer can be activate to test motion detection)

Tripwire	Intrusion	Abandoned	Missing
Trigger: when line is crossed	Trigger: when area out line is crossed entry or exit	Trigger: when somthing is left in the area - for longer than 30 sek	Trigger: when somthing is missing from the area - for longer than 30 sek

6   **Setting up recording and motion detection**

Setting up face detection (wired camera only).

The face detect function only works with Wired camera on CHANNEL 1

(**D**) FACE DETECT

EVENT- FACE DETECT (Triggers when it detects a face-shape, ! not a specific face !)

1) Select Channel **1**
2) Tick **Enable**
3) Click **Set**
(Here you can set the minimum size of the face that will trigger.)
4) Click **Apply**
5) When all Channels have been set and applied - click **Save**
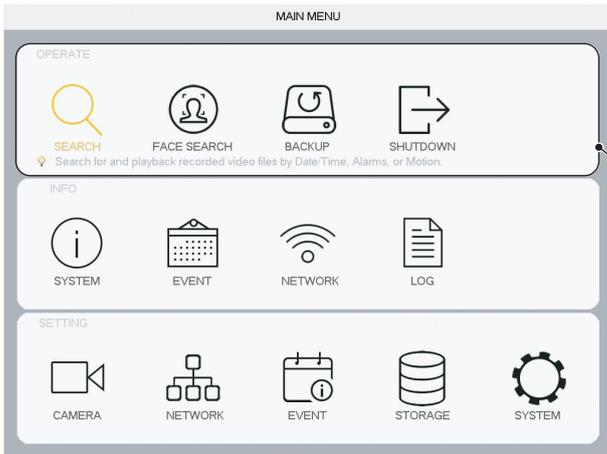(Buzzer can be activate to test motion detection)

Click **Default** will take you back to factory setting.

Face detection is usefull at locations like front door, at face hight or slightly above.

7   Searching in recorded video

Searching in recorded video by Time/Date, Motion detection, Face detection

MAIN MENU

OPERATE

SEARCH — Search for and playback recorded video files by Date/Time, Alarms, or Motion.

FACE SEARCH

BACKUP

SHUTDOWN

INFO

SYSTEM

EVENT

NETWORK

LOG
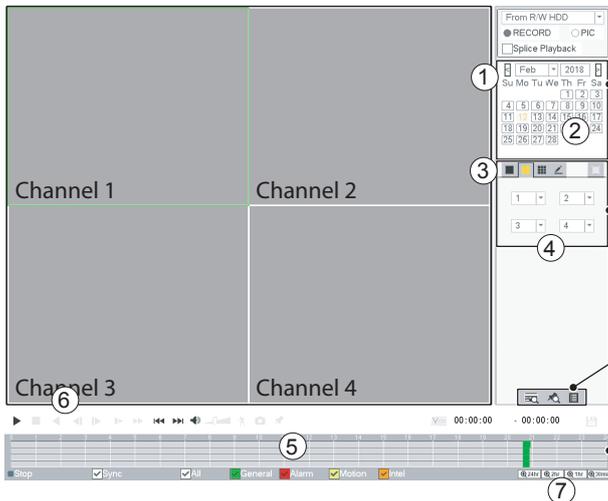
SETTING

CAMERA

NETWORK

EVENT

STORAGE

SYSTEM

When you have setup your system, this menu is where you can find video recordings to investigate or document events.

OPERATE: (A) SEARCH: Search for and playback recorded video by Date and Time.
(B) FACE SEARCH: Search and playback recorded video by face detection. (If feature is applied)

BACKUP: Plan backup of recorded video, to external media (Extenal HDD og USB memory).
SHUTDOWN: Shutdown / Logout / Reboot

(A) SEARCH

From R/W HDD
● RECORD ○ PIC
☐ Splice Playback

Feb | 2018
Su Mo Tu We Th Fr Sa

Channel 1   Channel 2

Channel 3   Channel 4

How to find a recording:
1) Select **YEAR and Month.**
2) Select **Day.**

Set up display:
3) Select **1/4/9** channel view.
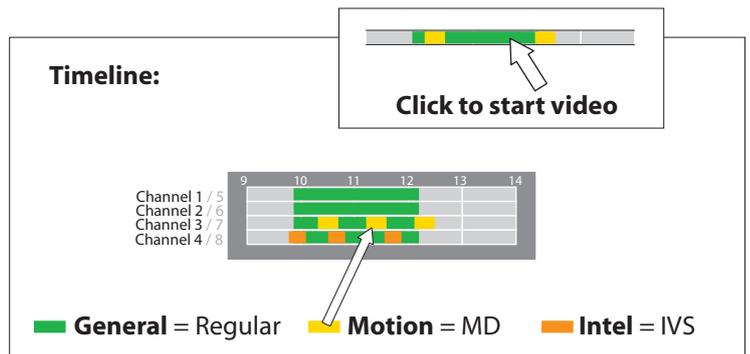**4)** Select which **channels to watch.**

*List of recordings by type, **R**egular / **M**D / **I**VS(INTEL):*
Select Channel at top. Doubelt click to start listed recording.

24 hour timeline:
5) Click timeline to view recording.

6) Controls for play back:
- ▸ Play
- ▪ Stop
- ◂ Play (backwards)
- ◂▸ One frame steps (Only when paused)
- ▹ Slow Playback (x1/2 / x1/4 / x1/8 x / x1/16)
- ▹ Fast Playback (x2 / x4 / x8 / x16)

7) Zoom timeline:

⊕ **24hr**	⊕ **2hr**	⊕ **1hr**	⊕ **30min**

Timeline:

Click to start video

Channel 1 / 5
Channel 2 / 6
Channel 3 / 7
Channel 4 / 8

9   10   11   12   13   14

▮ **General** = Regular   ▮ **Motion** = MD   ▮ **Intel** = IVS

No changes can be made in the Search window while video is playing. Stop video to change parameters.

⑦ **Searching in recorded video**

Searching in recorded video by Time/Date, Motion detection, Face detection

FACE SEARCH will show a picture taken of the face shape, captured by the camera.
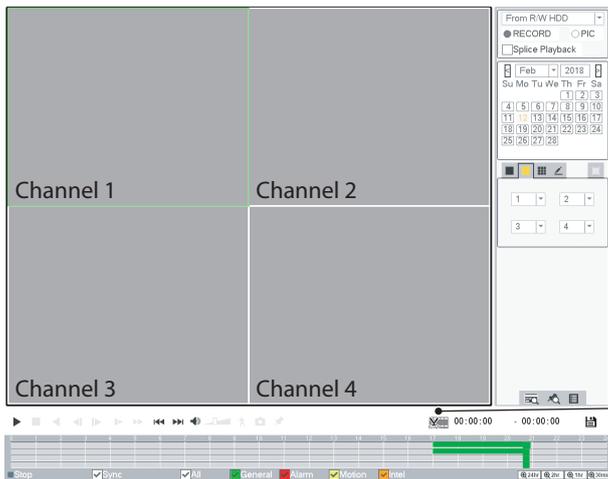
SEARCH by Year / Month / Date

8   Backing up a video sequence

Backing up a video sequence to storage media.

MAIN MENU

OPERATE

SEARCH   FACE SEARCH   BACKUP   SHUTDOWN
Search for and playback recorded video files by Date/Time, Alarms, or Motion.

INFO

SYSTEM   EVENT   NETWORK   LOG

SETTING

CAMERA   NETWORK   EVENT   STORAGE   SYSTEM

OPERATE: BACKUP: Plan backup of recorded video, to external media (Extenal HDD og USB memory).

Backup from SEARCH Menu

From R/W HDD
● RECORD   ○ PIC
☐ Splice Playback

Feb   2018
Su Mo Tu We Th Fr Sa
1 2 3
4 5 6 7 8 9 10
11 12 13 14 15 16 17
18 19 20 21 22 23 24
25 26 27 28

1   2
3   4

Channel 1   Channel 2

Channel 3   Channel 4

00:00:00 - 00:00:00

Stop   ☑Sync   ☑All   ■General ■Alarm ☑Motion ☐Intel   24hr 2hr 1hr 30min
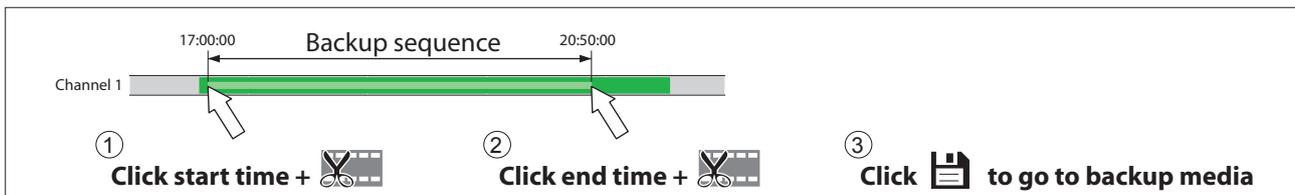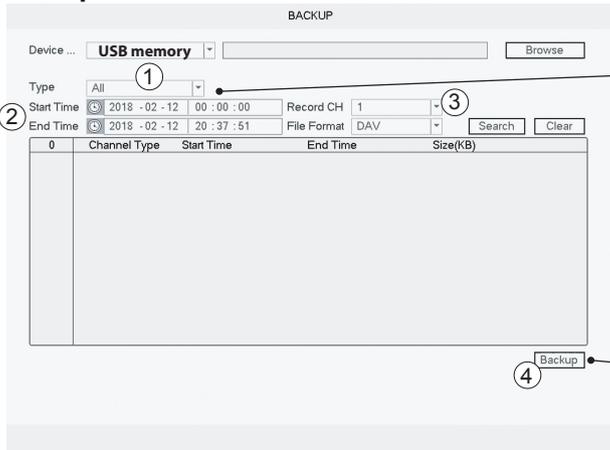
Backup - recorded video

Extenal storage media, HDD or a USB memorystick, need to be plugged in to USB (back of unit).

Save a video sequence to external memory.

Use timeline to select period.

17:00:00   Backup sequence   20:50:00

Channel 1

① **Click start time +** ✂   ② **Click end time +** ✂   ③ **Click** 💾 **to go to backup media**

Backup from BACKUP Menu

BACKUP

Device ...   **USB memory**   Browse

Type   All   ①
Start Time   2018 - 02 - 12   00 : 00 : 00   Record CH   1   ③
End Time   2018 - 02 - 12   20 : 37 : 51   File Format   DAV   Search   Clear
②
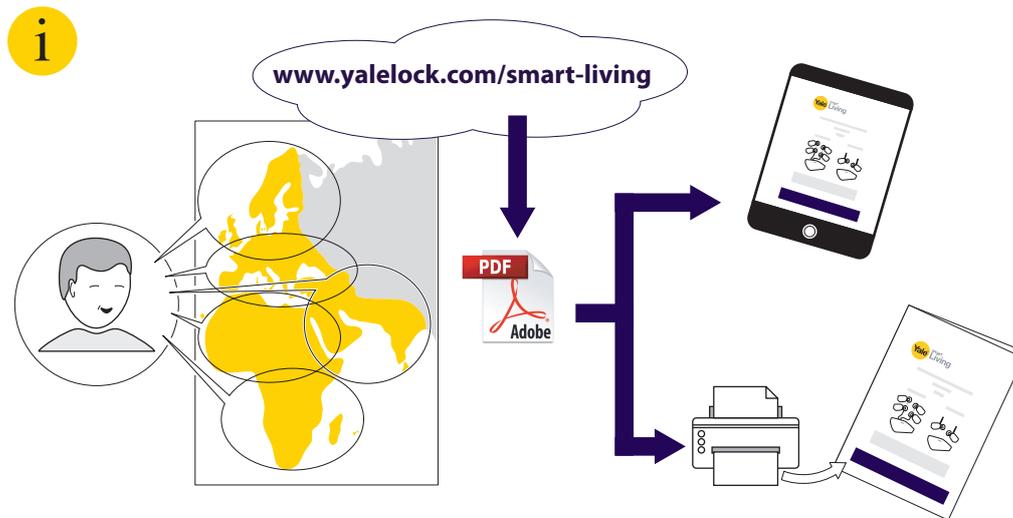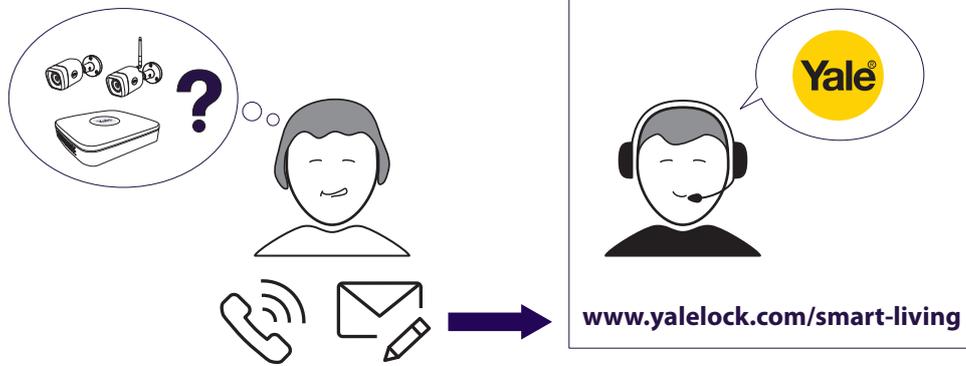0   Channel Type   Start Time   End Time   Size(KB)

Backup ④

Save a video sequence to external memory.

1) Set **Type** to backup.
2) Set **Start** and **END - Date / Time** to backup.
3) Set **Channel**.

4) Click **Backup**.

i Support

www.yalelock.com/smart-living

www.yalelock.com/smart-living

THE YALE BRAND, with its unparalleled global reach and range of products, reassures more people in more countries than any other consumer locking solution.

THE ASSA ABLOY GROUP is the world´s leading manufacturer and supplier of locking solutions, dedicated to satisfying end-user needs for security, safety and convenience.