# NI-9237 Specifications





# Contents

NI 9237 Datasheet 3
NI-9237 Specifications 14
Conditions
Definitions
Input Characteristics
Power Requirements
Physical Characteristics 19
Safety Voltages
Hazardous Locations
Safety and Hazardous Locations Standards 21
Electromagnetic Compatibility 21
CE Compliance
Product Certifications and Declarations
Shock and Vibration
Environmental
Environmental Management
EU and UK Customers
电子信息产品污染控制管理办法(中国 RoHS)
Calibration
Calibration

## NI 9237 Datasheet



The NI-9237 simultaneous bridge module for use with CompactDAQ and CompactRIO contains all the signal conditioning required to power and measure up to four bridge-based sensors simultaneously. The four RJ50 jacks provide direct connectivity to most torque or load cells and offer custom cable solutions with minimal tools. The high sampling rate and bandwidth of the NI-9237 offer a highquality, high-speed strain or load measurement system with zero interchannel phase delay. With 60 VDC isolation and 1,000 Vrms transient isolation, the NI-9237 has high-common-mode noise rejection and increased safety for both the operator and test system.

The NI-9237 can perform offset/null as well as shunt calibration and remote sense, making the module the best choice for strain and bridge measurements.

The NI 9944 and NI 9945 are accessories for use with quarter-bridge sensors. These accessories have a female RJ50 connector on one end and screw terminals on the other end.

	C SERIES	SIMULTANEOU	S BRIDGE MO	DULE COMPARIS	ON
Model	Channels	Sample Rate	Resolution	Connectivity	Simultaneous Supported Bridges
NI 9218	2	51.2 kS/s/ch	24 bits	LEMO, 9-pin DSUB	Quarter, Half, Full
NI 9219	4	100 S/s/ch	24 bits	Spring Terminal	Quarter, Half, Full
NI 9235	8	10 kS/s/ch	24 bits	Spring Terminal	120 $\Omega$ Quarter Bridge
NI 9236	8	10 kS/s/ch	24 bits	Spring Terminal	350 $\Omega$ Quarter Bridge
NI 9237	4	50 kS/s/ch	24 bits	RJ-50, DSUB	Quarter, Half, Full

## **NI C Series Overview**



NI provides more than 100 C Series modules for measurement, control, and communication applications. C Series modules can connect to any sensor or bus and allow for high-accuracy measurements that meet the demands of advanced data acquisition and control applications.

- Measurement-specific signal conditioning that connects to an array of sensors and signals
- Isolation options such as bank-to-bank, channel-to-channel, and channel-to-earth ground
- -40 °C to 70 °C temperature range to meet a variety of application and environmental needs
- Hot-swappable

The majority of C Series modules are supported in both CompactRIO and CompactDAQ platforms and you can move modules from one platform to the other with no modification.

#### CompactRIO



CompactRIO combines an open-embedded architecture with small size, extreme ruggedness, and C Series modules in a platform powered by the NI LabVIEW reconfigurable 1/O (RIO) architecture. Each system contains an FPGA for custom timing, triggering, and processing with a wide array of available

modular I/O to meet any embedded application requirement.

#### CompactDAQ

CompactDAQ is a portable, rugged data acquisition platform that integrates connectivity, data acquisition, and signal conditioning into modular I/O for directly interfacing to any sensor or signal. Using CompactDAQ with LabVIEW, you can easily customize how you acquire, analyze, visualize, and manage your measurement data.



#### Software

LabVIEW Professional Development System for Windows		
	<ul> <li>Use advanced software tools for large project development</li> </ul>	
	<ul> <li>Generate code automatically using DAQ Assistant and Instrument I/O Assistant</li> </ul>	
	<ul> <li>Use advanced measurement analysis and digital signal processing</li> </ul>	
	<ul> <li>Take advantage of open connectivity with DLLs, ActiveX, and .NET objects</li> </ul>	
	<ul> <li>Build DLLs, executables, and MSI installers</li> </ul>	

#### NI LabVIEW FPGA Module



 Design FPGA applications for NI RIO hardware

	<ul> <li>Program with the same graphical environment used for desktop and real- time applications</li> </ul>
	<ul> <li>Execute control algorithms with loop rates up to 300 MHz</li> </ul>
	<ul> <li>Implement custom timing and triggering logic, digital protocols, and DSP algorithms</li> </ul>
	<ul> <li>Incorporate existing HDL code and third-party IP including Xilinx IP generator functions</li> </ul>
	<ul> <li>Purchase as part of the LabVIEW Embedded Control and Monitoring Suite</li> </ul>
NI LabVIEW Real-Time Module	
	<ul> <li>Design deterministic real-time applications with LabV/EW graphical</li> </ul>




- Design deterministic real-time applications with LabVIEW graphical programming
- Download to dedicated NI or thirdparty hardware for reliable execution and a wide selection of I/O
- Take advantage of built-in PID control, signal processing, and analysis functions
- Automatically take advantage of multicore CPUs or set processor affinity manually
- Take advantage of real-time OS, development and debugging support, and board support

NI LabVIEW Real-Time Module	
	<ul> <li>Purchase individually or as part of a LabVIEW suite</li> </ul>

## NI-9237 Block Diagram

Each channel on the NI-9237 has an independent 24-bit ADC and an input amplifier that enable you to sample signals from all four channels simultaneously.

The NI-9237 is isolated from earth ground. However, the individual channels are not isolated from each other. The EX+, EX-, and T- signals are common among all channels. You can connect the NI-9237 to a device that is biased at any voltage within the NI-9237 rejection range of earth ground.

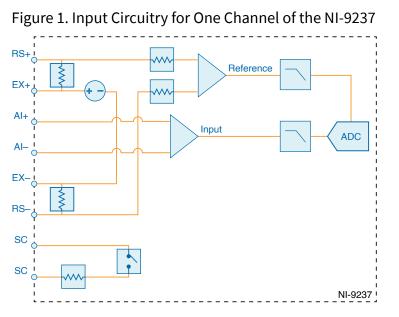

#### **Connection Options to Correct for Resistance Errors**

Wiring resistance can create errors in bridge circuits. The NI-9237 provides two mechanisms to correct for these errors: remote sensing and shunt calibration.

#### **Remote Sensing**

Remote sensing continuously and automatically corrects for errors in excitation leads, and generally is most appropriate for half- and full-bridge sensors.

Long wire and small gauge wire have greater resistance, which can result in gain error. The resistance in the wires that connect the excitation voltage to the bridge causes a voltage drop, which is a source of gain error. The NI-9237 includes remote sensing to compensate for this gain error. Connect remote sense wires to the points where the excitation voltage wires connect to the bridge circuit. Refer to the following figure for an illustration of how to connect remote sense wires to the NI-9237.

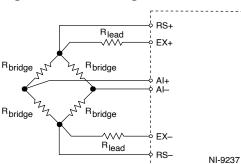


Figure 2. Connecting Remote Sense Wires to the NI-9237

The actual bridge excitation voltage is smaller than the voltage at the EX+ and EXleads. If you do not use remote sensing of the actual bridge voltage, the resulting gain error is:

 $\frac{R_{lead}}{R_{bridge}}$  for half-bridge sensors and  $\frac{2}{R_{bridge}}$  for full-bridge sensors. If you connect the remote sense signals directly to the bridge resistors, the NI-9237 senses the actual bridge voltage and eliminates the gain errors caused by the resistance of the EX+ and EX- leads.

#### Shunt Calibration

Shunt calibration can correct for errors from the resistance of both the excitation wiring and wiring in the individual resistors of the bridge. Remote sensing corrects for resistances from the EX pins on the NI-9237 to the sensor, and shunt calibration corrects for these errors and for errors caused by wire resistance within an arm of

the bridge. Shunt calibration is most useful with quarter-bridge sensors because there may be significant resistance in the wiring to the active resistor in the bridge.

The NI-9237 shunt calibration circuitry consists of a precision resistor and a software-controlled switch. Refer to the software help for information about enabling the shunt calibration switch for the NI-9237.

Shunt calibration involves simulating the input of strain by changing the resistance of an arm in the bridge by some known amount. This is accomplished by shunting, or connecting, a large resistor of known value across one arm of the bridge, creating a known strain-induced change in resistance. You can then measure the output of the bridge and compare it to the expected voltage value. You can use the results to correct gain errors in the entire measurement path, or to simply verify general operation to gain confidence in the setup.

Use a stable signal, which is typically the unloaded state of the sensor, first with the shunt calibration switch off and then again with the switch on. The difference in these two measurements provides an indication of the gain errors from wiring resistances. You can design the software application to correct subsequent readings for this gain error.

#### **Excitation Voltages**

You can program the NI-9237 to supply 2.5 V, 3.3 V, 5 V, or 10 V of excitation voltage. The maximum excitation power for internal excitation is 150 mW.

**Note** Unless you supply external excitation voltage, NI recommends that you set the excitation voltage to a value that keeps the total power below 150 mW. The NI-9237 automatically reduces internal excitation voltages as needed to stay below 150 mW total power.

Use the following equation to calculate the power of a single bridge:

$$P = \frac{V_{ex}^2}{B}$$

where R is the total resistance of the bridge.

For a quarter or half bridge, R is equal to two times the resistance of each element. For a full bridge, R is equal to the resistance of each element.


The 150 mW limit allows you to power half and full bridges as follows:

- Four 350 Ω half bridges at 5.0 V
- Four 350 Ω full bridges at 3.3 V
- Four 120 Ω half bridges at 2.5 V

#### **External Excitation**

You can connect an external excitation voltage source to the NI-9237 if you need an excitation voltage that causes more than 150 mW to dissipate across all the bridges.

Figure 3. Connecting an External Excitation Voltage Source to the NI-9237



**Note** For the NI-9237 with RJ-50, use the two EX+ and EX- terminals on the four-terminal external excitation voltage connector to connect one external excitation source.

You can use the additional EX+ and EX- terminals on the connector to wire multiple NI-9237 modules together in a daisy chain.

## Filtering

The NI-9237 uses a combination of analog and digital filtering to provide an accurate representation of in-band signals and reject out-of-band signals. The filters discriminate between signals based on the frequency range, or bandwidth, of the signal. The three important bandwidths to consider are the passband, the stopband, and the anti-imaging bandwidth.

The NI-9237 represents signals within the passband, as quantified primarily by passband ripple and phase nonlinearity. All signals that appear in the alias-free

bandwidth are either unaliased signals or signals that have been filtered by at least the amount of the stopband rejection.

#### Passband

The signals within the passband have frequency-dependent gain or attenuation. The small amount of variation in gain with respect to frequency is called the passband flatness. The digital filters of the NI-9237 adjust the frequency range of the passband to match the data rate. Therefore, the amount of gain or attenuation at a given frequency depends on the data rate.

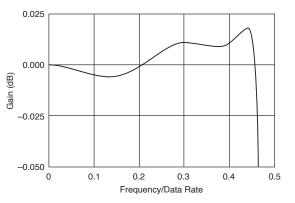


Figure 4. Typical Passband Flatness for the NI-9237

## Stopband

The filter significantly attenuates all signals above the stopband frequency. The primary goal of the filter is to prevent aliasing. Therefore, the stopband frequency scales precisely with the data rate. The stopband rejection is the minimum amount of attenuation applied by the filter to all signals with frequencies within the stopband.

## Alias-Free Bandwidth

Any signals that appear in the alias-free bandwidth are not aliased artifacts of signals at a higher frequency. The alias-free bandwidth is defined by the ability of the filter to reject frequencies above the stopband frequency. The alias-free bandwidth is equal to the data rate minus the stopband frequency.

#### **Data Rates**

The frequency of a master timebase  $(f_M)$  controls the data rate  $(f_s)$  of the NI-9237. The NI-9237 includes an internal master timebase with a frequency of 12.8 MHz, but the module also can accept an external master timebase or export its own master timebase. To synchronize the data rate of an NI-9237 with other modules that use master timebases to control sampling, all of the modules must share a single master timebase source.

The following equation provides the available data rates of the NI-9237:

 $f_s = \frac{f_M \div 256}{n}$ where n is any integer from 1 to 31.

However, the data rate must remain within the appropriate data rate range. When using the internal master timebase of 12.8 MHz, the result is data rates of 50 kS/s, 25 kS/s, 16.667 kS/s, and so on down to 1.613 kS/s depending on the value of n. When using an external timebase with a frequency other than 12.8 MHz, the NI-9237 has a different set of data rates.

**Note** The NI 9151 R Series Expansion chassis does not support sharing timebases between modules.

# NI-9237 Specifications

50 kS/s/channel, Bridge Analog Input, 4-Channel C Series Strain/Bridge Input Module

The following specifications are typical for the range -40 °C to 70 °C unless otherwise noted.

**Caution** Do not operate the NI-9237 in a manner not specified in this document. Product misuse can result in a hazard. You can compromise the safety protection built into the product if the product is damaged in any way. If the product is damaged, return it to NI for repair.

**Caution** Le NI-9237 ne doit en aucun cas être utilisé d'une autre façon que celle spécifiée dans ce document. Une mauvaise utilisation du produit peut s'avérer dangereuse. Si le produit est endommagé de quelque manière que ce soit, la sécurité intégrée dans le produit risque d'en être compromise. Si le produit est endommagé, le renvoyer à NI pour réparation.

#### Conditions

Specifications are valid for the range -40 °C to 70 °C unless otherwise noted.

#### Definitions

**Warranted** specifications describe the performance of a model under stated operating conditions and are covered by the model warranty.

**Characteristics** describe values that are relevant to the use of the model under stated operating conditions but are not covered by the model warranty.

- **Typical** specifications describe the performance met by a majority of models.
- **Nominal** specifications describe an attribute that is based on design, conformance testing, or supplemental testing.

#### Specifications are **Typical** unless otherwise noted.

#### Input Characteristics

Number of channels	4 analog input channels
Bridge completion	·
Half and Full	Internal
Quarter	External
ADC resolution	24 bits
Type of ADC	Delta-Sigma (with analog prefiltering)
Sampling mode	Simultaneous
TEDS support	IEEE 1451.4 TEDS Class II (Interface)

**Note** The NI 9237 also has TEDS circuitry. For more information about TEDS, visit ni.com/info and enter the Info Code rdteds.

Internal master timebase (f <sub>M</sub> )		
Frequency	12.8 MHz	
Accuracy	±100 ppm maximum	
Data rate range (f <sub>s</sub> ) using internal master timebase		
Minimum	1.613 kS/s	
Maximum	50 kS/s	
Data rate range (f <sub>s</sub> ) using external master timebase		
Minimum	391 S/s	
Maximum	51.36 kS/s	
Data rates (f <sub>s</sub> )	$(f_{M} \div 256) \div n$ , where n = 1, 2,, 31	
Typical input range	±25 mV/V	
Scaling coefficient	2.9802 nV/V per LSB	

Overvoltage protection between any two pins		±30 V	
Measurement Conditions <sup>[1]</sup>		Percent of Reading (Gain Error <sup>[2]</sup> )	Percent of Range <sup>[3]</sup> (Offset Error)
Calibrated Typ	Typical (25 °C, ±5 °C)	0.05%	0.05%
	Maximum (– 40 to 70 °C)	0.20%	0.25%
Uncalibrated <sup>[4]</sup>	Typical (25 °C, ±5 °C)	0.20%	0.10%
	Maximum (– 40 to 70 °C)	0.55%	0.35%

Table 1. Accuracy

Gain drift	10 ppm/°C maximum	
Offset drift		
2.5 V excitation	0.6 μV/V per °C	
3.3 V excitation	0.5 μV/V per °C	
5 V excitation	0.3 μV/V per °C	
10 V excitation	0.2 μV/V per °C	
Half-bridge completion		
Tolerance	±1200 μV/V maximum	
Drift	1.5 μV/V per °C	

Input Signal Frequency	Gain		Phase
(f <sub>in</sub> )	Typical	Maximum	Maximum
0 to 1 kHz	0.15%	0.3%	0.125°/kHz · f <sub>in</sub>
1 to 20 kHz	0.4%	1.1%	

Table 2. Channel-to-Channel Matching (Calibrated)

Phase nonlinearity	
$f_{in} = 0$ to 1 kHz	<0.001°
$f_{in}$ = 0 to 20 kHz	±0.1°

Input delay	$(40 + 5/512)/f_{\rm s} + 4.5 \mu{\rm s}$		
Passband			
Frequency	0.45 · f <sub>s</sub>		
Flatness	0.1 dB maximum		
Stopband			
Frequency	0.55 · f <sub>s</sub>		
Rejection	100 dB		
Alias-free bandwidth	0.45 · f <sub>s</sub>		
Oversample rate	$64 \cdot f_{s}$		
Rejection at oversample rate <sup>[5]</sup>			
$f_{\rm S} = 10  \rm kS/s$	60 dB @ 640 kHz		
$f_{\rm S} = 50 \text{ kS/s}$	90 dB @ 3.2 MHz		
Common-mode voltage, all signals to earth ground	±60 VDC		
Common-mode voltage range, with respect to EX-	±1 V from the midpoint of the excitation voltage		
CMRR			
Relative to earth ground $[6]$ ( $f_{in} = 0$ to 60 Hz)	140 dB		
Relative to EX– ( $f_{in} = 0$ to 1 kHz)	85 dB		
SFDR (1 kHz, -60 dBFS)	115 dB		
Total Harmonic Distortion (THD)			
1 kHz, –20 dBFS	-95 dB		
8 kHz, –20 dBFS	–95 dB		

Excitation Voltage	Density, (nV/V <sub>rms</sub> per √1 Hz )	Total, <i>f</i> <sub>in</sub> = 0 to 1 kHz (nV/V <sub>rms</sub> ) (signal sampled at 50 kHz)	Total, <i>f</i> <sub>in</sub> = 0 to 25 k	‹Hz (μV/V <sub>rms</sub> )
	Full Bridge	Full Bridge	Full Bridge	Half Bridge
2.5 V	8	250	1.3	1.6
3.3 V	6	190	1.0	1.2
5 V	4	130	0.6	0.8
10 V	2	65	0.3	0.5

Table 3. Input Noise

Excitation noise	100 μVrms
Crosstalk (not including cable eff	ects)
$f_{\rm in} = 1 \rm kHz$	-110 dB
<i>f</i> <sub>in</sub> = 10 kHz	-100 dB
Excitation	
Internal voltage	2.5 V, 3.3 V, 5.0 V, 10.0 V
Internal power	150 mW maximum
External voltage	2 V to 10 V
Shunt calibration	
Resistance	100 kΩ
Resistor accuracy	
25 °C	±110 Ω
– 40 °C to 70 °C	±200 Ω
MTBF	
NI-9237 with RJ-50	603,359 hours at 25 °C; Bellcore Issue 2, Method 1, Case 3, Limited Part Stress Method
NI-9237 with DSUB	704,148 hours at 25 °C; Bellcore Issue 2, Method 1, Case 3, Limited Part Stress Method

 $^1_-$  Before offset null or shunt calibration.

<sup>2</sup> Applies at a data rate of 50 kS/s. Lower data rates can have up to 0.20% of reading additional gain error.

 $\frac{3}{2}$  Range equals 25 mV/V.

<sup>4</sup> Uncalibrated accuracy refers to the accuracy achieved when acquiring data in raw or unscaled modes and in which calibration constants that are stored in the module are not applied to the data.

<sup>5</sup> Rejection by analog prefilter of signal frequencies at oversample rate.

<sup>6</sup> Measured with a balanced cable on the NI-9237 with RJ-50 and with no cable on the NI-9237 with DSUB. Shielded cables that are not twisted-pair may be significantly unbalanced, which can impact CMRR performance. To improve the balance of shielded cables, NI recommends twisting together the AI+/AI– pair, the RS+/RS– pair, and the EX+/EX– pair.

#### **Power Requirements**

Power consumption from chassis		
Active mode	740 mW maximum	
Sleep mode	25 μW maximum	
Thermal dissipation (at 70 °C)		
Active mode	740 mW maximum	
Sleep mode	25 μW maximum	

#### **Physical Characteristics**

If you need to clean the module, wipe it with a dry towel.

**Tip** For two-dimensional drawings and three-dimensional models of the C Series module and connectors, visit <u>ni.com/dimensions</u> and search by module number.

## Safety Voltages

Connect only voltages that are within the following limits.

Between any two pins ±30 V maximum	E	Between any two pins	±30 V maximum	
------------------------------------	---	----------------------	---------------	--

Isolation, channel-to-channel	None
Isolation, channel-to-earth ground	
Up to 3,000 m	
Continuous	60 VDC, Measurement Category I
Withstand	1,000 Vrms, verified by a 5 s dielectric withstand test
Up to 5,000 m	
Continuous	60 VDC, Measurement Category I
Withstand	860 Vrms, verified by a 5 s dielectric withstand test

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as **MAINS** voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.

**Caution** Do not connect the NI-9237 to signals or use for measurements within Measurement Categories II, III, or IV.

**Note** Measurement Categories CAT I and CAT O are equivalent. These test and measurement circuits are not intended for direct connection to the MAINS building installations of Measurement Categories CAT II, CAT III, or CAT IV.

#### Hazardous Locations

U.S. (UL)	Class I, Division 2, Groups A, B, C, D, T4; Class I, Zone 2, AEx nA IIC T4 Gc
Canada (C-UL)	Class I, Division 2, Groups A, B, C, D, T4; Class I, Zone 2, Ex nA IIC T4 Gc

Europe (ATEX) and International (IECEx)

Ex nA IIC T4 Gc

#### Safety and Hazardous Locations Standards

This product is designed to meet the requirements of the following electrical equipment safety standards for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1
- EN 60079-0:2012, EN 60079-15:2010
- IEC 60079-0: Ed 6, IEC 60079-15; Ed 4
- UL 60079-0; Ed 5, UL 60079-15; Ed 3
- CSA 60079-0:2011, CSA 60079-15:2012

**Note** For UL and other safety certifications, refer to the product label or the <u>Online Product Certification</u> section.

#### Electromagnetic Compatibility

This product meets the requirements of the following EMC standards for sensitive electrical equipment for measurement, control, and laboratory use:

- EN 61326-2-1 (IEC 61326-2-1): Class A emissions; Industrial immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- AS/NZS CISPR 11: Group 1, Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions

**Note** In the United States (per FCC 47 CFR), Class A equipment is intended for use in commercial, light-industrial, and heavy-industrial locations. In Europe, Canada, Australia and New Zealand (per CISPR 11) Class A equipment is intended for use only in heavy-industrial locations.

**Note** Group 1 equipment (per CISPR 11) is any industrial, scientific, or medical equipment that does not intentionally generate radio frequency energy for the treatment of material or inspection/analysis purposes.



**Note** For EMC declarations and certifications, and additional information, refer to the <u>Online Product Certification</u> section.

# CE Compliance 🤇 🧲

This product meets the essential requirements of applicable European Directives, as follows:

- 2014/35/EU; Low-Voltage Directive (safety)
- 2014/30/EU; Electromagnetic Compatibility Directive (EMC)
- 94/9/EC; Potentially Explosive Atmospheres (ATEX)

## **Product Certifications and Declarations**

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for NI products, visit <u>ni.com/product-certifications</u>, search by model number, and click the appropriate link.

## Shock and Vibration

To meet these specifications, you must panel mount the system.

Operating vibration	
Random (IEC 60068-2-64)	5 g <sub>rms</sub> , 10 Hz to 500 Hz
Sinusoidal (IEC 60068-2-6)	5 g, 10 Hz to 500 Hz
Operating shock (IEC 60068-2-27)	30 g, 11 ms half sine; 50 g, 3 ms half sine; 18 shocks at 6 orientations

#### Environmental

Refer to the manual for the chassis you are using for more information about meeting these specifications.

Operating temperature (IEC 60068-2-1, IEC 60068-2-2)	-40 °C to 70 °C
Storage temperature (IEC 60068-2-1, IEC 60068-2-2)	-40 °C to 85 °C
Ingress Protection	
NI 9237 with RJ-50	IP30
NI 9237 with DSUB	IP40
Operating humidity (IEC 60068-2-78)	10% RH to 90% RH, noncondensing
Storage humidity (IEC 60068-2-78)	5% RH to 95% RH, noncondensing
Pollution Degree	2
Maximum altitude	5,000 m

Indoor use only.

#### **Environmental Management**

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers. For additional environmental information, refer to the **Engineering a Healthy Planet** web page at <u>ni.com/environment</u>. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

#### EU and UK Customers

• X Waste Electrical and Electronic Equipment (WEEE)—At the end of the product life cycle, all NI products must be disposed of according to local laws and regulations. For more information about how to recycle NI products in your region, visit <u>ni.com/environment/weee</u>.

# 电子信息产品污染控制管理办法(中国 RoHS)

• ●●● 中国 RoHS— NI 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。关于 NI 中国 RoHS 合规性信息,请登录 ni.com/environment/ rohs\_china。(For information about China RoHS compliance, go to ni.com/ environment/rohs\_china.)

#### Calibration

You can obtain the calibration certificate and information about calibration services for the NI-9237 at <u>ni.com/calibration</u>.

Calibration interval	1 year

#### Calibration

You can obtain the calibration certificate and information about calibration services for the NI-9237 at <u>ni.com/calibration</u>.

Calibration interval	1 year