

CDB5480U Engineering Board and GUI Software

Features

- Standalone Power Meter Application
- Voltage and Current Interfaces
- Low- and High-voltage Sensor Connections
- Adaptable Sensor Filters Onboard
- USB Communication with PC
- UART/SPI Optically Isolated Communication
- Onboard C8051F342 Microcontroller
- Single Supply Operation USB or 5V
- Onboard DC-DC Converter and Regulator
- LCD Power Monitor Display
- LabWindows®/CVI® GUI Software
 - Full Register Setup & Chip Control
 - Simplified Register Access
 - Quick Calibration Control
 - FFT Analysis
 - Time Domain Analysis
 - Noise Histogram Analysis
- Voltage Reference Access

General Description

The CDB5480U is an extensive tool designed to evaluate the functionality and performance of the Cirrus Logic CS5480 power/energy measurement device.

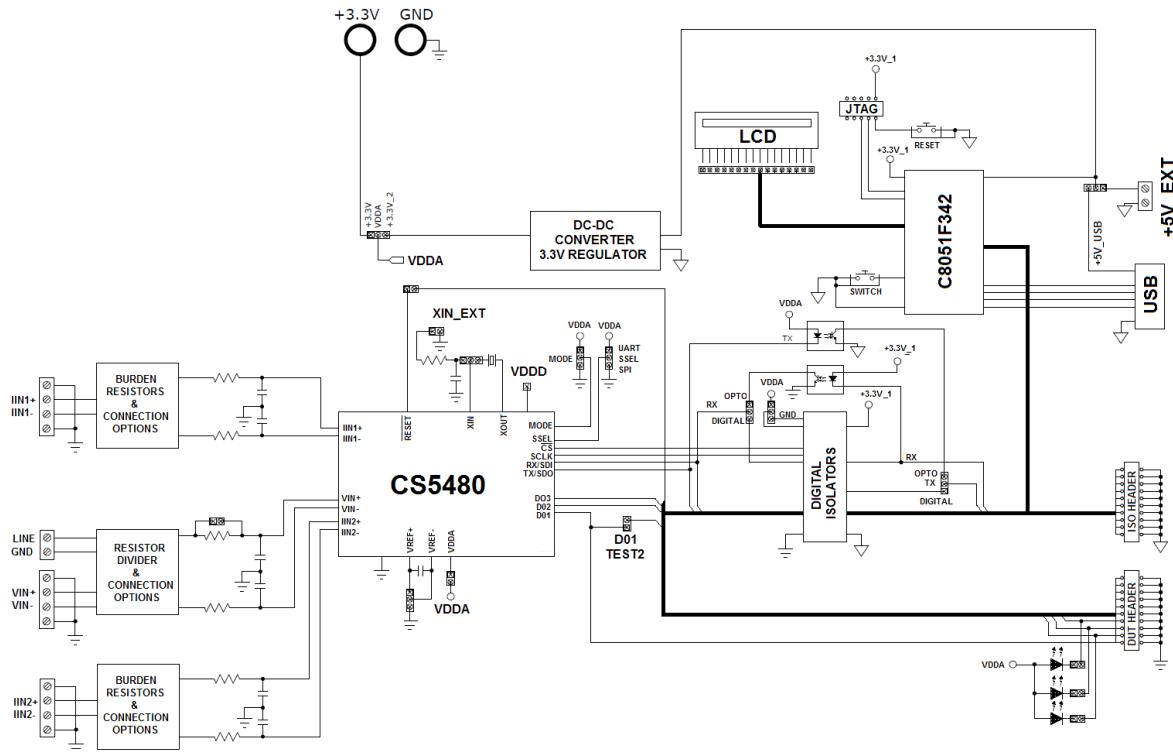
Multiple analog input connection options, configuration input filters, direct and isolated digital interfaces, multiple power supply options, an onboard programmable micro-controller, and visual LEDs with an LCD panel make the board a flexible and powerful customer development tool for various power/energy measurement applications.

The GUI software provides easy and complete access to the onboard CS5480 device. In addition, it includes the function of raw ADC data collection with time domain, frequency domain, and histogram analysis.

Schematics in the PADS™ PowerLogic™ format are available for download at www.cirrus.com/IndustrialSoftware.

ORDERING INFORMATION

CDB5480U Evaluation Board



⚠️ IMPORTANT SAFETY INSTRUCTIONS

Read and follow all safety instructions prior to using this demonstration board.

This Engineering Evaluation Unit or Demonstration Board must only be used for assessing IC performance in a laboratory setting. This product is not intended for any other use or incorporation into products for sale.

This product must only be used by qualified technicians or professionals who are trained in the safety procedures associated with the use of demonstration boards.

⚠️ DANGER Risk of Electric Shock

- The direct connection to the AC power line and the open and unprotected boards present a serious risk of electric shock and can cause serious injury or death. Extreme caution needs to be exercised while handling this board.
- Avoid contact with the exposed conductor or terminals of components on the board. High voltage is present on exposed conductor and it may be present on terminals of any components directly or indirectly connected to the AC line.
- Dangerous voltages and/or currents may be internally generated and accessible at various points across the board.
- Charged capacitors store high voltage, even after the circuit has been disconnected from the AC line.
- Make sure that the power source is off before wiring any connection. Make sure that all connectors are well connected before the power source is on.
- Follow all laboratory safety procedures established by your employer and relevant safety regulations and guidelines, such as the ones listed under, OSHA General Industry Regulations - Subpart S and NFPA 70E.

⚠️ WARNING Suitable eye protection must be worn when working with or around demonstration boards. Always comply with your employer's policies regarding the use of personal protective equipment.

⚠️ WARNING All components and metallic parts may be extremely hot to touch when electrically active.

Contacting Cirrus Logic Support

For all product questions and inquiries contact a Cirrus Logic Sales Representative. To find the one nearest to you go to www.cirrus.com

IMPORTANT NOTICE

Cirrus Logic, Inc. and its subsidiaries ("Cirrus") believe that the information contained in this document is accurate and reliable. However, the information is subject to change without notice and is provided "AS IS" without warranty of any kind (express or implied). Customers are advised to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, indemnification, and limitation of liability. No responsibility is assumed by Cirrus for the use of this information, including use of this information as the basis for manufacture or sale of any items, or for infringement of patents or other rights of third parties. This document is the property of Cirrus and by furnishing this information, Cirrus grants no license, express or implied under any patents, mask work rights, copyrights, trademarks, trade secrets or other intellectual property rights. Cirrus owns the copyrights associated with the information contained herein and gives consent for copies to be made of the information only for use within your organization with respect to Cirrus integrated circuits or other products of Cirrus. This consent does not extend to other copying such as copying for general distribution, advertising or promotional purposes, or for creating any work for resale.

CERTAIN APPLICATIONS USING SEMICONDUCTOR PRODUCTS MAY INVOLVE POTENTIAL RISKS OF DEATH, PERSONAL INJURY, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE ("CRITICAL APPLICATIONS"). CIRRUS PRODUCTS ARE NOT DESIGNED, AUTHORIZED OR WARRANTED FOR USE IN AIRCRAFT SYSTEMS, MILITARY APPLICATIONS, PRODUCTS SURGICALLY IMPLANTED INTO THE BODY, AUTOMOTIVE SAFETY OR SECURITY DEVICES, LIFE SUPPORT PRODUCTS OR OTHER CRITICAL APPLICATIONS. INCLUSION OF CIRRUS PRODUCTS IN SUCH APPLICATIONS IS UNDERSTOOD TO BE FULLY AT THE CUSTOMER'S RISK AND CIRRUS DISCLAIMS AND MAKES NO WARRANTY, EXPRESS, STATUTORY OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, WITH REGARD TO ANY CIRRUS PRODUCT THAT IS USED IN SUCH A MANNER. IF THE CUSTOMER OR CUSTOMER'S CUSTOMER USES OR PERMITS THE USE OF CIRRUS PRODUCTS IN CRITICAL APPLICATIONS, CUSTOMER AGREES, BY SUCH USE, TO FULLY INDEMNIFY CIRRUS, ITS OFFICERS, DIRECTORS, EMPLOYEES, DISTRIBUTORS AND OTHER AGENTS FROM ANY AND ALL LIABILITY, INCLUDING ATTORNEYS' FEES AND COSTS, THAT MAY RESULT FROM OR ARISE IN CONNECTION WITH THESE USES.

Cirrus Logic, Cirrus, the Cirrus Logic logo designs, EXL Core, and the EXL Core logo design are trademarks of Cirrus Logic, Inc. All other brand and product names in this document may be trademarks or service marks of their respective owners.

SPI is a trademark of Motorola, Inc.

LabWindows and CVI are registered trademarks of National Instruments, Inc.

Windows, Windows 2000, Windows XP, and Windows 7 are trademarks or registered trademarks of Microsoft Corporation.

PADS and PowerLogic are trademarks of Mentor Graphics Corporation.

TABLE OF CONTENTS

1. HARDWARE	4
1.1 Introduction	4
1.2 Evaluation Board Overview	4
1.3 Analog Section	5
1.4 Digital Section	8
1.5 Power Supply Selection	10
1.6 Typical Sensor Connections	11
1.7 Standalone Meter Application	14
2. SOFTWARE	15
2.1 Installation	15
2.2 Using the Software	15
2.3 Start-up Window	15
2.4 Connect Menu	15
2.5 System Menu	18
2.6 Calibration Window	22
2.7 Conversion Window	25
2.8 Cirrus Test Window	27
Appendix A. Bill Of Materials	36
Appendix B. Schematics.....	38
Appendix C. Layer Plots	41

LIST OF FIGURES

Figure 1. CDB5480U Assembly Drawing & Default Configuration	4
Figure 2. Voltage Channel — Low-voltage Input.....	5
Figure 3. Voltage Channel — High-voltage Input.....	6
Figure 4. Current Channel — Low-voltage Input.....	7
Figure 5. MCU Connection Window	8
Figure 6. Shunt Sensor Power Meter	11
Figure 7. Current Transformer Power Meter	12
Figure 8. Rogowski Coil Power Meter	13
Figure 9. Standalone Power Meter Measurements	14
Figure 10. GUI Start-up Window	15
Figure 11. Connect Menu Showing Successful USB Connection	16
Figure 12. USB Error Message	16
Figure 13. Connect Menu Showing Serial Connection Options	17
Figure 14. UART Serial Port Selection Window, UART Selected	17
Figure 15. SPI Serial Port Selection Window, SPI Selected	17
Figure 16. Unknown Chip ID Error Message.....	18
Figure 17. System Pull-down Options	18
Figure 18. Setup Window	19
Figure 19. Calibration Window	23
Figure 20. Conversion Window	25
Figure 21. Cirrus Test Pull-down Options	27
Figure 22. Data Collection Window	27
Figure 23. Data Collection UART Error Message.....	28
Figure 24. Data Collection Output Window	28
Figure 25. Data Collection Configuration Window	29
Figure 26. Histogram Analysis.....	31
Figure 27. FFT Analysis	32
Figure 28. Time Domain Analysis.....	33
Figure 29. Data Collection to File Window	34
Figure 30. Setup and Test Window	35
Figure 31. Schematic - Analog Inputs	38
Figure 32. Schematic - CS5480 & Socket.....	39
Figure 33. Schematic - Microcontroller & USB Interface	40
Figure 34. Top Silkscreen	41
Figure 35. Top Routing.....	42
Figure 36. Bottom Routing	43
Figure 37. Solder Paste Mask	44

1. HARDWARE

1.1 Introduction

The CDB5480U evaluation board provides a convenient means of evaluating the CS5480 power measurement IC. The CDB5480U evaluation board operates from a single USB or 5V power supply. An optional 3.3V power supply input is available for powering the CS5480 directly. The evaluation board interfaces the CS5480 to a PC via a USB cable. To accomplish this, the board comes equipped with a C8051F342 microcontroller and a USB interface. Additionally, the CDB5480U GUI software provides easy access to the internal registers of the CS5480. The software also provides a means to display the performance in the time domain or frequency domain.

1.2 Evaluation Board Overview

The board is partitioned into two main sections: analog and digital. The analog section consists of the CS5480, passive anti-aliasing filters, and a high-voltage section with attenuation resistor networks. The digital section consists of the C8051F342 microcontroller, LCD, the hardware test switches, the reset circuitry, and the USB interface. The board also has a user-friendly power supply connection. The assembly information and default configurations for jumpers are shown below.

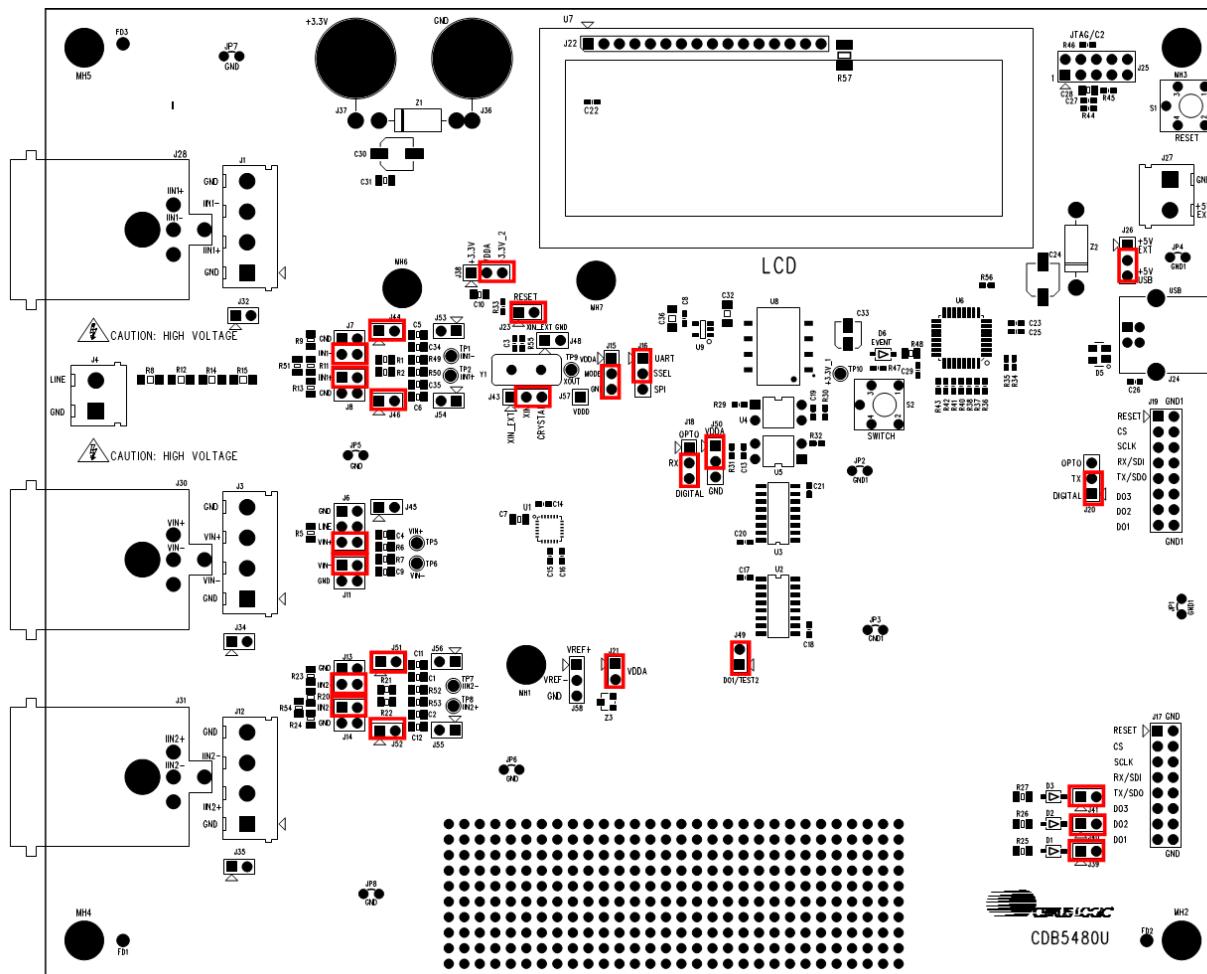


Figure 1. CDB5480U Assembly Drawing & Default Configuration

1.3 Analog Section

The analog section of the CDB5480U is highly configurable. Onboard signal conditioning options for the voltage and current channels enable most applications to interface directly to the sensors. The following two sections define the voltage and current channels configurations.

1.3.1 Voltage Sensor Connection

There are three input signal options for the voltage channel input ($VIN\pm$): an external low-voltage signal (via screw terminals or XLR connections), high-voltage line input, or GND. Table 1 illustrates the options available.

Table 1. Voltage Channel Input Signal Selection

INPUT	Description	J11	J6
$VIN\pm$	Selects External Low-voltage Fully Differential Signal	$VIN-$ <input checked="" type="checkbox"/> <input type="radio"/> $VIN-$ GND <input type="checkbox"/> <input checked="" type="radio"/> $VIN-$ (Default)	GND <input type="checkbox"/> <input type="radio"/> $VIN+$ $Line$ <input type="checkbox"/> <input checked="" type="radio"/> $VIN+$ $VIN+$ <input checked="" type="checkbox"/> <input type="radio"/> $VIN+$ (Default)
$VIN\pm$	Selects External Low-voltage Single-ended Signal	$VIN-$ <input type="checkbox"/> <input checked="" type="radio"/> $VIN-$ GND <input checked="" type="checkbox"/> <input type="radio"/> $VIN-$	GND <input type="checkbox"/> <input type="radio"/> $VIN+$ $Line$ <input type="checkbox"/> <input checked="" type="radio"/> $VIN+$ $VIN+$ <input checked="" type="checkbox"/> <input type="radio"/> $VIN+$
GND	Selects Grounding the Input	$VIN-$ <input type="checkbox"/> <input type="radio"/> $VIN-$ GND <input checked="" type="checkbox"/> <input type="radio"/> $VIN-$	GND <input checked="" type="checkbox"/> <input type="radio"/> $VIN+$ $Line$ <input type="checkbox"/> <input checked="" type="radio"/> $VIN+$ $VIN+$ <input type="checkbox"/> <input checked="" type="radio"/> $VIN+$
High Voltage Line	Selects External High-voltage AC Line Signal	$VIN-$ <input type="checkbox"/> <input type="radio"/> $VIN-$ GND <input checked="" type="checkbox"/> <input type="radio"/> $VIN-$	GND <input type="checkbox"/> <input type="radio"/> $VIN+$ $Line$ <input checked="" type="checkbox"/> <input type="radio"/> $VIN+$ $VIN+$ <input type="checkbox"/> <input checked="" type="radio"/> $VIN+$

The CDB5480U evaluation board provides screw-type terminals (J3) or XLR connectors (J30) to connect the low-voltage input signal to the voltage channel (see Figure 2). The screw terminals are labeled as $VIN+$ / $VIN-$. An R-C network at the channel input provides a simple configurable anti-alias filter. By installing jumpers on J6 to position $VIN+$ and J11 to position $VIN-$, the input voltage signal is supplied from the screw terminals or XLR connection.

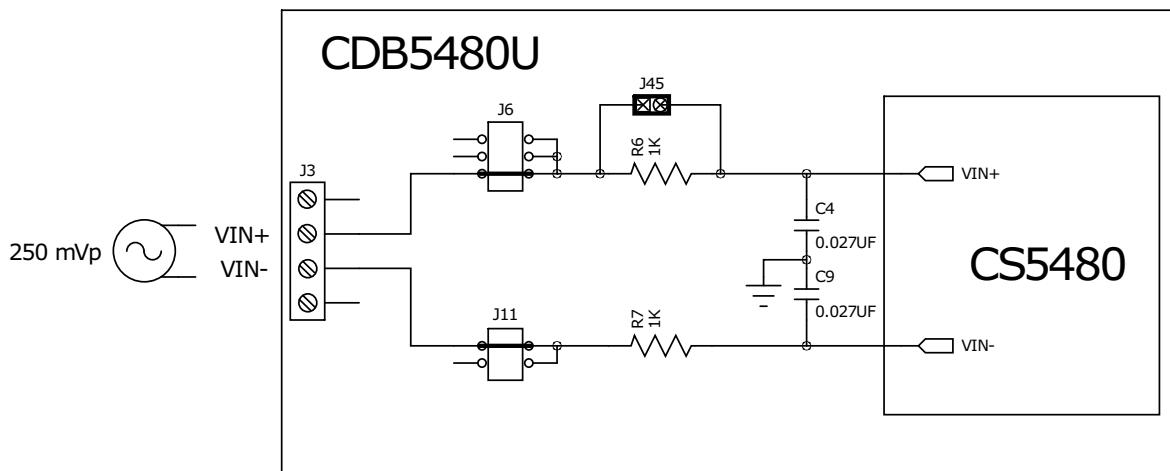


Figure 2. Voltage Channel — Low-voltage Input

The CDB5480U evaluation board provides screw-type terminal (J4) to connect to the high-voltage line input. By installing jumpers on J6 to position LINE and J11 to position GND, the input voltage signal is supplied from the high-voltage input. Extreme care should be used when connecting high-voltage signals to the CDB5480U evaluation board (see Figure 3).

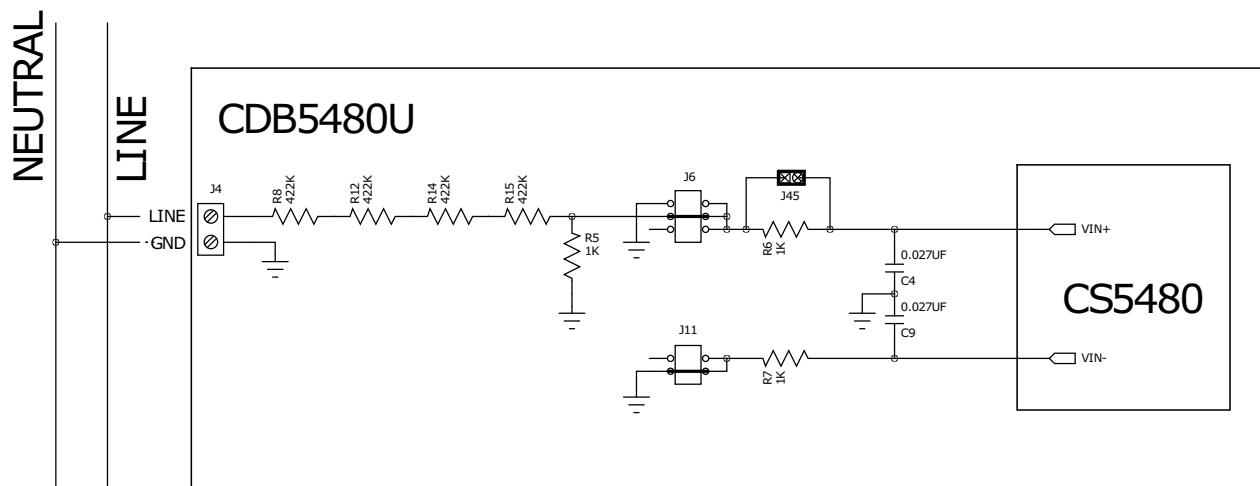


Figure 3. Voltage Channel — High-voltage Input

The default attenuation network provides the following attenuation:

$$\frac{1k}{(4 \times 422k) + 1k} = \frac{1}{1689}$$

With the CS5480 input range of 250mVp at maximum AC line input of:

$$300V_{rms} = \frac{250mVp}{\sqrt{2}} \times 1689$$

is acceptable. It is recommended to apply a 10% margin for the AC line input (270V_{rms}).

The CDB5480U evaluation board provides input shorting options for calibration and noise performance measurements. With a jumper on J6 and J11 in the GND position, the inputs are connected to analog ground (GND).

1.3.2 Current Sensor Connection

Current input options include an external signal (via screw terminals or XLR connectors) or GND. Table 2 shows the options available.

Table 2. Current Channel Input Signal Selection

INPUT	Description	J8	J7	J14	J13
IIN1± or IIN2±	Selects External Low-voltage, Fully Differential Signal	IIN1+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN1+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1+ (Default)	GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1- IIN1- <input checked="" type="checkbox"/> IIN1- (Default)	IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ (Default)	GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- IIN2- <input checked="" type="checkbox"/> IIN2- (Default)
IIN1± or IIN2±	Selects External Low-voltage, Single-ended Signal	IIN1+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN1+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1+ IIN1- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1- IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2-	GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN1- IIN1- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1- IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2-	IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2-	IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- IIN2+ <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2-
GND	Selects Grounding the Input	IIN1+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN1+ IIN1- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN1- IIN2+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2-	GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN1- IIN1- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN1- IIN2+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2-	IIN2+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2- IIN2+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2-	IIN2+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2- IIN2+ <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2+ GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2+ IIN2- <input type="checkbox"/> <input checked="" type="checkbox"/> IIN2- GND <input checked="" type="checkbox"/> <input type="checkbox"/> IIN2-

There are two input signal options for current channels (IIN1±, IIN2±). The CDB5480U evaluation board provides screw-type terminals (J1 and J2) or XLR connectors (J28 and J31) to connect input signals to the current channels. The screw terminals are labeled as IIN1+ / IIN1-, and IIN2+ / IIN2-. An R-C network at each channel input provides a simple configurable anti-alias filter (see Figure 3).

By installing jumpers on J8 to position IIN1+, J7 to position IIN1-, J14 to position IIN2+, and J13 to position IIN2-, the input current signal is supplied from the screw terminals or XLR connectors.

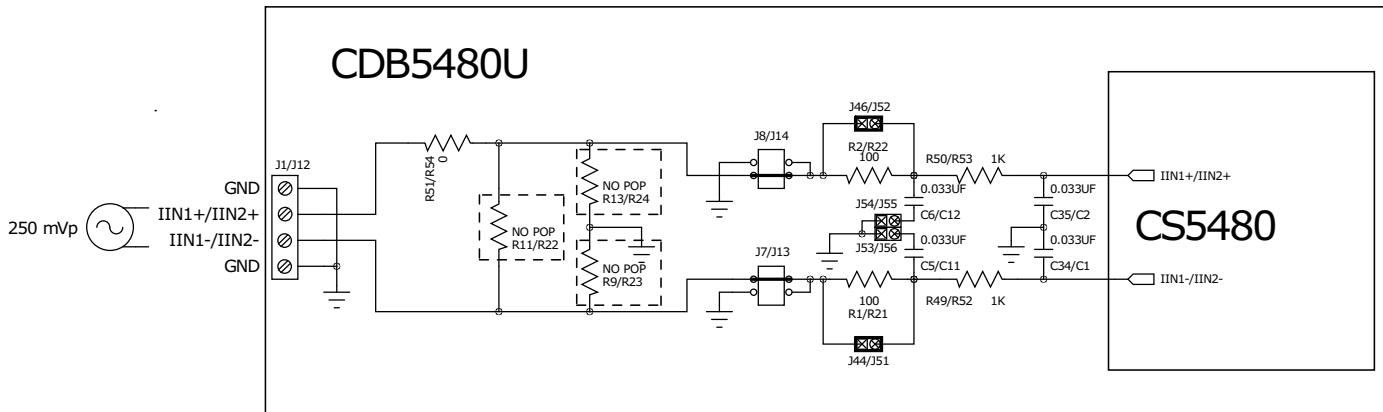


Figure 4. Current Channel — Low-voltage Input

The CDB5480U evaluation board provides input shorting options for calibration and noise performance measurements. With a jumper on J8, J7, J14, and J13 in the GND position, the inputs are connected to analog ground (GND).

1.4 Digital Section

The digital section contains the microcontroller, USB interface, LCD, optical isolation, JTAG header, reset circuitry, and external interface headers (J17 and J19). The microcontroller interfaces the UART or SPI of the CS5480 with the USB connection to the PC, enabling the GUI software to access all of the CS5480 registers and functions.

1.4.1 Serial Port Selection

Communication to the CS5480 is provided through two serial port options — UART or SPI. It is necessary to establish communication with the MCU before establishing a serial port communication protocol with the CS5480 (see Figure 5).

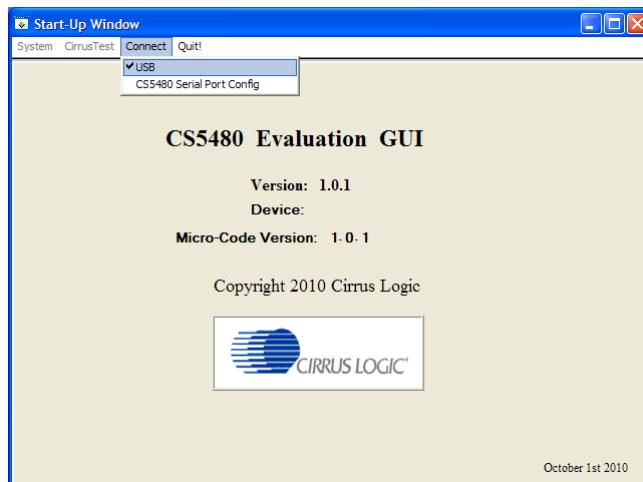


Figure 5. MCU Connection Window

For UART communication, place the SSEL jumper to the *UART* position via J16, and select *UART* in the serial port selection window. To enable SPI communications, place the SSEL jumper to the *SPI* position via J16 and select *SPI* in the serial port selection window. Table 3 provides the serial communication options on the CDB5480U board.

Table 3. Serial Communication Options

	J16	J18	J20	J50
UART	<input checked="" type="checkbox"/> UART <input type="checkbox"/> SSEL <input type="radio"/> SPI (default)	<input type="checkbox"/> OPTO <input checked="" type="checkbox"/> RX <input type="checkbox"/> DIGITAL (default)	<input type="checkbox"/> OPTO <input checked="" type="checkbox"/> TX <input type="checkbox"/> DIGITAL (default)	<input type="checkbox"/> VDDA <input checked="" type="checkbox"/> EN2 <input type="radio"/> GND (default)
SPI	<input type="checkbox"/> UART <input checked="" type="checkbox"/> SSEL <input type="checkbox"/> SPI	<input type="checkbox"/> OPTO <input checked="" type="checkbox"/> RX <input type="checkbox"/> DIGITAL	<input type="checkbox"/> OPTO <input checked="" type="checkbox"/> TX <input type="checkbox"/> DIGITAL	<input type="checkbox"/> VDDA <input checked="" type="checkbox"/> EN2 <input type="radio"/> GND
Low speed UART (4800 Baud Max)	<input checked="" type="checkbox"/> UART <input type="checkbox"/> SSEL <input type="radio"/> SPI	<input type="checkbox"/> OPTO <input checked="" type="checkbox"/> RX <input type="radio"/> DIGITAL	<input type="checkbox"/> OPTO <input checked="" type="checkbox"/> TX <input type="radio"/> DIGITAL	<input type="checkbox"/> VDDA <input checked="" type="checkbox"/> EN2 <input type="radio"/> GND

1.4.2 Interface to Microcontroller

Interface headers J17 and J19 are provided to allow the CDB5480U to be connected to an external energy registration device or an external microcontroller. Interface header J17 provides direct access to the CS5480 pins while interface header J19 provides an isolated connection. It is imperative to use the isolated connection (J19) when high-voltage signals are used. Failure to use isolation can result in damage to components or electrical shock. Refer to “Digital Isolation” on page 9 for details on signal isolation.

Interface header J19 can be used to connect to the external microcontroller. To connect the CS5480 to an external microcontroller, R34, R35, R36, R37, R38, R39, R40, R41, R42, and R43 must be removed from the board.

1.4.3 Digital Isolation

Two types of isolation are provided, including a low-speed optical coupler for UART only and high-speed digital isolation for UART and SPI communication. Default jumper settings provide high-speed digital isolators. To enable high-speed digital isolators, place jumpers (J18 and J20) in the *RX to DIGITAL* position and *TX to DIGITAL* position. To enable the high-speed digital isolators, it is also necessary to install jumper (J50) in the *VDDA* position. To enable low-speed optical UART communication, place jumpers (J18 and J20) in the *RX to OPTICAL* position and *TX to OPTICAL* position.

The high-speed digital isolators operate from DC to 150Mbps. The low-speed optical couplers operate to a maximum speed of about 4.8kHz. All the signals supplied to the isolators are available to the MCU except CPUCLK.

1.4.4 Additional Device Pin Access

The CS5480’s digital output pins DO1, DO2, DO3, and DO4 are routed to LEDs, which provide a simple visual check of the digital calculation output pulses. Jumpers J39, J40, J41, and J42 are equipped at the factory with jumpers to enable the LEDs. The DO1 digital output pin is supplied to the digital isolation using jumper J49.

The MODE pin jumper (J15) should be installed in the *VDDA to MODE* position.

The CS5480 system clock can be connected to an onboard quartz crystal or an external clock can be supplied to the CS5480 XIN pin through jumper J43. To connect the onboard quartz crystal, install jumper J43 in the *XIN to CRYSTAL* position.

1.5 Power Supply Selection

Table 4 illustrates the power supply connections on the evaluation board. The positive analog (VDDA) for the CS5480 can be supplied using the +3.3V binding post (J36 and J37) or the onboard +3.3V regulator. Jumper J38 allows the VDDA supply to be sourced from the +3.3V binding post (J37) or the regulated +3.3V supply. The DC-DC converter (U8) powers the onboard +3.3V regulator. Jumper J26 allows the +5V supply to be sourced from either the +5V EXT screw connector (J27) or the +5V USB supply. The +5V supplies the power for the microcontroller (8051_REGIN) and the DC-DC converter (U8). Jumper J21 is used to measure the CS5480 analog supply current and **must** be installed.

It is strongly recommended that the USB or +5V terminals be used when non-isolated voltage or current sensors are connected to the CDB5480U evaluation board. The DC-DC converter (U8) provides 1kVDC isolation, while no isolation is provided for the 3.3V binding post connections. When using the 3.3V binding post connections, the external 3.3VDC power supply should be isolated from the AC line, and the GND reference of the CS5480 section **must** be neutral or earth ground. The neutral should return to the same earth ground as the power supply and other instruments. Verify your equipment ratings and connections before use with high-voltage sources.

Table 4. Power Supply Selection

Supply Source	CS5480 Source	Binding post J36&J37	USB Supply J24	5V Terminals J27	J21	VDDA J38	+3.3V_1 J26
USB	On-board 3.3 V Regulator	NC	+5V	NC	VDDA VDDA (default)	<input type="checkbox"/> +3.3V VDDA +3.3V_2 (default)	<input type="checkbox"/> +5V EXT +5V +5V USB (default)
External +3.3V & USB	Binding Post	+3.3 V	+5V	NC	VDDA VDDA	+3.3V VDDA <input type="radio"/> +3.3V_2	<input type="checkbox"/> +5V EXT +5V +5V USB
External +5V	On-board 3.3V regulator	NC	NC	+5V	VDDA VDDA	<input type="checkbox"/> +3.3V VDDA +3.3V_2	+5V EXT +5V <input type="radio"/> +5V USB

1.6 Typical Sensor Connections

The CDB5480U evaluation board provides connections directly to several different types of sensors. Flexible onboard filter networks provide a convenient configuration for three common transducers, including current shunt, current transformer (CT), or Rogowski coil.

1.6.1 Shunt Power Meter Example

An inexpensive current shunt configuration is easily achievable with the CDB5480U evaluation board. Figure 6 depicts the voltage and current connections for a shunt sensor and its associated filter configurations.

It is strongly recommended that a low-side (neutral path) current shunt is used — especially in high-voltage situations. Make sure that all signals are well connected before the power source is turned on. Extreme care should be taken when connecting high-voltage signals to the CDB5480U evaluation board.

In this configuration it is unnecessary to use a burden resistor. A single anti-alias filter is all that is required for the current channel. Above the filter corner frequency, the CS5480 inputs will see the same voltage that is across the shunt. Therefore, the shunt voltage should be kept below the maximum of 50mV_p with I-Channel PGA = 50x. A 10% margin is recommended for the shunt voltage (45mV_p).

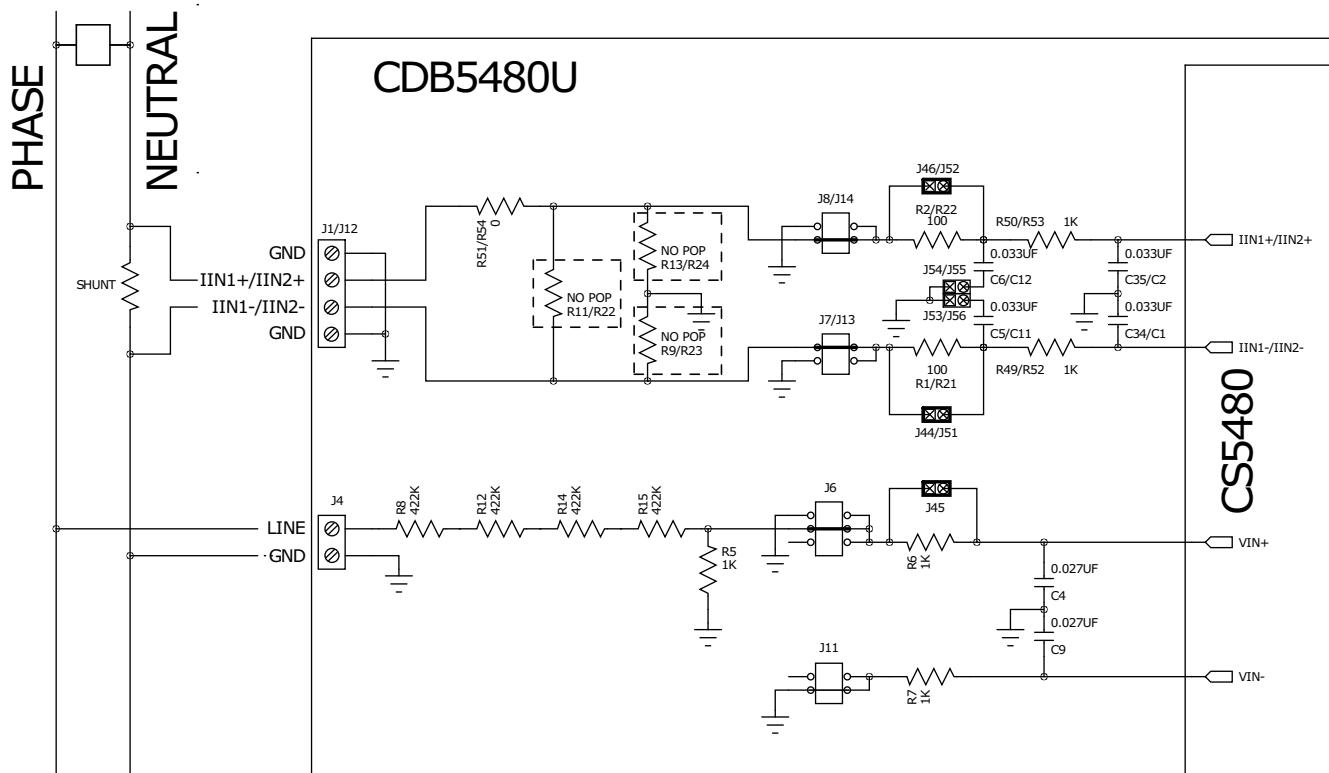


Figure 6. Shunt Sensor Power Meter

1.6.2 Current Transformer Power Meter Example

A slightly more expensive option is to use a current transformer (CT) to connect the AC mains to the CDB5480U evaluation board. Figure 7 depicts the voltage and current connections for a CT sensor and its associated filter configurations.

NEVER “open circuit” a CT. Make sure that all signals are well connected before the power source is turned on. Extreme care should be taken when connecting high-voltage signals to the CDB5480U evaluation board.

The burden resistor (R11/R22) is necessary in a CT application to convert the secondary current into voltage. Knowledge of the current transformers turns ratio (N) is key to determining the proper CS5480 input voltage (V_{burden}) that the meter places on the system. The optimum secondary voltage (V_{burden}) should be 10% less than the maximum channel voltage of 250mVp with I-channel PGA = 10x. The secondary voltage (V_{burden}) is determined by converting the primary current to the secondary current. Then the secondary current (I_{burden}) can be converted into a voltage by Ohm's Law.

$$V_{burden} = I_{burden} \times R_{burden} = \frac{I_{primary}}{N} \times R_{burden}$$

The secondary voltage (V_{burden}) is sourced to the CS5480 through a simple low-pass, anti-alias filter, and this voltage should not exceed the 250mVp.

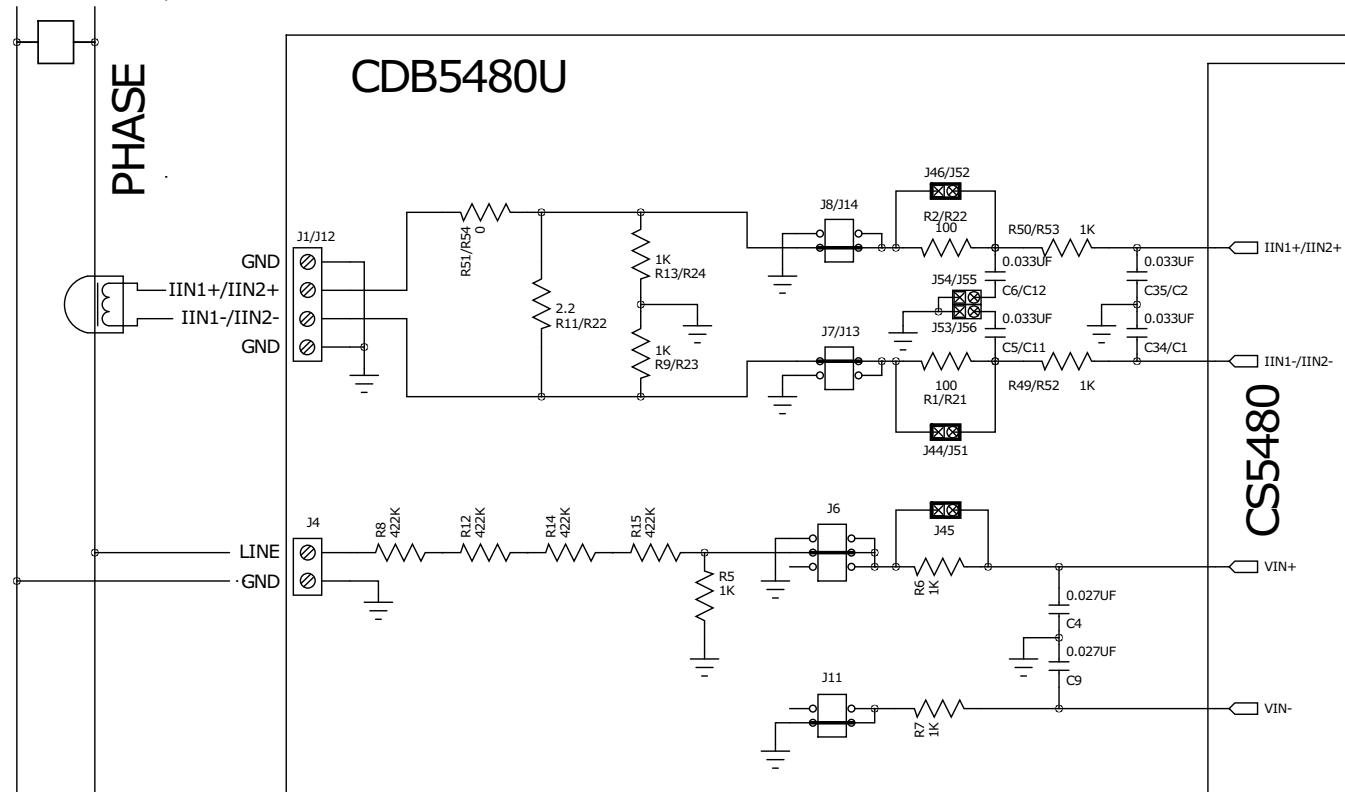


Figure 7. Current Transformer Power Meter

1.6.3 Rogowski Coil Power Meter Example

Rogowski coil power meter can be easily connected to the CDB5480U evaluation board. Figure 8 shows the voltage and current connections for the Rogowski sensor and its associated filter configurations.

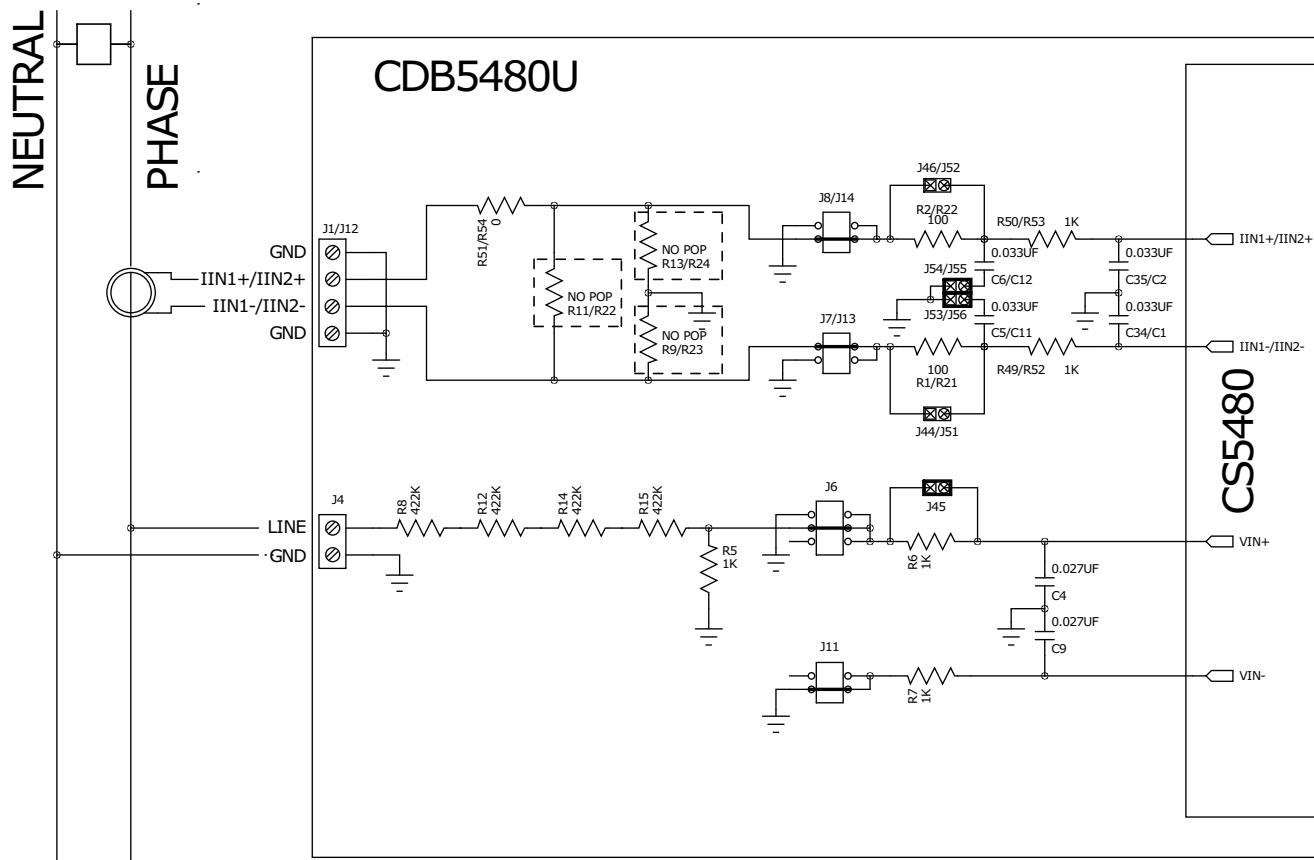


Figure 8. Rogowski Coil Power Meter

1.7 Standalone Meter Application

The CDB5480U evaluation board provides a standalone power meter using the CS5480, MCU, and LCD. The user can enable the power meter by connecting the sensors to the analog inputs, providing power to the board, and resetting the MCU by pressing the *RESET* switch. Refer to “Typical Sensor Connections” on page 11 for details on the sensor connections and “Power Supply Selection” on page 10 the details on supply options.

The user should not use the GUI to connect the CDB5480U board. If the GUI is connected to the CDB5480U board the standalone power meter function is disabled and the LCD on the CDB5480U will read "Cirrus Logic CS5480 Eval GUI". To re-enable the standalone power meter feature, close the GUI software. The standalone power meter feature will initially show the voltage channels' RMS register values:

$$V1_{rms} = N.NNNNN \text{ and } V2_{rms} = N.NNNNN.$$

By clicking the onboard switch S2, the standalone power meter will display the following measurement results:

1. RMS Voltage
2. RMS Current
3. Average Active Power
4. Average Reactive Power
5. Average Apparent Power
6. Power Factors
7. Total Active Power
8. Total Reactive Power
9. Total Apparent Power
10. Fundamental Frequency
11. CS5480 die Temperature



Figure 9. Standalone Power Meter Measurements

2. SOFTWARE

The evaluation board comes with software and a USB cable to link the evaluation board to the PC. The evaluation software was developed with LabWindows®/CVI®, a software development package from National Instruments. The evaluation software is available for download on the Cirrus Logic web site at <http://www.cirrus.com/industrialsoftware> and was designed to run under Windows® 2000, Windows XP®, and Windows 7™.

2.1 Installation

To install the software, download the application note AN278 from the Cirrus Logic web site at <http://www.cirrus.com/industrialsoftware>.

2.2 Using the Software

Before launching the software, check all jumper settings on the CDB5480U evaluation board as described in “Evaluation Board Overview” on page 4, and connect the board to an open USB port on the PC using the provided cable. Once the board is powered on, the software program can be launched.

2.3 Start-up Window

When the software is launched, the start-up window will appear. This window contains information concerning the software's title, revision number, and copyright date (see Figure 10).



Figure 10. GUI Start-up Window

A menu bar at the top displays four items: *System*, *Cirrus Test*, *Connect*, and *Quit*. Initially *System* and *Cirrus Test* are disabled. After establishing a link to a data source, the *System* and *Cirrus Test* items will become available.

2.4 Connect Menu

The *Connect* menu allows the user to establish a USB communication link with CDB5480U board. After the USB communication has been established, the CS5480 serial port configuration needs to be entered according to the position of jumper J16.

2.4.1 USB Item

In the *Connect* menu, the USB item allows the user to establish USB communication. If the USB item in the *Connect* menu is selected, the evaluation software will poll the C8051F342 microcontroller, verifying the serial communication link is ready. At this point, the *USB* menu item is checked, indicating that the PC has successfully communicated with the CDB5480U evaluation board. The micro-code version information is read from the board and displayed on the screen. See Figure 11. Due to improvements to the software or new features being added, the version displayed may be different than the image shown here.

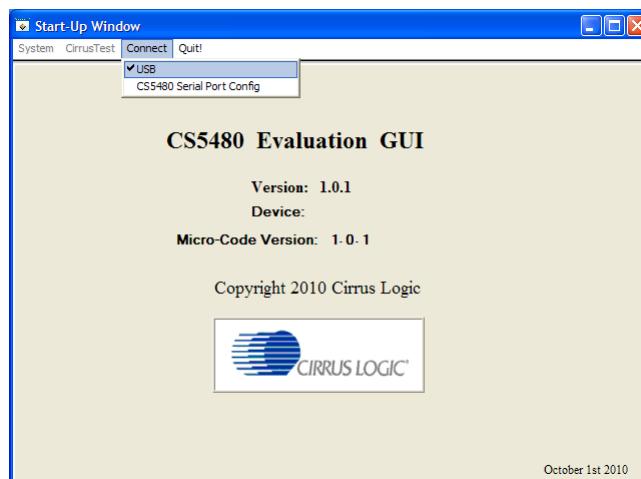


Figure 11. Connect Menu Showing Successful USB Connection

If the evaluation software is unable to establish a communication link with the CDB5480U board, a message will appear, indicating that the initial communication has failed. See Figure 12.

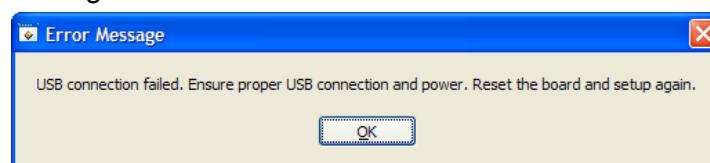


Figure 12. USB Error Message

Check to verify that the USB cable is connected properly and the power supply is on and connected properly to the CDB5480U. Reset the board (press the *RESET* button on the board) and try to set up the USB connection again.

2.4.2 CS5480 Serial Port Config Item

In the *Connect* menu, the *CS5480 Serial Port Config* item allows the user to select different types of serial communication — UART or SPI. See Figure 13.

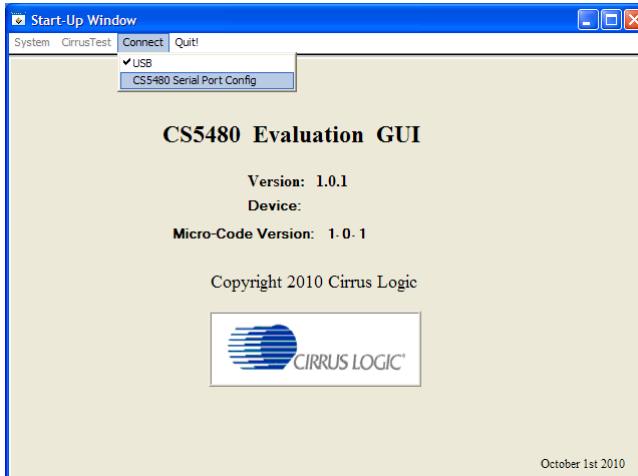


Figure 13. Connect Menu Showing Serial Connection Options

Before the software is configured, it is necessary to set J16 on the CDB5464U board to either UART or SPI communication. To select UART communication install jumper J16 in the *SSEL to UART* position. To select SPI communication install jumper J16 in the *SSEL to SPI* position.

To select UART communications, position jumper J16 to the *SSEL to UART* position and select *UART* in the *Serial Port Selection* window. See Figure 14.

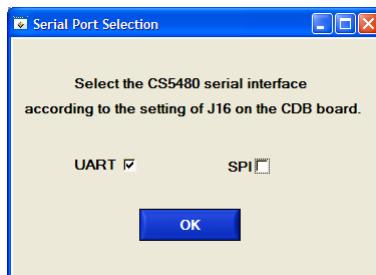


Figure 14. UART Serial Port Selection Window, UART Selected

To select SPI communications, position jumper J16 to the *SSEL to SPI* position and select *SPI* in the *Serial Port Selection* window. See Figure 15.

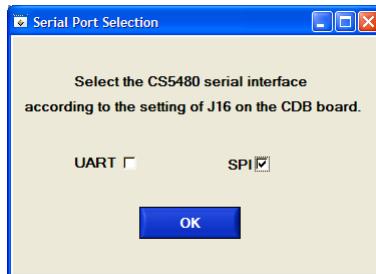


Figure 15. SPI Serial Port Selection Window, SPI Selected

After the serial port has been selected, press the OK button. The MCU will try to read the chip ID from the CS5480. The chip revision number will be displayed in "Device:" in the Start-up window. If the red "Unknown CHIP ID" is shown, check the power supply and clock to the CS5480, *MODE* jumper J15, *SSEL* jumper J16, and the isolation jumpers J18, J51, and J20, click the *RESET* button, and go back to the USB connection process.

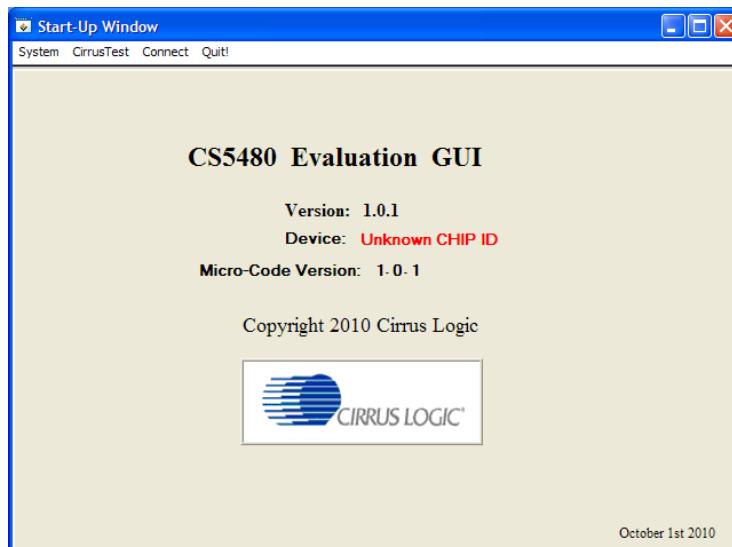


Figure 16. Unknown Chip ID Error Message

2.5 System Menu

The *System* pull-down provides three options: *Setup CS5480*, *Calibration*, and *Conversion*. Each window provides a means to evaluate the different functions and performance of the CS5480. See Figure 17.

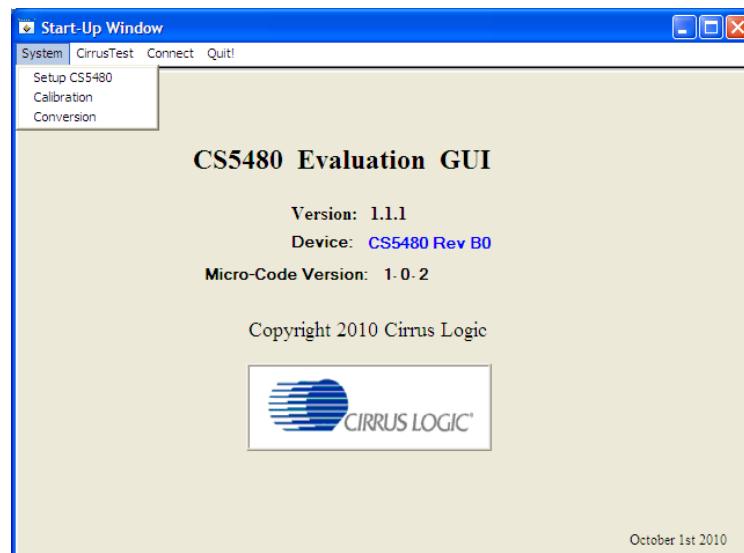


Figure 17. System Pull-down Options

2.5.1 Setup Window

The evaluation software provides access to the common CS5480's internal registers through the *Setup* window. See Figure 18. Enter the Setup window by selecting the *Setup CS5480* item from the *System* menu.

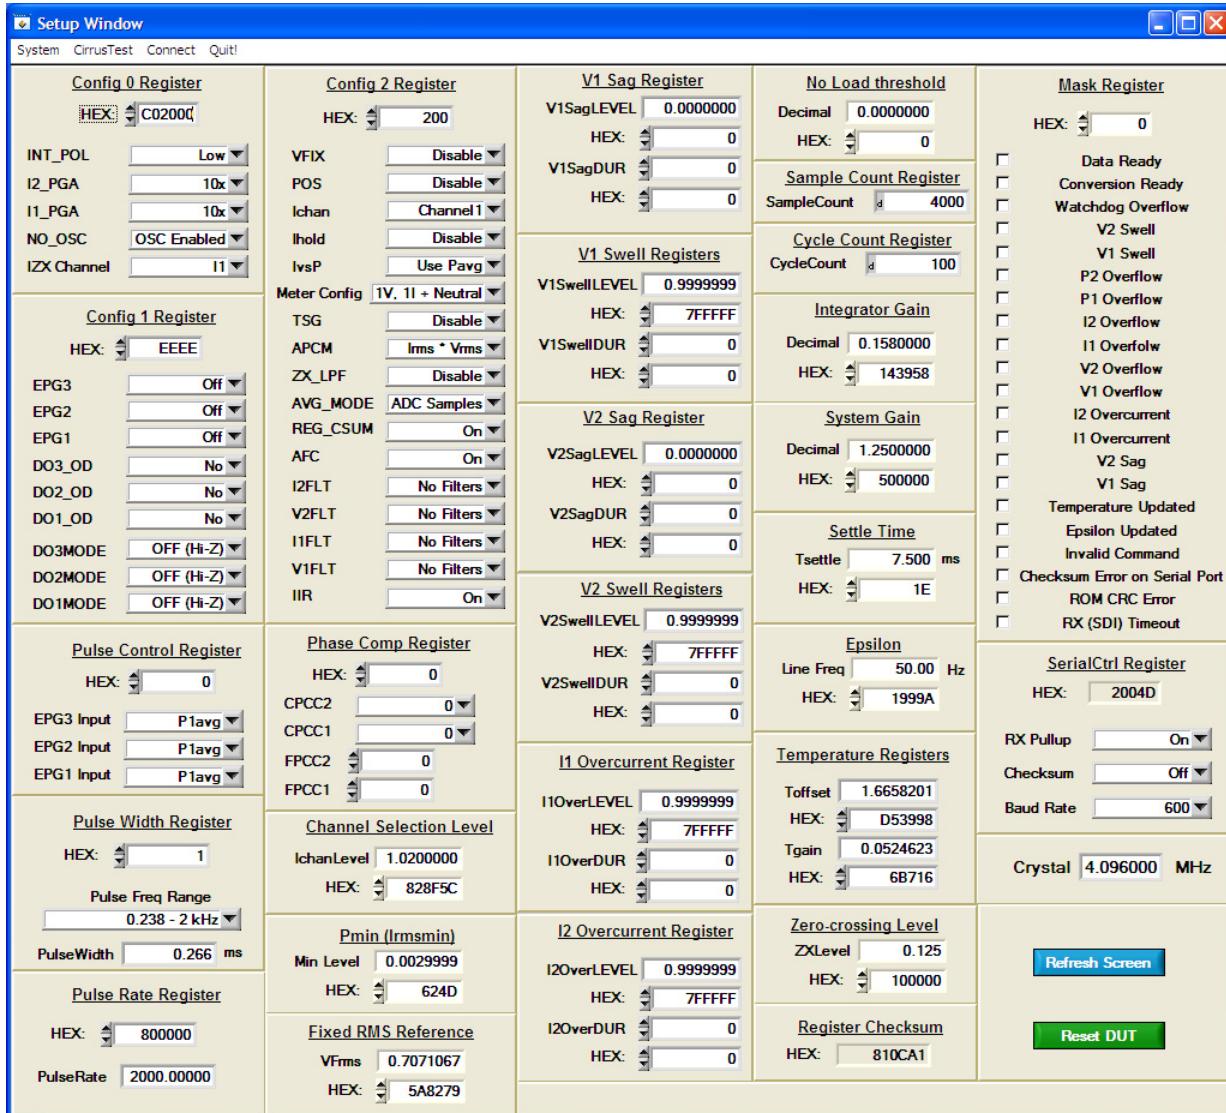


Figure 18. Setup Window

The *Setup* window displays all of the common CS5480 registers in hexadecimal notation and are decoded to provide easier readability. Refer to the CS5480 data sheet for information on register functionality and definitions. The *Setup* window is segmented by function. Each subsection may contain more than one CS5480 register in order to configure a particular function. Updating the hexadecimal value of a register will change the definitions display according to the new hexadecimal value of the register(s). Likewise, updating the definitions displayed from the list boxes will update the hexadecimal value(s) of the associated register(s).

2.5.1.1 Refresh Screen Button

The *Refresh Screen* button will update the contents of the screen by reading all the register values from the CS5480. It is a good idea to press the *Refresh Screen* button when entering the *Setup* window, or after modifying any registers, to reflect the current status of the CS5480.

2.5.1.2 Reset DUT Button

The *Reset DUT* button will software reset the CS5480. The CS5480 will perform a software reset as discussed in the CS5480 data sheet. After the software reset to the CS5480 device, the screen contents will be automatically refreshed with the updated status of the CS5480.

2.5.1.3 CS5480 Crystal Frequency

The CS5480 accepts a wide range of crystal input frequencies, and can therefore run at many different sample rates. The crystal frequency being used on the CS5480 should be entered in this box to provide accurate frequency calculation in the FFT window. This will also help the software decide which functions the evaluation system can perform reliably.

2.5.1.4 Configuration Registers

In the *Config0*, *Config1*, and *Config2* register boxes, the contents of the CS5480's configuration registers can be modified by typing a hexadecimal value in the *HEX:* field, or by changing any of the values below the *HEX:* field to the desired settings. Although the CDB5480U software allows the modification of any of the bits in the configuration registers, changing certain reserved bits, such as the NO_OSC bit of *Config0*, may cause the software and board to behave erratically. This applies only to the CDB5480U evaluation system and not to the CS5480 chip itself.

2.5.1.5 Pulse Control Register

The *Pulse Control Register* section is used to make changes to and display the contents of the CS5480's *PulseCtrl* register. The *PulseCtrl* register contains various bits used to select the input to each energy pulse generation block within the CS5480. Refer to the CS5480 data sheet for descriptions of the bits. The value of the *PulseCtrl* register is displayed in hexadecimal format. Most of the *PulseCtrl* register bits are reserved or unused. Only the usable bits are displayed in the *Setup* window.

2.5.1.6 Pulse Width and Pulse Rate Registers

The *Pulse Width Register* section is used to make changes to and display the contents of the CS5480's *PulseWidth* register. The *Pulse Width* register is used to define the frequency range and pulse width of the energy pulses generated by the CS5480. The *PulseWidth* register should be configured before setting the *PulseRate* register. The *Pulse Rate Register* section is used to make changes to and display the contents of the CS5480's *PulseRate* register. The *PulseRate* register defines the full-scale frequency of the energy pulses generated by the CS5480.

2.5.1.7 Phase Compensation

The *Phase Comp Register* section is used to make changes to and display the contents of the CS5480's *PC* (Phase Compensation Control) register. The *PC* register allows coarse and fine phase adjustment on each channel of the CS5480 data path. Refer to the CS5480 data sheet for descriptions of the *PC* register bits.

2.5.1.8 Integrator Gain, System Gain

The *Integrator Gain* and *System Gain* sections display the signal path gain in both hexadecimal and decimal format. Each register can be modified by typing a value in the corresponding *Decimal* or *HEX:* field.

2.5.1.9 Sample Count, Cycle Count, Settle Time

The *Sample Count Register*, *Cycle Count Register*, and *Settle Time* sections provide fields to display the values of registers associated with low-rate calculations. The *SampleCount* and *CycleCount* registers are entered or displayed in decimal format by default. The user may select to enter or view other number formats of the register by selecting the "d" within the field. The value of the T_{Settle} register is displayed in both hexadecimal and decimal format. Each register can be modified by typing a value in the corresponding field.

2.5.1.10 Epsilon

The *Epsilon* section is used to display and adjust the *Epsilon* register (the ratio of the AC line frequency to the output word rate). The *Epsilon* register can be updated either through entering the AC line frequency in the *Line Freq* field or by entering the direct register value in the *HEX:* field.

2.5.1.11 Mask Register

The *Mask Register* box displays the value for the *Mask* register in hexadecimal and decodes them to indicate each bit's function. The *Mask* register can be modified by typing a value in the *HEX:* field, or by checking the appropriate check boxes for the bits that are to be masked. The value present in the *Mask* register may be changed by the GUI software during certain operations to provide correct functionality of the CDB5480U board.

2.5.1.12 Temperature Registers

The *Temperature Registers* box is used to adjust the temperature offset register (T_{OFF}) and temperature gain register (T_{GAIN}) to convert the temperature register (T) from the Celsius scale to the Fahrenheit scale, or vice versa, and to improve temperature measurement accuracy. Refer to the CS5480 data sheet for the details of the on-chip temperature sensor.

2.5.1.13 Zero-crossing Level and No Load Threshold

The *Zero-crossing Level* and *No Load Threshold* boxes display the values for these registers in hexadecimal and decimal. Each register can be modified by typing a value in the corresponding *Decimal* or *HEX:* field.

2.5.1.14 V1/V2 Sag, V1/ V2 Swell, and I1/I2 Overcurrent Registers

The registers for voltage sag, voltage swell, and overcurrent are displayed in the *V1 Sag*, *V2 Sag*, *V1 Swell*, *V2 Swell*, *I1 Overcurrent*, and *I2 Overcurrent Register* sections. These sections display the level and duration values of the corresponding registers in both hexadecimal and decimal format. Each register can be modified by typing a value in the corresponding decimal or *HEX:* field. Refer to the CS5480 data sheet for detailed descriptions of these registers.

2.5.1.15 Channel Selection Level, Channel Select Minimum Amplitude, and Voltage Fixed RMS Reference Registers

There are three register sections dedicated for setting anti-tampering features of the CS5480: Channel Selection Level ($Ichan_{LEVEL}$), Channel Select Minimum Amplitude ($P_{MIN} (IRMS_{MIN})$) and Voltage Fixed RMS Reference register (VF_{RMS}). Each register can be modified by typing a value in the corresponding decimal or HEX fields. The Channel Selection Level register section is used to make changes to and display the contents of the CS5480's $Ichan_{LEVEL}$ register. The Channel Selection Level register sets the hysteresis level for automatic energy channel selection. The Channel Select Minimum Amplitude register $P_{MIN} (IRMS_{MIN})$ section is used to make changes to and display the contents of the CS5480's Channel Select Minimum Amplitude register. The Channel Select Minimum Amplitude register sets the minimum level for automatic energy channel selection. The Voltage Fixed RMS Reference register section is used to make changes to and display the contents of the CS5480's VF_{RMS} register. When voltage tampering is detected, the VF_{RMS} register contains the internal voltage RMS reference used in the active power calculations.

2.5.1.16 Register Checksum, SerialCtrl Registers

The *Register Checksum* and *SerialCtrl Register* boxes provide control and status of critical serial port communication parameters and the register checksum. The *SerialCtrl Register* section provides control over RX pin, baud rate, and enabling checksum protection for serial communication. The *Register Checksum* section provides the calculated checksum of the critical registers inside the CS5480. The register checksum updates automatically after single or continuous conversion has been performed. The *RegChk* and *SerialCtrl* registers are displayed in hexadecimal form. Please note that if the opto-couplers are selected as the isolation (J18, J20), the maximum baud rate is 2400.

The baud rate field applies only to UART serial communication and can be changed by the pull-down field. It is recommended to set the baud rate setting to the highest setting possible. The default setting of 600 baud will cause some GUI functions to overflow the communication buffer and not function correctly.

2.6 Calibration Window

The *Calibration* window is used to display and write to the CS5480 offset and gain calibration registers. It is also possible to initiate the CS5480's calibration sequences that are used to set the calibration values. AC offset, DC offset, and gain calibrations can be performed on either the voltage channel or the current channel, or both simultaneously. Refer to the CS5480 data sheet for more details on calibration. See Figure 19.

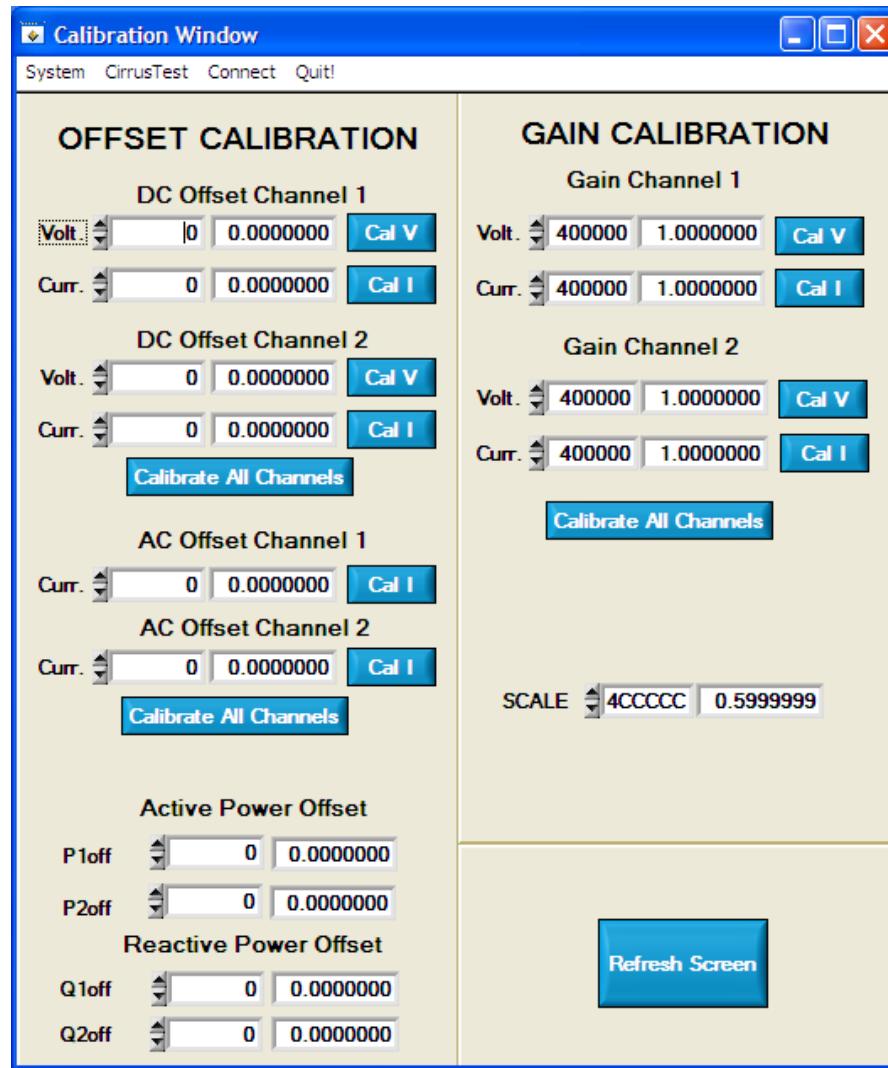


Figure 19. Calibration Window

The *Refresh Screen* button will update the contents of the screen by reading all the register values from the part. It is a good idea to press the *Refresh Screen* button when entering the *Calibration* window, or after modifying any registers to reflect the current status of the CS5480.

2.6.1 Offset / Gain Register

In the *Offset* and *Gain Calibration* boxes, the offset and gain registers for all channels are displayed in hexadecimal and decimal formats. These registers can be modified directly by typing the desired value in the display boxes. There are three types of offset registers: DC offset, AC offset and power offset. The AC offset registers only affect the RMS register values. The active and reactive power offset registers only affect the active and reactive power register values, respectively. The DC, AC, and power offset registers are two's complement numbers whose values range from -1 to +1. The gain register value ranges from 0 to 4.

2.6.2 Performing Calibrations

AC/DC offset and gain calibrations can be performed on both the voltage and current channels of the CS5480. It is generally a good idea to software-reset the CS5480 before running calibrations, because the initial values in the calibration registers will affect the results of the calibration. A software reset will reset these registers back to the default values of zero offset and unity gain. AC/DC offset calibration should be performed before gain calibration to ensure accurate results.

2.6.2.1 Offset Calibrations

1. Ground the channel(s) you want to calibrate directly at the channel header(s), J6 and J10 for the voltage channel and J7, J8, J13, and J14 for the current channels. The channel(s) could also be grounded directly at the screw-type terminals.
2. Press the corresponding AC or DC offset calibrate button (*Cal V*, *Cal I*, or *Calibrate All Channels*) in the corresponding *Offset Calibration* box(es).
3. The offset register value(s) will automatically update when the calibration is completed.

2.6.2.2 Gain Calibrations

1. Attach an AC or DC calibration signal to the screw-type terminals, and make sure the corresponding channel headers (J6, J7, J8, J10, J13, and J14) are set to the desired input position.
2. Press the corresponding gain calibrate button (*Cal V*, *Cal I*, or *Calibrate All Channels*) in the corresponding *Gain Calibration* box(es).
3. The gain register value(s) will automatically update when the calibration is completed.

The *Calibration* window also contains the *Active and Reactive Power Offset Register 1* and *Register 2* display and adjustment. The user can read and write the values in the CS5480 active and reactive power offset registers ($P_{1\text{OFF}}$, $P_{2\text{OFF}}$, $Q_{1\text{OFF}}$, and $Q_{2\text{OFF}}$).

2.7 Conversion Window

The **Conversion** window allows the user to see the results of single and continuous conversions and the CS5480 status, perform data averaging, and utilize the power-saving modes of the CS5480. The **Conversion** window can be accessed from the **System** menu pull-down, **Conversion** menu item. The **Conversion** window provides the active, apparent, and reactive energy calculations register results for each channel. In addition, the RMS, power factor, and peak signal amplitudes for each analog-to-digital converter channel, chip temperature (when temperature measurement function is enabled), AC line frequency (converted from the *Epsilon* register), and the values of each status register (*Status0*, 1, 2) are also displayed. The **Conversion** window also provides the total active, apparent, and reactive power register results.

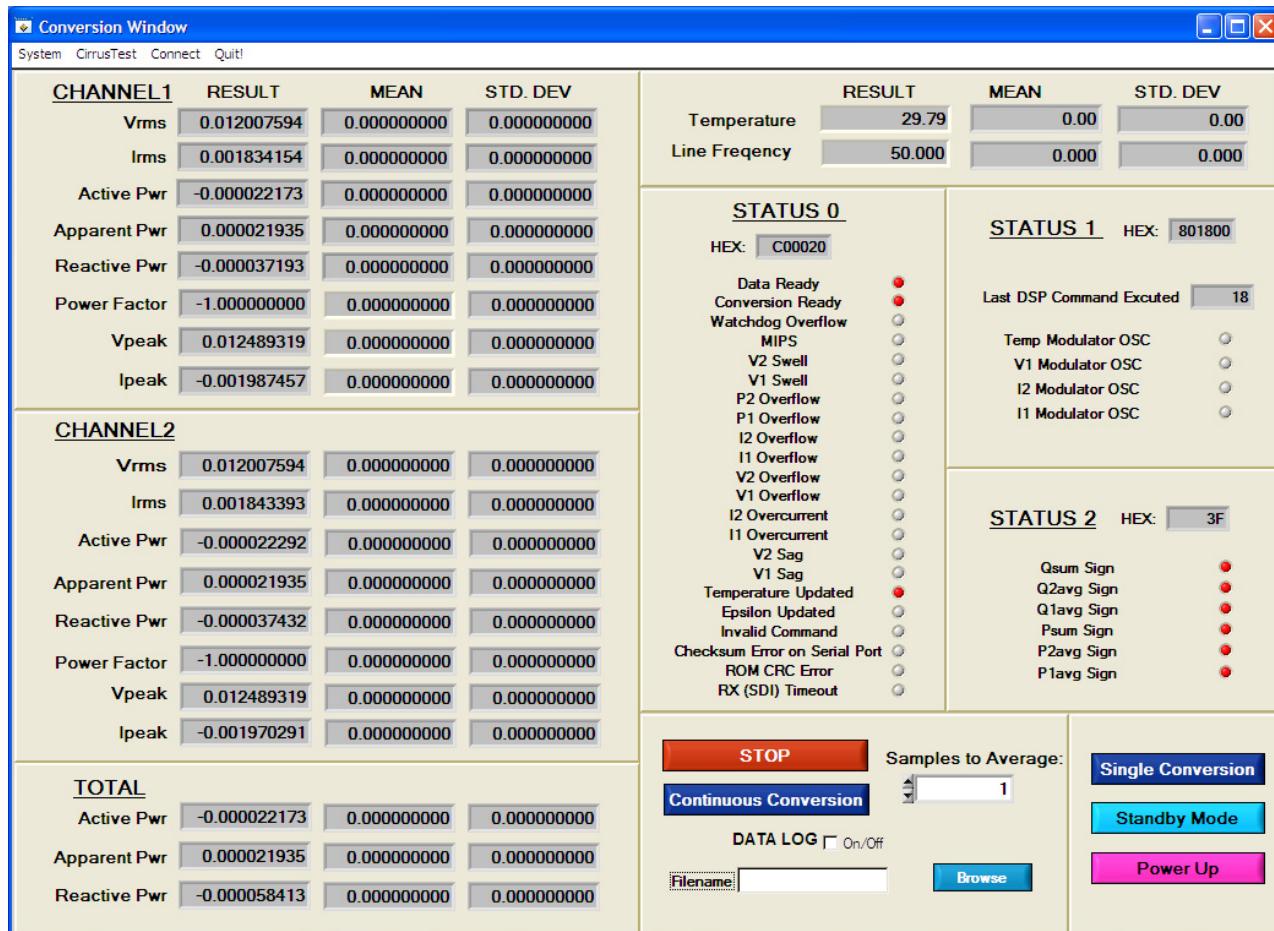


Figure 20. **Conversion** Window

2.7.1 Single Conversion Button

Pressing the **Single Conversion** button will cause a single conversion to be performed. After a single conversion is complete, the **Result** column will be updated with the values present in each data register.

2.7.2 Continuous Conversion Button

Pressing this button will cause continuous conversions to be performed until the user presses the **Stop** button. After each conversion is complete, the **Result** column will be updated with the values present in each data register. The **Mean** and **STD. DEV** columns will be updated every N cycle, where N is the

number in the *Samples to Average* field. The user should stop continuous conversion before leaving this window. The *Continuous Conversion* button should not be used with BAUD rates less than 1200 Hz in UART mode. Using lower BAUD rates (including the default 600 baud) will result in overflowing the communication buffer and cause other window errors and/or communication failure.

Data logging can be enabled using the *DATALOG On/Off* check box and *Filename* field.

2.7.3 Standby Mode Button

When this button is pressed, the CS5480 will enter a standby power saving mode. To return to normal mode, press the *Power Up* button. The user should power up the device before leaving this window.

2.7.4 Power Up Button

The *Power Up* button is used to send the wake-up command to the CS5480. The CS5480 will return to normal operating mode.

2.7.5 Line Frequency Result

When the AFC bit in the *Config2* register is set, the *Epsilon* register will be calculated automatically by the CS5480 and the *Line Frequency* fields will be updated automatically in continuous conversion mode. If the AFC bit in the *Config2* register is not set and the line frequency is other than the default value (50 Hz), the line frequency must be set manually here to make *Epsilon* be the ratio of line frequency to the output word rate (OWR). This ensures the accuracy of the quadrature power (Q1, Q2) and the reactive power ($Q1_{AVG}$ and $Q2_{AVG}$) calculations. Refer to the CS5480 data sheet for more details.

2.7.6 Temperature Result

The *Temperature* field displays the CS5480's die temperature in the top right corner of the *Conversion* window.

2.7.7 Samples to Average

The *Samples to Average* field allows the user to average a number of measurement results.

2.8 Cirrus Test Window

The *Cirrus Test* window provides three options: *Test and Debug*, *ADC Data Collection*, and *ADC Data Collection to File*. Each window provides a means to evaluate the different functions and performance of the CS5480. See Figure 21.

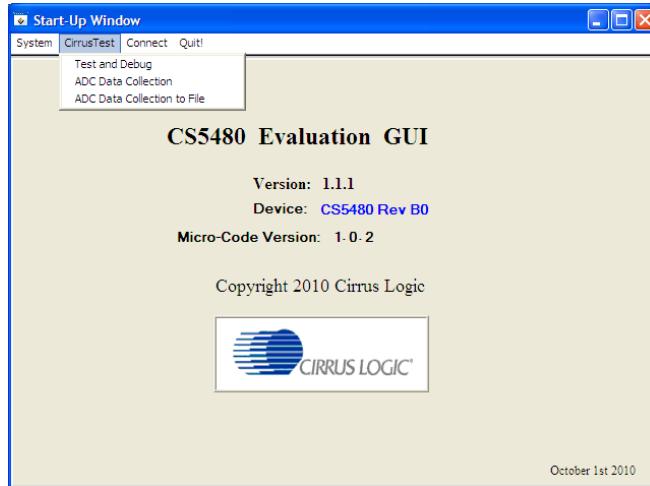


Figure 21. Cirrus Test Pull-down Options

2.8.1 Data Collection Window

The *Data Collection* window allows the user to collect sample sets of data from the CS5480 and analyze them using time domain, FFT, and histogram plots. The *Data Collection* window can be accessed by pulling down the *CirrusTest* menu, and selecting the *ADC Data Collection* item. See Figure 22.

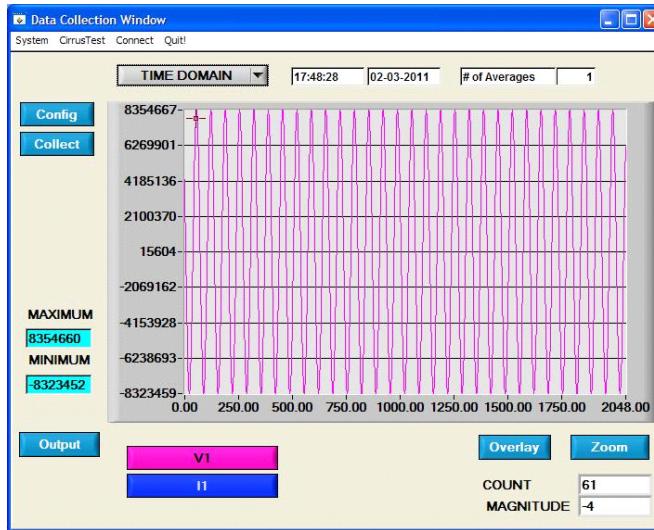


Figure 22. Data Collection Window

The *Data Collection* window can only be accessed when operating in SPI mode. When UART serial communication is enabled, an error window will be displayed. See Figure 23. To enable SPI refer to “Serial Port Selection” on page 8.

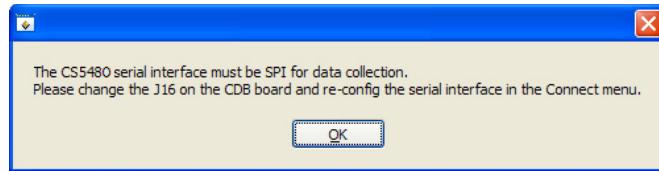


Figure 23. Data Collection UART Error Message

2.8.1.1 Time Domain / FFT / Histogram Selector

The *Time Domain/FFT/Histogram* selector selects the type of data processing to perform on the collected data and displays the results in the plot area. Refer to “Analyzing Data” on page 30 for more information.

2.8.1.2 Config Button

The *Config* button will bring up the *Configuration* window, in which the user can modify the data collection specifications. Refer to “Configuration Window” on page 29 for more information.

2.8.1.3 Collect Button

The *Collect* button will collect data from the part, to be analyzed in the plot area. See “Collecting Data Sets” on page 30 for more information.

2.8.1.4 Output Button

The *Output* button will bring up a window in which the user can output the data to a file for later use, print out a plot, or print out the entire screen. When saving data, only the data channel being displayed on the plot will be saved to a file.

2.8.1.5 Zoom Button

The *Zoom* button allows the user to zoom in on the plot by selecting two points in the plot area. Press the *Restore* button to return to the normal data plot, or press the *Zoom* button again to zoom in even further.

2.8.1.6 Channel Select Button

After data collection, the two buttons labeled as “No Data” will be replaced with *Current* and *Voltage* buttons, allowing the user to choose the appropriate channel for display. In the time domain mode, an additional *Overlay* button will be present which allows the user to display all the channels on the same plot.

2.8.1.7 Output Button & Window

The *Output* button allows the user to:

1. Output Time Domain File
2. Output FFT File
3. Output Histogram
4. Print Screen
5. Print Graph

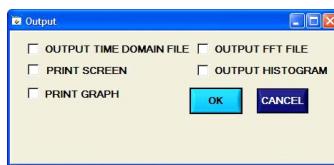


Figure 24. Data Collection Output Window

2.8.1.8 Configuration Window

The *Configuration* window allows the user to set up the data collection and analysis parameters. See Figure 25.

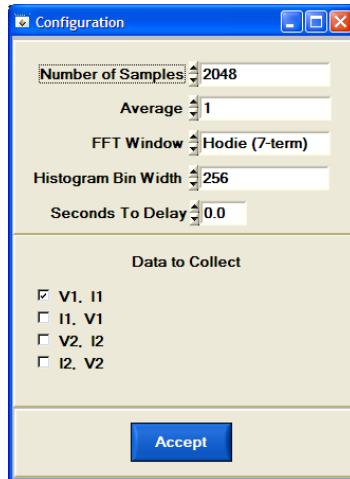


Figure 25. Data Collection Configuration Window

2.8.1.8.1 Number of Samples

The *Number of Samples* field allows the user to select the number of samples to collect, between 16 and 524288.

2.8.1.8.2 Average

When performing FFT analyses, the *Average* field determines the number of FFTs to average. FFTs will be collected and averaged when the *Collect* button is pressed.

2.8.1.8.3 FFT Window

The *FFT Window* box allows the user to select the type of windowing algorithm for FFT processing. Windowing algorithms include the Blackman, Blackman-Harris, Hanning, 5-term Hodie, and 7-term Hodie. The 5-term Hodie and 7-term Hodie are windowing algorithms developed at Crystal Semiconductor, now Cirrus Logic.

2.8.1.8.4 Histogram Bin Width

This field determines the "bin width" when plotting histograms of the collected data. Each vertical bar in the histogram plot will contain the number of output codes entered in this field. Increasing this number may allow the user to view histograms with larger input ranges.

2.8.1.8.5 Seconds to Delay

This field specifies the amount of time the system waits to begin data collection after the CS5480 starts continuous conversions.

2.8.1.8.6 Data to Collect

The *Data to Collect* check boxes allow the user to select the data types that will be collected and returned to the PC for processing.

2.8.1.8.7 Accept Button

When the *Accept* button is pressed, the current settings will be saved and the user will return to the *Data Collection* window.

2.8.1.9 *Collecting Data Sets*

To collect a sample data set:

1. In the *Data Collection* window, press the *Config* button to bring up the *Configuration* window and view the current settings.
2. Select the appropriate settings from the available options (see “Configuration Window” on page 29) and press the *Accept* button.
3. The *Data Collection* window should still be visible. Press the *Collect* button to begin collecting data.
4. Once the data has been collected, it can be analyzed, printed, or saved to disk.

2.8.1.10 *Analyzing Data*

The evaluation software provides three types of analysis tests: Time Domain, Frequency Domain, and Histogram. The time domain analysis processes acquired conversions to produce a plot of magnitude versus conversion sample number. The frequency domain analysis processes acquired conversions to produce a plot of magnitude versus frequency using the Fast-Fourier transform (results up to $F_s/2$ are calculated and plotted). Also statistical noise calculations are calculated and displayed. The histogram analysis processes acquired conversions to produce a histogram plot. Statistical noise calculations are also calculated and displayed.

2.8.1.11 Histogram Information

The following is a description of the indicators associated with histogram analysis. Histograms can be plotted in the *Data Collection* window by setting the analysis type pull-down menu to *Histogram*. See Figure 26. The histogram plot information includes:

- BIN: displays the x-axis value of the cursor on the histogram.
- MAGNITUDE: displays the y-axis value of the cursor on the histogram.
- MEAN: indicates the mean of the data sample set. The mean is calculated using the following formula:

$$\text{Mean} = \frac{\sum_{i=0}^{n-1} X_i}{n}$$

- STD_DEV: indicates the standard deviation of the collected data set. The standard deviation is calculated using the following formula:

$$\text{STDDEV} = \sqrt{\frac{\sum_{i=0}^{n-1} (X_i - \text{Mean})^2}{n}}$$

- VARIANCE: indicates the variance of the current data set. The variance is calculated using the following formula:

$$\text{Variance} = \frac{\sum_{i=0}^{n-1} (X_i - \text{Mean})^2}{n}$$

- MAXIMUM: indicates the maximum value of the collected data set.
- MINIMUM: indicates the minimum value of the collected data set.

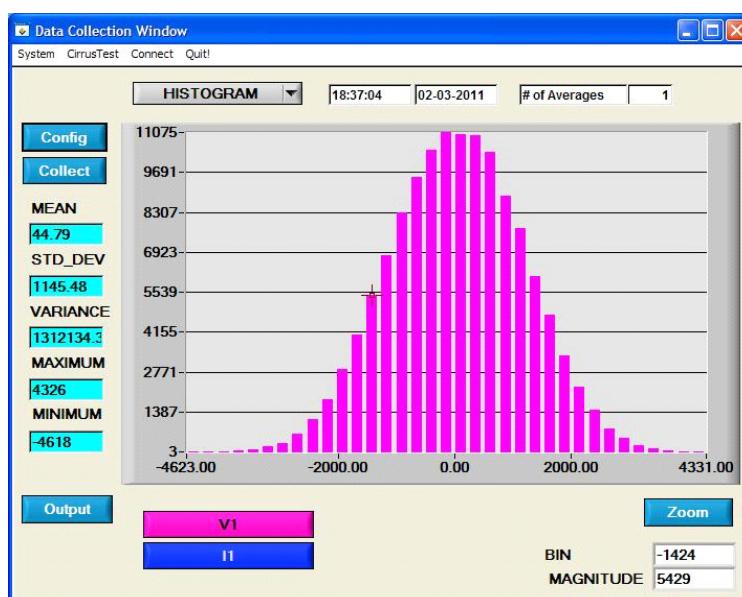


Figure 26. Histogram Analysis

2.8.1.12 Frequency Domain Information

The following describe the indicators associated with FFT (Fast-Fourier Transform) analysis. FFT data can be plotted in the *Data Collection* window by setting the analysis type selector to *FFT*. See Figure 27. The FFT information includes:

- FREQUENCY: displays the x-axis value of the cursor on the FFT display.
- MAGNITUDE: displays the y-axis value of the cursor on the FFT display.
- S/PN: indicates the signal-to-peak noise ratio (decibels).
- SINAD: indicates the signal-plus-noise-plus-distortion to noise-plus-distortion ratio (decibels).
- S/D: indicates the signal-to-distortion ratio, 4 harmonics are used in the calculations (decibels).
- SNR: indicates the signal-to-noise ratio, first 4 harmonics are not included (decibels).
- FS-PdB: indicates the full-scale to signal Ratio (decibels).

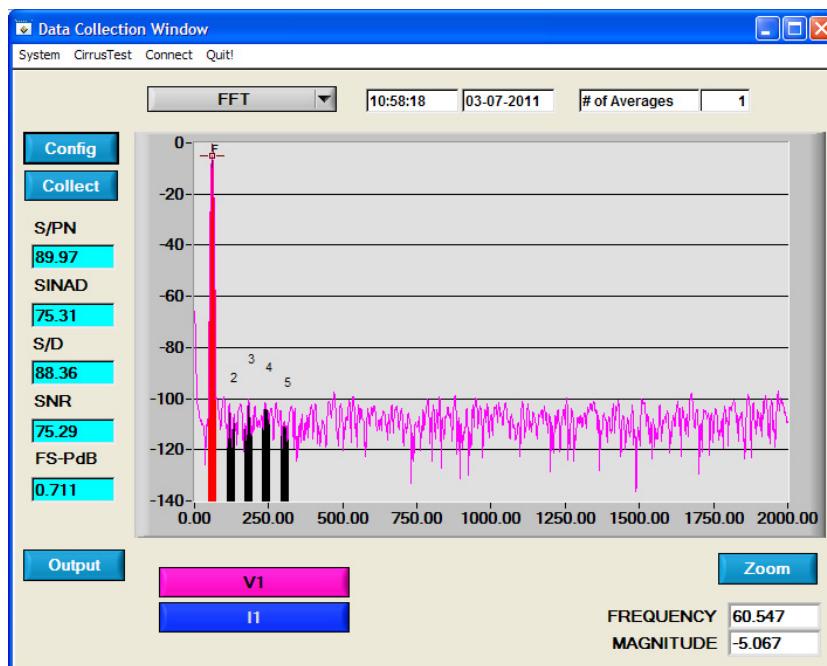


Figure 27. FFT Analysis

2.8.1.13 Time Domain Information

The following controls and indicators are associated with time domain analysis. Time domain data can be plotted in the *Data Collection* window by setting the analysis type selector to *Time Domain*. See Figure 28. The time domain plot includes:

- COUNT: displays current x-position of the cursor on the time domain display.
- MAGNITUDE: displays current y-position of the cursor on the time domain display.
- MAXIMUM: indicates the maximum value of the collected data set.
- MINIMUM: indicates the minimum value of the collected data set.

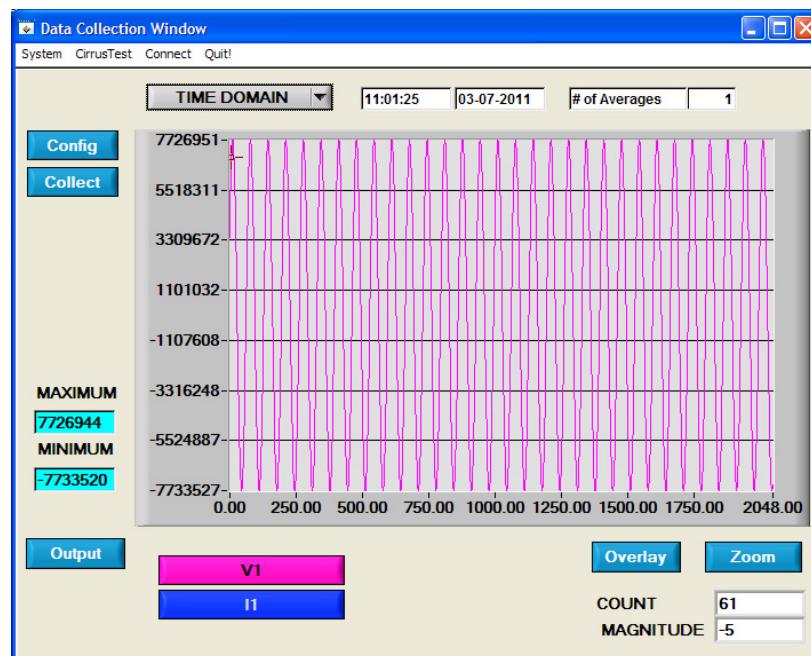


Figure 28. Time Domain Analysis

2.8.2 Data Collection to File Window

The *Data Collection to File* window allows the user to collect instantaneous voltage and current register data over an extended period of time to a data file. See Figure 29. The following steps are necessary for data collection to a file:

1. Provide the *Time to Collect* in seconds.
2. If a delay before data collection is needed, enter the time in seconds for the *Delay*.
3. Select the voltage and current channel 1 (V1,I1) or voltage and current channel2 (V2,I2).
4. Browse to a directory and enter the file name of the desired file to save.
5. Start the data collection by pressing the *START* button.
6. The data collection status will be provided in *Samples Collected* and *Time Remaining*.
7. The collection will complete without any further interaction by the user or the user may stop the data collection at any time by pressing the *STOP* button.

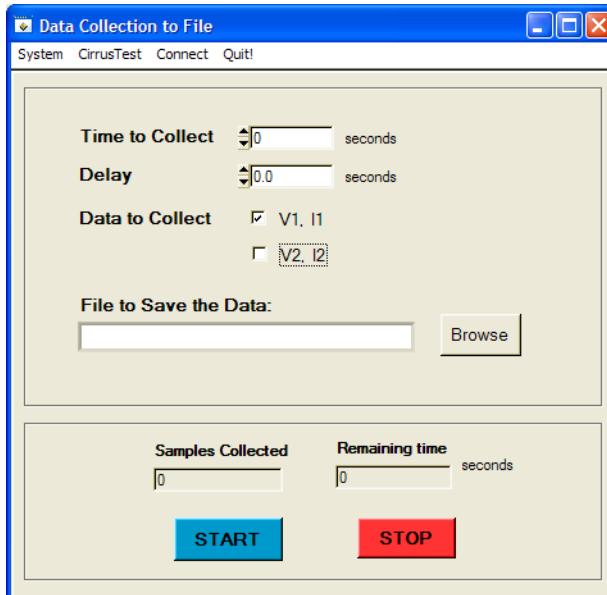


Figure 29. Data Collection to File Window

2.8.3 Setup and Test Window

The *Setup and Test* window allows the user a way to access CS5480 registers and send commands to the CS5480 directly. See Figure 30.

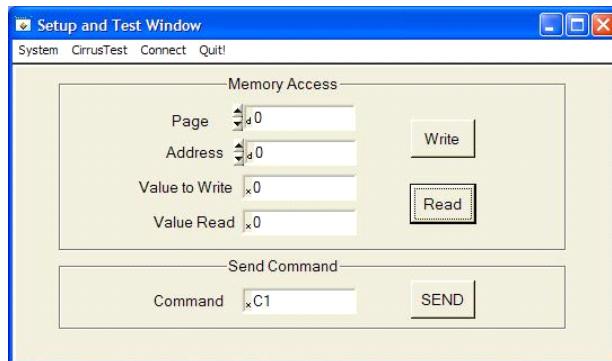


Figure 30. Setup and Test Window

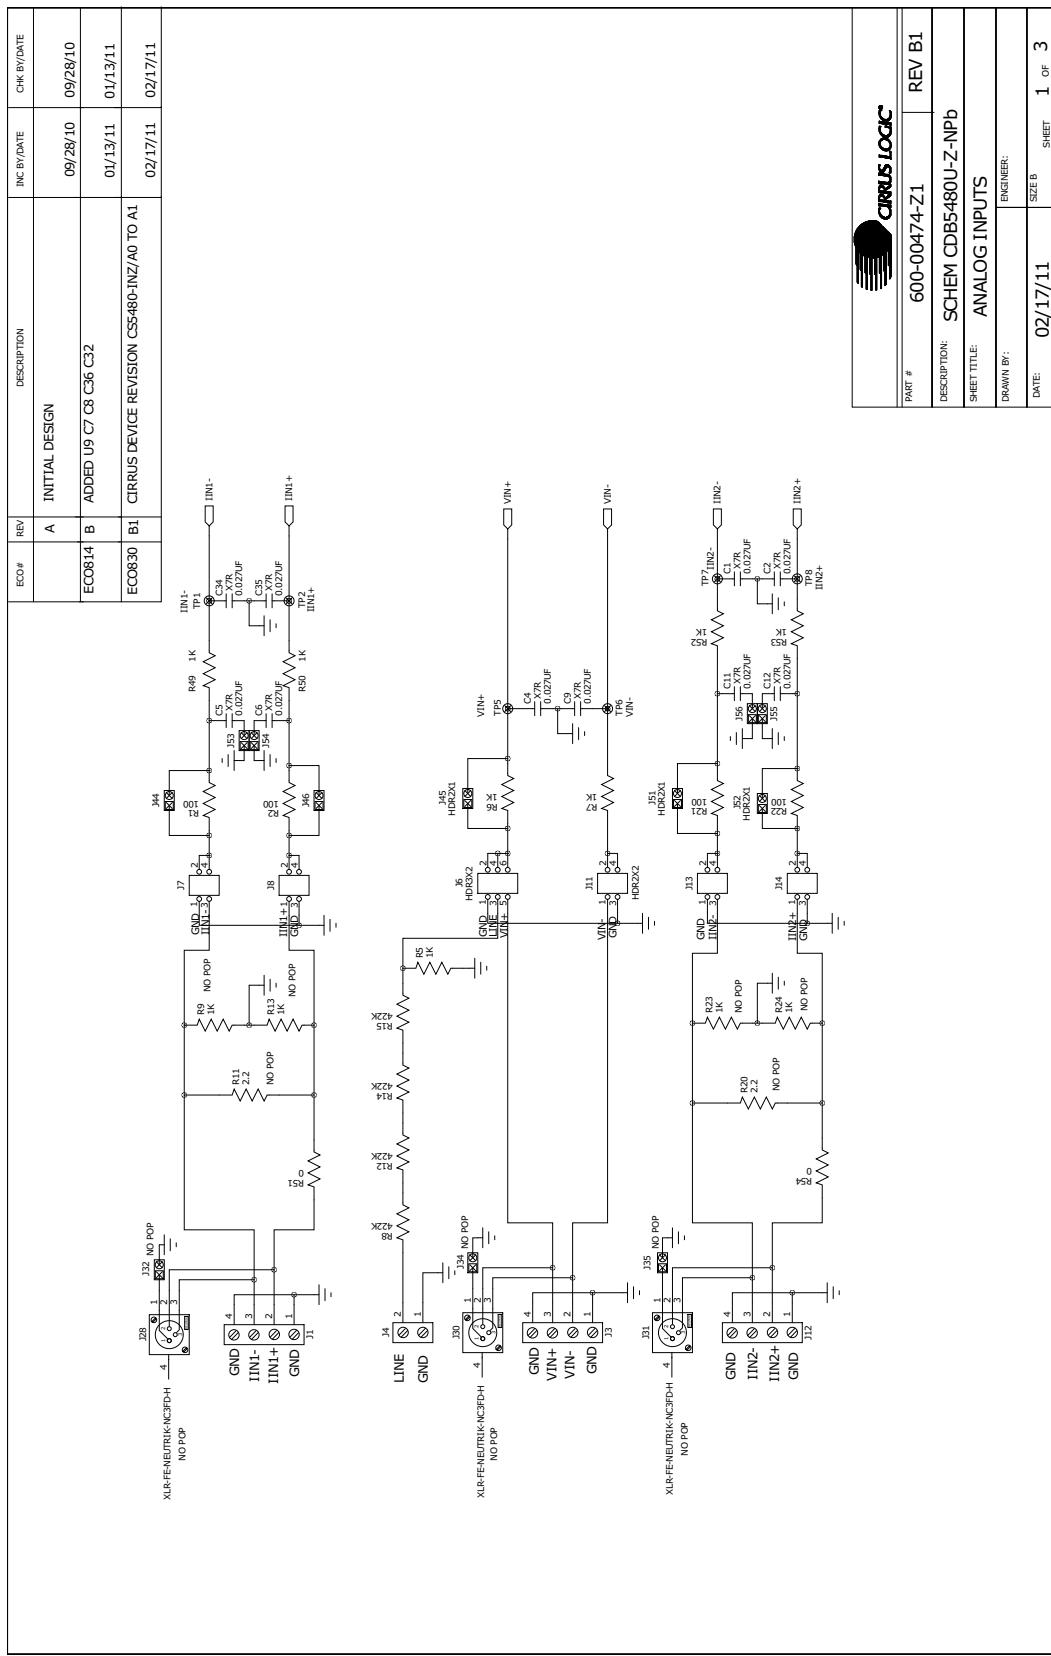
There are three types of transactions: Write, Read, and Send. The CS5480 memory is organized by pages. In order to properly write a register it is necessary to set the *Page*, *Address*, and *Value to Write* field and then press the *Write* button. To read a register it is necessary to set the *Page* and *Address* and then press the *Read* button. The register result will be displayed in the *Value Read* field. To send a command to the CS5480, enter the command in the *Command* field and press the *SEND* button. Refer to the CS5480 data sheet for more details on registers and commands.

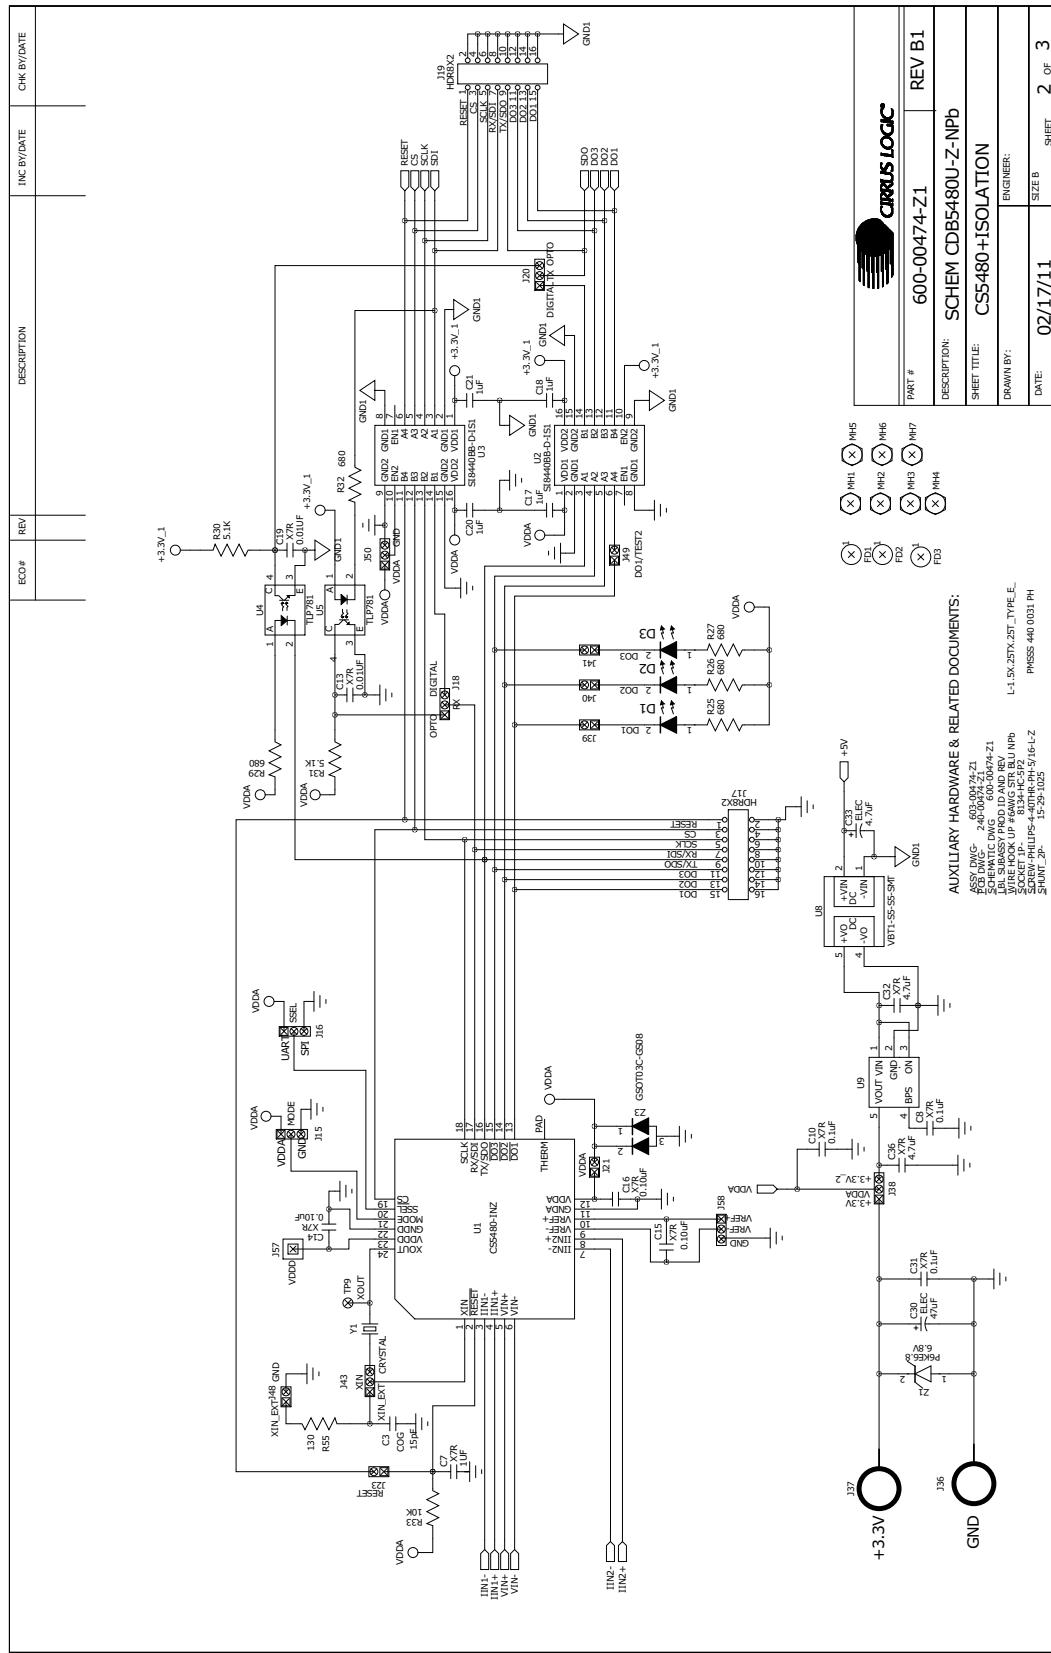
APPENDIX A. BILL OF MATERIALS
BILL OF MATERIAL (Page 1 of 2)

Item	Cirrus PIN	Rev	Description	Qty	Reference Designator	MFG	MFG P/N	Notes
1	001-04487-Z1	A	CAF 0.027μF ±5% 50V X7R NP0 0805	10	C1 C2 C4 C5 C6 C9 C12 C13 C34 C35	KEMET	C0805G273J5RAC	
2	001-10064-Z1	A	CAF 15pF ±5% 50V COG NP0 0603	1	C3	KEMET	C0603C15015GAC	
3	001-04523-Z1	A	CAP 1μF ±10% 16V X7R NP0 0805	2	C7 C28	KEMET	C0805G105K4RAC	
4	001-02194-Z1	A	CAP 0.1μF ±10% 16V X7R NP0 0603	1	C8	KEMET	C0603C104K3RAC	
5	001-04345-Z1	A	CAP 0.1μF ±10% 50V X7R NP0 0805	2	C10 C31	KEMET	C0805G104K5RAC	
6	001-01894-Z1	A	CAP 0.01μF ±10% 16V X7R NP0 0603	2	C13 C19	MURATA	GRM188R71C103KA01D	
7	001-10225-Z1	A	CAP 0.1μF ±10% 25V X7RLESE NP0 0603	3	C14 C15 C16	MURATA	GRM188R71E104KA01D	
8	001-10226-Z1	A	CAP 1μF ±10% 25V X5R NP0 0603	4	C17 C18 C20 C21	MURATA	GRM188R61E105KA12	
9	001-02189-Z1	A	CAP 0.1μF ±10% 16V X7R NP0 0603	5	C22 C23 C25 C27 C29	KEMET	C0603C104K4RAC	
10	012-00101-Z1	A	CAP 75μF ±20% 16V NP0 ELEC CASE C	2	C24 C30	PANASONIC	EE1E1CA47WWR	
11	001-10127-Z1	A	CAP 220μF ±10% 30V 206 NP0 0603	1	C26	KEMET	C0603C220K5GAC	
12	001-00123-Z1	A	CAP 25μF ±20% 25V X7R NP0 1206	2	C32 C36	TDK	C3216X7R1E475M	
13	012-0013-Z1	A	CAP 4.7μF ±20% 25V X7R NP0 CASE B	1	C33	PANASONIC	EE1E1EA4R7SR	
14	165-00044-Z2	A	LED SUP RED 10mmOD NP0 SMD	4	D1 D2 D3 D6	EVERLIGHT	28-21SRG7TR8	
15	070-00055-Z1	A	DIODE/ARRAY 5V (TVS) ESD NP0 SOT143	1	D5	LITTELFUSE	SP0503BAHTG	
17	110-00056-Z1	A	CONN TERM BLOCK 4 POS 5mm NP0 BLU TH	3	J1 J3 J12	ON-SHORE TECHNOLOGY	ED 1004ADS	
18	110-00056-Z1	A	CONN TERM BLOCK 2POS 5mm NP0 BLU TH	2	J4 J27	ON-SHORE TECHNOLOGY	ED 1002BDS	
19	115-00106-Z1	A	HDR 3x2 ML .1"CTR 062 S GLD NP0	1	J6	SAMTEC	TSMW-103-07-G-D	
20	115-00257-Z1	A	HDR 2x4 ML .1"033BD ST GLD NP0 TH	5	J7 J8 J11 J13 J14	SAMTEC	TSMW-102-08-G-D	
21	115-0009-Z1	A	HDR 3x4 ML .1"062 ST GLD NP0 TH	9	J15 J16 J18 J20 J26 J38 J43 J50 J58	SAMTEC	TSMW-103-07-G-S	
22	115-0029-Z1	A	HDR 3x4 ML .1"062 BD ST GLD NP0 TH	2	J17 J19	SAMTEC	TSMW-102-07-G-D	
23	115-0014-Z1	A	HDR 2x4 ML .1"062BD ST GLD NP0 TH	16	J21 J23 J39 J40 J41 J44 J45 J46 J48 J49 J51 J52	SAMTEC	TSMW-102-07-G-S	SOLDER J22 AND U7(LCD) TO PRINTED CIRCUIT BOARD
24	115-00276-Z1	A	HDR 6x1 ML .1"062 S GLD NP0 TH	1	J22	SAMTEC	TSMW-116-07-G-S	
25	110-0041-Z1	A	CON RA USE BLK NP0 TH	1	J24	AMP	292304-1	
26	115-0003-Z1	A	HDR 6x4 ML .1"CTR S GLD NP0	1	J25	SAMTEC	TSMW-105-07-G-D	
27	110-0014-Z1	A	CON XLR CHASSIS 3P FML SILV NP0	0	J28 J30 J31	NEUTRIK	NC3f-DH	NO POP
28	115-0004-Z1	A	HDR 2x4 ML .1"062BD ST GLD NP0 TH	0	J32 J34 J35	SAMTEC	TSMW-102-07-G-S	NO POP
29	110-0008-Z1	A	CON BPOST 2P SILV NYLON INS BLK NP0	1	J36	JOHNSON COMPONENTS	11-0103-001	REQUIRES WIRE, 1.5L X 0.25T X 0.25T TYPE E 24/19 BLU SOURCES ELEC. INC.
30	110-0010-Z1	A	CON BPOST 2P SILV NYLON INS RED NP0	1	J37	JOHNSON COMPONENTS	11-0102-001	REQUIRES WIRE, 1.5L X 0.25T X 0.25T TYPE E 24/19 BLU SOURCES ELEC. INC.
31	115-0024-Z1	A	HDR 1x1 ML .1"CTR S NP0 GLD	1	J57	SAMTEC	TSW-101-07-G-S	
32	080-0004-Z1	A	WIRE JUMPER 2P 0.1" BRASS NP0 TH	8	JP1 JP2 JP3 JP4 JP5 JP6 JP7 JP8	COMPONENTS CORPORATION	TP-101-10	
33	304-0001-Z1	A	SPCR STANDOFF 4x4 THR 875L AL NP0	7	MH MH2 MH3 MH4 MH5 MH6 MH7	KEYSTONE	1809	REQUIRES SCREW 4-40X5X16" PH STEEL 300-30025-Z1
34	020-01702-Z1	A	RES 100 OHM 1/8W ±1% NP0 0805 FILM	4	R1 R2 R21 R22	DALE	CRCMW080510RFRKEA	
35	020-01816-Z1	A	RES 1k OHM 1/8W ±1% NP0 0805 FILM	7	R5 R6 R7 R49 R50 R52 R53	DALE	CRCMW08051K00RFEA	
36	020-06362-Z1	A	RES 22k OHM 1/4W ±1% NP0 1206	4	R8 R12 R14 R15	DALE	CRCMW06422KFRKEA	
37	020-01816-Z1	A	RES 2.2 OHM 1/8W ±1% NP0 0803 FILM	0	R9 R13 R23 R24	DALE	CRCMW06035K01NEA	NO POP
38	021-00347-Z1	A	RES 2.2 OHM 1/8W ±1% NP0 0805 FILM	0	R11 R20	DALE	CRCMW08052R20JNEA	NO POP
39	021-00407-Z1	A	RES 680 OHM 1/8W ±5% NP0 0603 FILM	4	R25 R26 R27 R48	DALE	CRCMW080510RFRKEA	
40	021-00238-Z1	A	RES 680 OHM 1/8W ±1% NP0 0803 FILM	2	R29 R32	KOA	RK73B1JT7D681J	
41	021-00259-Z1	A	RES 1k OHM 1/10W ±1% NP0 0603 FILM	3	R30 R31 R47	DALE	CRCMW06035K10NEA	
42	021-00266-Z1	A	RES 10k OHM 1/10W ±5% NP0 0603 FILM	1	R33	DALE	CRCMW060310K01NEA	
43	020-00673-Z1	A	RES 10OHM 1/10W ±5% NP0 0603 FILM	9	R34 R35 R36 R37 R38 R40 R41 R42 R43	DALE	CRCMW0603000Z0EA	
44	021-00242-Z1	A	RES 1k OHM 1/10W ±2% NP0 0603 FILM	3	R44 R45 R46	DALE	CRCMW06031K00JNEA	
45	020-01473-Z1	A	RES 1OHM 1/8W ±1% NP0 0803 FILM	2	R51 R54	DALE	CRCMW0805000Z0EA	
46	020-0014-Z1	A	RES 130 OHM 1/10W ±1% NP0 0603 FILM	1	R55	DALE	CRCMW060310RFRKEA	
47	020-00673-Z1	A	RES 10 OHM 1/10W ±5% NP0 0603 FILM	0	R56	DALE	CRCMW0603000Z0EA	NO POP
48	021-00718-Z1	A	RES 20 OHM 1/3W ±5% NP0 1210 FILM	1	R57	DALE	CRCMW06020RJNEA	
49	120-0002-Z1	A	SWT SPST 130G 01 5mm TACT ESD NP0	2	S1 S2	ITT INDUSTRIES	PT544515L0LFS	INSTALL AFTER WASH PROCESS

BILL OF MATERIAL (Page 2 of 2)

Item	Cirrus PIN	Rev	Description	Qty	Reference Designator	Mfg	Mfg PIN	Notes
50	110-00452-Z1	A	CON TEST PT.1°C TR TIN PLAT NPB BLK	8	TP1 TP2 TP5 TP6 TP7 TP8 TP9 TP10	KEYSTONE	5001	
51	085-00333-Z2	A	IC CIRRUS BIDIR INFER MEAS NPB QFN44L	1	U1	CIRRUS LOGIC	CS55480-I-NZ7A1	
52	060-00589-Z1	A	IC ISOL 4CH 2.5kV 4/0 NPB SOIC16N	2	U2 U3	SILICON LABORATORIES	SB40BB-D-S1	
53	175-00031-Z1	A	OPT COUP TRANS 50-600% NPB DIP4	2	U4 U5	TOSHIBA	TLP781(F)	PROGRAM AT TEST
54	062-00289-Z1	A	IC P-OM USB 64kB FLASH ICU NPB LQFP32	1	U6	SILICON LABORATORIES	C0051F342-GQ	INC
55	160-00012-Z1	A	LCD MODULE 3.3V 16x2 16x64mm NPB	1	U7	TOPWAY	LNB162AF-C-2	NEED HDR16X1-SSW-116-01-G-S, TSW-116-07-G-S, #2 STANDOFF 500 LENGTH, SCREWS
56	061-00392-Z1	A	IC DIG DC/DC CONV 5V 1W NPB SMD08	1	U8	V-INFINITY	VBT-1S5-S5-SMT	
57	060-00319-Z1	A	IC LNR VREG µPWR 150mA NPB SOT23-5	1	U9	NATIONAL SEMICONDUCTOR	LF22885IM5-3.3/NOPB	
58	100-00120-Z1	A	XTL 4.096MHz HC919JS 30ppm 20μF NPB	1	Y1	ECS	ECS-41-20-4X	INSTALL PIN SOCKETS
59	070-00006-Z1	A	DIODE TR 6.8V 600mW NPB AXL	2	Z1 Z2	LITTLE FUSE	PK06E_8	
60	070-01686-Z1	A	DIODE TVS 3.3V 2LN ESD NPB SOT23	1	Z3	VISHAY	GSO/T03C-GS08	
61	603-00474-Z1	B	ASSY DWG CDB5480U-Z-NPB	REF		CIRRUS LOGIC	603-00474-Z1	
62	240-00474-Z1	B	PCB CDB5480U-Z-NPB	1		CIRRUS LOGIC	240-00474-Z1	
63	600-00474-Z1	B	SCHEM CDB5480U-Z-NPB	REF		CIRRUS LOGIC	600-00474-Z1	
64	422-00013-01	C	LBL SUBASSY PRODUCT ID AND REV	1		CIRRUS LOGIC	422-00013-01	
65	080-00003-Z1	A	WIRE BPOST 1.5X 25/41 GA BLU NPB	2	XJ36,XJ37	SQUIRES	L-1.5X25TX25T_TYPE_E_-	
66	135-000003-Z1	A	SKT 1P .100" .041" DIA GLD NPB	2	XY1(2 PINS)	AUGAT	8134-HC-5P2	
67	300-00025-Z1	A	SCREW 4-40X5/16" PH MACH SS NPB	7	XMH1 XMH2 XMH3 XMH4 XMH5 XMH6 XMH7	BUILDING FASTENERS	PHISS-S440 0031 PH	
68	110-00013-Z1	D	CON SHUNT 2P .1°C TR BLK NPB	31		MOLEX	15-29-1025	INSTALL AT TEST

APPENDIX B. SCHEMATICS

Figure 31. Schematic - Analog Inputs


Figure 32. Schematic - CS5480 & Socket

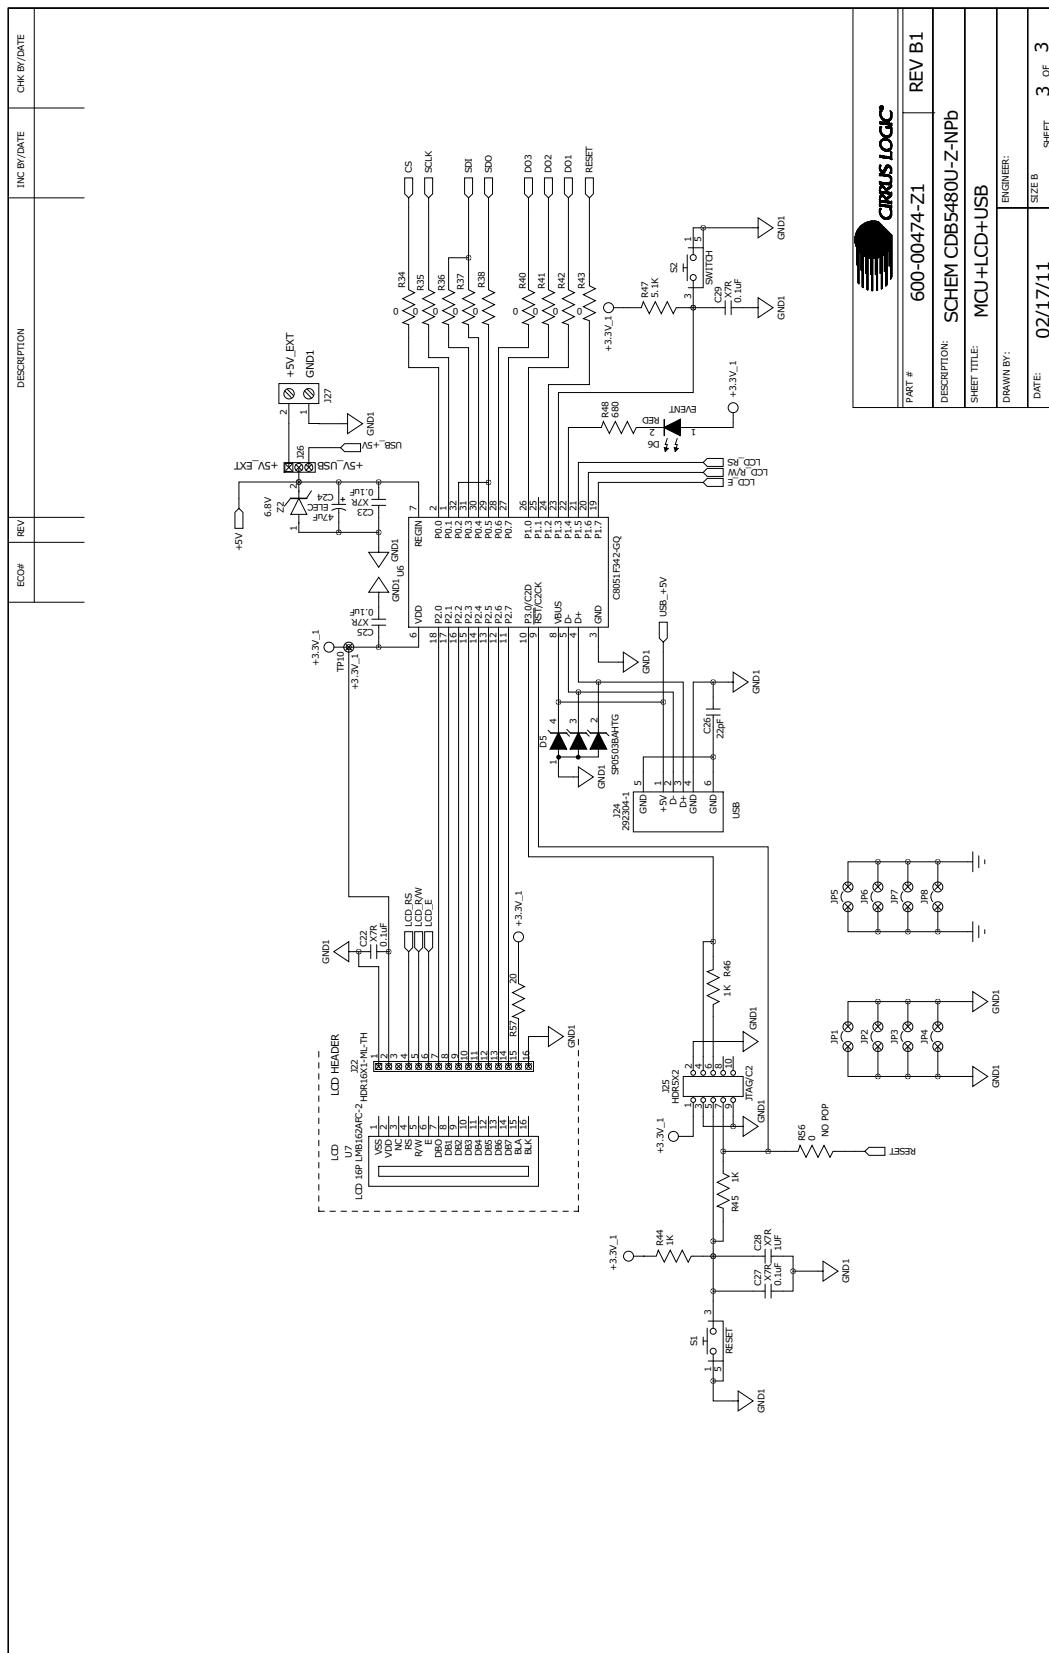
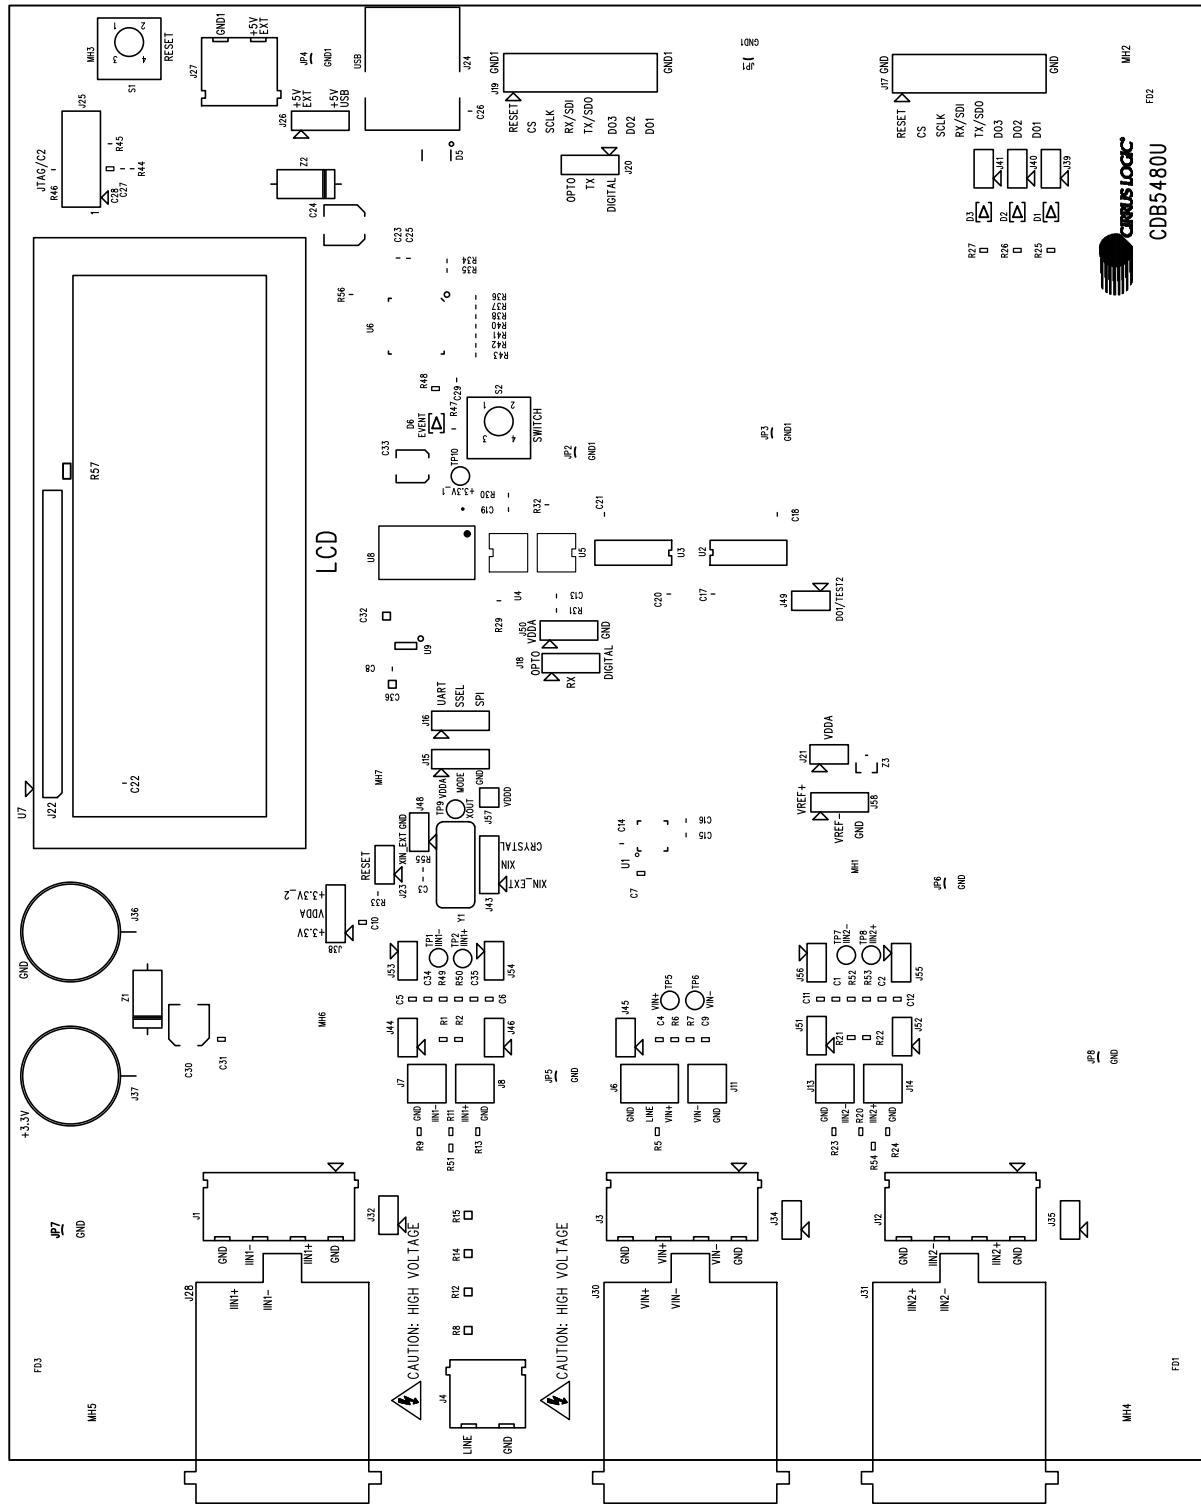


Figure 33. Schematic - Microcontroller & USB Interface

APPENDIX C. LAYER PLOTS

Figure 34. Top Silkscreen

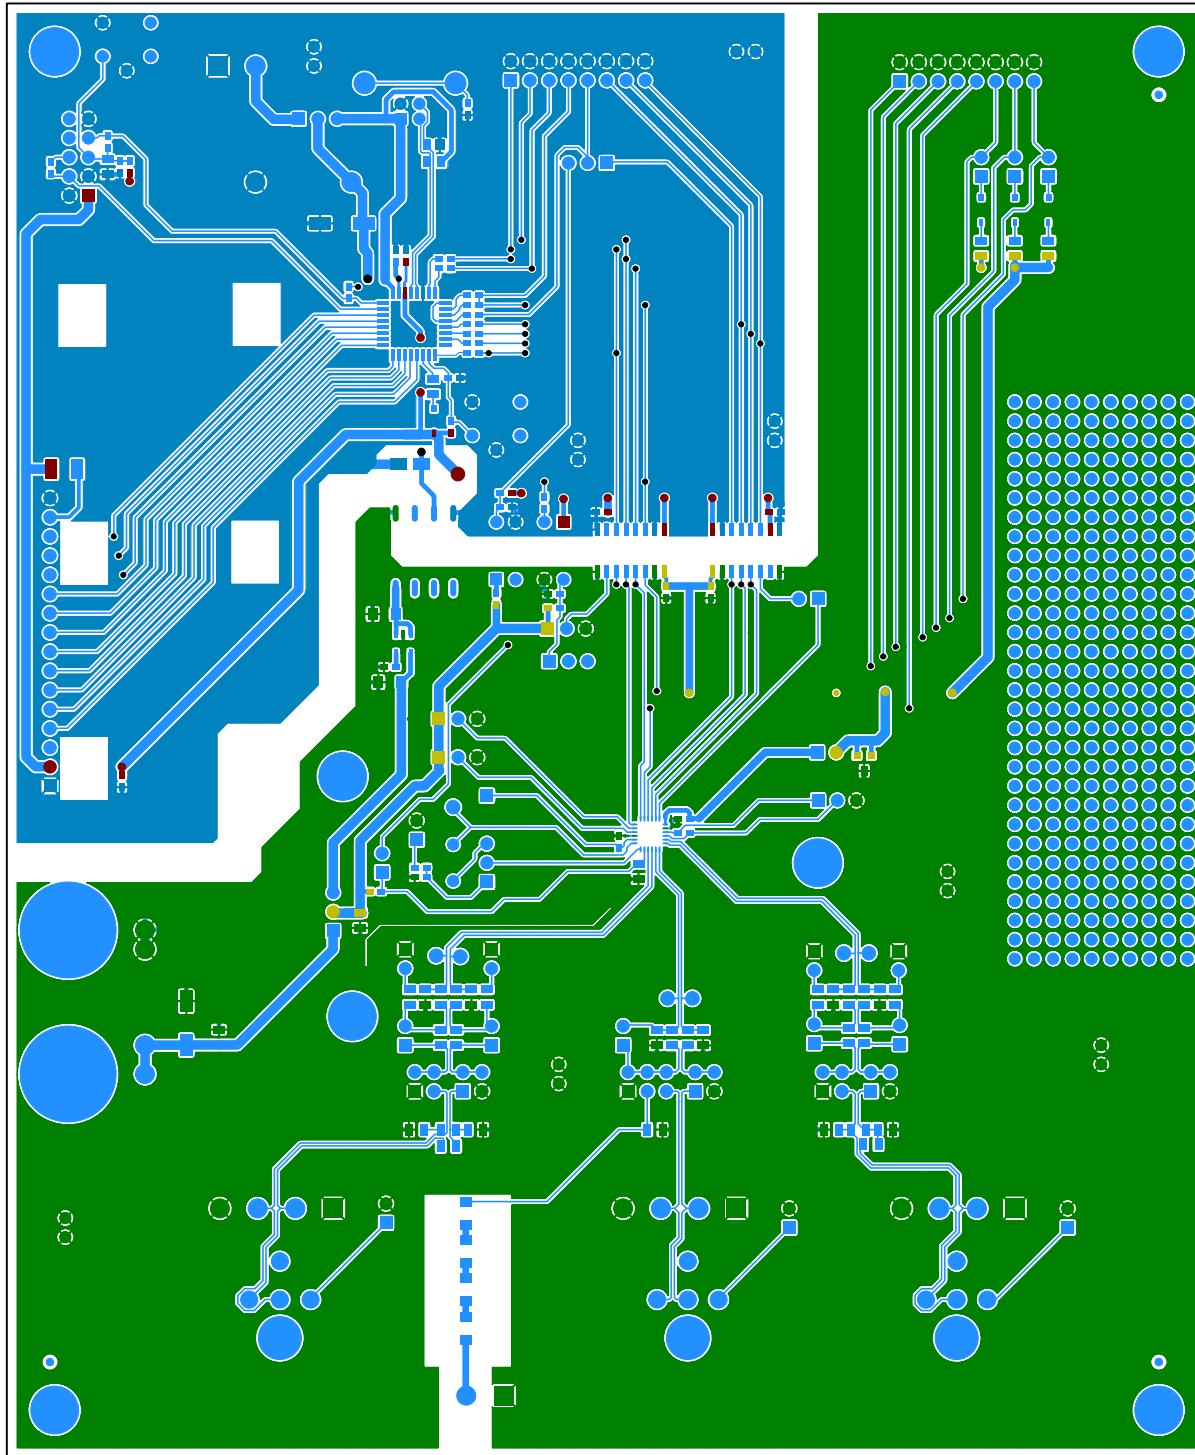


Figure 35. Top Routing

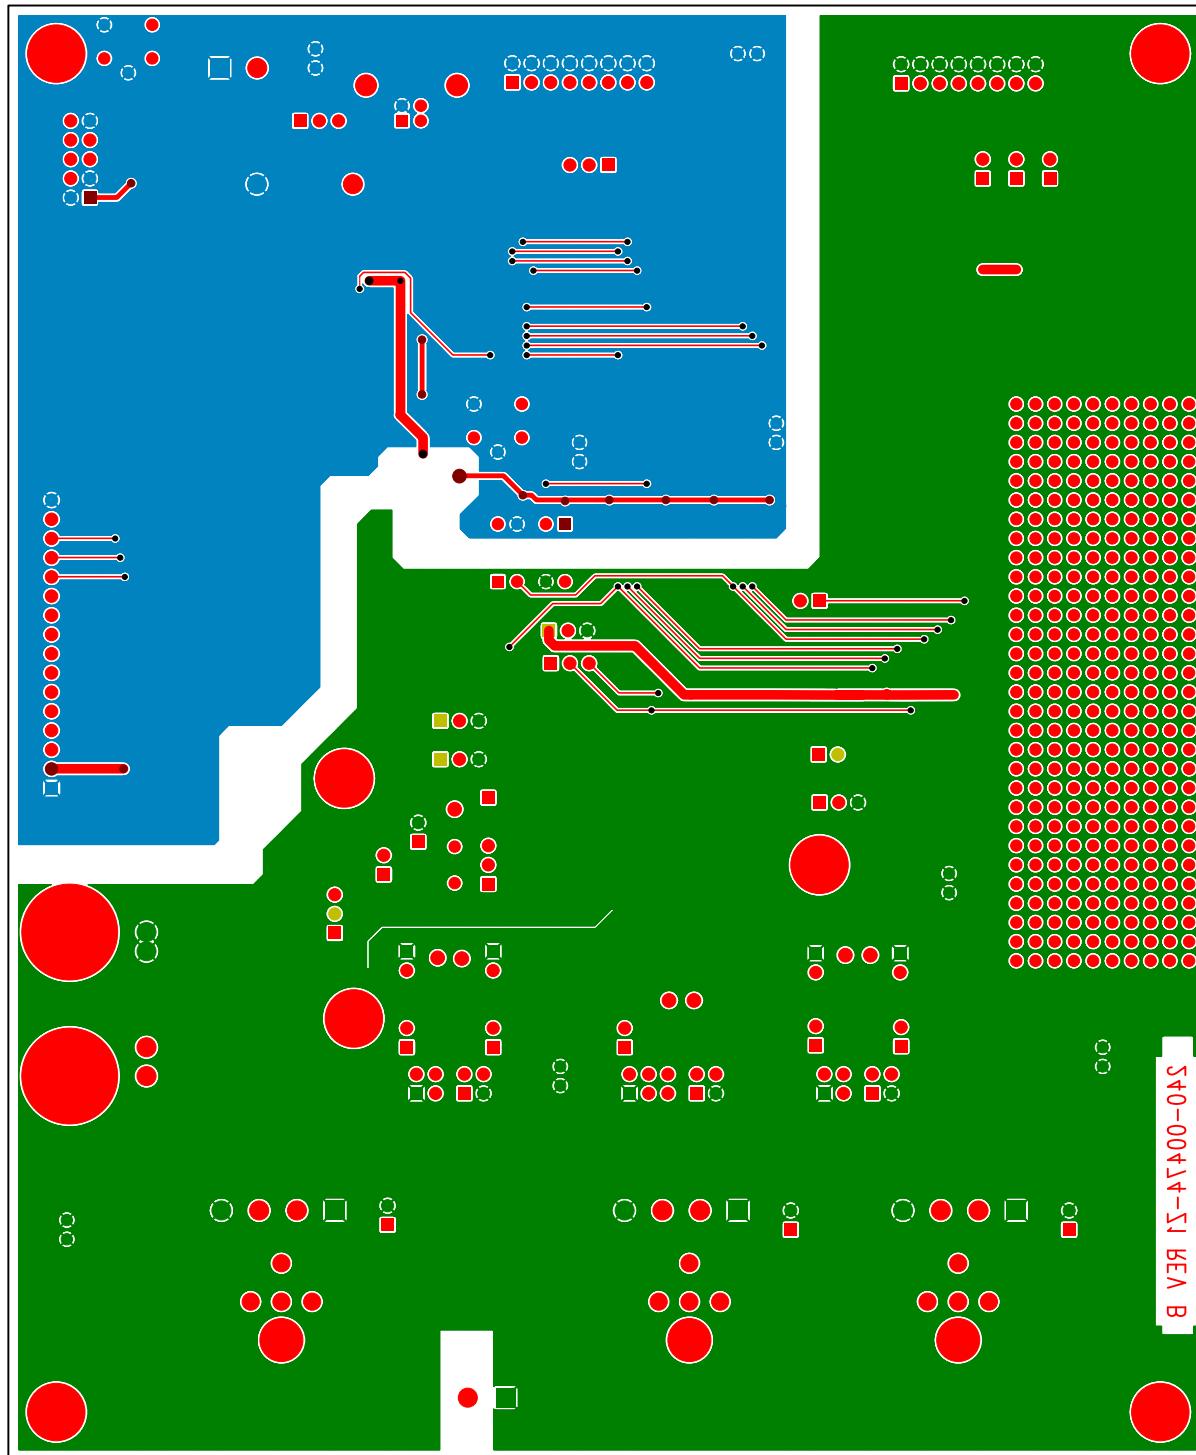


Figure 36. Bottom Routing

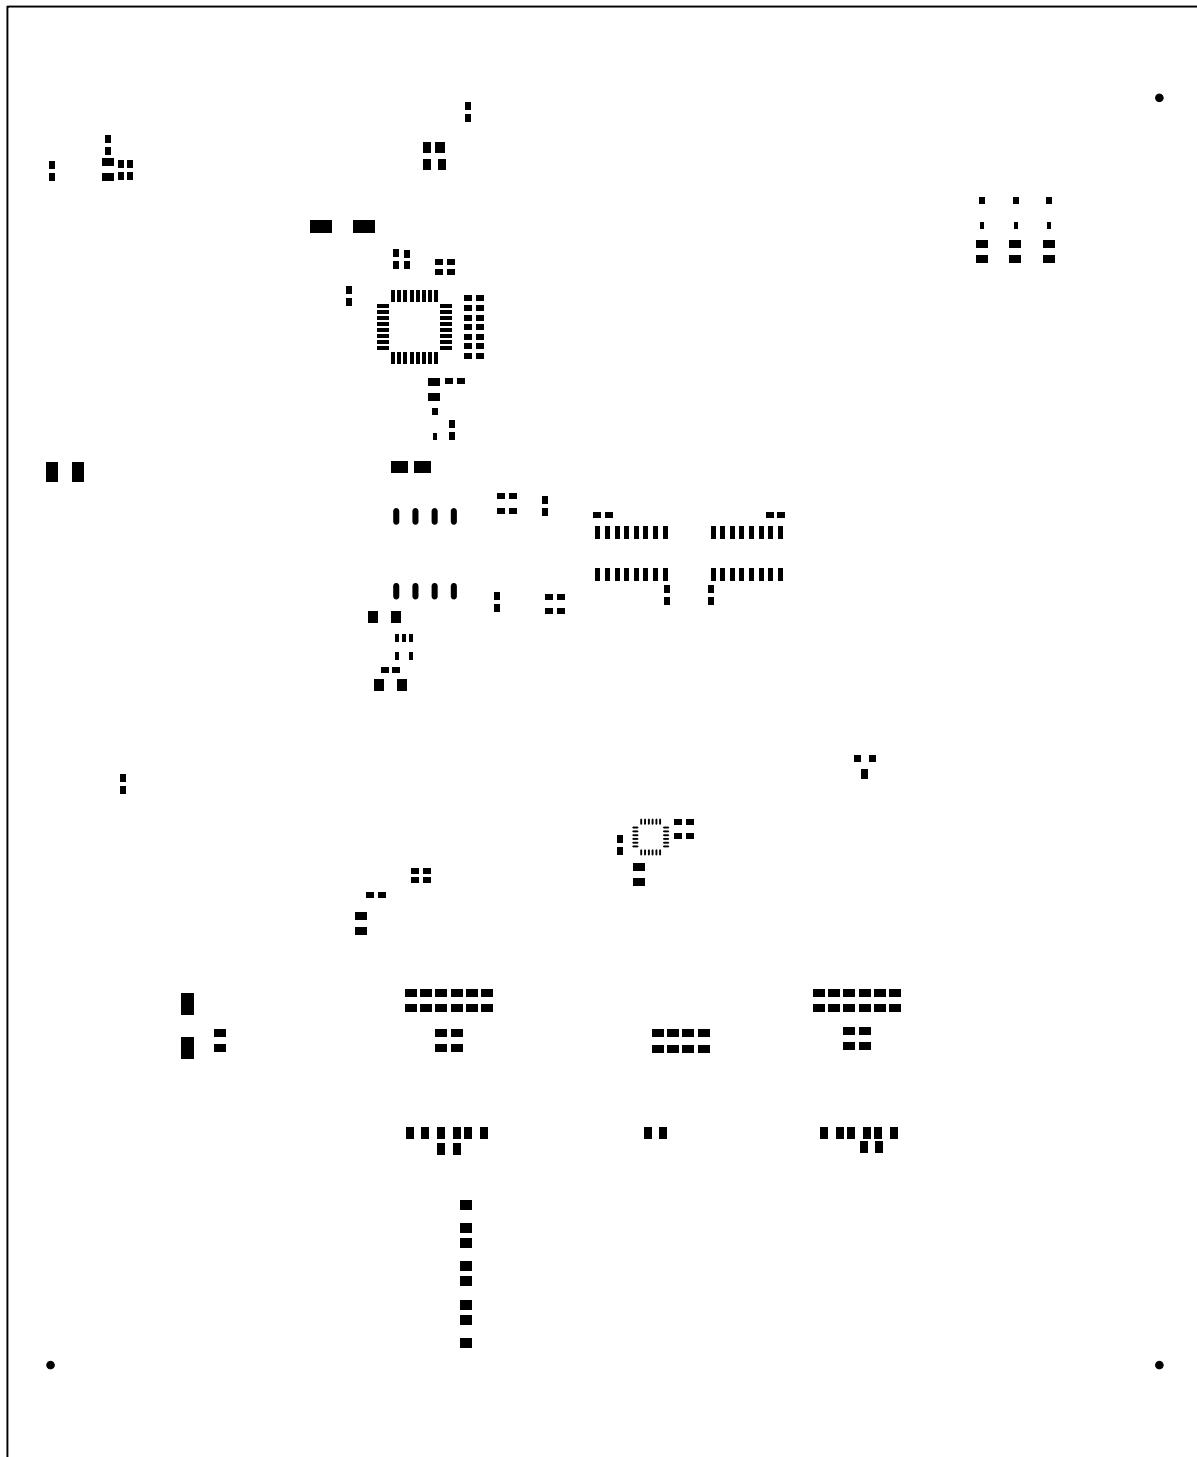


Figure 37. Solder Paste Mask

REVISION HISTORY

Revision	Date	Changes
DB1	NOV 2011	Initial Release.
DB2	DEC 2011	Edited for content and clarity.

THIS PAGE IS INTENTIONALLY LEFT BLANK.