


Quick Start Guide for FRDM-KE02Z

Contents:

- Quick Start Package Overview
- Get to Know the FRDM-KE02Z
- Getting Started Out of the Box
- Introduction to OpenSDA
- Explore Further

www.freescale.com/FRDM-KE02Z

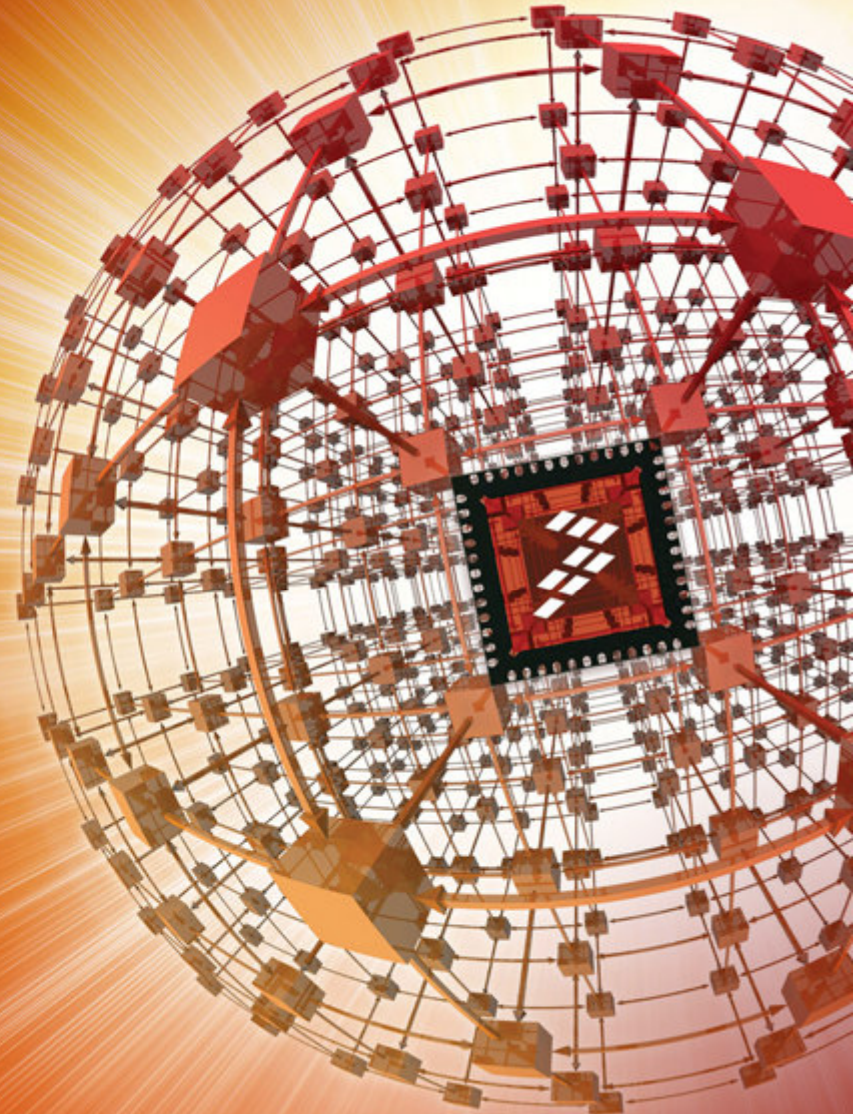

Quick Start Package Overview


These documents are available as part of the Quick Start Package:

Name	Type	Description
Quick Start Guide	PDF	This document
OpenSDA Applications	Folder	OpenSDA Applications for the FRDM-KE02Z
Precompiled Examples	Folder	S-record images of example projects for use with the MSD Flash Programmer

Additional reference documents are available on freescale.com/FRDM-KE02Z:

Name	Description
FRDM-KE02Z Quick Start Package	Quick Start Guide and supporting files for getting started with the FRDM-KE02Z.
FRDM-KE02Z User's Manual	This document—overview and detailed information for the FRDM-KE02Z hardware.
FRDM-KE02Z Pinouts	Spreadsheet of pin connections for all MCU pins. Includes pinout for the I/O headers, Arduino R3 compatibility chart, and OpenSDA MCU pinout.
FRDM-KE02Z Schematics	PDF schematics for the FRDM-KE02Z hardware
FRDM-KE02Z Design Package	Zip file containing all design source files for the FRDM-KE02Z hardware
OpenSDA User's Guide	Overview and instructions for use of the OpenSDA embedded debug circuit

Get to Know the FRDM-KE02Z

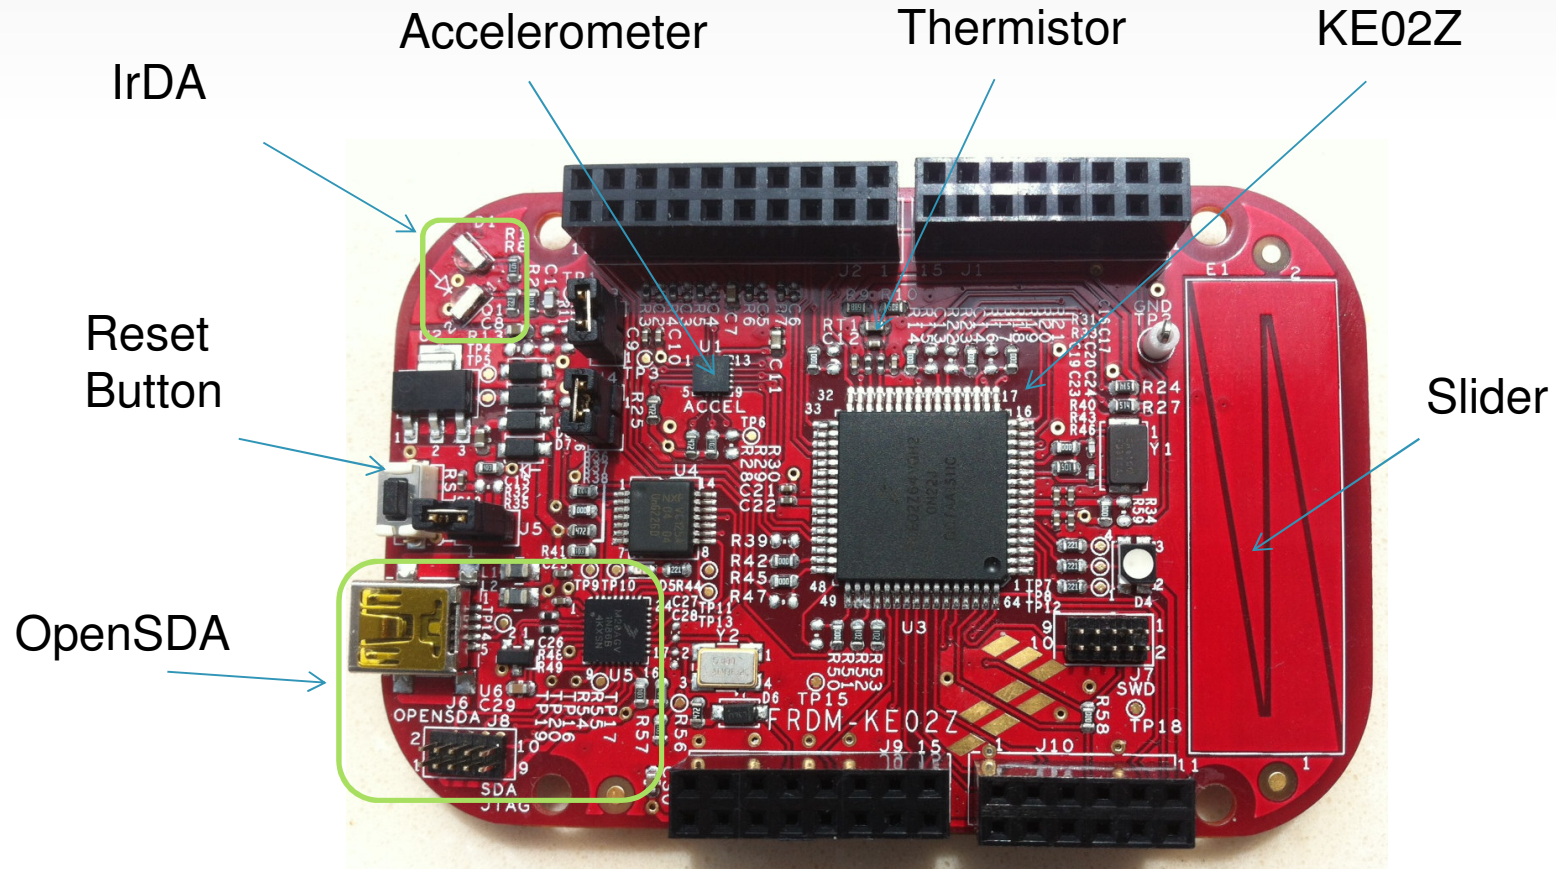

Get to Know the FRDM-KE02Z



2 of 2

The Freescale Freedom development platform is a set of software and hardware tools for evaluation and development. It is ideal for rapid prototyping of microcontroller-based applications. The Freescale Freedom KE02Z hardware, FRDM-KE02Z, is a simple, yet sophisticated design featuring a Kinetis L Series microcontroller, the industry's first microcontroller built on the ARM® Cortex™-M0+ core.

Features:

- MKE02Z32VFM4 MCU – 20MHz, 64KB Flash, 4KB SRAM, 64QFP
- Capacitive touch slider, MMA8451Q accelerometer, Tri-color LED
- Flexible power supply options – USB, coin cell battery, external source
- Easy access to MCU I/O
- IrDA transmitter and receiver
- Thermistor sensor to measuring temperature
- Form factor compatible with Arduino™ R3 pin layout
- New, OpenSDA debug interface
 - Mass storage device flash programming interface (default) – no tool installation required to evaluate demo apps
 - P&E Debug interface provides run-control debugging and compatibility with IDE tools
 - CMSIS-DAP interface: new ARM standard for embedded debug interface

Refer to the *FRDM-KE02Z User's Manual* and *OpenSDA User's Guide* for more information.

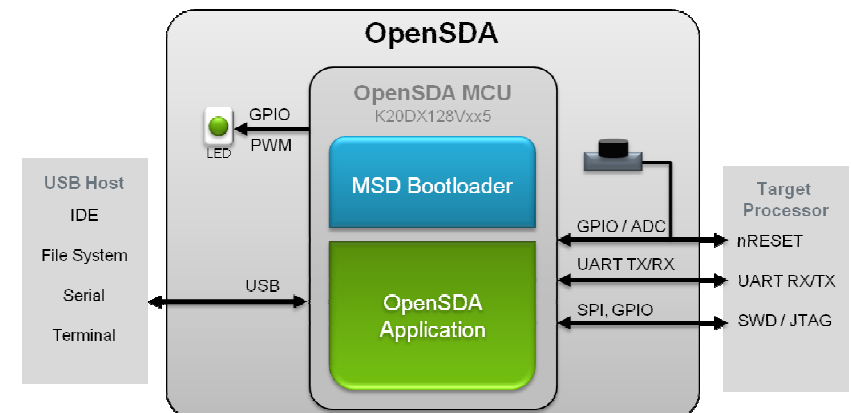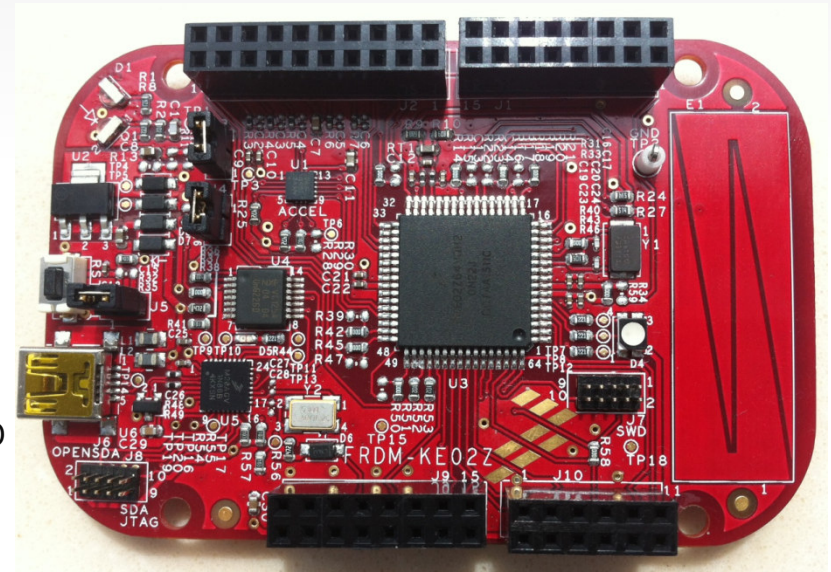

Getting Started Out of the Box

Installing Drivers and Running the Out of Box Demo

0 **Optional:** Download and Install the P&E OpenSDA USB Drivers found at www.pemicro.com/opensda.

1 Plug in a USB cable (not included) from a USB host to the OpenSDA mini-B USB connector. The FRDM-KE02Z will be powered by this USB connection.

FRDM-KE02Z comes with the mass-storage device (MSD) Flash Programmer OpenSDA Application preinstalled. It will appear as a removable storage drive with a volume label of `FRDM-KE02Z`.

The MSD Flash Programmer also includes a USB virtual serial port which requires an `.INF` file for proper installation in Windows. The necessary `.INF` file is available in the P&E OpenSDA USB Drivers (Step 0) and also on the `FRDM-KE02Z` removable drive.

If the USB CDC Serial Port fails to automatically install in Windows, follow the instructions in Step 2. Otherwise, skip to Step 3.

- 2**
- [Open Device Manager](#)
 - Locate and right-click on “OpenSDA – CDC Serial Port”
 - Select “Update Driver Software”
 - “Browse” and select the `FRDM-KE02Z` drive
 - Click “Next” to complete the installation

3 The pre-installed demo running on the KE02Z MCU will cycle through several colors on the RGB LED. After this completes, tilt the board. The color mix of the RGB LED will change based on the accelerometer data.

4 Touch the capacitive slider. Green light blinking

Introduction to OpenSDA

1 of 2

OpenSDA is an open-standard serial and debug adapter. It bridges serial and debug communications between a USB host and an embedded target processor. OpenSDA software includes a flash-resident USB mass-storage device (MSD) bootloader and a collection of OpenSDA Applications. FRDM-KE02Z comes with the MSD Flash Programmer OpenSDA Application preinstalled. Follow these instructions to run the OpenSDA Bootloader and update or change the installed OpenSDA Application.

Enter OpenSDA Bootloader Mode

- 1 Unplug the USB cable if attached.
- 2 Press and hold the Reset button (SW1).
- 3 Plug in a USB cable (not included) between a USB host and the OpenSDA USB connector (labeled “SDA”).
- 4 Release the Reset button.

A removable drive should now be visible in the host file system with a volume label of `BOOTLOADER`. You are now in OpenSDA Bootloader mode.

IMPORTANT NOTE: Follow the “Load an OpenSDA Application” instructions to update the MSD Flash Programmer on your FRDM-KE02Z to the latest version. It is likely that the version provided in this package is newer than what was preprogrammed on your FRDM-KE02Z.



Load an OpenSDA Application

- 1 While in OpenSDA Bootloader mode, double-click `SDA_INFO.HTML` in the `BOOTLOADER` drive. A web browser will open the OpenSDA homepage containing the name and version of the installed Application. This information can also be read as text directly from `SDA_INFO.HTML`.
- 2 Locate the `OpenSDA Applications` folder in the FRDM-KE02Z Quick Start Package.
- 3 Copy & paste or drag & drop the MSD Flash Programmer Application (`MSD-FRDM-KE02Z_Pemicro_vXYZ.SDA`) to the `BOOTLOADER` drive.
- 4 Unplug the USB cable and plug it in again. The new OpenSDA Application should now be running and a `FRDM-KE02Z` drive should be visible in the host file system.

You are now running the latest version of the MSD Flash Programmer. Use this same procedure to load other OpenSDA Applications.

If to use debugger, load debug application named `DEBUG-APP_Pemicro_vXYZ.SDA`

Introduction to OpenSDA

2 of 2

The MSD Flash Programmer is a composite USB application that provides a virtual serial port and an easy and convenient way to program applications into the KE02Z MCU. It emulates a FAT16 file system, appearing as a removable drive in the host file system with a volume label of `FRDM-KE02Z`. Raw binary and Motorola S-record files that are copied to the drive are programmed directly into the flash of the KE02Z and executed automatically. The virtual serial port enumerates as a standard serial port device that can be opened with standard serial terminal applications.

Using the MSD Flash Programmer

- 1 Locate the `Precompiled Examples` folder in the FRDM-KE02Z Quick Start Package.
- 2 Copy & paste or drag & drop one of the `.srec` files to the `FRDM-KE02Z` drive.

The new application should now be running on the FRDM-KE02Z. Starting with the MSD Flash Programmer, you can program repeatedly without the need to unplug and reattach the USB cable before reprogramming.

Program `Lab_demo_frdm.srec` example to replace the out-of-box demo on your FRDM-KE02Z.

Using the Virtual Serial Port

- 1 Determine the symbolic name assigned to the FRDM-KE02Z virtual serial port. In Windows [open Device Manager](#) and look for the COM port named “PEMicro/Freescale – CDC Serial Port”.

NOTE: Flash programming with the MSD Flash Programmer is currently only supported on Windows operating systems. However, the virtual serial port has been successfully tested on Windows, Linux and Mac operating systems.

- 2 Open the serial terminal emulation program of your choice. Examples for Windows include [Tera Term](#), [PuTTY](#), and [HyperTerminal](#).
- 3 Program one of the “serial test” applications from the `Precompiled Examples` folder using the MSD Flash Programmer.
- 4 Configure the terminal program. Most embedded examples use 8 data bits, no parity bits, and one stop bit (8-N-1). Match the baud rate to the selected serial test application and open the port.
- 5 Press and release the Reset button (SW1) at anytime to restart the example application. Resetting the embedded application will not affect the connection of the virtual serial port to the terminal program.

NOTE: Refer to the *OpenSDA User's Guide* for a description of a known Windows issue when disconnecting a virtual serial port while the COM port is in use.

Explore Further



Now that you are familiar with the FRDM-KE02Z and OpenSDA, it's time to explore the additional software and lab guides available on www.freescale.com/FRDM-KE02Z. Select your next path from the links in the **Jump Start Your Design** section.

How to Reach Us:

Home Page:
freescale.com

Web Support:
freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. “Typical” parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including “Typicals”, must be validated for each customer application by customer’s technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: <http://www.reg.net/v2/webservices/Freescale/Docs/TermsandConditions.htm>

Freescale, the Freescale logo, Altivec, C-5, CodeTest, CodeWarrior, ColdFire, C_Ware, Energy Efficient Solutions logo, Kinetis, mobileGT, PowerQUICC, Processor Expert, QorIQ, Qorriva, StarCore, Symphony, and VortiQa are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Airfast, BeeKit, BeeStack, ColdFire+, CoreNet, Flexis, MadniV, MXC, Platform in a Package, QorIQ Qonverge, QUICC Engine, Ready Play, SafeAssure, SMARTMOS, TurboLink, Vybrid, and Xtrinsic are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc. 2012.
All rights reserved.