


952SX LONER®

Temperature Controlled Soldering Station

 COMPLIES WITH MIL-S-45743E, MIL-STD-2000, DOD-STD-2000-1B, WS6536E AND ESD SPEC, DOD-STD-1686, DOD-HDBK-263



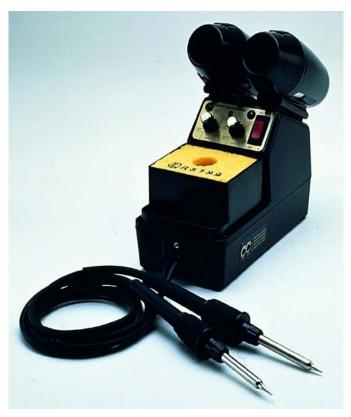

instruction manual

Specifications for Model 952SX

Power Requirements 120V, 50/60 Hz

Power Rating 15W - 220W

Heater Rating 120V, 95W

Temperature Range 400°F-800°F/205°C-427°C

Temperature Regulation ±6°F/±3°C

Tip-to-Ground Voltage

Leakage/Resistance < 2mV/< 2 ohms

Overall Dimension 4.1"W x 8.2"H x 10"D

104 mm x 208 mm x 254 mm

Weight 3.1 lbs/1.4 kg

Contents

952SX includes 1 - LT375 Soldering Tip


1 - LT337BC Soldering Tip

PD528 Tool Pod

SH230 Sponge Holder

(Includes RS199 Cleaning Sponge, RS243 Leveling Pad, LN230 Liner)

WP556 WIGAPRY Low Static Computer Aid

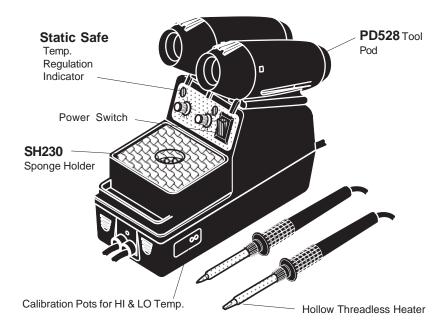


WARNING:

MAINTENANCE

Replace RS199 Cleaning Sponge

 Fill water only up to the top of the RS243 Leveling Pad.

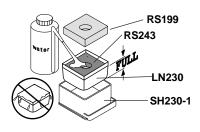

CAUTION:

Over-filling can cause thermal shock to the tip or heating element during tip

• Replace SC581 Solder Collector

- Hold the Housing firm and turn Cap counter-clockwise and pull it away from the Housing.
- 2. Remove used SC581 and replace with a new one.
- 3. Reassemble Pod with TOP of the Cap in



TIP CLEANING

To maintain proper Tip to Ground resistance.

- 1. Remove Tip from Heater Assembly.
- Using a ST707 Soldering Tool Maintenance Brush, clean Tip and Heater Barrel at surfaces shown.
- 3. Install the tip and tighten RS372 Retaining Sleeve. Take note of the gap to ensure proper fitting.

 (If there is no gap, try replacing the RS372 Retaining Sleeve).




TIP CARE

- 1. Set desired temperature. Blinking Neon Lamp means Tool is ready.
- 2. TIN the Tip. (apply solder)
- 3. Do not rub, bend or reshape the Tip.
- 4. Always clean the Tip by wiping it against the saturated sponge and always RE-TIN.

TEMPERATURE CALIBRATION

(Note: Dual Soldering Stations are calibrated to temperatures of the soldering tips installed. If changing tip to different size and or length a recalibration is necessary to match temperature markings on the front panel.)


- 1. Turn on power and set Temperature Control Knob to 400°F (205°C).
- 2. Using a clean and well tinned Tip, apply a small amount of solder on the Tip, just enough to form a bead on top of the Tip.
- 3. Place the center of the thermocouple wire of the SDS100 on top of the bead.
- Again, apply a small amount of solder on the center of the thermo-couple wire, just enough to embed the center.
- 5. Adjust LO-Temp. Calibration Pot so the Meter will read 400°F (205°C).
- 6. Set Temperature Control Knob to 800°F (427°C).
- 7. Adjust Hi-Temp. Calibration Pot so the Meter will read 800°F (427°C).

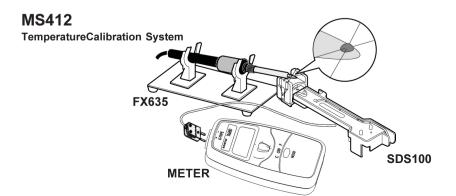

CHANGING TIP


DO NOT USE the soldering tool if soldering tip is loose. This will cause the heater element to break.

- 1. MAKE SURE YOUR TOOL IS COOL!
- 2. Turn Retaining Sleeve counter-clockwise to remove.
- 3. Remove old Soldering Tip.
- 4. Insert new Tip.
- 5. Install Retaining Sleeve. (should be "finger" tight only.)




DERING TIPS					
d Chrome Plated for optimum heat transfer N FOR MORE SELECTIONS		B B			
LT374 Standard Probe	.03 (0.8 mm)	.48 (12.2 mm)			
LT375 Standard Spade	.06 (1.5 mm)	.48 (12.2 mm)			
LT392 Extra-Long Needle Point	.02 (0.5 mm)	1.13 (28.8 mm)			
LT394 Extra-Long Spade	.07 (2.0 mm)	.93 (23.6 mm)			
LT446 SMD Probe	.03 (0.8 mm)	.48 (12.2 mm)			
LT337BC Heavy Duty Terminal Spade	.10 (2.5 mm)	.74 (18.8 mm)			
LT223BC Heavy Duty Fine Spade	.06 (1.5 mm)	1.21 (30.7 mm)			
LT222BC Extra long Needle Point	.04 (1.0 mm)	1.21 (30.7 mm)			
LT153BH Jumbo Spade	.20 (4.9 mm)	.93 (23.6 mm)			
LT155BH Jumbo Angle Spade	.32 (8.3 mm)	.97 (21.1 mm)			
SET-UP & REQUIRED ACCESSORIES FOR HEAVY DUTY AND JUMBO TIPS					
"BC"					
Apply AN112 or AN122* Anti-Seize Compound to Heater and area of Tip contact. Compound TA350 TIP RS271 RS351					
	LT374 Standard Probe LT375 Standard Spade LT392 Extra-Long Needle Point LT394 Extra-Long Spade LT446 SMD Probe LT337BC Heavy Duty Terminal Spade LT223BC Heavy Duty Fine Spade LT222BC Extra long Needle Point LT153BH Jumbo Spade LT155BH Jumbo Angle Spade ED ACCESSORIES FOR HEAVY DUT "BC" HEAVY DUTY T AC735	LT374 Standard Probe .03 (0.8 mm) LT375 Standard Spade .06 (1.5 mm) LT392 Extra-Long Needle Point .02 (0.5 mm) LT394 Extra-Long Spade .07 (2.0 mm) LT446 SMD Probe .03 (0.8 mm) LT337BC Heavy Duty Terminal Spade .10 (2.5 mm) LT223BC Heavy Duty Fine Spade .06 (1.5 mm) LT222BC Extra long Needle Point .04 (1.0 mm) LT153BH Jumbo Spade .20 (4.9 mm) LT155BH Jumbo Angle Spade .32 (8.3 mm) ED ACCESSORIES FOR HEAVY DUTY AND JUMBO "BC" HEAVY DUTY TIP AC735 JUMBO			

^{*}AN122 Anti-Seize Compound comes in syringe dispenser.




Fine point tip for SMD soldering.




Large and heavy tip for heavy duty soldering.

952SX LONER® SOLDERING STATION SPARE PARTS LIST

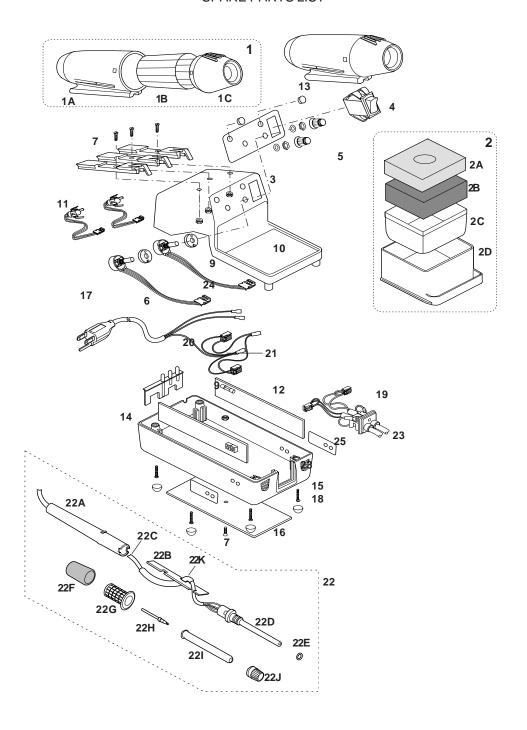

ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
1	PD528	Tool Pod	2
1A	SR042	Thermal Housing for Tool Pod	2
1B	SC581	Solder Collector for Tool Pod	2
1C	SR043	Front Housing for Tool Pod	2
2	SH230	General Purpose Sponge Holder	1
2A	RS199	Cleaning Sponge	1
2B	RS243	Leveling Pad for SH230	1
2C	LN230	Liner for SH230	1
2D	SH230-1	Sponge Holder Tray	1
3	SR303	Control Panel Label	1
4	SR452	Power Switch, Illuminated	1
5	SR068	Knob, Temperature Control	2
6	SR243	5K Potentiometer, Temperature Control	2
7	SR015	Flat Head Screw- Slotted #6 - 32 x 1/2	4
9	SR467	Hex Nut- #6 - 32	4
10	SR781	Top Case 1	
11	SR019	Dove Tail Mount	1
12	15002W95	Circuit Board	2
13	SR573	LED Assy.	2
14	SR052	Bottom Base	1
15	SR011	Pan Head Screw- Phillip #6 - 18 x 5/8	5
16	SR054	Bottom Weight	1
17	SR313	Power Cord Assy.	1
18	SR251	Rubber Foot	4
19			
20	SR241	Strain Relief for Power Cord	1
21	SR249	Fuse, 250V, 1 A (5mm x 20 mm)	2
22	SR298	Soldering Tool, Complete Assembly	2
22A	SR057	Handle for Tool	2
22B	SR058	Cord Strain Relief	1
22C	SR280	Tool Cord Assy., Burn Proof	2
22D	SR060	Heater Element Assembly Kit (O-Ring (22E) & Collar (22g) Included	2
22E	SR062	O-Ring	2
22F	SR063	Vinyl Sleeve	2
22G	SR064	Collar	2
22H	LT375	LONER _® Standard Spade Tip	1
221	RS382	Retaining Sleeve	1
22J	RB386	Retaining Bushing	1
22K	SR525	Silicone Hose, Low Static (sold per foot)	5-1/4"
23	SR053	Strain Relief for Tool Cord	1
24	SR255	Spacer for Potentiometer	2
25	SR310	Label, Calibration Pot, Right Front or Left Rear	1
26	SR311	Label, Calibration Pot, Left Front or Right Rear	1
27	LT337BC	Heavy Duty Soldering Tip	1
28	RS271	Retaining Sleeve, Heavy Duty	1

952SX instruction manual

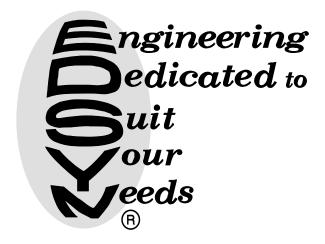

ALL RIGHTS RESERVED.

NO PART OF THIS PUBLICATION INCLUDING THE INDIVIDUAL ICONS
MAY BE REPRODUCED OR UTILIZED IN ANY FORM OR BY ANY MEANS
WITHOUT THE PERMISSION OF EDSYN. INC.

THE NAMES LONER, SOLDAPULLT, SOLDAVAC, ATMOSCOPE, AUTO-VAC, IDLE-REST, OCTAVAC AND KLATCH
ARE REGISTERED TRADEMARKS OF EDSYN, INC.



MOST PRODUCTS ARE COVERED BY U.S. AND FOREIGN PATENTS AND PENDING APPLICATIONS.

DESIGN, COLOR AND MATERIALS SUBJECT TO CHANGE WITHOUT NOTICE.

TIP STYLE ON SOLDERING, DESOLDERING AND HOT AIR TOOLS MAY VARY.

PRINTED IN U.S.A.



...the power of precision

15958 Arminta Street • Van Nuys • CA 91406-1896 Web Site www.edsvn.com • eMail info@edsvn.com