

multicomp PRO



Operating Instruction for Dual Inputs Thermocouple Thermometer

Please read this manual before switching the unit on.
Important safety information inside.

| Content | Page |
|--------------------------------------|-------------|
| 1.Introduction..... | 4 |
| 2.Features..... | 4 |
| 3.Specifications..... | 5 |
| 4.Description..... | 6 |
| 4-1.Meter Description..... | 6 |
| 4-2.Symbols Used on LCD Display..... | 7 |
| 5.Operating Instructions..... | 8 |
| 5-1.Temperature Measurement..... | 8 |
| 5-2.Button Operation..... | 8 |
| 5-3.High/Low Temperature Alarm..... | 10 |
| 5-4.Delete Datalogger..... | 10 |
| 5-5.Auto Power Off..... | 10 |
| 5-6.Remaining Memory Positions..... | 10 |
| 5-7.Use of the PC Software..... | 10 |
| 6.Replacement Battery..... | 10 |

1.Introduction

The meter is a handheld temperature measuring instrument via probe and adopt Thermocouple sensor (J, K, T, E, S, R, N), the accuracy is high, easy to use.

2.Features

- Large LCD display with backlight
- User selectable °C and °F
- Max/Min/Difference/Average
- Low battery indication
- Data hold
- User calibration-offset adjustment ($\pm 5^{\circ}\text{C}$)
- High/Low alarms (Audio and Visual)
- Datalogging function: 16000
- Time Stamp
- Adjustable sampling rate
- USB interface with software
- Auto Power off
- Type J, K, T, E, S, R, N input

3. Specifications

Temperature Range

| | |
|--------|---------------------------------|
| Type J | -200 to 1000°C (-328 to 1832°F) |
| Type K | -250 to 1372°C (-418 to 2502°F) |
| Type T | -250 to 400°C (-418 to 752°F) |
| Type E | -200 to 990°C (-328 to 1814°F) |
| Type S | 0 to 1760°C (32 to 3200°F) |
| Type R | 0 to 1760°C (32 to 3200°F) |
| Type N | -200 to 1290°C (-328 to 2354°F) |


Accuracy

| | |
|--------------|--|
| Type J/K/T | ±1% of reading +1°C [1.8°F] below -99.9°C [-148°F] * ±0.5% of reading +1°C [1.8°F] above -99.9°C [-148°F] * |
| Type E/S/R/N | ±1% of reading +2°C [3.6°F] below -99.9°C [-148°F] * ±0.5% of reading +2°C [3.6°F] above -99.9°C [-148°F] * |

* probe accuracy not included

The accuracy is suit for the temperature from 18°C to 28°C and the humidity less than 80%



Temperature Coefficient: outside the specified temperature range 0.1% of the reading + 0.3°C/°C (0.5°F/°F)

| | |
|------------------------|---|
| Resolution | 0.1(°C/°F) from -99.9 to 999.9°C (-148 to 999.9°F); 1(°C/°F) outside range |
| Sampling Rate | three times per two seconds |
| Auto Power Off | 15 minutes after last operation |
| Low Battery Indication |  |
| Power Supply | 9V battery |
| Overrange | Unplug or poor contact probe will be displayed“ ----” |

4. Description


4-1. Meter Description

- | | | |
|---------------|----------------------|------------------------|
| 1-LCD Display | 6-Backlight Button | 11-USB Interface |
| 2-Up Button | 7-Datalogger Button | 12-Bracket Fixing Fole |
| 3-Down Button | 8-Data Hold Button | 13-Battery Cover |
| 4-MODE Button | 9-Calibration Button | 14-T2 Input |
| 5-SET Button | 10-Power Button | 15-T1 Input |

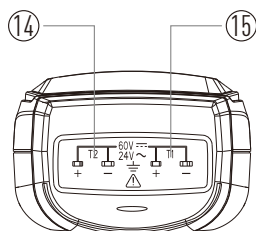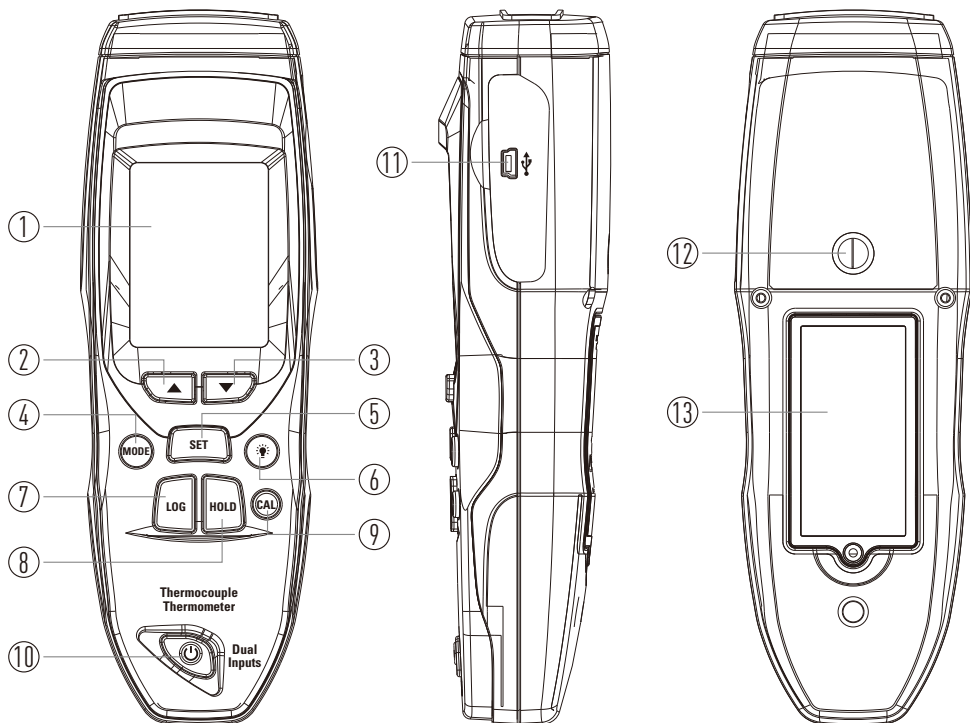

4-2.Symbols Used on LCD Display

- 1-T1 Input Type: J, K, T, E, R, S, N
- 2-Freeze The Displayed Readings
- 3-Low Battery Indication
- 4-T1 Temperature Value
- 5-Temperature unit: °C/°F/K
- 6-Max Temperature Value Icon
- 7-Min Temperature Value Icon
- 8-Average Temperature in Real Time Icon
- 9-Temperature Difference in Real Time Icon
- 10-T2 Input Type: J, K, T, E, R, S, N
- 11-T2 Temperature Value
- 12-Low Alarm Icon
- 13-High Alarm Icon
- 14-Datalogger Icon
- 15-Remaining Memory Icon
- 16-Real Time Clock (RTC)/Remaining Memory Value

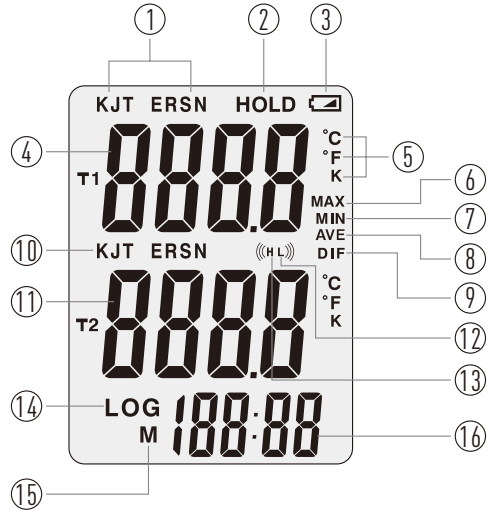

5. Operating Instructions

5-1. Temperature Measurement

- Insert the temperature probe and press the power button, there is no particular order.
- The screen will display the current measured value for T1 and T2.
- When the measured environment temperature changes, take a few minutes to stabilize readings.

Tips: After measuring high temperatures, do not touch the probe immediately, to avoid burns.

5-2. Button Operation

5-2-1. Up Button ▲

5-2-2. Down Button ▼

5-2-3. MODE Button: MAX/MIN/AVG/DIF Display.

- Continuously press the **MODE** Button, the screen will appear sequentially MAX/MIN/AVG/DIF icon.
- When there is MAX/MIN, the screen will show the Maximum/Minimum value for T1 and T2 Channel.
- When there is AVG/DIF icon, T1 will display real-time temperature for T1 channel, and T2 will display the average/difference value (the Average/Difference value are based on real-time temperature values for T1 and T2).

Note: Pressing the **MODE** Button will not display MAX/MIN/AVG/DIF icon if two probes are not inserted; Only a probe is inserted, it can only display MAX/MIN icon and appears Maximum/Minimum value for the inserted probe, but cannot show AVG/DIF icon and display Average/Difference value, another channel will show "----"; Only when two probes are inserted, the display will completely show MAX/MIN/AVG/DIF icon and the corresponding value.

Note: Simultaneously press **Up** and **Down** Button, and then recalculate the maximum and minimum values, the maximum and minimum values of the actual measured temperature will be calculated again when you press the **MODE** Button at this moment.

5-2-4. SET Button: Set up sampling rate, temperature type and temperature units.

- Press the **SET** Button, will appear flashing LOG symbol, then display section of the real time clock (RTC) will be changed to show DataLogger sampling rate, then adjust DataLogger sampling rate (1s-60min) by **Up** Button or **Down** Button.
- Press the **SET** Button again, the screen will stop flashing LOG symbol, the setting of DataLogger sampling rate is successful, then the temperature type of T1 channel will flash, then select the temperature type by **Up** Button or **Down** Button.
- Press the **SET** Button again, the temperature type of T1 channel will stop flashing LOG symbol, the setting of temperature type of T1 channel is successful, then the temperature type of T2 channel will flash, then select the temperature type by **Up** Button or **Down** Button.
- Press the **SET** Button again, the temperature type of T2 channel will stop flashing LOG symbol, the setting of temperature type of T2 channel is successful, then temperature units icon (°C/°F/K) will flash, then select temperature units by **Up** Button or **Down** Button.
- Press the **SET** Button again, then exit the setup.

Note: During setup, you can always press the **LOG** Button to start recording data; once you start recording, settings cannot be changed, if need to change, please stop data recording.

5-2-5.Backlight Button: Open or close backlight.

- The default backlight is on when open, then will be automatically off after 30s.
- Press the **Backlight** Button to open or close backlight.
- The backlight will be automatically off after 5 minutes if without any operation.
- Press the **Backlight** Button again to open backlight if needed.

5-2-6.Datalogger Button


- When the sampling rate is set to 0 second, or the data is full, press the **Datalogger** Button not start recording data, LOG symbol will flash on the screen for half a second, then disappeared.
- At the time of recording data, pressing the **Datalogger** Button will end data records for 2s.
- If data is recorded over 15 minutes without any operation, the meter will sleep, sleeping does not affect data logging.

5-2-7.Data Hold Button: Freeze current measured temperature value


- The value of maximum and minimum will not be frozen.
- Press the **Data Hold** Button again to return to normal measurement mode.

5-2-8.Calibration Button: User Calibration.

- Press **CAL** Button for 3s to come into user calibration mode of T1 channel, User calibration interface of T1 channel is as follows: The upper display shows the measured value of T1 channel, below is to show the user calibration value of T1 channel (Positive or Negative), then adjust the calibration value by **Up** Button or **Down** Button, the temperature change is 0.1°C/°F when you press each time.
- Press **CAL** Button for 3s again to come into user calibration mode of T2 channel (User calibration data of T1 has been saved), User calibration interface of T2 channel is as follows: The upper display shows the user calibration value of T2 channel (Positive or Negative), below is to show the measured value of T2 channel, then adjust the calibration value by **Up** Button or **Down** Button , the temperature change is 0.1°C/°F when you press each time.

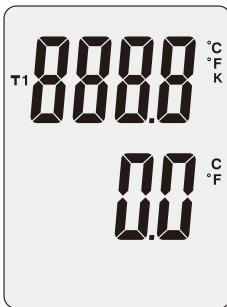

User Calibration Mode
of T1 Channel

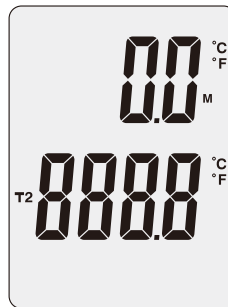

User Calibration Mode
of T2 Channel

Note: Adopting the units (°C/°F) of user calibration mode depend on the units before entering the user calibration mode, if units before calibraion is °C, the unit of user calibration is °C.

5-2-9. Power Button

- Press the **Power** Button for power On/Off.
- The meter is shutdown when data is being recorded, the recorded data is automatically saved before the shutdown, then the meter will stop the data logging function, if need to record again, then press the **Power** Button and **LOG** Button again.

5-3. High/Low Temperature Alarm

- When the measured temperature value is higher or lower than the value of High/Low temperature that set up, there will be a buzzer, meanwhile, the related icon of the high or low temperature will be displayed.
- After pressing the **HOLD** Button for one second, then pressing the **Up** Button, will turn off the alarm, it will show bELL ON or bELL OFF on the screen, and then display the current measured temperature; this function only turned off the buzzer, the screen still show the icon of high or low temperature when there is a alarm.
- Just press the **HOLD** Button and UP button again to open alarm.

5-4. Delete Datalogger

- After pressing the **HOLD** Button for one second, then press **Down** Button will delete the stored data, it will show dAtA CLR on the screen, and then display the current measured temperature.
- When press **HOLD** Button 4 seconds, still no press **Up** Button or **Down** Button, the meter will estimate that you want to press the **HOLD** Button, the measured temperature will be frozen, HOLD icon is displayed.

5-5. Auto Power Off

- Press the **Power** Button first, and then press the **MODE** Button for 1s, LCD will show APO ON or APO OFF.
- APO ON means it will be auto power off after 15 mins without any operation, APO OFF means auto power of turn off.


5-6. Remaining Memory Positions

Press the **Backlight** Button first, and then press the **MODE** Button for 1s, LCD will show remaining memory positions, it will restore temperature display after 2s.

5-7. Use of the PC Software

Insert CD into the CD-ROM, the CD will automatically run "setup.exe" to guide users to complete the installation.

6. Replacement Battery

- If the logo " "appears on the LCD display, the battery should be replaced promptly.
- Open the battery box and remove the old battery, put a new battery (9 volt battery NEDA 1604 or 6F22 or other similar batteries).
- If the thermometer is not used for a long time, please take out the battery to prevent liquid leakage.



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT



When this product has reached the end of its life it must be treated as Waste Electrical & Electronics Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

Made in China
PO Box 13362 Dublin 2
LS12 2QQ