

Fluke 2638A/05

Hydra Series III 22-Channel Data Acquisition System

Technical Data

Price-performance breakthrough in a stand-alone data acquisition system

The Fluke 2638A/05 Hydra Series III continues the Hydra Series legacy of precision, multi-channel data acquisition. The new Series III improves on Hydra's industry-leading thermocouple accuracy and adds a new dimension to how you collect and view data in a portable system.



DC measurement accuracy of 0.0024 %, basic $0.5~^{\circ}$ C thermocouple accuracy, full-color display, easy-to-use menu system and industrial safety ratings put the 2638A in a category of its own as a precision data acquisition system. The dedicated 6.5 digit digital multimeter (DMM) mode provides additional utility and value.


The 2638A/05 is a 22 channel true differential analog input data logger with the Fluke Universal Input Connector that lets you connect and disconnect any type of input to any channel, quickly and easily. Selectable inputs include dc voltage, ac voltage, resistance, thermocouple, RTD, thermistor, frequency and dc and ac current. You can also use the 2638A/05 with optional software and other Fluke data loggers to create a flexible, customized data acquisition system.



2638A/05 Hydra Series III features at a glance

- DC accuracy of 0.0024 %
- Thermocouple accuracy of 0.5 °C
- 22 universal differential isolated inputs
- On-screen color trend graphing and analysis
- Easy-to-use menu system for setup and data management
- Input types: ac V, dc V, ac I, dc I, thermocouple, PRT (2, 3, 4 w), thermistor, resistance (2-4 w), frequency
- Multi-channel real-time data display
- 6.5-digit bench DMM function for frontpanel inputs
- Monitor function for real-time viewing and charting between scans
- 20 on-board math channels
- One-button screen capture of chart or data displays
- 45 channels/second basic dc scan rate
- Internal 75,000 scan/setup file memory
- USB flash drive support
- Data security features
- CAT II 300 V input safety rated
- Supported by TQSoft and TQAero thermal validation software for enhanced data collection in regulated industries



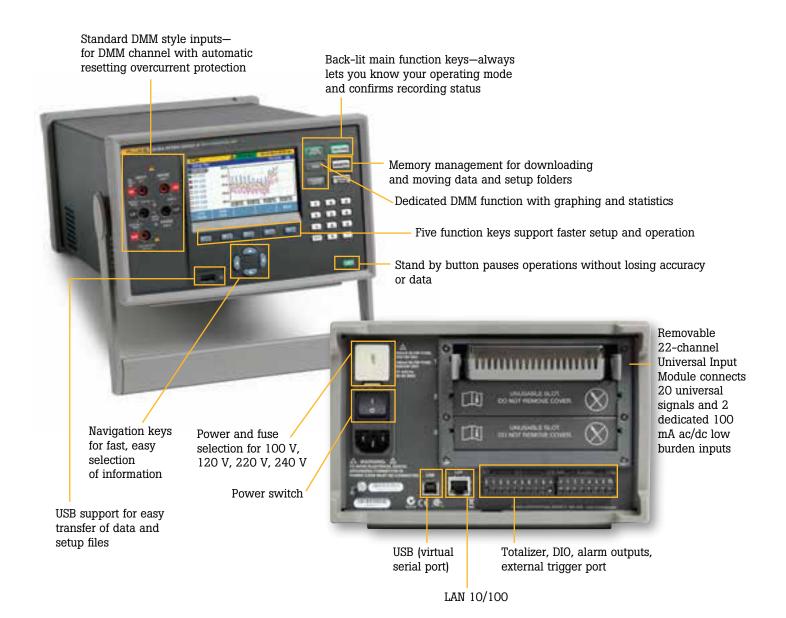


Accurate industrial thermocouple measurements

The 2638A/05 incorporates the Fluke patented Universal Input Connector to bring more accuracy to thermocouple measurements than most other instruments in its class. The Universal Input Connector supports 14 common thermocouple types. Temperature-focused menu selections make the 2638A/05 especially suitable for temperature validation applications. If you need to "zero" a large number of thermocouples to a known reference temperature

before starting a temperature profiling or validation test, the 2638A/05 will normalize all readings to your reference channel at the push of a button and store the offsets for reference in a supporting data file. If you are conducting chamber tests, heat treating tests under AMS guidelines, or validating temperature devices under 21 CFR regulations, Hydra Series III makes it that much easier to comply.



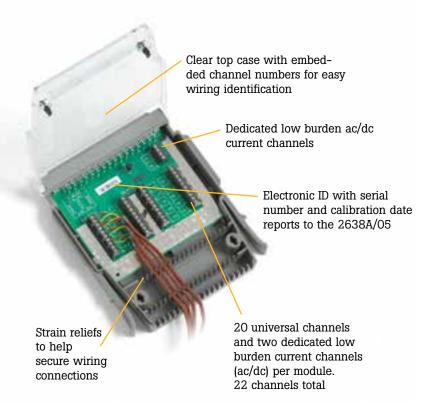

Universal Input Connector

The Universal Input Connector plugs into the slot in the 2638A/05 that contains a serviceable relay card. The Universal Input Connector has 22 input channels (20 universal inputs and 2 dedicated, low-burden input current channels). Each input connector contains a CJC (cold-junction compensation) device, which is calibrated at the factory. The calibration date and input connector serial number are programed into the input connector and are read by the 2638A/05 when installed. This information is saved in the test setup data file, which is available for review with any associated scan data from a test setup. This feature is a valuable form of traceability if you are working in a regulated industry.

Wiring a test or system setup for 20 to 60 or more channels can be time consuming. With the inexpensive plug-in Universal Input Connector, you can wire your system once, quickly disconnect the connector from your Hydra, then reconnect the Hydra to another input connector for use in a different area.

Other data loggers require you to wire your inputs directly to an expensive "plug-in" active component signal conditioning module. If you need your instrument for another test at another location, you must remove your wiring or use another expensive plug-in signal conditioning module. With Hydra Series III, all your signal conditioning is inside the mainframe, not in your input connector.

Using multiple low-cost Universal Input Connectors gives you the flexibility to leave your input connector at the test site, completely wired, and ready to use. When you need data from that site, simply "plug in" and load your saved setup file. It's that simple!



CHANNEL SET	UP	02-14-26	13 04/15 pm
Setup File:		Mc	dule: 🚃
☐ Ch 001	Channel Status:	ON	
Ch 101	Function:	Thermocouple	-K
Ch 102	Label:		
Ch 103	Alarm 1:	OFF	
Ch 104	Alarm 2:	OFF	
Ch 105	Mx+B:	OFF	
Ch 106			
□ Ch 107			
	/erify Copy nannel Channe	Test Setup	Save

Graphical color display with easy-to-use menus

Never get lost again in a complex menu tree while configuring channels or setting up a test. The large, full color, thin film diode (TFD) display enables the Hydra Series III to display comprehensive easy-to-understand data and easy menu navigation.


Back-lighted function keys quickly confirm the active menu selection. The "Record" key illuminates to indicate when the 2638A is recording data in scan, monitor or DMM mode. You always have visible confirmation when your data is being recorded.

Copy-and-paste channel functions make repetitive channel setups a simple task. Top-ofscreen menu bar headings always let you know where you are in the setup process.

View your data with the push of a button. Page through all channel data and alarms in a quick view mode or scroll through channels and channel statistics individually. Statistics include rate of change, min, max, standard deviation, average, sample size and peak-to-peak information.





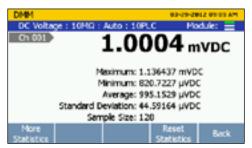

Real-time data charting with historical review.

Dedicated DMM functions.

Real-time data charting with historical review

Chart the real-time data of up to four channels at once. Simply select your channels and view real time charts of your measurements. The chart will auto scale for best fit of the displayed values. Zoom in or out to view areas of interest with the push of a button. A history mode enables you to scroll through previously collected data within the scan file...all without a PC and expensive charting programs.

Language support

All displayed text in the menus and data display area are translated to eight languages. You can change the language under the instrument setup area with the push of a button. French, Spanish, Japanese, German, Korean, English, Portuguese, Chinese and Russian are all supported languages in the 2638A/05.

Screen capture function

With one key push on the front panel, you can capture the screen contents of the 2638A/05 directly to the USB drive in .jpg file format. Capture trend chart results or data displays for reports or just closer review.

Two alarms per channel

Each channel can be set for two alarm points: High-High, High-Low or Low-Low, in any combination. The 2638A/05 then compares the set points during each scan. An out-of-range value is reported on the main display and data files. You can also assign any alarm point to any of six TTL alarm outputs.

Math channels

Each channel measurement can be set to scale and record your measurement using mx+b gain and offset calculations that are available during your channel setup menu. In addition, each 2638A/05 mainframe has 20 internal math channels with alarm settings for more complex calculations that record results to your data file during each scan. Each channel result can be used as a variable in another math channel calculation.

DMM mode adds functionality and value

The Hydra Series III is based on a 6.5 digit (22-bit) precision digital multimeter measurement engine with exceptional measurement quality and resolution-so when you are not using your Hydra to collect multi-channel data, you can use it as a precision digital multimeter. Front-panel "DMMstyle" input jacks and dedicated DMM menu selections enable you to measure dc voltage, dc resistance, ac voltage, ac resistance, Ohms, frequency, and temperature (thermocouples, RTDs and thermistors). Record DMM measurements to a separate DMM data file for later viewing. The 2638A/05 also displays measurement statistics and graphs measurements right on the main display.

USB and internal memory

The Hydra Series III features 20 mb on-board memory for storing over 75,000 data records and configuration files. In addition to this large on-board memory, a built-in USB port is available to collect and store large files up to 32 GB directly to a USB flash drive. An on-board file management menu makes moving data files or configuration files from internal or USB memory to your PC easy.



Memory management

The main panel memory key opens a simple menu for managing data files and setup files. If you want to load a previously saved setup file for a test, simply select your file from either internal memory or from a USB drive and you are ready to start scanning. You can easily move stored internal data to a USB for PC analysis or move setup files to another 2638A/05. With Hydra Series III you have easy access to data without the need for a direct PC connection.

To help safeguard your test data in the case of a power outage, the 2638A/05 has a menu selection to resume scanning in the same configuration immediately when power is restored. It is just another way the 2638A/05 works with and protects your data.

Flexible triggers and resolution

To begin a scan, you have several options that can be set in your test setup menu:

- · External trigger
- Remote SCPI command
- Alarm trigger
- Time interval trigger
- Manual trigger initiated from the front panel

Measurement resolution is at your control with the 2638A/05. You can choose between standard settings of Fast, Medium or Slow (4.5, 5.5, 6.5 digits) for the resolution you need. You can also select custom measurement speeds on individual channels to get the accuracy and resolution to suit your requirements.

Totalizer

A totalizer input located on the rear panel provides a simple counter that records to the data file on every scan. The totalizer count can accumulate up to 1.048.575 counts and be reset from the front panel or remote command.

Channel statistics

Each channel's measurement statistics can be viewed at any time. During scanning, monitoring or in DMM mode, you have rate-of-change (per minute and per second), standard deviation, minimum, maximum, peak-to-peak, and average-all available at the touch of a button.

Connectivity

USB (virtual serial port) and LAN interface connections are available for easy connection to your company network or direct to you PC. Use optional Fluke DAQ application software for the 2638A Series or develop your own interface with the standard SCPI command set, or use our Lab View driver or Indusoft Web Studio to support your specific application needs.


Category II international safety ratings

The Hydra Series III is the only general purpose portable data acquisition system with an IEC Category II safety rating to help protect you and your operators when making real-world measurements on machinery in industrial areas. Other data loggers that are not clearly rated for these types of category measurements should be reviewed before being used for industrial measurement. Fluke takes your safety and your measurements seriously.

A note on measurement safety

An instrument's safety ratings should always be reviewed before performing any electrical measurement. Data loggers should not be an exception to that rule.

It is sometimes mistakenly assumed that a high voltage input specification on a data logger makes it safe to use on or near industrial equipment or to monitor mains power. This is not always the case. The Fluke Hydra Series III was designed specifically to meet stringent CAT II safety standards.

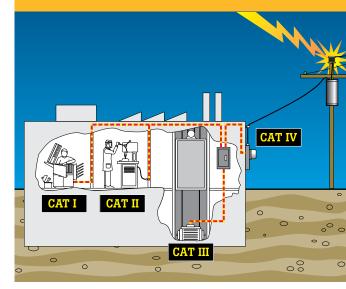



Data security

If you use your 2638A/05 in a regulated industry, you will appreciate the data traceability feature option in the instrument setup menu. This two level (administrator/authorized user) system allows an administrator to assign up to five authorized users. The system provides an authenticated record of the operator of any recorded data. Both setup files and resulting data files contain the authorized user ID and timestamp. Guest users may use an existing secured setup file but cannot make changes, and any resulting data file carries the nontraceable label of "Guest."

Calibration

The 2638A/05 comes with a Fluke statement of manufacturing calibration practices. Accredited calibration certificates are available when specified at the time of order.

Calibration of the 2638A/05 is straightforward and only requires a password to access the calibration menu from the front panel. The 2638A/05 can be calibrated manually following the internal menu or by using automated procedures with Fluke Calibration MET/CAL® Calibration Management Software.

Built-in relay maintenance counter

The key to the isolation and accuracy of the 2638A in part comes from the use of high-quality switching relays inside the unit. Because these relays do deteriorate with extended use, the 2638A has a maximum relay counter for each installed relay board. This will assist a user in anticipating when replacing the relay board may be advisable.

Need a large system data collection network? No problem!

Need a 200 or 2.000 channel system? Optional Fluke DAO application software (2680A-APSW) makes it easy to seamlessly collect data from multiple channels and mainframes.

If you want to build your own system, use our LabView drivers available on the NI developers web site. To create a customized, graphical process-and-communication-interface with Fluke data acquisition products.

FDA 21 CFR Part 11 and AMS 2750 compliant data collection

Thermal validation software from TOSolutions supports the Fluke 2638A for enhanced data collection and reporting required in regulated industries. TQSoft assists with compliance with the United States Food and Drug Administration CFR Part 11 regulations on electronic records and signatures for incubation, sterilization, freezing, drying and temperature mapping validation applications in pharmaceutical and biomedical industries. It also assists with compliance to European standards for sterilization. decontamination, and disinfecting (EN554, EN285, EN15883, HTM2010, HTM2030), ISO 15833 requirements for washer-disinfectors, and ISO 17025 competence requirements for testing and calibration laboratories. The TOSoft application has been audited by major pharmaceutical companies and its quality documentation has passed FDA audits.

TOAero assists with compliance to National Aerospace and Defense Contractors Accreditation Program (NADCAP) and SAE International AMS 2750 guidelines covering industrial heat treating applications in aerospace and transportation industries. It supports heat treatment processes validation by Temperature Uniformity Survey (TUS) and System Accuracy Test (SAT) procedures required by AMS 2750.



Need a large system data collection network? No problem!

Service and CarePlans

The 2638A Hydra Series III ships with a standard one-year warranty. Extended service plans for up to four additional years of coverage (Silver CarePlans) and annual calibration and repair services with expedited handling (Gold Care-Plans) are also available in most countries



Measurement specifications

Accuracy specifications generally are valid for 6.5 digit resolution mode (unless otherwise noted) after a minimum of one-hour warm-up, and within an operating temperature range of 18 $^{\circ}\text{C}$ to 28 $^{\circ}\text{C}.$ Derating applies with a fast sample rate and for operating temperatures outside the limited range. Twenty-four-hour

specifications are relative to calibration standards and assume a controlled electromagnetic environment per EN 61326. The confidence level for accuracy specifications is 95 % within one year of calibration (unless otherwise noted).

Scan rate	Fast	45 channels per second max (0.03 seconds per channel, depending on function and range)
	Medium	16 channels per second (0.1 seconds per channel)
	Slow	2 channels per second (0.5 seconds per channel)
	Custom	Selectable from 0.2 NPLC to 200 NPLC
Display resolution		4.5 to 6.5 digits, depending on function and sample rate

Specifications

DC voltage

Maximum input	300 V
Common mode rejection	140 db at 50 Hz or 60 Hz \pm 0.1 % (1k Ω imbalance)
Normal mode rejection	60 db for NPLC of 1 or greater and power-line frequency ±0.1 %
Measurement method	Multi-ramp A/D
A/D linearity	2 ppm of measurement + 1 ppm of range
Input bias current	30 pA at 25 °C

DC voltage input characteristics

Range	Resolution	Mea	Measurement rate/Resolution			
		Fast 4.5 digits	Medium 5.5 digits	Slow 6.5 digits		
100 mV	100.0000 mV	10 μV	1 μV	0.1 μV	10 MΩ or >10 GΩ ^[1]	
1 V	1.000000 V	100 μV	10 μV	1 μV	10 MΩ or >10 GΩ ^[1]	
10 V	10.00000 V	1 mV	100 μV	10 μV	10 MΩ or >10 GΩ ^[1]	
100 V	100.0000 V	10 mV	1 mV	100 μV	10 MΩ ±1%	
300 V	300.000 V	100 mV	10 mV	1 mV	10 MΩ ±1%	
[1] 10 MΩ is default in	put impedance.					

DC voltage accuracyAccuracy is given as ± (% measurement + % of range).

Range	24 hour (23 ±1 °C)	90 days (23 ±5 °C)	1 year (23 ±5 °C)	T.C./ °C outside 18 °C to 28 °C
100 mV	0.0025 + 0.003	0.0025 + 0.0035	0.0037 + 0.0035	0.0005 + 0.0005
1 V	0.0018 + 0.0006	0.0018 + 0.0007	0.0025 + 0.0007	0.0005 + 0.0001
10 V	0.0013 + 0.0004	0.0018 + 0.0005	0.0024 + 0.0005	0.0005 + 0.0001
100 V	0.0018 + 0.0006	0.0027 + 0.0006	0.0038 + 0.0006	0.0005 + 0.0001
300 V	0.0018 + 0.002	0.0031 + 0.002	0.0041 + 0.002	0.0005 + 0.0003



AC voltage AC voltage specifications are for ac sine wave signals >5 % of range. For inputs from 1 % to 5 % of range and <50 kHz, add an additional error of 0.1 % of range.

Maximum input Front panel: 300 V rms or 425 V peak; Rear inputs: 150 V CAT II; 250 V peak		Front panel: 300 V rms or 425 V peak; Rear inputs: 150 V CAT II; 250 V peak
Measurement	Measurement method AC-coupled true-rms. Measures the ac component of input with up to 300 V dc bias on any range	
AC filter Slow		20 Hz
bandwidth Fast		200 Hz
Maximum crest factor		5:1 at full scale

AC voltage input characteristics

Range	Resolution	Mea	Input impedance		
		Fast 4.5 digits	Medium 5.5 digits	Slow 6.5 digits	
100 mV	100.0000 mV	10 μV	1 μV	0.1 μV	1 MΩ ±2 % shunted
1 V	1.000000 V	100 μV	10 μV	1 μV	by 150 pF
10 V	10.00000 V	1 mV	100 μV	10 μV	
100 V	100.0000 V	10 mV	1 mV	100 μV	
300 V	300.000 V	100 mV	10 mV	1 mV	

AC voltage accuracy Accuracy is given as \pm (% measurement + % of range).

Range	Frequency	24 hour (23 ±1 °C)	90 days (23 ±5 °C)	1 year (23 ±5 °C)	T.C./°C outside 18 °C to 28 °C
100 mV	20 Hz to 20 kHz	0.1 + 0.05	0.11 + 0.05	0.11 + 0.05	0.01 + 0.005
	20 Hz to 50 kHz	0.2 + 0.05	0.22 + 0.05	0.22 + 0.05	0.01 + 0.005
	50 Hz to 100 kHz	0.55 + 0.08	0.6 + 0.08	0.6 + 0.08	0.05 + 0.01
1 V	20 Hz to 20 kHz	0.1 + 0.05	0.11 + 0.05	0.11 + 0.05	0.01 + 0.005
	20 Hz to 50 kHz	0.2 + 0.05	0.22 + 0.05	0.22 + 0.05	0.01 + 0.005
	50 Hz to 100 kHz	0.55 + 0.08	0.6 + 0.08	0.6 + 0.08	0.05 + 0.01
10 V	20 Hz to 20k Hz	0.1 + 0.05	0.11 + 0.05	0.11 + 0.05	0.01 + 0.005
	20 Hz to 50 kHz	0.2 + 0.05	0.22 + 0.05	0.22 + 0.05	0.01 + 0.005
	50 Hz to 100 kHz	0.55 + 0.08	0.6 + 0.08	0.6 + 0.08	0.05 + 0.01
100 V	20 Hz to 20 kHz	0.1 + 0.05	0.11 + 0.05	0.11 + 0.05	0.01 + 0.005
	20 Hz to 50 kHz	0.2 + 0.05	0.22 + 0.05	0.22 + 0.05	0.01 + 0.005
	50 Hz to 100 kHz	0.55 + 0.08	0.6 + 0.08	0.6 + 0.08	0.05 + 0.01
300 V	20 Hz to 20 kHz	0.1 + 0.05	0.11 + 0.05	0.11 + 0.05	0.01 + 0.005
	20 Hz to 50 kHz	0.2 + 0.05	0.22 + 0.05	0.22 + 0.05	0.01 + 0.005
	50 Hz to 100 kHz	0.55 + 0.27	0.6 + 0.27	0.6 + 0.27	0.05 + 0.03

DC current

Input protection 0.15 A /600 V resettable PTC	
Common mode rejection 140 db at 50 Hz or 60 Hz ±0.1 % (1 kΩ imbalance)	
Normal mode rejection	60 db for NPLC of 1 or greater and power line frequency ±0.1 %

DC current input characteristics

Range	Resolution	Meas	Measurement rate/resolution			Burden voltage
		Fast 4.5 digits	Medium 5.5 digits	Slow 6.5 digits	(ohms)	
100 μΑ	100.0000 μΑ	10 nA	1 nA	0.1 nA	lkΩ	<1 mV
1 mA	1.000000 mA	100 nA	10 nA	1 nA	1kΩ	<1 mV
10 mA	10.00000 mA	1 μΑ	100 nA	10 nA	10 Ω	<1 mV
100 mA	100.0000 mA	10 μΑ	1 μΑ	100 nA	10 Ω	<1 mV



 $\label{eq:current} \begin{array}{l} \textbf{DC current accuracy} \\ \text{Accuracy is given as \pm (% measurement + % of range)}. \end{array}$

Range	24 hour (23 ±1 °C)	90 days (23 ±5 °C)	1 year (23 ±5 °C)	T.C./°C outside 18 °C to 28 °C
100 μΑ	0.005 + 0.003	0.006 + 0.0035	0.007 + 0.0035	0.002 + 0.001
1 mA	0.005 + 0.001	0.006 + 0.0011	0.007 + 0.0011	0.002 + 0.001
10 mA	0.005 + 0.003	0.006 + 0.0035	0.007 + 0.0035	0.002 + 0.001
100 mA	0.005 + 0.001	0.015 + 0.0035	0.015 + 0.0035	0.002 + 0.001

Thermocouple temperature accuracy

Type	Temperature range	Temperature	Accuracy		
			Internal CJC	External CJC	
K	-270 °C to 1372 °C	-200 °C	1.60 °C	0.42 °C	
		0 ℃	0.62 °C	0.15 °C	
		1000 °C	0.64 °C	0.22 °C	
Т	-270 °C to 400 °C	-200 °C	1.60 °C	0.40 °C	
		0 °C	0.65 °C	0.15 °C	
		200 °C	0.48 °C	0.12 °C	
		400 °C	0.41 °C	0.12 °C	
R	-50 °C to 1768 °C	0 °C	1.28 °C	1.13 °C	
		300 °C	0.71 °C	0.63 °C	
		1200 °C	0.54 °C	0.49 °C	
		1600 °C	0.56 °C	0.51 °C	
S	-50 °C to 1768 °C	0 ℃	1.26 °C	1.11 °C	
_		300 °C	0.76 °C	0.67 °C	
		1200 °C	0.62 °C	0.56 °C	
		1600 °C	0.65 °C	0.59 °C	
J	-210 °C to 1200 °C	-200 °C	1.42 °C	0.30 °C	
-		0 ℃	0.61 °C	0.12 °C	
		1000 °C	0.53 °C	0.16 °C	
N	-270 °C to 1300 °C	-200 °C	1.69 °C	0.63 °C	
		0 ℃	0.64 °C	0.23 °C	
		500 °C	0.45 °C	0.18 °C	
		1000 °C	0.46 °C	0.21 °C	
E	-270 °C to 1000 °C	-200 °C	1.43 °C	0.26 °C	
ш	270 0 10 1000 0	0 ℃	0.61 °C	0.10 °C	
		300 °C	0.46 °C	0.09 °C	
		700 °C	0.46 °C	0.12 °C	
В	100 °C to 1820 °C	300 °C	1.98 °C	1.98 °C	
Б	100 0 10 1020 0	600 °C	1.03 °C	1.03 °C	
	-	1200 °C	0.62 °C	0.62 °C	
		1600 °C	0.57 °C	0.57 °C	
C	0 °C to 2315 °C	000°C	0.55 °C	0.34 °C	
C	0 0 10 23 13 0	1200 °C	0.64 °C	0.42 °C	
		2000 °C	0.95 °C	0.42 °C	
D	0 °C to 2315 °C	600 °C	0.45 °C	0.33 °C	
D	0 0 10 23 13 0	1200 °C	0.43 °C	0.38 °C	
		2000 °C	0.51 °C	0.58 °C	
G	0 °C to 2315 °C	600 °C	0.73 °C	0.36 °C	
G	0 0 0 2315 0	1200 °C	0.34 °C	0.36 °C	
		2000 °C	0.54 °C	0.50 °C	
L	-200 °C to 900 °C		0.51 C	0.20 °C	
ь	-200 0 10 900 0	0°C	0.99 °C 0.62 °C	0.20 °C 0.12 °C	
7.4	EO °C += 1410 °C	0 °C	0.49 °C 0.64 °C	0.13 °C 0.16 °C	
M	-50 °C to 1410 °C				
		500 °C	0.51 °C	0.16 °C	
TT	200 %0 +- 000 %0	1000 °C	0.42 °C	0.15 °C	
Ū	-200 °C to 600 °C	-200 °C	1.49 °C	0.38 °C	
		0 °C	0.63 °C	0.15 °C	
TAT	0.90 +- 0015.00	400 °C	0.40 °C	0.12 °C	
W	0 °C to 2315 °C	000 °C	0.37 °C	0.36 °C	
		1200 °C	0.34 °C	0.34 °C	
		2000 °C	0.51 °C	0.50 °C	



Resistance input characteristics

Range	Resolution	Measurement Rate / Resolution			Source current
		Fast 4.5 digits	Medium 5.5 digits	Slow 6.5 digits	
100 Ω	100.0000 Ω	10 mΩ	1 mΩ	0.1 mΩ	1 mA / 4 V
1 kΩ	1.000000 kΩ	100 mΩ	10 mΩ	1 mΩ	1 mA / 4 V
10 kΩ	10.00000 kΩ	1 Ω	100 mΩ	10 mΩ	100 μA / 6 V
100 kΩ	100.0000 kΩ	10 Ω	1 Ω	100 mΩ	100 μA / 12 V
1 MΩ	1.000000 ΜΩ	100 Ω	10 Ω	1 Ω	10 μA / 12 V
10 ΜΩ	10.00000 ΜΩ	1 kΩ	100 Ω	10 Ω	1 μA / 12 V
100 ΜΩ	100.0000 ΜΩ	10 kΩ	1 kΩ	100 Ω	0.1 μA / 12 V

Resistance accuracy

Accuracy is given as \pm (% measurement + % of range).

Range	24 hour (23 ±1 °C)	90 days (23 ±5 °C)	1 year (23 ±5 °C)	T.C./ °C outside 18 °C to 28 °C
100 Ω	0.003 + 0.003	0.008 + 0.004	0.01 + 0.004	0.0006 + 0.0005
1 kΩ	0.002 + 0.0005	0.008 + 0.001	0.01 + 0.001	0.0006 + 0.0001
10 kΩ	0.002 + 0.0005	0.008 + 0.001	0.01 + 0.001	0.0006 + 0.0001
100 kΩ	0.002 + 0.0005	0.008 + 0.001	0.01 + 0.001	0.0006 + 0.0001
1 MΩ	0.002 + 0.001	0.008 + 0.001	0.01 + 0.001	0.001 + 0.0002
10 ΜΩ	0.015 + 0.001	0.02 + 0.001	0.04 + 0.001	0.003 + 0.0004
100 ΜΩ	0.3 + 0.01	0.8 + 0.01	0.8 + 0.01	0.15 + 0.002

RTD temperature accuracy (4 wire)

Temperature	Accuracy	Fast sample rate (NPLC < 10)	T.C./ °C outside 18 °C to 28 °C
−200 °C	0.015 °C	add 0.02 °C	0.0021 °C
0 °C	0.02 °C	add 0.02 °C	0.0023 °C
300 °C	0.04 °C	add 0.02 °C	0.0028 °C
00° ℃	0.06 °C	add 0.02 °C	0.0033 °C

Thermistor temperature accuracy (4 wire)

•	<i>y</i>		
Temperature	Accuracy 2.2 kΩ thermistor	Accuracy $5 \text{ k}\Omega$ thermistor	Accuracy 10 kΩ thermistor
-40 °C	0.002 °C	0.003 °C	0.003 °C
0 °C	0.004 °C	0.003 °C	0.003 °C
25 °C	0.01 °C	0.005 °C	0.005 °C
50 °C	0.012 °C	0.007 °C	0.009 °C
100 °C	0.08 °C	0.035 °C	0.017 °C
150 °C	0.35 °C	0.15 °C	0.06 °C

Frequency

Range	Frequency	24 hour (23 ±1 °C)	90 days (23 ±5 °C)	1 year (23 ±5 °C)	T.C./ °C outside 18 °C to 28 °C
100 mV to 300 V	20 Hz to 40 Hz	0.03	0.03	0.03	0.001
	40 Hz to 1 MHz	0.006	0.01	0.01	0.001

General specifications

Power

 $100\,V$ to $264\,V\,$ in 4 power model selections (100 V, 120 V, 220 V, 240 V) Voltage:

47 Hz to 440 Hz Frequency:

(automatically sensed when turned on) 36 V A peak (24 W average)

Power consumption:

Communication

10/100 Mb TCPIP DHC Remote commands: SCPI command set

Internal memory 75,000 scans 1,000 setup files

File security

Dual level, Administrator, four secure users, Guest status

Alarm outputs

6 TTL alarm outputs—assignable to one or multiple channels

Alarm setpoints

2 assignable alarm setpoints/channel, Hi Lo, Hi Hi, Lo Lo

Language menus

English, Chinese, French, German, Japanese, Korean, Portuguese,

Russian and Spanish

Environment

Temperature

Operating: 0 °C to 50 °C Storage: 20 °C to 70 °C

Warm-up: One hour to full uncertainty specifications

Relative humidity (non-condensing)

Operating: 0 °C to 28 °C <90 %

28 °C to 40 °C < 75 % 40 °C to 50 °C < 50 %

Storage: 20 °C to 70 °C<95 %

Physical Weight:

6 kg (13.2 lbs)

Dimensions: 150 mm x 285 mm x 385 mm

(5.91 in x 11.22 in x 15.16 in

Standard rack height: 3 U



Ordering Information

Models

2638A/05 22-Channel Data Acquisition Unit/Data Logger: 20 Universal Channels

includes one relay board (2638A-RLY) and one (2638A-100) connector

What comes in the box?

Each 2638A/05 is shipped with one installed relay board and one Universal Input Connector, test leads, product manual, safety information and an evaluation copy of 2680A-APSW software on CD, power cord, screwdriver, and Statement of calibration practices.

Accessories

2638A-100 Extra Universal Input Module for 2638A

2638A-RLY Extra Relay Board for 2638A and 2638A/05 (Replacement)

Y2638S 19-Inch Rackmount, Single Mounting, 2638A

Y2638D 19-Inch Rackmount, Dual Mounting, 2638A

2638A-101 10 Ohm Shunt Resistors (Quantity 10 each) 100 mA max, 0.05 %

2638A-1GB 1 GB USB Flash Memory

2638A/CASE 2638A Transit Case

Options

Accredited Calibration Certificate 17025: add option/C to model

2680A-APSW Fluke DAQ 6.0 Application Software for 2638A and 2638A/05

TQSOFT-IQ/OQ Thermal Validation Software

TQAERO Furnace Validation Software



Fluke. Keeping your world up and running.®

Fluke Corporation

PO Box 9090, Everett, WA 98206 U.S.A.

Fluke Europe B.V. PO Box 1186, 5602 BD

Eindhoven, The Netherlands

For more information call:

In the U.S.A. (877) 355-3225 or Fax (425) 446-5116 In Europe/M-East/Africa +31 (0) 40 2675 200 or Fax +31 (0) 40 2675 222 In Canada (800)-36-FLUKE or Fax (905) 890-6866

From other countries +1 (425) 446-5500 or

Fax +1 (425) 446-5116 Web access: http://www.fluke.com

©2016 Fluke Corporation. Specifications subject to change without notice. Printed in U.S.A. 4/2016 6006626a-en

Pub-ID 12103-eng

Modification of this document is not permitted without written permission from Fluke Corporation.