



FLOW



TEMPERATURE



HUMIDITY



CONDUCTIVITY

Out of Liquid Evaluation Kit

Thermal Mass Flow Evaluation Kit

Only for evaluation purposes




INNOVATIVE SENSOR TECHNOLOGY

Benefits & Characteristics

- Single supply 5 V_{DC}
- Suitable for aggressive liquids
- No contact between sensor and liquid
- Adjustable by customer

Illustration¹⁾

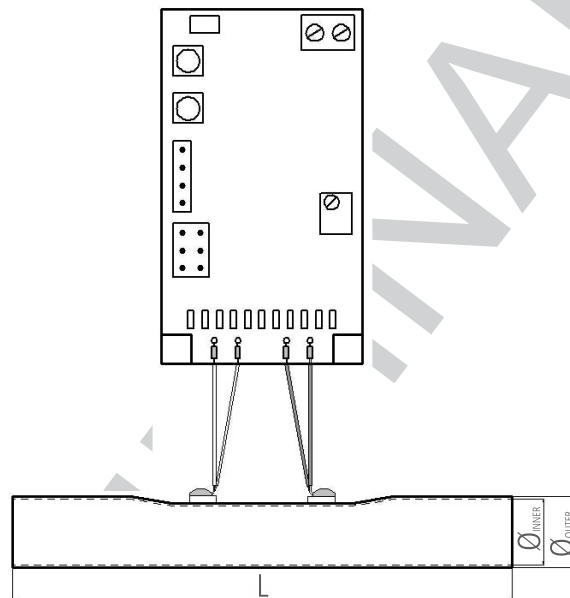

1) For actual size, see dimensions

Technical Data

Tube dimensions (L x Ø _{OUTER} x (Ø _{INNER})) in mm):	40 x 4 x (3.8)
PCB dimensions (L x W x H in mm):	25 x 58 x 12
Operating measuring range:	0 ml/min to 3000 ml/min (4 m/s)
Response time (t ₉₀):	< 300 ms (at step from 0 to 1000 ml/min)
Warm up time:	< 30 s
Connection (PCB to tube):	Cu/Ag-wire, PTFE insulated, AWG 30/19, 50 mm
Heater:	R _H (0 °C) = 50 Ω ± 1 %
Temperature sensor:	R _S (0 °C) = 1000 Ω ± 1 %
Connection (module):	Screw terminal
Supply voltage:	5 V _{DC} ± 5 %
Current consumption:	1.5 A (maximal)
Analogue output, non linear	0 V _{DC} to < 5.0 V _{DC}
Tube material:	Stainless steel



FLOW



TEMPERATURE



HUMIDITY



CONDUCTIVITY

Out of Liquid Evaluation Kit


Thermal Mass Flow Evaluation Kit

Only for evaluation purposes



INNOVATIVE SENSOR TECHNOLOGY

Adjustment Procedure (if necessary)

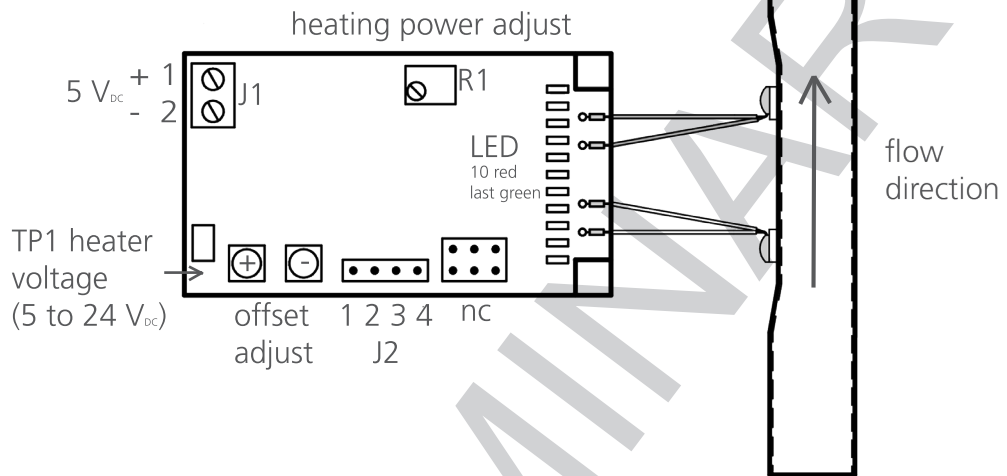

J1	
Pin 1	Pin 2
$V_{DD} = 5.0 V_{DC}$ (regulated) minimum 1.5 A	GND

J2			
Pin 1	Pin 2	Pin 3	Pin 4
GND	analog out (non-linear flow signal 0 to $< 5 V_{DC}$)		

1. power up the module
2. start pump to fill up the system (tube) with liquid
3. wait until output signal is stable (about 30 s)
4. adjust potentiometer R1 to a heater voltage of about 8 to 10 V_{DC} at TP1
5. apply a known flow (for example 200 ml/min)
6. measure analog output voltage at J2 Pin2 (should be in the range of 2.0 to 2.5 V_{DC} at 200 ml/min)
7. adjust R1 for desired output voltage
8. stop flow
9. check if analog output voltage at J2 Pin2 is $< 0.1 V_{DC}$
10. if not, push the offset buttons repeatedly to adjust output voltage and LED's so only the green LED is ON and voltage is below 0.1 V_{DC}
11. apply flow again and check output voltage
12. this output signal is the non-linearized flow signal



FLOW



TEMPERATURE



HUMIDITY



CONDUCTIVITY

Out of Liquid Evaluation Kit


Thermal Mass Flow Evaluation Kit

Only for evaluation purposes



INNOVATIVE SENSOR TECHNOLOGY

Typical Flow Curve (water)

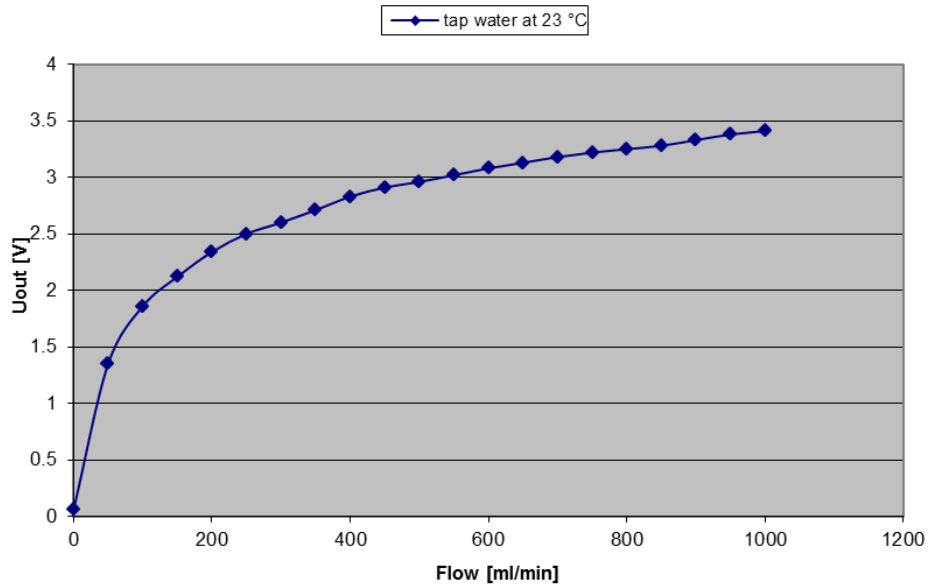

Order Information

Order code	OOL Demo Unit V2.0 160.00005
Order code	P1K0/050.232.2K.C.050.M.U.S 310.00819

Additional Documents

Datasheet:	Document name: DFOOL_E
------------	---------------------------



INNOVATIVE SENSOR TECHNOLOGY

Innovative Sensor Technology IST AG, Stegrütistrasse 14, CH-9642 Ebnat-Kappel, Switzerland,
 Phone: +41 (0) 71 992 01 00 | Fax: +41 (0) 71 992 01 99 | E-mail: info@ist-ag.com | Web: www.ist-ag.com



All mechanical dimensions are valid at 25 °C ambient temperature, if not differently indicated • All data except the mechanical dimensions only have information purposes and are not to be understood as assured characteristics • Technical changes without previous announcement as well as mistakes reserved • The information on this data sheet was examined carefully and will be accepted as correct; No liability in case of mistakes • Load with extreme values during a longer period can affect the reliability • The material contained herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner • Typing errors and mistakes reserved • Product specifications are subject to change without notice • All rights reserved