# Cree<sup>®</sup> XLamp<sup>®</sup> CXA2530 LED



#### **PRODUCT DESCRIPTION**

TheXLamp<sup>®</sup>CXA2530LEDarrayexpands Cree's family of high-flux, multi-die arrays, offering high performance in an easy-to-use platform. With XLamp LED lighting-class reliability, the CXA2530's uniform emitting surface enables both directional and non-directional lighting applications and luminaire designs. Available in 2-step and 4-step color consistency, and featuring a 19-mm optical source, the CXA2530 brings new levels of flux and efficacy to this form factor.

#### The CX Family LED Design Guide

provides basic information on the requirements to use the CXA2530 LED successfully in luminaire designs.

## **FEATURES**

- Available in 4-step, 3-step and 2-step • EasyWhite® bins at 2700 K, 3000 K, 3500 K, 4000 K & 5000 K CCT and 4-step EasyWhite bins at 5700 K & 6500 K CCT
- Available in ANSI white bins at 4000 K, 5000 K, 5700 K & 6500 K CCT
- Available in 70-, 80-, 90- and • 93-minimum CRI options
- Forward voltage option: 36-V class
- 85 °C binning and characterization •
- Maximum drive current: 1600 mA •
- 115° viewing angle, uniform chromaticity profile
- Top-side solder connections •
- Thermocouple attach point •
- NEMA SSL-3 2011 standard flux bins
- RoHS and REACh compliant
- UL<sup>®</sup> recognized component (E349212)

F

#### **TABLE OF CONTENTS**

| Characteristics                        | 2  |
|--|----|
| Operating Limits                       | 2  |
| Flux Characteristics, EasyWhite® Order |    |
| Codes and Bins                         | 3  |
| Flux Characteristics, ANSI White Order |    |
| Codes and Bins                         | 6  |
| Relative Spectral Power Distribution   | 7  |
| Electrical Characteristics             | 7  |
| Relative Luminous Flux vs. Current     | 8  |
| Typical Spatial Distribution           | 9  |
| Performance Groups - Brightness        | 9  |
| Performance Groups - Chromaticity      | 10 |
| Cree EasyWhite® Bins Plotted on the    |    |
| 1931 CIE Color Space                   | 13 |
| Cree ANSI White Bins Plotted on the    |    |
| 1931 CIE Color Space                   | 13 |
| Bin and Order Code Formats             | 14 |
| Mechanical Dimensions                  | 14 |
| Thermal Design                         | 15 |
| Notes                                  | 16 |
| Packaging                              | 17 |

Copyright © 2012-2017 Cree, Inc. All rights reserved. The information in this document is subject to change without notice. Cree®, XLamp® and EasyWhite® are registered trademarks and the Cree logo is a trademark of Cree, Inc. UL® and the UR logo are registered trademarks of UL LLC.


## **CHARACTERISTICS**

| Characteristics                           | Unit    | Minimum | Typical | Maximum |
|---|---------|---------|---------|---------|
| Viewing angle (FWHM)                      | degrees |         | 115     |         |
| ESD classification (HBM per Mil-Std-883D) | V       |         |         | 8000    |
| DC forward current                        | mA      |         |         | 1600*   |
| Reverse current                           | mA      |         |         | 0.1     |
| Forward voltage (@ 800 mA, 85 °C)         | V       |         | 36.4    |         |
| Forward voltage (@ 800 mA, 25 °C)         | V       |         |         | 42      |

\* Refer to the Operating Limits section.

## **OPERATING LIMITS**

The maximum current rating of the CXA2530 is dependent on the case temperature (Tc) when the LED has reached thermal equilibrium under steady-state operation. The graph shown below assumes that the system design employs good thermal management (thermal interface material and heat sink) and may vary when poor thermal management is employed. Please refer to the Mechanical Dimensions section on page 14 for the location of the Tc measurement point.

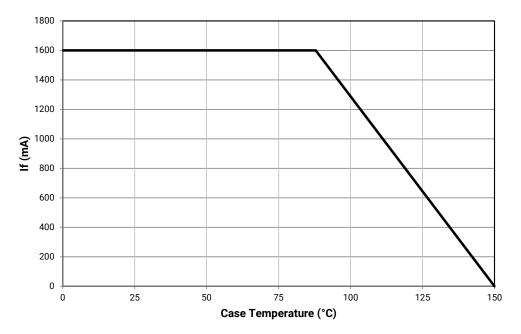



## FLUX CHARACTERISTICS, EASYWHITE® ORDER CODES AND BINS (I<sub>F</sub> = 800 mA, T<sub>J</sub> = 85 °C)

The following table provides order codes for XLamp CXA2530 LEDs. For a complete description of the order code nomenclature, please see the Bin and Order Code Formats section (page 14).

| Nominal | C     | RI    | Minin | num Lumino           | ous Flux              |       | 2-Step                       |       | 3-Step                       |       | 4-Step                       |                              |                              |
|---------|-------|-------|-------|----------------------|-----------------------|-------|------------------------------|-------|------------------------------|-------|------------------------------|------------------------------|------------------------------|
| CCT     | Min   | Тур   | Group | Flux (lm)<br>@ 85 °C | Flux (lm)<br>@ 25 °C* | Group | Order Code                   | Group | Order Code                   | Group | Order Code                   |                              |                              |
|         |       |       | T4    | 3440                 | 3879                  |       |                              |       |                              |       | CXA2530-0000-<br>000N00T465F |                              |                              |
|         | 70 75 | 70 75 | 70 75 | 75                   | U2                    | 3680  | 4150                         |       |                              |       |                              | 65F                          | CXA2530-0000-<br>000N00U265F |
| 6500 K  |       |       | U4    | 3955                 | 4596                  |       |                              |       |                              |       | CXA2530-0000-<br>000N00U465F |                              |                              |
| 6500 K  |       |       | T2    | 3200                 | 3609                  |       |                              |       |                              |       | CXA2530-0000-<br>000N0HT265F |                              |                              |
|         | 80    |       | T4    | 3440                 | 3879                  |       |                              |       |                              | 65F   | CXA2530-0000-<br>000N0HT465F |                              |                              |
|         |       |       | U2    | 3680                 | 4150                  |       |                              |       |                              |       | CXA2530-0000-<br>000N0HU265F |                              |                              |
|         |       |       | T4    | 3440                 | 3879                  |       |                              |       |                              |       | CXA2530-0000-<br>000N00T457F |                              |                              |
|         | 70 75 | 70    | 75    | U2                   | 3680                  | 4150  |                              |       |                              |       | 57F                          | CXA2530-0000-<br>000N00U257F |                              |
| 5700 K  |       |       | U4    | 3955                 | 4596                  |       |                              |       |                              |       | CXA2530-0000-<br>000N00U457F |                              |                              |
| 5700 K  |       |       | T2    | 3200                 | 3609                  |       |                              |       |                              |       | CXA2530-0000-<br>000N0HT257F |                              |                              |
|         | 80    | 80    |       | T4                   | 3440                  | 3879  |                              |       |                              |       | 57F                          | CXA2530-0000-<br>000N0HT457F |                              |
|         |       |       | U2    | 3680                 | 4150                  |       |                              |       |                              |       | CXA2530-0000-<br>000N0HU257F |                              |                              |
|         |       |       | T4    | 3440                 | 3879                  |       | CXA2530-0000-<br>000N00T450H |       |                              |       | CXA2530-0000-<br>000N00T450F |                              |                              |
|         | 70    | 75    | U2    | 3680                 | 4150                  | 50H   | CXA2530-0000-<br>000N00U250H |       |                              | 50F   | CXA2530-0000-<br>000N00U250F |                              |                              |
|         |       |       | U4    | 3955                 | 4596                  |       | CXA2530-0000-<br>000N00U450H |       |                              |       | CXA2530-0000-<br>000N00U450F |                              |                              |
|         |       |       | T2    | 3200                 | 3609                  |       | CXA2530-0000-<br>000N0HT250H |       |                              |       | CXA2530-0000-<br>000N0HT250F |                              |                              |
| 5000 K  | 80    |       | Τ4    | 3440                 | 3879                  | 50H   | CXA2530-0000-<br>000N0HT450H | 50G   | CXA2530-0000-<br>000N0HT450G | 50F   | CXA2530-0000-<br>000N0HT450F |                              |                              |
|         |       |       | U2    | 3680                 | 4150                  |       | CXA2530-0000-<br>000N0HU250H |       | CXA2530-0000-<br>000N0HU250G |       | CXA2530-0000-<br>000N0HU250F |                              |                              |
|         |       |       | R4    | 2600                 | 2932                  |       | CXA2530-0000-<br>000N0UR450H |       |                              |       | CXA2530-0000-<br>000N0UR450F |                              |                              |
|         | 90    | 90 95 | S2    | 2780                 | 3135                  | 50H   | CXA2530-0000-<br>000N0US250H | 50G   | CXA2530-0000-<br>000N0US250G | 50F   | CXA2530-0000-<br>000N0US250F |                              |                              |
|         |       |       | S4    | 2990                 | 3372                  |       | CXA2530-0000-<br>000N0US450H |       | CXA2530-0000-<br>000N0US450G |       | CXA2530-0000-<br>000N0US450F |                              |                              |

Notes

Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 16).

• Cree XLamp CXA2530 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.

\* Flux values @ 25 °C are calculated and for reference only.

| Nominal | С     | RI    | Minin | num Lumino           | ous Flux                     |                              | 2-Step                       |                              | 3-Step                       | 4-Step                       |                              |     |                              |     |
|---------|-------|-------|-------|----------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|-----|------------------------------|-----|
| CCT     | Min   | Тур   | Group | Flux (lm)<br>@ 85 °C | Flux (lm)<br>@ 25 °C*        | Group                        | Order Code                   | Group                        | Order Code                   | Group                        | Order Code                   |     |                              |     |
|         | 70 75 |       | Τ4    | 3440                 | 3879                         |                              | CXA2530-0000-<br>000N00T440H |                              |                              |                              | CXA2530-0000-<br>000N00T440F |     |                              |     |
|         |       | 75    | U2    | 3680                 | 4150                         | 40H                          | CXA2530-0000-<br>000N00U240H |                              |                              | 40F                          | CXA2530-0000-<br>000N00U240F |     |                              |     |
|         |       |       | U4    | 3955                 | 4596                         |                              | CXA2530-0000-<br>000N00U440H |                              |                              |                              | CXA2530-0000-<br>000N00U440F |     |                              |     |
|         |       |       | T2    | 3200                 | 3609                         |                              | CXA2530-0000-<br>000N0HT240H |                              |                              |                              | CXA2530-0000-<br>000N0HT240F |     |                              |     |
| 4000 K  | 80    |       | Τ4    | 3440                 | 3879                         | 40H                          | CXA2530-0000-<br>000N0HT440H | 40G                          | CXA2530-0000-<br>000N0HT440G | 40F                          | CXA2530-0000-<br>000N0HT440F |     |                              |     |
|         |       |       | U2    | 3680                 | 4150                         |                              | CXA2530-0000-<br>000N0HU240H |                              | CXA2530-0000-<br>000N0HU240G |                              | CXA2530-0000-<br>000N0HU240F |     |                              |     |
|         | 90 95 |       | R4    | 2600                 | 2932                         |                              | CXA2530-0000-<br>000N0UR440H |                              |                              |                              | CXA2530-0000-<br>000N0UR440F |     |                              |     |
|         |       | 90    | 90    | 90 95                | 90 95                        | 90 95                        | S2                           | 2780                         | 3135                         | 40H                          | CXA2530-0000-<br>000N0US240H | 40G | CXA2530-0000-<br>000N0US240G | 40F |
|         |       |       | S4    | 2990                 | 3372                         |                              | CXA2530-0000-<br>000N0US440H |                              | CXA2530-0000-<br>000N0US440G |                              | CXA2530-0000-<br>000N0US440f |     |                              |     |
|         |       |       | T2    | 3200                 | 3609                         |                              | CXA2530-0000-<br>000N00T235H |                              |                              |                              | CXA2530-0000-<br>000N00T235F |     |                              |     |
|         | 80    | 80    | T4    | 3440                 | 3879                         | 35H                          | CXA2530-0000-<br>000N00T435H | 35G                          | CXA2530-0000-<br>000N00T435G | 35F                          | CXA2530-0000-<br>000N00T435F |     |                              |     |
| 3500 K  |       |       | U2    | 3680                 |                              | CXA2530-0000-<br>000N00U235H |                              | CXA2530-0000-<br>000N00U235G |                              | CXA2530-0000-<br>000N00U235F |                              |     |                              |     |
| 3000 K  |       | 93 95 | R2    | R2 2420 2729         | CXA2530-0000-<br>000N0YR235H |                              |                              |                              | CXA2530-0000-<br>000N0YR235F |                              |                              |     |                              |     |
|         | 93    |       | R4    | 2600                 | 2932                         | 35H                          | CXA2530-0000-<br>000N0YR435H | 35G                          | CXA2530-0000-<br>000N0YR435G | 35F                          | CXA2530-0000-<br>000N0YR435F |     |                              |     |
|         |       |       | S2    | 2780                 | 3135                         |                              | CXA2530-0000-<br>000N0YS235H |                              | CXA2530-0000-<br>000N0YS235G |                              | CXA2530-0000-<br>000N0YS235F |     |                              |     |

## FLUX CHARACTERISTICS, EASYWHITE<sup>®</sup> ORDER CODES AND BINS (I<sub>F</sub> = 800 mA, T<sub>1</sub> = 85 °C) - CONTINUED

Notes

- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 16).
- Cree XLamp CXA2530 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
- \* Flux values @ 25 °C are calculated and for reference only.

| Nominal | С     | RI                               | Minin | num Lumino                   | ous Flux              |                              | 2-Step                       |                              | 3-Step                       |       | 4-Step                       |                              |     |                              |     |                              |
|---------|-------|----------------------------------|-------|------------------------------|-----------------------|------------------------------|------------------------------|------------------------------|------------------------------|-------|------------------------------|------------------------------|-----|------------------------------|-----|------------------------------|
| CCT     | Min   | Тур                              | Group | Flux (lm)<br>@ 85 °C         | Flux (lm)<br>@ 25 °C* | Group                        | Order Code                   | Group                        | Order Code                   | Group | Order Code                   |                              |     |                              |     |                              |
|         |       |                                  | S4    | 2990                         | 3372                  |                              | CXA2530-0000-<br>000N00S430H |                              |                              |       | CXA2530-0000-<br>000N00S430F |                              |     |                              |     |                              |
|         | 80    |                                  | T2    | 3200                         | 3609                  | 30H                          | CXA2530-0000-<br>000N00T230H | 30G                          | CXA2530-0000-<br>000N00T230G | 30F   | CXA2530-0000-<br>000N00T230F |                              |     |                              |     |                              |
|         |       |                                  | T4    | 3440                         | 4150                  |                              | CXA2530-0000-<br>000N00T430H |                              | CXA2530-0000-<br>000N00T430G |       | CXA2530-0000-<br>000N00T430F |                              |     |                              |     |                              |
|         |       |                                  | Q4    | 2260                         | 2549                  |                              | CXA2530-0000-<br>000N0UQ430H |                              |                              |       | CXA2530-0000-<br>000N0UQ430F |                              |     |                              |     |                              |
| 3000 K  | 90    | 95                               | R2    | 2420                         | 2729                  | 30H                          | CXA2530-0000-<br>000N0UR230H | 30G                          | CXA2530-0000-<br>000N0UR230G | 30F   | CXA2530-0000-<br>000N0UR230F |                              |     |                              |     |                              |
|         |       |                                  | R4    | 2600                         | 2932                  |                              | CXA2530-0000-<br>000N0UR430H |                              | CXA2530-0000-<br>000N0UR430G |       | CXA2530-0000-<br>000N0UR430F |                              |     |                              |     |                              |
|         |       | Q4 2260 2549   3 95 R2 2420 2729 | Q4    | 2260                         | 2549                  |                              | CXA2530-0000-<br>000N0YQ430H |                              |                              |       | CXA2530-0000-<br>000N0YQ430F |                              |     |                              |     |                              |
|         | 93    |                                  | 30H   | CXA2530-0000-<br>000N0YR230H | 30G                   | CXA2530-0000-<br>000N0YR230G | 30F                          | CXA2530-0000-<br>000N0YR230F |                              |       |                              |                              |     |                              |     |                              |
|         |       |                                  | R4    | 2600                         | 2932                  |                              | CXA2530-0000-<br>000N0YR430H |                              | CXA2530-0000-<br>000N0YR430G |       | CXA2530-0000-<br>000N0YR430F |                              |     |                              |     |                              |
|         |       |                                  | S4    | 2990                         | 3372                  |                              | CXA2530-0000-<br>000N00S427H |                              |                              |       | CXA2530-0000-<br>000N00S427F |                              |     |                              |     |                              |
|         | 80    |                                  | T2    | 3200                         | 3609                  | 27H                          | CXA2530-0000-<br>000N00T227H | 27G                          | CXA2530-0000-<br>000N00T227G | 27F   | CXA2530-0000-<br>000N00T227F |                              |     |                              |     |                              |
|         |       |                                  | T4    | 3440                         | 4150                  |                              | CXA2530-0000-<br>000N00T427H |                              | CXA2530-0000-<br>000N00T427G |       | CXA2530-0000-<br>000N00T427F |                              |     |                              |     |                              |
| 2700 K  | 90    | 95                               | Q2    | 2100                         | 2368                  | 27H                          | CXA2530-0000-<br>000N0UQ227H | 27G                          | CXA2530-0000-<br>000N0UQ227G | 27F   | CXA2530-0000-<br>000N0UQ227F |                              |     |                              |     |                              |
| 2700 K  | 90    | 90                               | Q4    | 2260                         | 2932                  | 2711                         | CXA2530-0000-<br>000N0UQ427H | 276                          | CXA2530-0000-<br>000N0UQ427G | 275   | CXA2530-0000-<br>000N0UQ427F |                              |     |                              |     |                              |
|         |       |                                  | Q2    | 2100                         | 2368                  |                              | CXA2530-0000-<br>000N0YQ227H |                              |                              |       | CXA2530-0000-<br>000N0YQ227F |                              |     |                              |     |                              |
|         | 93 95 | 93 95                            | 93 95 | 93                           | 93                    | 93                           | 93 95                        | Q4                           | 2260                         | 2549  | 27H                          | CXA2530-0000-<br>000N0YQ427H | 27G | CXA2530-0000-<br>000N0YQ427G | 27F | CXA2530-0000-<br>000N0YQ427F |
|         |       |                                  | R2    | 2420                         | 2729                  |                              | CXA2530-0000-<br>000N0YR227H |                              | CXA2530-0000-<br>000N0YR227G |       | CXA2530-0000-<br>000N0YR227F |                              |     |                              |     |                              |

## FLUX CHARACTERISTICS, EASYWHITE<sup>®</sup> ORDER CODES AND BINS (I<sub>F</sub> = 800 mA, T<sub>1</sub> = 85 °C) - CONTINUED

Notes

- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 16).
- Cree XLamp CXA2530 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
- \* Flux values @ 25 °C are calculated and for reference only.



## FLUX CHARACTERISTICS, ANSI WHITE ORDER CODES AND BINS (I<sub>F</sub> = 800 mA, T<sub>J</sub> = 85 °C)


The following table provides order codes for XLamp CXA2530 LEDs. For a complete description of the order code nomenclature, please see the Bin and Order Code Formats section (page 14).


|                | C   | RI  | М     | inimum Luminous      | Flux                  |                         |                          |
|----------------|-----|-----|-------|----------------------|-----------------------|-------------------------|--------------------------|
| Nominal<br>CCT | Min | Тур | Group | Flux (lm)<br>@ 85 °C | Flux (lm)<br>@ 25 °C* | Chromaticity Regions    | Order Code               |
|                |     |     | T4    | 3440                 | 3879                  |                         | CXA2530-0000-000N00T40E1 |
|                | 70  | 75  | U2    | 3680                 | 4150                  | 1A0, 1B0, 1C0, 1D0, 65F | CXA2530-0000-000N00U20E1 |
| 6500 K         |     |     | U4    | 3955                 | 4596                  |                         | CXA2530-0000-000N00U40E1 |
| 0000 K         |     |     | T2    | 3200                 | 3609                  |                         | CXA2530-0000-000N0HT20E1 |
|                | 80  |     | T4    | 3440                 | 3879                  | 1A0, 1B0, 1C0, 1D0, 65F | CXA2530-0000-000N0HT40E1 |
|                |     |     | U2    | 3680                 | 4150                  |                         | CXA2530-0000-000N0HU20E1 |
|                |     |     | T4    | 3440                 | 3879                  |                         | CXA2530-0000-000N00T40E2 |
|                | 70  | 75  | U2    | 3680                 | 4150                  | 2A0, 2B0, 2C0, 2D0, 57F | CXA2530-0000-000N00U20E2 |
| 5700 K         |     |     | U4    | 3955                 | 4596                  |                         | CXA2530-0000-000N00U40E2 |
| 5700 K         |     |     | T2    | 3200                 | 3609                  |                         | CXA2530-0000-000N0HT20E2 |
|                | 80  |     | T4    | 3440                 | 3879                  | 2A0, 2B0, 2C0, 2D0, 57F | CXA2530-0000-000N0HT40E2 |
|                |     |     | U2    | 3680                 | 4150                  |                         | CXA2530-0000-000N0HU20E2 |
|                |     |     | T4    | 3440                 | 3879                  |                         | CXA2530-0000-000N00T40E3 |
|                | 70  | 75  | U2    | 3680                 | 4150                  | 3A0, 3B0, 3C0, 3D0, 50F | CXA2530-0000-000N00U20E3 |
| 5000 K         |     |     | U4    | 3955                 | 4596                  |                         | CXA2530-0000-000N00U40E3 |
| 5000 K         |     |     | T2    | 3200                 | 3609                  |                         | CXA2530-0000-000N0HT20E3 |
|                | 80  |     | T4    | 3440                 | 3879                  | 3A0, 3B0, 3C0, 3D0, 50F | CXA2530-0000-000N0HT40E3 |
|                |     |     | U2    | 3680                 | 4150                  |                         | CXA2530-0000-000N0HU20E3 |
|                |     |     | T4    | 3440                 | 3879                  | 5A0, 5B0, 5C0, 5D0, 40F | CXA2530-0000-000N00T40E5 |
| 4000 K         | 70  | 75  | U2    | 3680                 | 4150                  |                         | CXA2530-0000-000N00U20E5 |
|                |     |     | U4    | 3955                 | 4596                  |                         | CXA2530-0000-000N00U40E5 |

Notes

- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 16).
- Cree XLamp CXA2530 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
- \* Flux values @ 25 °C are calculated and for reference only.


## **RELATIVE SPECTRAL POWER DISTRIBUTION**



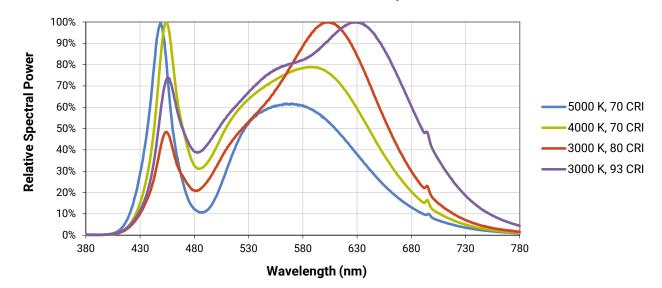

## **ELECTRICAL CHARACTERISTICS**

The following graph is the result of a series of steady-state measurements.

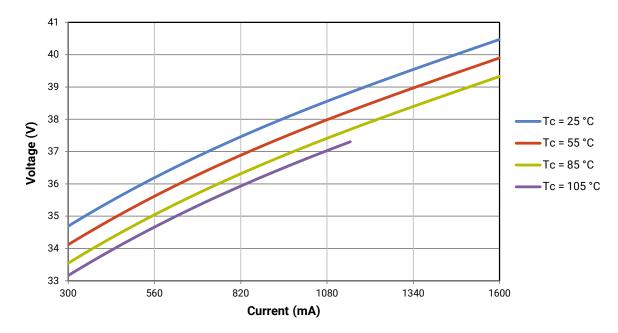


## **RELATIVE LUMINOUS FLUX VS. CURRENT (T<sub>J</sub> = 85 °C)**

The relative luminous flux values provided below are the ratio of:


- · Measurements of CXA2530 at steady-state operation at the given conditions, divided by
- Flux measured during binning, which is a pulsed measurement at 800 mA at T<sub>1</sub> = 85 °C.

For example, at steady-state operation of Tc = 85 °C,  $I_F$  = 1080 mA, the relative luminous flux ratio is 120% in the chart below. A CXA2530 LED that measures 3200 lm during binning will deliver 3840 lm (3200 \* 1.2) at steady-state operation of Tc = 85 °C,  $I_F$  = 1080 mA.

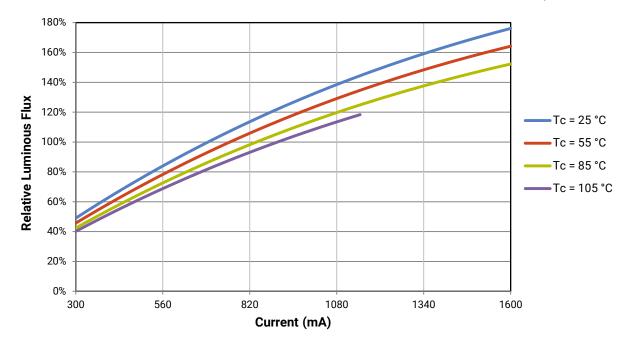



## **TYPICAL SPATIAL DISTRIBUTION**

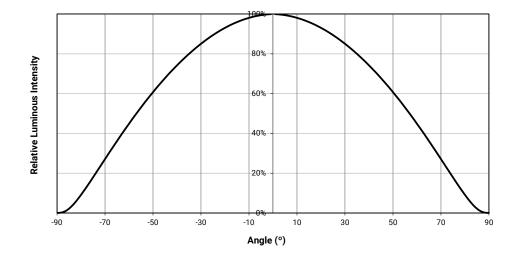

## PERFORMANCE GROUPS - BRIGHTNESS (I<sub>F</sub> = 800 mA, T<sub>J</sub> = 85 °C)

XLamp CXA2530 LEDs are tested for luminous flux and placed into one of the following bins.

| Group Code | Minimum Luminous Flux | Maximum Luminous Flux |
|------------|-----------------------|-----------------------|
| Q2         | 2100                  | 2260                  |
| Q4         | 2260                  | 2420                  |
| R2         | 2420                  | 2600                  |
| R4         | 2600                  | 2780                  |
| S2         | 2780                  | 2990                  |
| S4         | 2990                  | 3200                  |
| T2         | 3200                  | 3440                  |
| T4         | 3440                  | 3680                  |
| U2         | 3680                  | 3955                  |
| U4         | 3955                  | 4230                  |
| V2         | 4230                  | 4545                  |



## **PERFORMANCE GROUPS - CHROMATICITY (T<sub>J</sub> = 85 °C)**

XLamp CXA2530 LEDs are tested for chromaticity and placed into one of the regions defined by the following bounding coordinates.

| EasyV | Vhite Color Ter | nperatures – 2 | -Step  |
|-------|-----------------|----------------|--------|
| Code  | ССТ             | x              | у      |
|       |                 | 0.3429         | 0.3507 |
| 50H   | 5000 K          | 0.3434         | 0.3571 |
| JUH   | 2000 K          | 0.3475         | 0.3604 |
|       |                 | 0.3469         | 0.3539 |
|       |                 | 0.3784         | 0.3741 |
| 40H   | 4000 K          | 0.3804         | 0.3818 |
| 40H   | 4000 K          | 0.3867         | 0.3857 |
|       |                 | 0.3844         | 0.3778 |
|       |                 | 0.4030         | 0.3857 |
| 35H   | 3500 K          | 0.4061         | 0.3941 |
| 300   | 3200 K          | 0.4132         | 0.3976 |
|       |                 | 0.4099         | 0.3890 |
|       |                 | 0.4291         | 0.3973 |
| 30H   | 3000 K          | 0.4333         | 0.4062 |
| 30H   | 3000 K          | 0.4395         | 0.4084 |
|       |                 | 0.4351         | 0.3994 |
|       |                 | 0.4528         | 0.4046 |
| 27H   | 2700 K          | 0.4578         | 0.4138 |
| 2/H   | 2700 K          | 0.4638         | 0.4152 |
|       |                 | 0.4586         | 0.4060 |

|          | EasyWhite Color Temperatures – 3-Step Ellipse |              |        |            |            |                |  |  |  |  |
|----------|---|--------------|--------|------------|------------|----------------|--|--|--|--|
|          | COT   | Center Point |        | Major Axis | Minor Axis | Rotation Angle |  |  |  |  |
| Bin Code | ССТ   | x            | У      | а          | b          | (°)            |  |  |  |  |
| 50G      | 5000 K  | 0.3447       | 0.3553 | 0.00840    | 0.00312    | 65.0           |  |  |  |  |
| 40G      | 4000 K  | 0.3818       | 0.3797 | 0.00939    | 0.00402    | 53.7           |  |  |  |  |
| 35G      | 3500 K  | 0.4073       | 0.3917 | 0.00927    | 0.00414    | 54.0           |  |  |  |  |
| 30G      | 3000 K  | 0.4338       | 0.4030 | 0.00834    | 0.00408    | 53.2           |  |  |  |  |
| 27G      | 2700 K  | 0.4577       | 0.4099 | 0.00834    | 0.00420    | 48.5           |  |  |  |  |



## **PERFORMANCE GROUPS - CHROMATICITY (T<sub>J</sub> = 85 °C) - CONTINUED**

| EasyV | Vhite Color Ten | nperatures – 4 | -Step  |
|-------|-----------------|----------------|--------|
| Code  | ССТ             | х              | у      |
|       |                 | 0.3097         | 0.3196 |
| 65F   | 6500 K          | 0.3079         | 0.3297 |
| 03F   | 0000 K          | 0.3164         | 0.3382 |
|       |                 | 0.3176         | 0.3275 |
|       |                 | 0.3253         | 0.3325 |
| 57F   | 5700 1/         | 0.3249         | 0.3439 |
| 57F   | 5700 K          | 0.3331         | 0.3514 |
|       |                 | 0.3330         | 0.3393 |
|       |                 | 0.3407         | 0.3459 |
| 50F   | 5000 K          | 0.3415         | 0.3586 |
|       | 2000 K          | 0.3499         | 0.3654 |
|       |                 | 0.3484         | 0.3521 |
|       |                 | 0.3744         | 0.3685 |
| 40F   | 4000 K          | 0.3782         | 0.3837 |
| 40F   | 4000 K          | 0.3912         | 0.3917 |
|       |                 | 0.3863         | 0.3758 |
|       |                 | 0.3981         | 0.3800 |
| 35F   | 3500 K          | 0.4040         | 0.3966 |
| 30F   | 3200 K          | 0.4186         | 0.4037 |
|       |                 | 0.4116         | 0.3865 |
|       |                 | 0.4242         | 0.3919 |
| 30F   | 3000 K          | 0.4322         | 0.4096 |
| 30F   | 3000 K          | 0.4449         | 0.4141 |
|       |                 | 0.4359         | 0.3960 |
|       |                 | 0.4475         | 0.3994 |
| 27F   | 2700 K          | 0.4573         | 0.4178 |
| 275   | 2700 K          | 0.4695         | 0.4207 |
|       |                 | 0.4589         | 0.4021 |

Copyright © 2012-2017 Cree, Inc. All rights reserved. The information in this document is subject to change without notice. Cree<sup>®</sup>, XLamp<sup>®</sup> and EasyWhite<sup>®</sup> are registered trademarks and the Cree logo is a trademark of Cree, Inc. UL<sup>®</sup> and the UR logo are registered trademarks of UL LLC.



## **PERFORMANCE GROUPS - CHROMATICITY (T**<sub>J</sub> = 85 °C) - **CONTINUED**

| ANSI White Bins |        |             |        |        |  |  |  |  |
|-----------------|--------|-------------|--------|--------|--|--|--|--|
| Code            | ССТ    | Bin<br>Code | x      | у      |  |  |  |  |
|                 |        |             | 0.3048 | 0.3207 |  |  |  |  |
|                 |        | 1A0         | 0.3130 | 0.3290 |  |  |  |  |
|                 |        | TAU         | 0.3144 | 0.3186 |  |  |  |  |
|                 |        |             | 0.3068 | 0.3113 |  |  |  |  |
|                 |        | 1B0         | 0.3028 | 0.3304 |  |  |  |  |
|                 | 6500 K |             | 0.3115 | 0.3391 |  |  |  |  |
|                 |        |             | 0.3130 | 0.3290 |  |  |  |  |
| 0E1             |        |             | 0.3048 | 0.3207 |  |  |  |  |
| UEI             |        | 1C0         | 0.3115 | 0.3391 |  |  |  |  |
|                 |        |             | 0.3205 | 0.3481 |  |  |  |  |
|                 |        | 100         | 0.3213 | 0.3373 |  |  |  |  |
|                 |        |             | 0.3130 | 0.3290 |  |  |  |  |
|                 |        |             | 0.3130 | 0.3290 |  |  |  |  |
|                 |        | 100         | 0.3213 | 0.3373 |  |  |  |  |
|                 |        | 1D0         | 0.3221 | 0.3261 |  |  |  |  |
|                 |        |             | 0.3144 | 0.3186 |  |  |  |  |

|      | ANSI White Bins |              |        |        |  |  |  |  |  |  |
|------|-----------------|--------------|--------|--------|--|--|--|--|--|--|
| Code | ССТ             | Bin<br>Code  | x      | у      |  |  |  |  |  |  |
|      |                 |              | 0.3215 | 0.3350 |  |  |  |  |  |  |
|      |                 | 2A0          | 0.3290 | 0.3417 |  |  |  |  |  |  |
|      |                 | ZAU          | 0.3290 | 0.3300 |  |  |  |  |  |  |
|      |                 |              | 0.3222 | 0.3243 |  |  |  |  |  |  |
|      |                 | 2B0          | 0.3207 | 0.3462 |  |  |  |  |  |  |
|      | 5700 K          |              | 0.3290 | 0.3538 |  |  |  |  |  |  |
|      |                 |              | 0.3290 | 0.3417 |  |  |  |  |  |  |
| 050  |                 |              | 0.3215 | 0.3350 |  |  |  |  |  |  |
| 0E2  |                 | 2C0          | 0.3290 | 0.3538 |  |  |  |  |  |  |
|      |                 |              | 0.3376 | 0.3616 |  |  |  |  |  |  |
|      |                 |              | 0.3371 | 0.3490 |  |  |  |  |  |  |
|      |                 |              | 0.3290 | 0.3417 |  |  |  |  |  |  |
|      |                 |              | 0.3290 | 0.3417 |  |  |  |  |  |  |
|      |                 | 0.00         | 0.3371 | 0.3490 |  |  |  |  |  |  |
|      |                 | 2D0          | 0.3366 | 0.3369 |  |  |  |  |  |  |
|      |                 |              | 0.3290 | 0.3300 |  |  |  |  |  |  |
|      |                 |              |        |        |  |  |  |  |  |  |
|      | AN              | ISI White Bi | ns     |        |  |  |  |  |  |  |


| ANSI White Bins |        |             |       |       |  |  |
|-----------------|--------|-------------|-------|-------|--|--|
| Code            | ССТ    | Bin<br>Code | x     | у     |  |  |
| 0E5             | 4000 K | 5A0         | .3670 | .3578 |  |  |
|                 |        |             | .3702 | .3722 |  |  |
|                 |        |             | .3825 | .3798 |  |  |
|                 |        |             | .3783 | .3646 |  |  |
|                 |        | 5B0         | .3702 | .3722 |  |  |
|                 |        |             | .3736 | .3874 |  |  |
|                 |        |             | .3869 | .3958 |  |  |
|                 |        |             | .3825 | .3798 |  |  |
|                 |        | 5C0         | .3825 | .3798 |  |  |
|                 |        |             | .3869 | .3958 |  |  |
|                 |        |             | .4006 | .4044 |  |  |
|                 |        |             | .3950 | .3875 |  |  |
|                 |        | 5D0         | .3783 | .3646 |  |  |
|                 |        |             | .3825 | .3798 |  |  |
|                 |        |             | .3950 | .3875 |  |  |
|                 |        |             | .3898 | .3716 |  |  |

| ANSI White Bins |        |             |       |       |  |  |
|-----------------|--------|-------------|-------|-------|--|--|
| Code            | ССТ    | Bin<br>Code | x     | у     |  |  |
|                 | 5000 K | 3A0         | .3371 | .3490 |  |  |
|                 |        |             | .3451 | .3554 |  |  |
|                 |        |             | .3440 | .3427 |  |  |
|                 |        |             | .3366 | .3369 |  |  |
|                 |        | 3B0         | .3376 | .3616 |  |  |
|                 |        |             | .3463 | .3687 |  |  |
|                 |        |             | .3451 | .3554 |  |  |
|                 |        |             | .3371 | .3490 |  |  |
| 0E3             |        | 3C0         | .3463 | .3687 |  |  |
|                 |        |             | .3551 | .3760 |  |  |
|                 |        |             | .3533 | .3620 |  |  |
|                 |        |             | .3451 | .3554 |  |  |
|                 |        | 3D0         | .3451 | .3554 |  |  |
|                 |        |             | .3533 | .3620 |  |  |
|                 |        |             | .3515 | .3487 |  |  |
|                 |        |             | .3440 | .3427 |  |  |


XLAMP<sup>®</sup> CXA2530 LED



## CREE EASYWHITE® BINS PLOTTED ON THE 1931 CIE COLOR SPACE (T<sub>j</sub> = 85 °C)

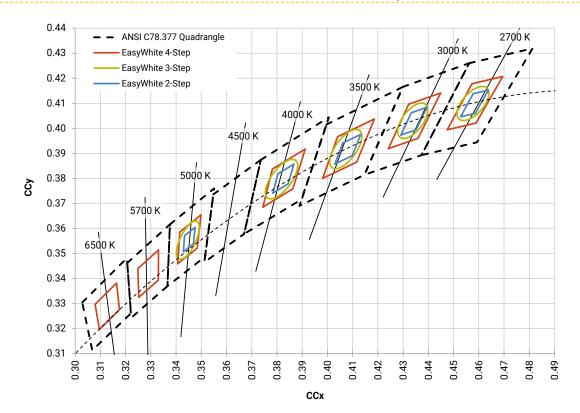

## CREE ANSI WHITE BINS PLOTTED ON THE 1931 CIE COLOR SPACE (T, = 85 °C)

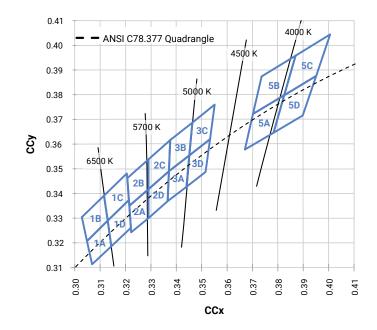


Copyright © 2012-2017 Cree, Inc. All rights reserved. The information in this document is subject to change without notice. Cree®, XLamp® and EasyWhite® are registered trademarks and the Cree logo is a trademark of Cree, Inc. UL® and the UR logo are registered trademarks of UL LLC.


CREE 🚖

## **BIN AND ORDER CODE FORMATS**

Bin codes and order codes are configured as follows:

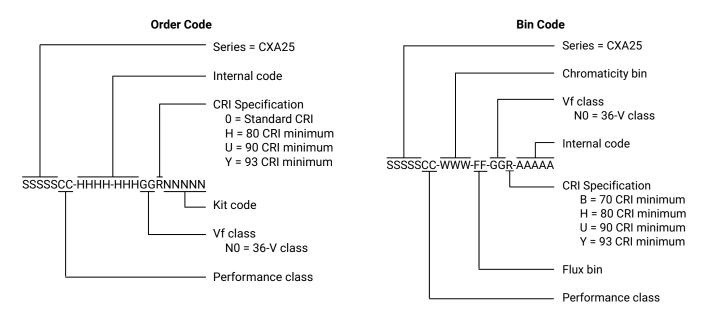

## **MECHANICAL DIMENSIONS**

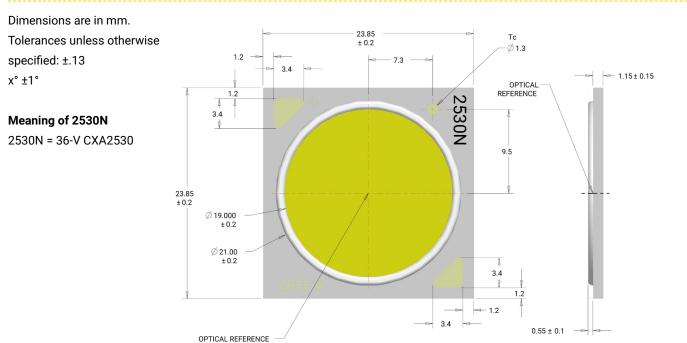


Copyright © 2012-2017 Cree, Inc. All rights reserved. The information in this document is subject to change without notice. Cree®, XLamp® and EasyWhite® are registered trademarks and the Cree logo is a trademark of Cree, Inc. UL® and the UR logo are registered trademarks of UL LLC.

## THERMAL DESIGN


The CXA family of LED arrays can include over a hundred different LED die inside one package, and thus over a hundred different junction temperatures ( $T_j$ ). Cree has intentionally removed junction-temperature-based operating limits and replaced the commonplace maximum  $T_j$  calculations with maximum ratings based on forward current ( $I_F$ ) and case temperature (Tc). No additional calculations are required to ensure the CXA LED is being operated within its designed limits. Please refer to page 2 for the Operating Limit specification.

There is no need to calculate for  $T_J$  inside the package, as the thermal management design process, specifically from solder point ( $T_{sp}$ ) to ambient ( $T_a$ ), remains identical to any other LED component. For more information on thermal management of Cree XLamp LEDs, please refer to the Thermal Management application note. For CXA soldering recommendations and more information on thermal interface materials (TIM) and connection methods, please refer to the Cree XLamp CX Family LEDs soldering and handling document. The CX Family LED besign Guide provides basic information on the requirements to use Cree XLamp CXA LEDs successfully in luminaire designs.

To keep the CXA2530 LED at or below the maximum rated Tc, the case to ambient temperature thermal resistance (R\_c-a) must be at or below the maximum R\_c-a value shown on the following graph, depending on the operating environment. The y-axis in the graph is a base 10 logarithmic scale.

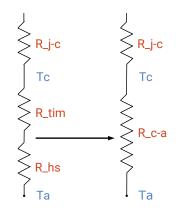

As the figure at right shows, the R\_c-a value is the sum of the thermal resistance of the TIM (R\_tim) plus the thermal resistance of the heat sink (R\_hs).

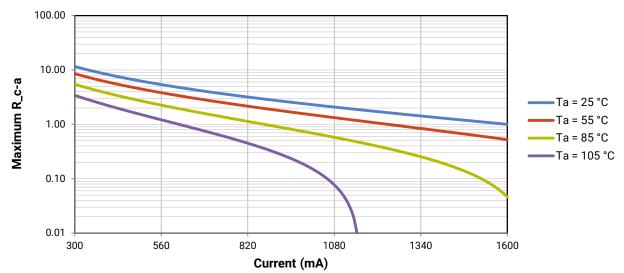

#### **NOTES**

#### Measurements

The luminous flux, radiant power, chromaticity, forward voltage and CRI measurements in this document are binning specifications only and solely represent product measurements as of the date of shipment. These measurements will change over time based on a number of factors that are not within Cree's control and are not intended or provided as operational specifications for the products. Calculated values are provided for informational purposes only and are not intended as specifications.

#### **Pre-Release Qualification Testing**

Please read the LED Reliability Overview for details of the qualification process Cree applies to ensure long-term reliability for XLamp LEDs and details of Cree's pre-release qualification testing for XLamp LEDs.

#### Lumen Maintenance

Cree now uses standardized IES LM-80-08 and TM-21-11 methods for collecting long-term data and extrapolating LED lumen maintenance. For information on the specific LM-80 data sets available for this LED, refer to the public LM-80 results document.

Please read the Long-Term Lumen Maintenance application note for more details on Cree's lumen maintenance testing and forecasting. Please read the Thermal Management application note for details on how thermal design, ambient temperature, and drive current affect the LED junction temperature.

#### **RoHS Compliance**

The levels of RoHS restricted materials in this product are below the maximum concentration values (also referred to as the threshold limits) permitted for such substances, or are used in an exempted application, in accordance with EU Directive 2011/65/EC (RoHS2), as implemented January 2, 2013. RoHS Declarations for this product can be obtained from your Cree representative or from the Product Documentation sections of www.cree.com.

#### **REACh Compliance**

REACh substances of very high concern (SVHCs) information is available for this product. Since the European Chemical Agency (ECHA) has published notice of their intent to frequently revise the SVHC listing for the foreseeable future, please contact a Cree representative to insure you get the most up-to-date REACh SVHC Declaration. REACh banned substance information (REACh Article 67) is also available upon request.

#### **UL® Recognized Component**

Level 4 enclosure consideration. The LED package or a portion thereof has been investigated as a fire and electrical enclosure per ANSI/ UL 8750.

#### Vision Advisory

WARNING: Do not look at an exposed lamp in operation. Eye injury can result. For more information about LEDs and eye safety, please refer to the LED Eye Safety application note.

## PACKAGING

Cree CXA2530 LEDs are packaged in trays of 20. Five trays are sealed in an anti-static bag and placed inside a carton, for a total of 100 LEDs per carton. Each carton contains 100 LEDs from the same performance bin.

Dimensions are in inches. Tolerances:  $\pm$ .13 x°  $\pm$ 1°

