
# multicomp PRO

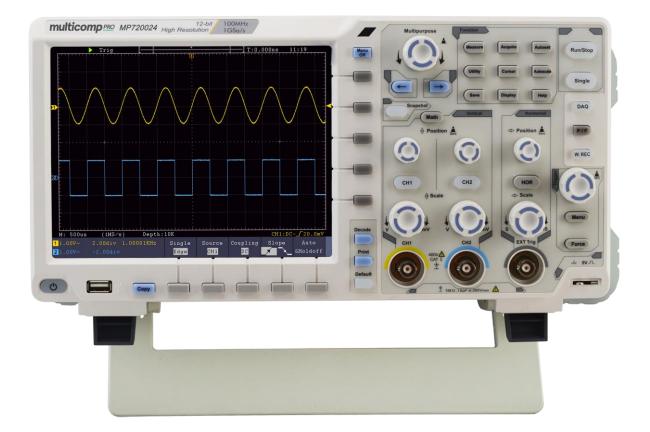

# Digital Storage Oscilloscope 100MHz Model MP720024

# **Table of Contents**

1. General Safety Requirements	1
2. Safety Terms and Symbols	2
3. Junior User Guidebook	4
Introduction to the Structure of the Oscilloscope Front Panel Front Panel Menu Buttons Rear Panel Control Area	5 6 6
User Interface Introduction	8
How to Implement the General Inspection	10
How to Implement the Function Inspection	10
How to Implement the Probe Compensation	11
How to Set the Probe Attenuation Coefficient	12
How to Use the Probe Safely	13
How to Implement Self-calibration	13
Introduction to the Vertical System	14
Introduction to the Horizontal System	15
Introduction to the Trigger System	15
4. Advanced User Guidebook	17
How to Set the Vertical System	18
Use Mathematical Manipulation Function Waveform math User defined function Digital Filter Using FFT function	21 22 22
Use Vertical Position and Scale Rotary controls	25
How to Set the Horizontal System Zoom the Waveform	
How to Set the Trigger/Decoding System Single Trigger Alternate Trigger (Trigger mode: Edge) Logic Trigger Bus Trigger Bus Decoding	27 35 35 36
How to Operate the Function Menu How to Implement Sampling Setup How to Set the Display System	

How to Save and Recall a Waveform	
How to Record/Playback Waveforms	
How to Clone a waveform	61
How to Implement the Auxiliary System Function Setting	
How to Measure Automatically	
How to Measure with Cursors	
How to Use Autoscale	
How to Use Built-in Help	
How to Use Executive Buttons	
How to Print the Screen Image	
5. Communication with PC	
Using USB Port	
Using LAN Port	
Connect directly	
Connect through a router	
6. Demonstration	
Example 1: Measurement a Simple Signal	
Example 2: Gain of a Amplifier in a Metering Circuit	
Example 3: Capturing a Single Signal	
Example 4: Analyze the Details of a Signal	
Example 5: Application of X-Y Function	
Example 6: Video Signal Trigger	
7. Troubleshooting	
8. Technical Specifications	
Trigger	
General Technical Specifications	
9. Appendix	
Appendix A: Enclosure	
Appendix B: General Care and Cleaning	

# **1. General Safety Requirements**

Before use, please read the following safety precautions to avoid any possible bodily injury and to prevent this product or any other connected products from damage. In order to avoid any contingent danger, ensure this product is only used within the range specified.

Only the qualified technicians can implement the maintenance.

To avoid Fire or Personal Injury:

- Connect the probe correctly. The grounding end of the probe corresponds to the grounding phase. Please don't connect the grounding end to the positive phase.
- Use Proper Power Cord. Use only the power cord supplied with the product and certified to use in your country.
- **Connect or Disconnect Correctly.** When the probe or test lead is connected to a voltage source, please do not connect and disconnect the probe or test lead at random.
- Product Grounded. This instrument is grounded through the power cord grounding conductor. To avoid electric shock, the grounding conductor must be grounded. The product must be grounded properly before any connection with its input or output terminal.

When powered by AC power, it is not allowed to measure AC power source directly, because the testing ground and power cord ground conductor are connected together, otherwise, it will cause short circuit.

- Check all Terminal Ratings. To avoid fire or shock hazard, check all ratings and markers of this product. Refer to the user's manual for more information about ratings before connecting to the instrument.
- **Do not operate without covers**. Do not operate the instrument with covers or panels removed.
- Use Proper Fuse. Use only the specified type and rating fuse for this instrument.
- Avoid exposed circuit. Do not touch exposed junctions and components when the instrument is powered.
- **Do not operate if in any doubt.** If you suspect damage occurs to the instrument, have it inspected by qualified service personnel before further operations.
- Use your Oscilloscope in a well-ventilated area. Make sure the instrument installed with proper ventilation, refer to the user manual for more details.
- Do not operate in wet conditions.
- **Do not operate in an explosive atmosphere.**
- Keep product surfaces clean and dry.

# 2. Safety Terms and Symbols

## **Safety Terms**

**Terms in this manual.** The following terms may appear in this manual:



**Warning:** Warning indicates the conditions or practices that could result in injury or loss of life.



**Caution:** Caution indicates the conditions or practices that could result in damage to this product or other property.

Terms on the product. The following terms may appear on this product:


Danger: It indicates an injury or hazard may immediately happen.

Warning: It indicates an injury or hazard may be accessible potentially.

Caution: It indicates a potential damage to the instrument or other property might occur.

## **Safety Symbols**

Symbols on the product. The following symbol may appear on the product:

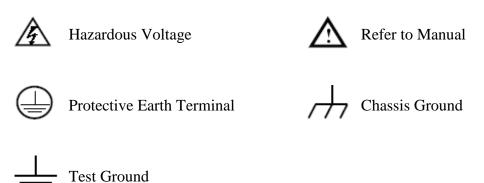


To avoid body damage and prevent product and connected equipment damage, carefully read the following safety information before using the test tool. This product can only be used in the specified applications.



## Warning:

The two channels of the oscilloscope are not electrically isolated. The channels should adopt a common ground during measuring. To prevent short circuits, the 2 probe grounds must not be connected to 2 different non-isolated DC levels.

#### The diagram of the oscilloscope ground wire connection:

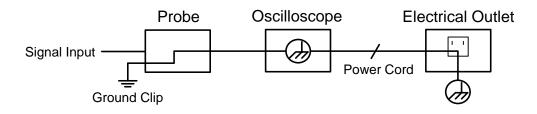

It is not allowed to measure AC power when the oscilloscope is AC powered.

## Marning:

To avoid fire or electrical shock, when the oscilloscope input signal connected is more than 42V peak (30Vrms) or on circuits of more than 4800VA, please take note of below items:

- Only use accessory insulated voltage probes and test lead.
- Check the accessories such as probe before use and replace it if there are any damages.
- Remove probes, test leads and other accessories immediately after use.
- Remove USB cable which connects oscilloscope and computer.
- Do not apply input voltages above the rating of the instrument because the probe tip voltage will directly transmit to the oscilloscope. Use with caution when the probe is set as 1:1.
- Do not use exposed metal BNC or banana plug connectors.
- Do not insert metal objects into connectors.

## 3. Junior User Guidebook

### This chapter deals with the following topics mainly:

- Introduction to the structure of the oscilloscope
- Introduction to the user interface
- How to implement the general inspection
- How to implement the function inspection
- How to make a probe compensation
- How to set the probe attenuation coefficient
- How to use the probe safely
- How to implement an auto-calibration
- Introduction to the vertical system
- Introduction to the horizontal system
- Introduction to the trigger system

## Introduction to the Structure of the Oscilloscope

This chapter makes a simple description of the operation and function of the front panel of the oscilloscope, enabling you to be familiar with the use of the oscilloscope in the shortest time.

## **Front Panel**

The front panel has rotary controls and function buttons. The 5 buttons in the column on the right side of the display screen or in the row under the display screen are menu selection buttons, through which, you can set the different options for the current menu. The other buttons are function buttons, through which, you can enter different function menus or obtain a specific function application directly.

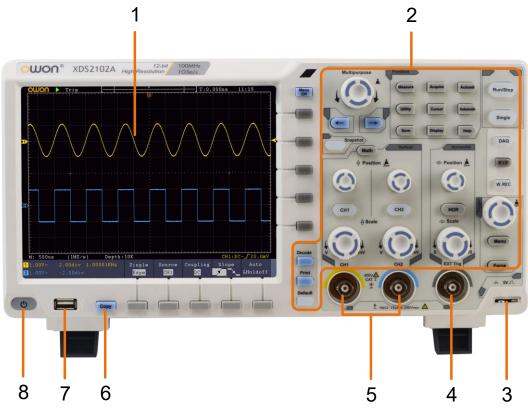


Figure 3-1 Front panel

- 1. Display area
- 2. Control (button and rotary control) area
- 3. Probe Compensation: Measurement signal (5V/1kHz) output.
- 4. EXT Trigger Input
- 5. Signal Input Channel
- 6. Copy button: You can save the waveform by just pressing this button in any user interface.
- 7. **USB Host port:** It is used to transfer data when external USB equipment connects to the oscilloscope regarded as "host device". For example: Saving the waveform to USB flash disk needs to use this port.

8. Power on/off

Backlight of this button:

**Red light:** The oscilloscope is turned off (connects with AC Power); **Green light:** The oscilloscope is turned on (powered by AC Power).

## **Front Panel Menu Buttons**

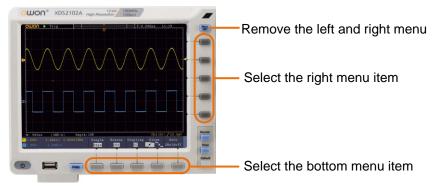


Figure 3-2 Menu Buttons





Figure 3-3 Rear Panel

- 1. Handle
- 2. Air vents
- 3. AC power input jack
- 4. Fuse
- 5. Foot stool: Adjust the tilt angle of the oscilloscope.
- 6. LAN port: the network port which can be used to connect with PC.

- 7. USB Device port: It is used to transfer data when external USB equipment connects to the oscilloscope regarded as "slave device". For example: to use this port when connect PC to the oscilloscope by USB.
- 8. Lock Hole: You can lock the oscilloscope to a fixed location using the security lock (please buy it yourself) to secure the oscilloscope.
- 9. **AV Port**: AV signal output port (optional).
- 10. **Trig Out(P/F)** port: Trigger signal output or Pass/Fail output.

## **Control Area**

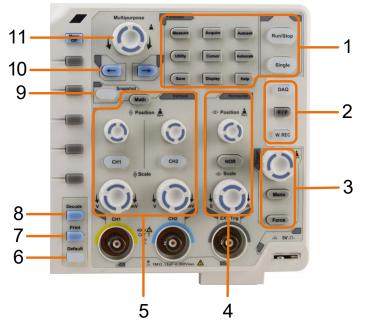


Figure 3-4 Control Area Overview

- **1. Function button area**: Total 11 buttons
- 2. DAQ: Multimeter Recorder.
  P/F: Pass/Fail
  W.REC: Waveform Record
- **3.** Trigger control area with 2 buttons and 1 rotary control.

The Trigger Level rotary control is to adjust trigger voltage. Other 2 buttons refer to trigger system setting.

4. Horizontal control area with 1 button and 2 rotary controls.

"HOR" button refer to horizontal system setting menu, "Horizontal Position" rotary control control trigger position, "Horizontal Scale" control time base.

5. Vertical control area with 3 buttons and 4 rotary controls.

"CH1" and "CH2 " correspond to setting menu in CH1 and CH2, "Math" button refer to math menu, the math menu consists of six kinds of operations, including CH1-CH2, CH2-CH1, CH1+CH2, CH1\*CH2, CH1/CH2 and FFT. Two "Vertical Position" rotary control control the vertical position of CH1/CH2, and two "Scale" rotary control control voltage scale of CH1, CH2.

- 6. Default: Call out the factory settings.
- 7. Print
- 8. Turn on/off **Decode** function.
- 9. Snapshot
- **10. Direction key:** Move the cursor of the focused parameter.
- **11. M** rotary control (Multipurpose rotary control): when a  $\mathbf{M}$  symbol appears in the menu, it indicates you can turn the **M** rotary control to select the menu or set the value. You can push it to close the menu on the left and right.

## **User Interface Introduction**

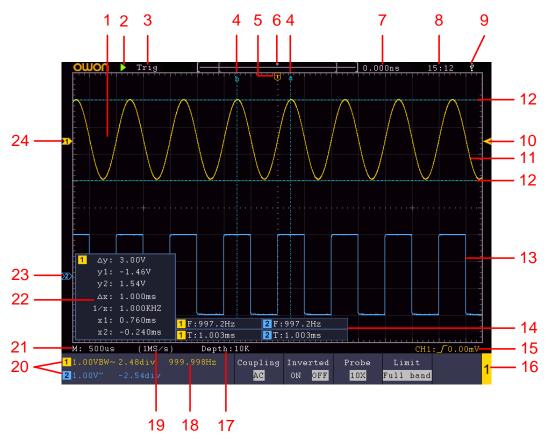


Figure 3-5 Illustrative Drawing of Display Interfaces

- 1. Waveform Display Area.
- 2. Run/Stop
- 3. The state of trigger, including:

Auto: Automatic mode and acquire waveform without triggering.

Trig: Trigger detected and acquire waveform.

Ready: Pre-triggered data captured and ready for a trigger.

Scan: Capture and display the waveform continuously.

Stop: Data acquisition stopped.

4. The two blue dotted lines indicates the vertical position of cursor measurement.

- 5. The T pointer indicates the horizontal position for the trigger.
- 6. The pointer indicates the trigger position in the record length.
- 7. It shows present triggering value and displays the site of present window in internal memory.
- 8. It shows setting time.
- 9. It indicates that there is a USB disk connecting with the oscilloscope.
- 10. The pointer shows the trigger level position.
- 11. The waveform of CH1.
- 12. The two blue dotted lines indicate the horizontal position of cursor measurement.
- 13. The waveform of CH2.
- 14. It indicates the measured type and value of the corresponding channel. "T" means period, "F" means frequency, "V" means the average value, "Vp" the peak-peak value, "Vr" the root-mean-square value, "Ma" the maximum amplitude value, "Mi" the minimum amplitude value, "Vt" the Voltage value of the waveform's flat top value, "Vb" the Voltage value of the waveform's flat base, "Va" the amplitude value, "Os" the overshoot value, "Ps" the Preshoot value, "RT" the rise time value, "FT" the fall time value, "PW" the +width value, "NW" the -Width value, "+D" the +Duty value, "-D" the -Duty value, "PD" the Delay A->B ₽ value, "ND" the Delay A->B ₽ value, "NP" the Screen Duty, "RP" the Phase, "+PC" the +Pulse count, "-PC" the -Pulse count, "+E" the Rise edge count, "-E" the Fall edge count, "AR" the Area, "CA" the Cycle area.
- 15. The icon shows the selected trigger type, e.g.  $\int$  represents triggering on the rising edge for an Edge trigger. The reading shows the trigger level value of the corresponding channel.
- 16. Channel identifier of current bottom menu.
- 17. The readings show the record length.
- 18. The frequency of the trigger signal.
- 19. The readings show current sample rate.
- 20. The readings indicate the corresponding Voltage Division and the Zero Point positions of the channels. "BW" indicates bandwidth limit.

The icon shows the coupling mode of the channel.

- "—" indicates direct current coupling
- "~" indicates AC coupling
- " $\stackrel{!}{=}$ " indicates GND coupling
- 21. The reading shows the setting of main time base.
- 22. It is cursor measure window, showing the absolute values and the readings of the cursors.
- 23. The blue pointer shows the grounding datum point (zero point position) of the waveform of the CH2 channel. If the pointer is not displayed, it means that this channel is not opened.
- 24. The yellow pointer indicates the grounding datum point (zero point position) of the waveform of the CH1 channel. If the pointer is not displayed, it means that the channel is not opened.

## How to Implement the General Inspection

After you get a new oscilloscope, it is recommended that you should make a check on the instrument according to the following steps:

#### 1. Check whether there is any damage caused by transportation.

If the packing boxes or foam cushions are found to have serious damage, keep them in a safe place until the complete instrument and accessories have passed the electrical and mechanical tests.

#### 2. Check the Accessories

Check that all the parts and accessories are included and in serviceable condition.

#### 3. Check the Complete Instrument

If the instrument is damaged in its appearance or it fails in normal operation or performance test, do not use it and contact the supplier directly.

## How to Implement the Function Inspection

Make a fast function check to verify the normal operation of the instrument, according to the following steps:

1. Connect the power cord to a power source. Long press the 🕑 button on the

#### bottom left of the instrument.

The instrument carries out all self-check items and shows the Boot Logo. Push the **Utility** button, select **Function** in the bottom menu. Select **Adjust** in the left menu, select **Default** in the bottom menu. The default attenuation coefficient set value of the probe in the menu is 10X.

2. Set the Switch in the Oscilloscope Probe as 10X and Connect the Oscilloscope with CH1 Channel.

Align the slot in the probe with the plug in the CH1 connector BNC, and then tighten the probe with rotating it to the right side.

Connect the probe tip and the ground clamp to the connector of the probe compensator.

#### 3. Push the Autoset Button on the front panel.

The square wave of 1 KHz frequency and 5V peak-peak value will be displayed in several seconds (see *Figure 3-6*).



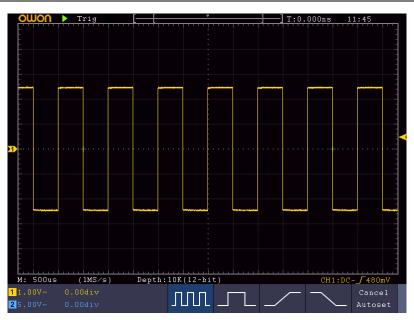


Figure 3-6 Auto set

Check CH2 by repeating Step 2 and Step 3.

## How to Implement the Probe Compensation

When connect the probe with any input channel for the first time, make this adjustment to match the probe with the input channel. The probe which is not compensated or presents a compensation deviation will result in the measuring error or mistake. For adjusting the probe compensation, please carry out the following steps:

- 1. Set the attenuation coefficient of the probe in the menu as 10X and that of the switch in the probe as 10X (see "*How to Set the Probe Attenuation Coefficient*" on P12), and connect the probe with the CH1 channel. If a probe hook tip is used, ensure that it keeps in close touch with the probe. Connect the probe tip with the signal connector of the probe compensator and connect the reference wire clamp with the ground wire connector of the probe connector, and then push the **Autoset** button on the front panel.
- 2. Check the displayed waveforms and regulate the probe till a correct compensation is achieved (see *Figure 3-7* and *Figure 3-8*).

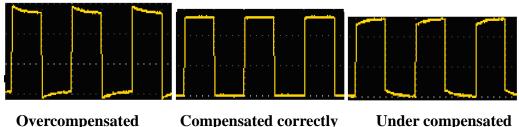


Figure 3-7 Displayed Waveforms of the Probe Compensation

3. Repeat the steps mentioned if needed.

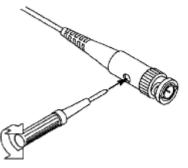


Figure 3-8 Adjust Probe

## How to Set the Probe Attenuation Coefficient

The probe has several attenuation coefficients, which will influence the vertical scale factor of the oscilloscope.

To change or check the probe attenuation coefficient in the menu of oscilloscope:

- (1) Push the function menu button of the used channels (CH1 or CH2 button).
- (2) Select **Probe** in the bottom menu; select **Attenu** in the right menu, turn the **M** rotary control to select the proper value corresponding to the probe.

This setting will be valid all the time before it is changed again.



#### Caution:

The default attenuation coefficient of the probe on the instrument is preset to 10X.

Make sure that the set value of the attenuation switch in the probe is the same as the menu selection of the probe attenuation coefficient in the oscilloscope.

The set values of the probe switch are 1X and 10X (see *Figure 3-9*).

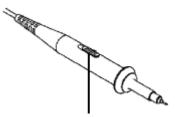


Figure 3-9 Attenuation Switch



#### Caution:

When the attenuation switch is set to 1X, the probe will limit the bandwidth of the oscilloscope in 5MHz. To use the full bandwidth of the oscilloscope, the switch must be set to 10X.

#### **Identify the Probe Attenuation Coefficient Automatically**

The oscilloscope can identify the probe attenuation coefficient of the 100:1 (impedance  $5K\pm 20\%$ ) or 10:1 (impedance  $10K\pm 20\%$ ) probe with the identifying pin. When you attach the probe, the oscilloscope set the attenuation automatically on the oscilloscope vertical menu for the channel to match the probe.

For example, if you attach a 10:1 probe with the identifying pin, the screen will prompt "The probe attenuation factor is X10", and set the attenuation to 10X automatically on the oscilloscope vertical menu for the channel.

## How to Use the Probe Safely

The safety guard ring around the probe body protects your finger against any electric shock, shown as *Figure 3-10*.



Figure 3-10 Finger Guard



## Warning:

To avoid electric shock, always keep your finger behind the safety guard ring of the probe during the operation.

To protect you from suffering from the electric shock, do not touch any metal part of the probe tip when it is connected to the power supply.

Before making any measurements, always connect the probe to the instrument and connect the ground terminal to the earth.

## How to Implement Self-calibration

The self-calibration application can make the oscilloscope reach the optimum condition rapidly to obtain the most accurate measurement value. You can carry out this application program at any time. This program must be executed whenever the change of ambient temperature is  $5^{\circ}$ C or over.

Before performing a self-calibration, disconnect all probes or wires from the input connector. Push the **Utility** button, select **Function** in the bottom menu, select **Adjust**. in the left menu, select **Self Cal** in the bottom menu; run the program after everything is ready.

## Introduction to the Vertical System

As shown in *Figure 3-11*, there are a few of buttons and rotary controls in **Vertical Controls**. The following practices will gradually direct you to be familiar with the using of the vertical setting.



Figure 3-11 Vertical Control Zone

1. Use the **Vertical Position** rotary control to show the signal in the center of the waveform window. The **Vertical Position** rotary control functions the regulating of the vertical display position of the signal. Thus, when the **Vertical Position** rotary control is rotated, the pointer of the earth datum point of the channel is directed to move up and down following the waveform.

#### **Measuring Skill**

If the channel is under the DC coupling mode, you can rapidly measure the DC component of the signal through the observation of the difference between the wave form and the signal ground.

If the channel is under the AC mode, the DC component would be filtered out. This mode helps you display the AC component of the signal with a higher sensitivity.

#### Vertical offset back to 0 shortcut key

Turn the **Vertical Position** rotary control to change the vertical display position of channel and push the position rotary control to set the vertical display position back to 0 as a shortcut key, this is especially helpful when the trace position is far out of the screen and want it to get back to the screen center immediately.

- 2. Change the Vertical Setting and Observe the Consequent State Information Change. With the information displayed in the status bar at the bottom of the waveform window, you can determine any changes in the channel vertical scale factor.
  - Turn the **Vertical Scale** rotary control and change the "Vertical Scale Factor (Voltage Division)", it can be found that the scale factor of the channel corresponding to the status bar has been changed accordingly.
  - Push buttons of CH1, CH2 and Math, the operation menu, symbols, waveforms and scale factor status information of the corresponding channel will be displayed in the screen.

## **Introduction to the Horizontal System**

Shown as *Figure 3-12*, there are a button and two rotary controls in the **Horizontal Controls**. The following practices will gradually direct you to be familiar with the setting of horizontal time base.



Figure 3-12 Horizontal Control Zone

- 1. Turn the **Horizontal Scale** rotary control to change the horizontal time base setting and observe the consequent status information change. Turn the **Horizontal Scale** rotary control to change the horizontal time base, and it can be found that the **Horizontal Time Base** display in the status bar changes accordingly.
- 2. Use the **Horizontal Position** rotary control to adjust the horizontal position of the signal in the waveform window. The **Horizontal Position** rotary control is used to control the triggering displacement of the signal or for other special applications. If it is applied to triggering the displacement, it can be observed that the waveform moves horizontally with the rotary control when you rotate the **Horizontal Position** rotary control.

#### Triggering displacement back to 0 shortcut key

Turn the **Horizontal Position** rotary control to change the horizontal position of channel and push the **Horizontal Position** rotary control to set the triggering displacement back to 0 as a shortcut key.

3. Push the **Horizontal HOR** button to switch between the normal mode and the wave zoom mode.

## Introduction to the Trigger System

As shown in *Figure 3-13*, there are one rotary control and three buttons make up **Trigger Controls**. The following practices will direct you to be familiar with the setting of the trigger system gradually.



Figure 3-13 Trigger Control Zone

- 1. Push the **Trigger Menu** button and call out the trigger menu. With the operations of the menu selection buttons, the trigger setting can be changed.
- Use the Trigger Level rotary control to change the trigger level setting. By turning the Trigger Level rotary control, the trigger indicator in the screen will move up and down. With the movement of the trigger indicator, it can be observed that the trigger level value displayed in the screen changes accordingly. Note: Turning the Trigger Level rotary control can change trigger level value and it is also the hotkey to set trigger level as the vertical mid point values of the amplitude of the trigger signal.
- 3. Push the **Force** button to force a trigger signal, which is mainly applied to the "Normal" and "Single" trigger modes.

# 4. Advanced User Guidebook

Up till now, you have already been familiar with the basic operations of the function areas, buttons and rotary controls in the front panel of the oscilloscope. Based the introduction of the previous Chapter, the user should have an initial knowledge of the determination of the change of the oscilloscope setting through observing the status bar. If you have not been familiar with the above-mentioned operations and methods yet, we advise you to read the section of Chapter 3 "Junior User Guidebook".

This chapter will deal with the following topics mainly:

- How to Set the Vertical System
- How to Set the Horizontal System
- How to Set the Trigger/Decoding System
- How to Implement the Sampling Setup
- How to Set the Display System
- How to Save and Recall Waveform
- How to Record/Playback Waveforms
- How to Clone a waveform
- How to Implement the Auxiliary System Function Setting
- How to Update your Instrument Firmware
- How to Measure Automatically
- How to Measure with Cursors
- How to Use Autoscale
- How to Use Built-in Help
- How to Use Executive Buttons
- How to Print the Screen Image

It is recommended that you read this chapter carefully to get acquainted the various measurement functions and other operation methods of the oscilloscope.

## How to Set the Vertical System

The VERTICAL CONTROLS includes three menu buttons such as CH1, CH2 and Math, and four rotary controls such as Vertical Position, Vertical Scale for each channel.

#### Setting of CH1 and CH2

Each channel has an independent vertical menu and each item is set respectively based on the channel.

#### To turn waveforms on or off (channel, math)

Pushing the CH1, CH2, or Math buttons have the following effect:

- If the waveform is off, the waveform is turned on and its menu is displayed.
- If the waveform is on and its menu is not displayed, its menu will be displayed.
- If the waveform is on and its menu is displayed, the waveform is turned off and its menu goes away.

Function	Setting		Description
Menu			
	DC		Pass both AC and DC components of the input signal.
Coupling	AC		Block the DC component of the input signal.
	GROUND		Disconnect the input signal.
Inverted	ON		Display inverted waveform.
Inverteu	OFF		Display original waveform.
	Attenu	0.001X to 1000X	Step by $1 - 2 - 5$ . Match this to the probe attenuation factor to have an accurate reading of vertical scale.
Probe	MeasCurr	YES NO	If you are measuring current by probing the voltage drop across a resistor, choose <b>YES</b> .
	A/V (mA/V) V/A (mV/A)		Turn the <b>M</b> rotary control to set the Amps/Volts ratio. The range is 100 mA/V - 1 KA/V. Amps/Volts ratio = 1/Resistor value Volts/Amp ratio is automatically calculated.
Limit	Full band 20M		Get full bandwidth. Limit the channel bandwidth to 20MHz to reduce display noise.

The description of the Channel Menu is shown as the following list:

#### 1. To set channel coupling

Taking the Channel 1 for example, the measured signal is a square wave signal containing the direct current bias. The operation steps are shown as below:

(1) Push the **CH1** button to show the CH1 SETUP menu.

- (2) Select Coupling in the bottom menu.
- (3) Select **DC** in the right menu. Both DC and AC components of the signal are passed.
- (4) Select AC in the right menu. The direct current component of the signal is blocked.

#### 2. To adjust the probe attenuation

For correct measurements, the attenuation coefficient settings in the operating menu of the Channel should always match what is on the probe (see "*How to Set the Probe Attenuation Coefficient*" on P12). If the attenuation coefficient of the probe is 1:1, the menu setting of the input channel should be set to X1.

Take the Channel 1 as an example, the attenuation coefficient of the probe is 10:1, the operation steps are shown as follows:

- (1) Push the CH1 button to show the CH1 SETUP menu.
- (2) Select **Probe** in the bottom menu. Select **Attenu** in the right menu, turn the **M** rotary control to set it as 10×.

#### 3. To measure current by probing the voltage drop across a resistor

Take the Channel 1 as an example, if you are measuring current by probing the voltage drop across a  $1\Omega$  resistor, the operation steps are shown as follows:

- (1) Push the **CH1** button to show CH1 SETUP menu.
- (2) Select Probe in the bottom menu. In the right menu, set MeasCurr as YES, the A/V radio menu will appear below. Select it; turn the M rotary control to set the Amps/Volts ratio. Amps/Volts ratio = 1/Resistor value. Here the A/V radio should be set to 1.

#### 4. To invert a waveform

Waveform inverted: the displayed signal is turned 180 degrees against the phase of the earth potential.

Taking the Channel 1 for example, the operation steps are shown as follows:

- (1) Push the CH1 button to show the CH1 SETUP menu.
- (2) Select **Inverted** in the bottom menu, switch to **ON.** the waveform is inverted. Push again to switch to **OFF**, the waveform goes back to its original one.

#### 5. To set bandwidth limit

When high frequency components of a waveform are not important to its analysis, the bandwidth limit control can be used to reject frequencies above 20 MHz.

Taking the Channel 1 for example, the operation steps are shown as below:

- (1) Push the **CH1** button to show CH1 SETUP menu.
- (2) Select Limit in the bottom menu.
- (3) Select **Full band** in the right menu. The high frequency of the signal will be allowed to pass.
- (4) Select **20M** in the right menu. The bandwidth is limited to 20 MHz. The frequencies above 20MHz will be rejected.

## **Use Mathematical Manipulation Function**

The **Mathematical Manipulation** function is used to show the results of the addition, multiplication, division and subtraction operations between two channels, the FFT operation for a channel, advanced math feature including Intg, Diff, Sqrt, user defined function, and digital filter. Press the **Math** button to display the menu on the bottom.

Functio	n Menu Setting		Description				
	Factor1	CH1 CH2	Select the signal source of the factor1				
	Sign	+ - * /	Select the sign of mathematical manipulation				
Dual Wfm Math	Factor2	CH1 CH2	Select the signal source of the factor2				
	Vertical (div)		Turn the $\mathbf{M}$ rotary control to adjust the vertical position of the Math waveform				
	Vertical (V/div)	Turn the <b>M</b> rotar, the Math wavefor	y control to adjust the vertical division of m				
	Source	CH1	Select CH1 as FFT source.				
	Source	CH2	Select CH2 as FFT source.				
		Hamming					
		Rectangle					
	Window	Blackman					
		Hanning	Select window for FFT.				
			Kaiser				
		Bartlett					
FFT		V RMS					
		Decibels					
	Format	Radian	V RMS and Decibels are				
		Degrees					
		Position value	Switch to select the horizontal position or				
	Hori (Hz)	Time base value/	time base of the FFT waveform, turn the <b>M</b> rotary control to adjust it				
	<b>T</b> 7 (* 1	Position value	Switch to select the vertical position or				
	Vertical	Division value/	vertical division of the FFT waveform, turn the <b>M</b> rotary control to adjust it				
User Function	Intg, Diff, Sqrt, and user defined function						

#### The Waveform Calculation menu:

User Manual					
	channel	CH1 CH2	Select channel		
		low-pass	Only the signals whose frequencies are lower than the current cut-off frequency can pass the filter.		
		high-pass	Only the signals whose frequencies are greater than the current cutoff frequency can pass the filter.		
	type	band-pass	Only the signals whose frequencies are greater than the cutoff frequency down and lower than the current cutoff frequency upper can pass the filter.		
DIR		band-reject	Only the signals whose frequencies are lower than the current cutoff frequency down or greater than the current cutoff frequency upper can pass the filter.		
	window	Retangular Tapered Triangular Hanning Hamming Blackman	Select window for digital filter		
	cut-off fre or upper down		Turn the <b>M</b> rotary control to set cut-off frequency		
	Vertical (div)		Turn the <b>M</b> rotary control to adjust the vertical position of Math waveform		
FFT Peak	ON OFF		Enable or disable FFT peak search. Dynamic marker $\bigtriangledown$ marks the FFT peak.		

User Manual

## Waveform math

Taking the additive operation between Channel 1 and Channels 2 for example, the operation steps are as follows:

- 1. Press the **Math** button to display the math menu in the bottom. The pink M waveform appears on the screen.
- 2. Select **Dual Wfm Math** in the bottom menu.
- 3. In the right menu, select **Factor1** as **CH1**.
- 4. Select **Sign** as + in the right menu.
- 5. In the right menu, select Factor2 as CH2.
- 6. Select **Vertical** (**div**) in the right menu, turn the **M** rotary control to adjust the vertical position of Math waveform.

7. Select **Vertical** (**V**/**div**) in the right menu, turn the **M** rotary control to adjust the vertical division of Math waveform.

## **User defined function**

- 1. Press the **Math** button to display the math menu in the bottom.
- 2. Select **User Function** in the bottom menu, an expression input keyboard pops up.

Expression	• (c	(ch1)+Intg(ch1)+Diff(ch2)+Sqrt(8)										
	1	2	3	4	5	6	7	8	9	0	×	Clear
				(cl	n1)	(c	h2) (					Channel
Operators —			F I	- ] :	* ,	/		()	)			0 "
			Ir	ıtg	Di	ff	Se	ırt			<b>↓</b>	Confirm
			/					$\overline{\ }$				
		Inte	gral	Ľ	Differ	entia	al S	Squa	re ro	ot		

3. Create an expression. When done, choose ← in the keyboard to confirm. The division of Math waveform is displayed at the left bottom of screen.

<mark>1</mark> 2.00V~	0.00格	100.0000KHz
<b>2</b> 2.00V~	0.00格	100.0000KHz (m: 5.00)

## **Digital Filter**

Digital filter provides 4 types of filters (low pass, high pass, band pass and band reject). The specified frequencies can be filtered by setting the cut-off frequency.

- 1. Press the **Math** button to display the math menu in the bottom.
- 2. Select **DIR** in the bottom menu.
- 3. In the right menu, select **channel** as **CH1** or **CH2**.
- 4. In the right menu, select **type**, select the desired filter type.
- 5. In the right menu, select **window**, select the desired window.
- 6. When **low-pass** or **high-pass** type is selected, select **cut-off fre** in the right menu. When **band-pass** or **band-reject** type is selected, select **upper** or **down** in the right menu. Turn **M** rotary control to adjust the frequency.
- 7. In the right menu, select **Vertical (div)**, turn **M** rotary control to adjust the vertical position of Math waveform. The voltage division of Math waveform is the same as the selected channel.

Note: On the Scan format, digital filter is disabled.

## Using FFT function

The FFT (fast Fourier transform) math function mathematically converts a time-domain waveform into its frequency components. It is very useful for analyzing the input signal on Oscilloscope. You can match these frequencies with known system frequencies, such as system clocks, oscillators, or power supplies.

FFT function in this oscilloscope transforms 8192 data points of the time-domain signal into its frequency components mathematically (the record length should be 10K or above). The final frequency contains 4096 points ranging from 0Hz to Nyquist frequency.

Taking the FFT operation for example, the operation steps are as follows:

- 1. Press the **Math** button to display the math menu in the bottom.
- 2. Select **FFT** in the bottom menu.
- 3. In the right menu, select **Source** as **CH1**.
- 4. In the right menu, select **Window**. In the left menu, turn the **M** rotary control to select the proper window type.
- 5. In the right menu, select **Format**. In the left menu, turn the **M** rotary control to select amplitude unit (**V RMS**, **Decibels**) or phase unit (**Radian**, **Degrees**).
- 6. Select **Hori** (**Hz**) in the right menu; select repeatedly to make the M symbol in front of the horizontal position value (the upper one), turn the M rotary control to adjust the horizontal position of FFT waveform; then select to make the M symbol in front of the time base value below, turn the M rotary control to adjust the time base of FFT waveform.
- 7. Select **Vertical** in the right menu; do the same operations as above to set the vertical position and vertical division.

#### To select the FFT window

■ There are 6 FFT windows. Each one has trade-offs between frequency resolution and magnitude accuracy. What you want to measure and your source signal characteristics help you to determine which window to use. Use the following guidelines to select the best window.

Туре	Characteristics	Window
Hamming	<ul> <li>Better solution for magnitude than Rectangle, and good for frequency as well. It has slightly better frequency resolution than Hanning.</li> <li>Recommend to use for:</li> <li>Sine, periodic and narrow band random noise.</li> <li>Transients or bursts where the signal levels before and after the event are significantly different.</li> </ul>	

	Best solution for frequency, worst for magnitude.	
	Best type for measuring the frequency spectrum of nonrepetitive signals and measuring frequency components near DC.	
	Recommend to use for:	
Rectangle	• Transients or bursts, the signal level before and after the event are nearly equal.	
	• Equal-amplitude sine waves with frequencies those are very close.	
	• Broadband random noise with a relatively slow varying spectrum.	
	Best solution for magnitude, worst for frequency.	
Blackman	Recommend to use for:	$\wedge$
2	• Single frequency waveforms, to find higher order harmonics.	
	Good for magnitude, but poorer frequency resolution than Hamming.	
	Recommend to use for:	$\frown$
Hanning	• Sine, periodic and narrow band random noise.	
	• Transients or bursts where the signal levels before and after the event are significantly different.	
	The frequency resolution when using the Kaiser window is fair; the spectral leakage and amplitude accuracy are both good.	
Kaiser	The Kaiser window is best used when frequencies are very close to the same value but have widely differing amplitudes (the side lobe level and shape factor are closest to the traditional Gaussian RBW). This window is also good for random signals.	
Bartlett	The Bartlett window is a slightly narrower variant of the triangular window, with zero weight at both ends.	

#### Notes for using FFT

■ Use the default **dB** scale for details of multiple frequencies, even if they have very different amplitudes. Use the **Vrms** scale to compare frequencies.

- DC component or offset can cause incorrect magnitude values of FFT waveform. To minimize the DC component, choose AC Coupling on the source signal.
- To reduce random noise and aliased components in repetitive or single-shot events, set the oscilloscope acquisition mode to average.

#### What is Nyquist frequency?

The Nyquist frequency is the highest frequency that any real-time digitizing oscilloscope can acquire without aliasing. This frequency is half of the sample rate. Frequencies above the Nyquist frequency will be under sampled, which causes aliasing. So pay more attention to the relation between the frequency being sampled and measured.

#### **Use Vertical Position and Scale Rotary controls**

1. The **Vertical Position** rotary control is used to adjust the vertical positions of the waveforms.

The analytic resolution of this control rotary control changes with the vertical division.

2. The **Vertical Scale** rotary control is used to regulate the vertical resolution of the wave forms. The sensitivity of the vertical division steps as 1-2-5.

The vertical position and vertical resolution is displayed at the left bottom corner of the screen (see *Figure 4-1*).

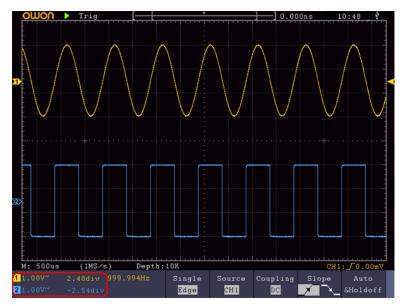


Figure 4-1 Information about Vertical Position


## How to Set the Horizontal System

The **HORIZONTAL CONTROLS** includes the **Horizontal HOR** button and such rotary controls as **Horizontal Position** and **Horizontal Scale**.

- 1. **Horizontal Position** rotary control: this rotary control is used to adjust the horizontal positions of all channels (include those obtained from the mathematical manipulation), the analytic resolution of which changes with the time base.
- 2. **Horizontal Scale** rotary control: it is used to set the horizontal scale factor for setting the main time base or the window.
- 3. **Horizontal HOR** button: push it to switch between the normal mode and the wave zoom mode. For more detailed operations, see the introductions below.

## Zoom the Waveform

Push the **Horizontal HOR** button to enter wave zoom mode. The top half of the display shows the Main window and the bottom half displays the Zoom window. The Zoom window is a magnified portion of the Main window.

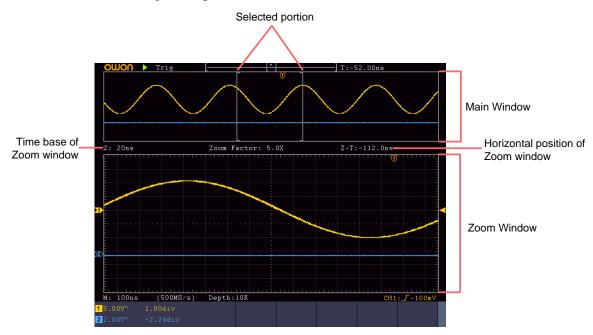

In normal mode, the **Horizontal Position** and **Horizontal Scale** rotary controls are used to adjust the horizontal position and time base of the Main window.

In wave zoom mode, the **Horizontal Position** and **Horizontal Scale** rotary controls are used to adjust the horizontal position and time base of the Zoom window.

## How to Set the Trigger/Decoding System

Trigger determines when DSO starts to acquire data and display waveform. Once trigger is set correctly, it can convert the unstable display to meaningful waveform.

When DSO starts to acquire data, it will collect enough data to draw waveform on left of trigger point. DSO continues to acquire data while waiting for trigger condition to occur. Once it detects a trigger it will acquire enough data continuously to draw the waveform on right of trigger point.

Trigger control area consists of 1 rotary control and 2 menu buttons.

Trigger Level: The rotary control that set the trigger level; push the rotary

control and the level will be set as the vertical mid point values of the amplitude of the trigger signal.

Force: Force to create a trigger signal and the function is mainly used in "Normal" and "Single" mode.

Trigger Menu: The button that activates the trigger control menu.

## **Trigger Control**

The oscilloscope provides four trigger types: single trigger, alternate trigger, logic trigger and bus trigger. Each type of trigger has different sub menus.

Two ways to enter trigger mode:

**Key operation**: Press Trigger **Menu** panel button, then bottom menu Trigger Type, select Single, ALT, Logic or Bus Trigger on the popup right menus, rotate M rotary control to choose different trigger types.

**Single trigger**: Use a trigger level to capture stable waveforms in two channels simultaneously.

Alternate trigger: Trigger on non-synchronized signals.

**Logic trigger**: Trigger the signal according to the condition of logic relationship. **Bus trigger**: Set bus timing trigger.

The **Single Trigger, Alternate Trigger, Logic Trigger** and **Bus Trigger** menus are described respectively as follows:

## **Single Trigger**

Single trigger has eight types: edge trigger, video trigger, slope trigger, pulse trigger, runt trigger, windows trigger, timeout trigger and Nth edge trigger.

Edge Trigger: I	t occurs when the trigger input passes through a specified voltage
]	evel with the specified slope.
Video Trigger:	Trigger on fields or lines for standard video signal.
Slope Trigger: 7	The oscilloscope begins to trigger according to the signal rising or
t	falling speed.
Pulse Trigger: 1	Find pulses with certain widths.
Runt Trigger: 7	Frigger pulses that pass through one trigger level but fail to pass
t	hrough the other trigger level.
Windows Trigg	er: Provide a high trigger level and low trigger level, the oscilloscope
	triggers when the input signal passes through the high trigger level or
	the low trigger level.
<b>Timeout Trigge</b>	er: The oscilloscope triggers when the time interval from when the
1	rising edge (or the falling edge) passes through the trigger level to
•	when the neighbouring falling edge (or the rising edge) passes
1	through the trigger level is greater than the timeout time set.
Nth Edge Trigg	er: The oscilloscope triggers on the Nth edge that appears on the
	specified idle time.
The eight trigger	modes in Single Trigger are described respectively as follows:

## 1. Edge Trigger

An edge trigger occurs on trigger level value of the specified edge of input signal. Select Edge trigger mode to trigger on rising edge or falling edge.

In Edge Trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, CH1:DC-f0.00mV, indicates that trigger type is edge, trigger source is CH1, coupling is DC, and trigger level is 0.00mV.

Menu	Settings	Instruction
Single Mode	Edge	Set vertical channel trigger type as edge trigger.
	CH1	Channel 1 as trigger signal.
	CH2	Channel 2 as trigger signal.
Source	EXT	External trigger as trigger signal
	EXT/5	1/5 of the external trigger signal as trigger signal.
	AC Line	AC power line as trigger signal.
	AC	Block the direct current component.
	DC	Allow all component pass.
Coupling	HF	Block the high-frequency signal, only low-frequency
Coupling		component pass.
	LF	Block the low-frequency signal, only high-frequency
		component pass. (LF menu is only for certain models)
Slope		Trigger on rising edge
Slope		Trigger on falling edge
	Auto	Acquire waveform even no trigger occurs
	Normal	Acquire waveform when trigger occurs
Mode	Single	When trigger occurs, acquire one waveform then stop
WIOUE	Holdoff	100 ns - 10 s, turn the M rotary control to set time
Holdoff		interval before another trigger occur, press (
TIOIdOIT		$\rightarrow$ panel button to move cursor to choose which digit
	Reset	to be set.
		Set Holdoff time as default value (100 ns).

Edge menu list:

**Trigger Level**: trigger level indicates vertical trig position of the channel, rotate trig level rotary control upward and downward to move trigger level, during setting, an orange red dotted line displays to show trig position, and the value of trigger level changes at the right corner, after setting, dotted line disappears.

#### 2. Video Trigger

Choose video trigger to trigger on fields or lines of NTSC, PAL or SECAM standard video signals.

In Video Trigger mode, the trigger setting information is displayed on bottom right of

the screen, for example, CH1: WALL, indicates that trigger type is Video, trigger

source is CH1, and Sync type is Even.

Video Trigge	r menu list:	
MENU	SETTING	INSTRUCTION
Single Mode	Video	Set vertical channel trigger type as video trigger
Course	CH1	Select CH1 as the trigger source
Source	CH2	Select CH2 as the trigger source
	NTSC	
Modu	PAL	Select video modulation
	SECAM	
	Line	Synchronic trigger in video line
	Field	Synchronic trigger in video field
Sync	Odd	Synchronic trigger in video odd filed
	Even	Synchronic trigger in video even field
	Line NO.	Synchronic trigger in designed video line, turn the M
		rotary control to set the line number
Mode	Auto	Acquire waveform even no trigger occurred
Holdoff	Auto	Acquire waverorini even no urgger occurred

#### Video Trigger menu list.

## 3. Slope Trigger

Slope trigger sets the oscilloscope as the positive/negative slope trigger within the specified time.

In Slope Trigger mode, the trigger setting information is displayed on bottom right of

the screen, for example,  $CH1: \int \Delta 0.00 mV$ , indicates that trigger type is slope, trigger source is CH1, slope is rising, 0.00mV is the differential between up level and low level threshold.

Sole uger menu list.			
MENU	SETTING	INSTRUCTION	
Single Mode	Slope	Set vertical channel trigger type as slope trigger.	
Source	CH1 CH2	Select CH1 as the trigger source. Select CH2 as the trigger source.	
	slope	Slope selecting	
When		Set slope condition; turn the <b>M</b> rotary control to set slope time, press $\overleftarrow{-}$ $\overrightarrow{-}$ panel button to move cursor to choose which digit to be set.	

#### Slope trigger menu list:

	High level	Adjust <b>M</b> rotary control to set the High level upper
Threshold	Low level	limit.
&SlewRate	Slew rate	Adjust <b>M</b> rotary control to set Low level lower limit.
		Slew rate = (High level - Low level) / Settings
	Auto	Acquire waveform even no trigger occurred
	Normal	Acquire waveform when trigger occurred
Mode	Single	When trigger occurs, acquire one waveform then stop
	Holdoff	100  ns - 10  s, turn the <b>M</b> rotary control to set time
Holdoff		interval before another trigger occur, press 🗲
11010011		$\rightarrow$ panel button to move cursor to choose which
	Reset	digit to be set.
		Set Holdoff time as 100 ns

#### 4. Pulse Width Trigger

Pulse trigger occurs according to the width of pulse. The abnormal signals can be detected through setting up the pulse width condition.

In Pulse Width Trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, CH1:DC-\_\_O.OOmV, indicates that trigger type is pulse width, trigger source is CH1, coupling is DC, polarity is positive, and trigger level is 0.00mV.

MENU	SETTING	INSTRUCTION
Single Mode	Pulse	Set vertical channel trigger type as pulse trigger.
Source	CH1	Select CH1 as the trigger source.
Source	CH2	Select CH2 as the trigger source.
Coupling	AC	Not allow DC portion to pass.
Coupling	DC	Allow all portion pass.
when	Polarity	Choose the polarity
	$\begin{array}{c} \leftarrow \rightarrow \\ \leftarrow \rightarrow \end{array}$	Select pulse width condition and adjust the <b>M</b> rotary control to set time, press $\overleftarrow{-}$ $\overrightarrow{-}$ panel button to move cursor to choose which digit to be set.

#### Pulse Width Trigger menu list:


[		
	Auto	Acquire waveform even no trigger occurred
	Normal	Acquire waveform when trigger occurred
Mode	Single	When trigger occurs, acquire one waveform then stop
WIGue	Holdoff	100 ns - 10 s, adjust M rotary control to set time
Holdoff		interval before another trigger occur, press $\leftarrow$ $\rightarrow$
		panel button to move cursor to choose which digit to
	Reset	be set.
		Set Holdoff time as 100 ns

## **5.Runt Trigger**

Trigger pulses that pass through one trigger level but fail to pass through the other trigger level. Shown as below figure,

In Runt Trigger mode, the trigger setting information is displayed on bottom right of

the screen, for example,  $CH1: Jul \triangle 0.00mV$ , indicates that trigger type is runt, trigger source is CH1, polarity is positive, 0.00mV is the differential between up level and low level threshold.

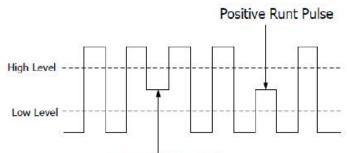

Negative Runt Pulse

Runt Trigger

Runt Trigger menu list:			
MENU	SETTING	INSTRUCTION	
Single Mode	Runt	Set vertical channel trigger type as runt trigger.	
Source	CH1	Select CH1 as the trigger source.	
Source	CH2	Select CH2 as the trigger source.	
	Up Level	Adjust the $\mathbf{M}$ rotary control to set the up level	
Threshold	Low Level	threshold.	
Threshold		Adjust the $\mathbf{M}$ rotary control to set the low level	
		threshold.	
Canditian	Polarity	Positive Polarity, the oscilloscope triggers on the	
		positive runt pulse.	
Condition	ilit juit	Negative Polarity, the oscilloscope triggers on the	
		negative runt pulse.	

	Lei Lei	FA FA	Adjust the <b>M</b> rotary control to set pulse width, press ← → panel button to move cursor to choose which digit to be set. Trigger when runt pulse is greater than the set pulse width. Trigger when runt pulse equals to the set pulse width. Trigger when runt pulse is lower than the set pulse width.
		uto	Acquire waveform even no trigger occurred
	Noi	rmal	Acquire waveform when trigger occurred
	Sin	ıgle	When trigger occurs, acquire one waveform then stop
Mode	Hol	doff	100 ns - 10 s, adjust <b>M</b> rotary control to set time
Holdoff			interval before another trigger occur, press $\overleftarrow{-}$
			panel button to move cursor to choose which digit to be
	Re	eset	set.
			Set Holdoff time as 100 ns

## **6.Windows Trigger**

Provide a high trigger level and low trigger level, the oscilloscope triggers when the input signal passes through the high trigger level or the low trigger level. In Windows Trigger mode, the trigger setting information is displayed on bottom right of the screen, for example,  $CH1:\pi In \triangle 0.00mV$ , indicates that trigger type is windows, trigger source is CH1, polarity is positive, 0.00mV the differential between up level and low level threshold.

MENU	SETTING	INSTRUCTION
Single Mode	Windows	Set vertical channel trigger type as Windows trigger.
Source	CH1 CH2	Select CH1 as the trigger source. Select CH2 as the trigger source.
Threshold	Up Level Low Level	Adjust the <b>M</b> rotary control to set the up level threshold. Adjust the <b>M</b> rotary control to set the low level threshold.
Condition	Polarity	Positive Polarity, the oscilloscope triggers on the positive Windows pulse. Negative Polarity, the oscilloscope triggers on the negative Windows pulse.

Windows Trigger menu list:

		ufu Mur	Enter: Triggers when the trigger signal enters the specified trigger level range. Exit: Triggers when the trigger signal exits the specified trigger level range. Time: Specify the hold time of the input signal after entering the specified trigger level. The oscilloscope triggers when the accumulated hold time is greater than the windows time. Available range is 30ns-10s, default 100ns.
		uto	Acquire waveform even no trigger occurred
	Nor	rmal	Acquire waveform when trigger occurred
Mode	Sin	ıgle	When trigger occurs, acquire one waveform then stop
WIOde	Hol	doff	100 ns - 10 s, adjust <b>M</b> rotary control to set time
Holdoff			interval before another trigger occur, press $\leftarrow$ $\rightarrow$
11010011			panel button to move cursor to choose which digit to be
	Re	eset	set.
			Set Holdoff time as 100 ns

## 7.Timeout Trigger

The oscilloscope triggers when the time interval from when the rising edge (or the falling edge) passes through the trigger level to when the neighbouring falling edge (or the rising edge) passes through the trigger level is greater than the timeout time set.

In Timeout Trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, CH1: f=150V, indicates that trigger type is Timeout, trigger source is CH1, edge is positive, 0.00mV is up level or low level threshold.

MENU	SETTING	INSTRUCTION
Single	Timeout	Set vertical channel trigger type as Timeout trigger.
Mode	Timeout	
Source	CH1	Select CH1 as the trigger source.
Source	CH2	Select CH2 as the trigger source.
	Edge	Start timing when the rising edge of the input signal
Edge	$\nearrow \mathbb{Z}$	passes through the trigger level.
Euge		Start timing when the falling edge of the input signal
		passes through the trigger level.
Configure		Set idle time. Idle time means the minimum time of idle
	Idle Time	clock before searching data that can meet trigger
		conditions. Available range is 30ns-10s, default 100ns.


Timeout Trigger menu list:

	Auto	Acquire waveform even no trigger occurred
	Normal	Acquire waveform when trigger occurred
Mode	Single	When trigger occurs, acquire one waveform then stop
Mode	Holdoff	100 ns - 10 s, adjust M rotary control to set time
Holdoff		interval before another trigger occur, press $\leftarrow \rightarrow$
Holdoff		panel button move cursor to choose which digit to be
	Reset	set.
		Set Holdoff time as 100 ns

## 8.Nth Edge trigger

The oscilloscope triggers on the Nth edge that appears on the specified idle time. As figure shown below, the oscilloscope should trigger on the second falling edge after the specified idle time and the idle time should be set to P1/P2/P3/P4 < Idle Time < M. Wherein, M, P1, P2, P3 and P4 are positive or negative pulse width participating in the counting.

In Nth Edge Trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, CH1:Nth0.00mV, indicates that trigger type is Nth Edge, trigger source is CH1, -150V is up level or low level threshold.

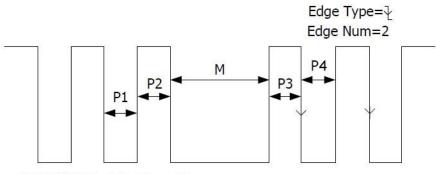

P1/P2/P3/P4<Idle Time<M

Nth Edge Trigger

Nth Eage Ir	<b>Nth Edge Trigger menu</b> list:		
MENU	SETTING	INSTRUCTION	
Single Mode	Nth Edge	Set vertical channel trigger type as Nth Edge trigger.	
Source	CH1	Select CH1 as the trigger source.	
Source	CH2	Select CH2 as the trigger source.	

Nth Edge Trigger menu list:

1		
	Edge	Trigger on the rising edge of the input signal when
Edge		voltage level meets the specified trigger level.
Luge		Trigger on the falling edge of the input signal when
_		voltage level meets the specified trigger level.
		Set idle time before the edge counting in Nth Edge
	Idle Time	Trigger. Adjust M rotary control to set idle time press
	Idle Tille	$\leftarrow$ $\rightarrow$ panel button to move cursor to choose which
Configure		digit to be set. Available range is 30ns-10s, default
		100ns.
	Edge Num	Set the edge number value of "N" in Nth Edge trigger.
	Auto	Acquire waveform even no trigger occurred
	Normal	Acquire waveform when trigger occurred
Mada	Single	When trigger occurs, acquire one waveform then stop
Mode	Holdoff	100 ns - 10 s, adjust <b>M</b> rotary control to set time
Haldoff		interval before another trigger occur, press $\leftarrow$ $\rightarrow$
Holdoff		panel button move cursor to choose which digit to be
	Reset	set.
		Set Holdoff time as 100 ns

# Alternate Trigger (Trigger mode: Edge)

Trigger signal comes from two vertical channels when alternate trigger is on. This mode is used to observe two unrelated signals. Trigger mode is edge trigger.

Menu	Settings	Instruction
Alternate Mode	Edge	Set vertical channel trigger type as edge trigger.
Source	CH1	Channel 1 as trigger signal.
Source	CH2	Channel 2 as trigger signal.
Coupling	AC	Block the direct current component.
Coupling	DC	Allow all component pass.
Slope	$\mathbf{x}$	Trigger on rising edge Trigger on falling edge
	Auto	Acquire waveform even no trigger occurs
Mode Holdoff	Holdoff	100 ns - 10 s, turn the <b>M</b> rotary control to set time interval before another trigger occur, press $\overleftarrow{}$ $\xrightarrow{}$ panel button to move cursor to choose which digit to be set.
	Reset	Set Holdoff time as default value (100 ns).

Alternate trigger (Trigger Type: Edge) menu list:

# Logic Trigger

Trigger according to logic relation.

In Logic Trigger mode, the trigger setting information is displayed on bottom right of

the screen, for example,  $\bigcirc$  CH1:H 2.00V CH2:H 0.00mV, indicates that

trigger type is Logic, logic mode is AND, CH1 high level and trigger level is 0.00mV, CH2 high level and trigger level is 0.00mV.

MENU	SETTING	INSTRUCTION
Mode	Logic	Set vertical channel trigger type as Logic trigger.
	AND	Set logic mode as AND.
Logic	OR	Set logic mode as OR.
Mode	XNOR	Set logic mode as XNOR.
	XOR	Set logic mode as XOR.
	CH1	Set CH1 as High Level, Low level, high or low level,
		Rise and Fall.
	CH2	Set CH2 as High Level, Low level, high or low level,
Input Mode		Rise and Fall.
		<i>Note :</i> When input mode of one channel is set as Rise or
		Fall, the other channel could not be set as Rise and Fall
		at the same time.
	Goes True	Trigger when condition turns True from False.
	Goes False	Trigger when condition turns False from True.
	Is True >	Trigger when the time of true condition is more than
Out Mod		the set time
Out Mou	Is True <	Trigger when the time of true condition is lower than
		the set time
	Is True =	Trigger when the time of true condition is equal to the
	15 11uc –	set time
	Auto	Acquire waveform even no trigger occurred
	Normal	Acquire waveform when trigger occurred
Mode	Single	When trigger occurs, acquire one waveform then stop
Widde	Holdoff	100 ns - 10 s, adjust <b>M</b> rotary control to set time
Holdoff		interval before another trigger occur, press $\overleftarrow{\leftarrow}$ $\rightarrow$
11010011		panel button move cursor to choose which digit to be
	Reset	set.
		Set Holdoff time as 100 ns

#### Logic Trigger menu list:


# **Bus Trigger**

# 1. RS232 Trigger

RS232 is a serial communication mode used in the data transmission between PCs or between PC and Terminal. A character is transmitted as a frame of data which consist of 1bit start bit, 5-8bits data bits, 1bit check bit and 1-2 stop bits.

In RS232 bus trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, RS232 CH1:0.00mV, indicates that trigger type

is RS232, CH1 trigger level is 0.00mV. Format as shown in the figure below,

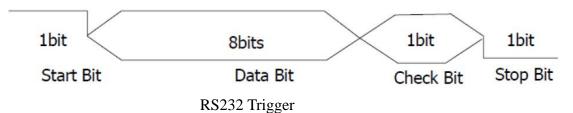

RS232 Trigger menu list:				
MENU	SETTING		INSTRUCTION	
Bus Type	RS	232	Set vertical channel bus type as RS232 trigger.	
	Sour	CH1	Select CH1 as the trigger source.	
	ce	CH2	Select CH2 as the trigger source.	
Input	Pola	Nor	Select polarity of data transmission as Normal. Select	
mput	rity	mal	polarity of data transmission as Inverted.	
		Inve		
		rted		
			Trigger on the start frame of position. After choosing	
	Star	t	this condition, press Configure to enter detailed	
			settings.	
			Trigger when error frame is detected. After choosing	
	Error		this condition, press Configure to enter detailed	
When			settings.	
			Trigger when Chk Error is detected. After choosing	
	Chk Error		this condition, press Configure to enter detailed	
			settings.	
			Trigger on the last bit of the preset data. After	
	Data		choosing this condition, press Configure to enter	
			detailed settings.	
			Common Baud: adjust M rotary control to choose	
	St	art	common baud.	
			Custom Baud: adjust M rotary control to choose	
			baud, ranges from 50 to 10,000,000.Stop Bit: Select "1" or "2".	
Configure			Parity: "NO""EVEN""ODD"	
			<b>Common Baud:</b> adjust <b>M</b> rotary control <b>to choose</b>	
	Er	ror	common baud.	
			<b>Custom Baud:</b> adjust <b>M</b> rotary control <b>to choose</b>	
			<b>baud</b> , ranges from 50 to 10,000,000.	
			<b>buuu</b> , 1011205 110111 50 to 10,000,000.	

## DS727 Tri


		Even-Odd: Select Even or Odd.	
		Common Baud: adjust M rotary control to choose	
	Chk Error	common baud.	
		Custom Baud: adjust M rotary control to choose	
		baud, ranges from 50 to 10,000,000.	
		Data Bits: Set as $5$ , $6$ , $7$ , 8 bits.	
	Data	Data: Set data according to data bits, ranges from 0-31,	
		0-63, 0-127 or 0-255.	
Mode	Auto	Acquire waveform even no trigger occurred	
	Normal	Acquire waveform when trigger occurred	
Holdoff	Single	When trigger occurs, acquire one waveform then stop	

## 2. I2C Trigger

The I2C serial bus consists of SCL and SDA. The transmission rate is determined by SCL, and the transmission data is determined by SDA. As shown in below figure, oscilloscope can trigger on the start, restart, stop, ack lost, specific device address or data value, also device address and data value at the same time.

In I2C bus trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, I2C CH1:0.00mV CH2:0.00mV, indicates that trigger tune is I2C CH1 trigger level is 0.00mV.

trigger type is I2C, CH1 trigger level is 0.00mV, CH2 trigger level is 0.00mV.

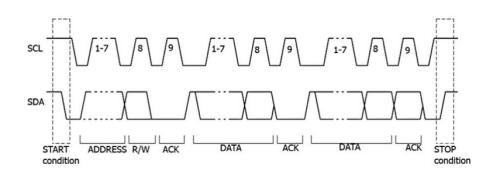

I2C Trigger menu l	ist:
--------------------	------

MENU	SETTING	INSTRUCTION
Bus Type	I2C	Set vertical channel bus type as I2C trigger.
Source	CH1	Set CH1 as SCL or SDA.
	CH2	Set CH2 as SCL or SDA.
When	Start	Trigger when SDA data transitions from high to low while SCL is high.
	Restart	When another start condition occurs before a stop condition.
	Stop	Trigger when SDA data transitions from low to high

			while SCL is high.
	Ack Lost		Trigger when SDA data is high during any
			acknowledgement of SCL clock position.
	Addre		Trigger on the read or write bit when the preset
	Addre	88	address is met.
		Addr	Set Address Bits to be "7", "8"or"10".
		Bits	
	Adr	Addr	Set address according to the preset address bits,
	For	ess	address range is 0-127, 0-255, 0-1023 respectively.
	mat		Set Data Direction to be Read or Write.
		Dire	Note: The set is not available when Address bits is set
		ction	to "8".
	Data		Search for the preset data value on SDA and trigger on
			the dump edge of SCL of the last bit of the data area.
		Byte	
	leng	lengt	
		h	Set data byte length, available range 1-5 bytes. Adjust
	DatF	Curr	<b>M</b> rotary control to set byte length.
	orma	entB	Select the data bit, ranges from 0 to (byte length*8 -1).
	t	it	Set data to be H, L or X (H or L)
	Ľ	Data	
			Set all the data bits to be the specified value in Data
		All	
-		Bits	
	Addr / Data		Trigger when Address and Data conditions are met at
			the same time .
Mode	Auto		Acquire waveform even no trigger occurred
	Normal		Acquire waveform when trigger occurred
Holdoff	Single		When trigger occurs, acquire one waveform then stop

# 3. SPI Trigger

Trigger on the specified data when the timeout condition is meet. When using SPI trigger, you need to specify the SCL and SDA data sources.

In SPI bus trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, SPI CH1:0.00mV CH2:0.00mV, indicates that trigger type is SPI, CH1 trigger level is 0.00mV, CH2 trigger level is 0.00mV.

MENU	SETTING	INSTRUCTION
Bus Type	SPI	Set vertical channel bus type as SPI trigger.
Source	CH1	Set CH1 as SCL or SDA.

**SPI Trigger menu** list:

	CH2	Set CH2 as SCL or SDA.
		Set the minimum time that SCL must be idle, that is a
		period of SCL, available range 100ns-10s. Time out
		means SCL keeps idle for a specified time before
Time Out	Time out	oscilloscope starts to search for the data(SDA) on
		which to trigger. adjust M rotary control to set time
		out, press $\overleftarrow{\leftarrow}$ $\rightarrow$ panel button move cursor to
		choose which digit to be set.
	Clock Edge	Set Edge Clock as Rising edge or Falling edge. Means
	$\sim$	sample the SDA data on the rising edge or falling edge
	_^ _ ^_	of the clock.
	Data Bits	Set the number of bits of the serial data character
		string. It can be set to any integer between 4-32. adjust
ClockEdg e&Data		M rotary control to set Data Bits.
	Current Bit	Set the number of the data bits, ranges from 0-31,
		adjust M rotary control to set Current Bit.
	Data	Set the value of the current data bit as H,L or X (H or
		L).
	All Bits	Set all the data bits to be the specified value in Data.
Mode	Auto	Acquire waveform even no trigger occurred
	Normal	Acquire waveform when trigger occurred
Holdoff	Single	When trigger occurs, acquire one waveform then stop

# 4. CAN Trigger

CAN (Controller Area Network) is a serial communication protocol of the ISO international standardization.

By using the CAN bus trigger, you can trigger on **Start of Frame**, **Type of Frame**, **Identifier**, **Data**, **ID & Data**, **End of Frame**, **Missing Ack**, or **Bit Stuffing Error**. You need to specify the signal source, trigger signal type, sample point, and signal rate of the CAN signal.

In CAN bus trigger mode, the trigger setting information is displayed on bottom right of the screen, for example, CAN = CH1:-126mV, indicates that trigger type is CAN, CH1 trigger level is -126 mV.

MENU	SETTING	INSTRUCTION	
Bus Type	CAN	Set vertical channel bus type as CAN trigger.	
Input Source	Course	CH1	Select CH1 as the trigger source.
	Source	CH2	Select CH2 as the trigger source.

## CAN Trigger menu list:

		CAN_H		N_H bus signal.	
	Туре	CAN_L		N_L bus signal.	
	- ) P •	TX	Transmiss	ion signal on the CAN signal line.	
		RX	Received s	signal on the CAN signal line.	
		Turn the <b>M</b> rotary control to set the Sample point, which			
		is a point within a bit's time. The oscilloscope samples			
	Sample	the bit level at this point. "Sample point" is represented			
	Point		by the percentage of "the time from the start of the bit's		
		time to the sample point time" in the "bit's time". The range is 5% to 95%.			
	Common			rol to select from the Baud list on	
	Baud	the left.	Totary conti	for to select from the badd list of	
	Custom	Turn the <b>M</b> 10,000 to 1,	•	trol to set the Baud. The range is	
	Baud	Tip: You ca	an select the	e nearest value in Common Baud,	
		-	just it in this		
	Start	5		ne of the data frame.	
			Data		
	Туре	Type (Bottom menu)	Remote	-	
			Error	Trigger on the selected frame.	
			Overload		
			Format	Select Standard or Extended.	
	ID	Configure	ID	Use the M rotary control and	
	ID	(Bottom menu)		<b>Direction key</b> on the front panel	
				to set.	
			Derte	Set the number of bytes with the	
			Byte	<b>M</b> rotary control. The range is 1	
		Configure	Length	to 8.	
Condition	Data	(Bottom		Set the data with the <b>M</b> rotary	
Condition		menu)	Data	control and Direction key on	
				the front panel.	
			Format	Select Standard or Extended.	
				Use the M rotary control and	
			ID	<b>Direction key</b> on the front panel	
				to set.	
		Configure		Set the number of bytes with the	
	ID&Data	(Bottom	Byte	M rotary control. The range is 1	
		menu)	Length	to 8.	
				Set the data with the <b>M</b> rotary	
			Data	control and <b>Direction key</b> on	
			Data	the front panel.	
	End	Trigger on t	he end fram	e of the data frame.	

	Missing Ack	Trigger on Missing Ack. Trigger on Bit Stuffing Error.	
	Bit Stuffing		
Mode	Auto	Acquire waveform even no trigger occurred	
	Normal	Acquire waveform when trigger occurred	
Holdoff	Single	When trigger occurs, acquire one waveform then stop	

# **Bus Decoding**

## 1. RS232 Decoding

To decode RS232 signal:

- (1) Connect the RS232 signal to the Signal Input Channel of the oscilloscope.
- (2) Adjust to the proper time base and voltage division.
- (3) In trigger menu, select Bus trigger, and select bus type as RS232, set parameters based on the characteristics of the signal, trigger the signal correctly and obtain stable display. Refer to "*RS232 Trigger*" on page 36.
- (4) Push the **Decode** button on the front panel. Select bus type as RS232. set parameters based on the characteristics of the signal. When the parameters are set correctly, the information carried by the signal will be displayed.

**Tip:** If there are repetitive menu items in both trigger menu and decoding menu, you can set anyone of them, the other will be changed synchronously.

#### Note:

- Use the **Trigger Level** rotary control to adjust the thresholds of bus trigger and bus decoding.
- When decoding, if "Parity" is not set to "None", and the check bit error is detected, two red error marks will be displayed in the corresponding position in the waveform.

MENU	SETTING	INSTRUCTION	
Bus Type	RS232	Set bus type of decoding as RS232.	
Common Baud		Turn the <b>M</b> rotary control to select from the Baud list on the left.	
Configure	Custom Baud	<ul><li>Turn the M rotary control to set the Baud. The range is 50 to 10,000,000.</li><li>Tip: You can select the nearest value in Common Baud, and then adjust it in this menu.</li></ul>	
	Data Bits	Set the data width of each frame to match the signal. It can be set to 5, 6, 7 or 8.	

#### **RS232 Decoding menu** list:

	Parity	set the even-odd check mode to match the polarity used by the signal.	
Display	Format Display EventTable	Binary Decimal Hex ASCII ON OFF	Set the display format of the bus. Select "ON" to display the event table.
	Save EventTable	If a USB storage device is currently connected to the instrument, save the event table data in a .csv (spreadsheet) formatted file on the external USB storage device.	

## 2. I2C Decoding

To decode I2C signal:

- (1) Connect the clock line (SCLK) and the data line (SDA) of the I2C signal to the Signal Input Channels of the oscilloscope.
- (2) Adjust to the proper time base and voltage division.
- (3) In trigger menu, select Bus trigger, and select bus type as I2C, set parameters based on the characteristics of the signal, trigger the signal correctly and obtain stable display. Refer to "*I2C Trigger*" on page 38.
- (4) Push the **Decode** button on the front panel. Select bus type as I2C. set parameters based on the characteristics of the signal. When the parameters are set correctly, the information carried by the signal will be displayed.

**Tip:** If there are repetitive menu items in both trigger menu and decoding menu, you can set anyone of them, the other will be changed synchronously.

Information	Abbreviation	Background
Read Address	R, Read, or do not display	Green
Write Address	W, Write, or do not display	Green
Data	D, Data, or do not display	Black

**Decoded information interpretation:** 

Note:

- Use the **Trigger Level** rotary control to adjust the thresholds of bus trigger and bus decoding.
- When the ACK (ACKnowledge Character) is not met, two red error marks will be displayed in the corresponding position in the waveform.

MENU	SETTING	INSTRUCTION	
Bus Type	I2C	Set bus type of decoding as I2C.	
Display	Format EventTable	Binary Decimal Hex ASCII ON OFF	Set the display format of the bus. Select "ON" to display the event table.
	Save EventTable	If a USB storage device is currently connected to the instrument, save the event table data in a .csv (spreadsheet) formatted file on the external USB storage device.	

## I2C Decoding menu list:

# 3. SPI Decoding

To decode SPI signal:

- (1) Connect the clock line (SCLK) and the data line (SDA) of the SPI signal to the Signal Input Channels of the oscilloscope.
- (2) Adjust to the proper time base and voltage division.
- (3) In trigger menu, select Bus trigger, and select bus type as SPI, set parameters based on the characteristics of the signal, trigger the signal correctly and obtain stable display. Refer to "*SPI Trigger*" on page 39.
- (4) Push the **Decode** button on the front panel. Select bus type as SPI. set parameters based on the characteristics of the signal. When the parameters are set correctly, the information carried by the signal will be displayed.

**Tip:** If there are repetitive menu items in both trigger menu and decoding menu, you can set anyone of them, the other will be changed synchronously.

Note:

- Use the **Trigger Level** rotary control to adjust the thresholds of bus trigger and bus decoding.
- LS First in Bit Order menu item (Least Significant Bit First) means that the least significant bit will arrive first: hence e.g. the hexadecimal number 0x12, will arrive as the sequence 01001000 in binary representation, will be decoded as the reversed sequence 00010010.

MENU	SETTING	INSTRUCTION		
Bus Type	SPI	Set bus type of decoding as SPI.		
	SCLK		clock edge to match the signal, sample the n the rising or falling edge of the clock.	
Configure	Time Out	be idle befor	Set the minimum time that the clock (SCL) signal must be idle before the oscilloscope starts to search for the data (SDA) on which to trigger. The range is 30 ns to 10 s.	
	Data Bits	Set the data width of each frame to match the signal. It can be set to any integer between 4 and 32.		
	Bit Order	Select LS First or MS First to match the signal.		
	Format	Binary Decimal Hex ASCII	Set the display format of the bus.	
Display	EventTable	ON OFF	Select "ON" to display the event table.	
	Save EventTable	instrument,	torage device is currently connected to the save the event table data in a .csv ) formatted file on the external USB storage	

## **SPI Decoding menu** list:

## 4. CAN Decoding

To decode CAN signal:

- (1) Connect the CAN signal to the Signal Input Channel of the oscilloscope.
- (2) Adjust to the proper time base and voltage division.
- (3) In trigger menu, select Bus trigger, and select bus type as CAN, set parameters based on the characteristics of the signal, trigger the signal correctly and obtain stable display. Refer to "*CAN Trigger*" on page 40.
- (4) Push the **Decode** button on the front panel. Select bus type as CAN. set parameters based on the characteristics of the signal. When the parameters are set correctly, the information carried by the signal will be displayed.

**Tip:** If there are repetitive menu items in both trigger menu and decoding menu, you can set anyone of them, the other will be changed synchronously.

Information	Abbreviation	Background
Identifier	I, ID, or do not display	Green
Overload Frame	OF	Green

**Decoded information interpretation:** 

Error Frame	EF	Green
Data Length code	L, DLC, or do not display	Blue
Data	D, Data, or do not display	Black
Cualia Radundanay Chask	C CBC or do not diaplay	Valid: Purple
Cyclic Redundancy Check	C, CRC, or do not display	Error: Red

Note:

- Use the **Trigger Level** rotary control to adjust the thresholds of bus trigger and bus decoding.
- When the ACK (ACKnowledge Character) of Data Frame or Remote Frame is not met, two red error marks will be displayed in the corresponding position in the waveform.
- Error Frame, Remote Frame, and Overload Frame will be identified in the "Data" column in the event table (Data Frame will not be identified).

#### CAN Decoding menu list:

MENU	SETTING	INSTRUCTION	
Bus Type	CAN	Set bus type of decoding as CAN.	
Display	Format EventTable	Binary Decimal Hex ASCII ON OFF	Set the display format of the bus. Select "ON" to display the event table.
	Save EventTable	If a USB storage device is currently connected to the instrument, save the event table data in a .csv (spreadsheet) formatted file on the external USB storage device.	

# How to Operate the Function Menu

The function menu control zone includes 8 function menu buttons: Measure, Acquire, Utility, Cursor, Autoscale, Save, Display, Help and 3 immediate-execution buttons: Autoset, Run/Stop, Single.

# How to Implement Sampling Setup

Push the Acquire button, Acqu Mode, Length, PERF Mode and Intrpl is shown in the bottom menu.

The description of the Acqu Mode menu is shown as follows:

Function Menu		Setting	Description
	Sample		Normal sampling mode.
Acqu Mode	Peak Detect		Use to capture maximal and minimal samples. Finding highest and lowest points over adjacent intervals. It is used for the detection of the jamming burr and the possibility of reducing the confusion.
	Average	4, 16, 64, 128	It is used to reduce the random and don't-care noises, with the optional number of averages.

The description of the **Record Length** menu is shown as follows:

Function Menu	Setting	Description
	1000	
	10K	
Longth	100K	Choose the record length
Length	1M	Choose the record length
	10M	
	20M (Single CH)	

The description of **PERF Mode** menu is shown as follows:

Function Menu	Setting	Description
DEDE Mada	8-bit	Set the vertical resolution $(\Lambda/D)$
PERF Mode	12-bit	Set the vertical resolution (A/D)

When the sample rate <=250MS/s, ADC resolution is set to 12-bit by default; When the sample rate >250MS/s, and both channels are turned on, ADC resolution is set to 8-bit by default;

When the sample rate <250MS/s, and only one channel is turned on, ADC resolution can be set to 8-bit or 12-bit in this menu.


The description of the **Intrpl** menu is shown as follows:

Function Menu	Setting	Description
Intual	Sinx/x	Use sine(x)/x interpolation
Intrpl	Х	Use linear interpolation


Interpolation method is a processing method to connect the sampled points, using some points to calculate the whole appearance of the waveform. Select the appropriate interpolation method according to the actual signal.

Sine(x)/x interpolation: Connect the sampled points with curved lines.

**Linear interpolation**: Connect the sampled points with straight lines. This method is suitable to rebuild the straight-edged signals, such as square or pulse wave.

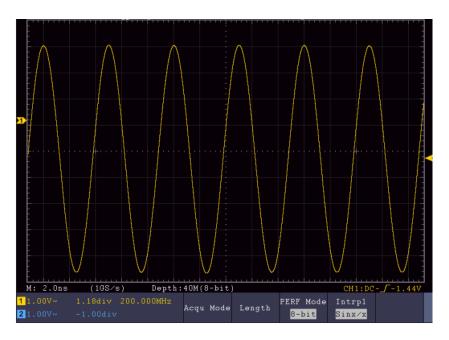

Sine(x)/x interpolation

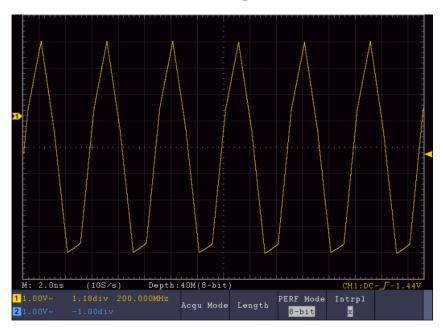

Linear interpolation

# How to Set the Display System

<b>Function Menu</b>	Se	tting	Description
	D	Oots	Only the sampling points are displayed.
Tyme	V	'ect	The space between the adjacent sampling
Туре			points in the display is filled with the vector
			form.
	C	)FF	
	1 S	econd	
Persist	2 Se	econds	Set the persistence time
	5 Se	econds	
	Inf	finity	
	Enable	ON	Turn on/off XV display function
XY Mode	Ellable	OFF	Turn on/off XY display function
AT Mode	Full	ON	Turn on/off the full screen view in XY mode
	Screen	OFF	Turn on/on the full screen view in X f mode
Counton	(	ON	Turn on/off counter
Counter	C	OFF	Turn on/on counter
			Erase the results of previous acquisitions from
Clear			the display. The oscilloscope will start to
			accumulate acquisitions again.

Push the **Display** button and the Display menu is shown as follows:

## Persist

When the **Persist** function is used, the persistence display effect of the picture tube oscilloscope can be simulated. The reserved original data is displayed in fade color and the new data is in bright color.

- (1) Push the **Display** button.
- (2) Select **Persist** in the bottom menu.
- (3) In the Time menu, select the persist time, including OFF, 1 Second, 2 Seconds, 5 Seconds and Infinity. When the "Infinity" option is set for Persist Time, the measuring points will be stored till the controlling value is changed. Select OFF to turn off persistence and clear the display.
- (4) Select **Clear** in the bottom menu to erase the results of previous acquisitions from the display. The oscilloscope will start to accumulate acquisitions again.

## XY Format

This format is only applicable to Channel 1 and Channel 2. After the XY display format is selected, Channel 1 is displayed in the horizontal axis and Channel 2 in the vertical axis; the oscilloscope is set in the un-triggered sample mode: the data are displayed as bright spots.

#### The operations of all control rotary controls are as follows:

- The Vertical Scale and the Vertical Position rotary controls of Channel 1 are used to set the horizontal scale and position.
- The Vertical Scale and the Vertical Position rotary controls of Channel 2 are used to set the vertical scale and position continuously.

#### The following functions can not work in the XY Format:

- Reference or digital wave form
- Cursor
- Trigger control
- FFT

**Operation steps:** 

- 1. Push the **Display** button.
- 2. Select **XY Mode** in the bottom menu. Select **Enable** as **ON** in the right menu.
- 3. To make the XY view full screen, select **Full Screen** as **ON** in the right menu.

#### Counter

It is a 6-digit single-channel counter. The counter can only measure the frequency of the triggering channel. The frequency range is from 2Hz to the full bandwidth. Only if the measured channel is in **Edge** mode of **Single** trigger type, the counter can be enabled. The counter is displayed at the bottom of the screen.

<mark>1</mark> 5.00V-	-0.86div(1.00000KHz)	Single	Source	Coupling	Slope	Auto	
25.00V-	-1.18div	Edge	CH1	DC		&Holdoff	

Operation steps:

- 1. Push **Trigger Menu** button, set the trigger type to **Single**, set the trigger mode to **Edge**, select the signal source.
- 2. Push the **Display** button.
- 3. Select **Counter** as **ON** or **OFF** in the bottom menu.

## How to Save and Recall a Waveform

Push the **Save** button, you can save the waveforms, configures, screen images, record or clone the waveform.

The description of the Save Function Menu is shown as the following table:

<b>Function Menu</b>	Setting	Description
	Wave	Choose the saving type.
	Configure	About the <b>Record</b> type, see " <i>How to</i>
Туре	Image	Record/Playback Waveforms" on P57.
	Record	About the Clone type, see "How to Clone
	Clone	a waveform" on P61.
When the type is <b>Wave</b> , the r	nenu shows	as following:
Туре	Format	For internal storage, only BIN can be
Wave	(Right	selected. For external storage, the format
vv avc	menu)	can be BIN, TXT or CSV.
	CH1	Choose the waveform to be saved. (If
	CH2	certain channel is off, the corresponding
	Math	menu item will be disabled.)
Source	All	(Choose All to save all the waveforms that
		are turned on. You can save into the
		current internal object address, or into USB
		storage as a single file.) Choose the address which the waveform is
Object	0 - 49	saved to or recall from.
		Recall or close the waveform stored in the
		current object address. When the show is
		ON, if the current object address has been
	ON	used, the stored waveform will be shown,
Object & Show Show	OFF	the address number and relevant
	011	information will be displayed at the top left
		of the screen; if the address is empty, it
		will prompt "None is saved".
		Close all the waveforms stored in the
Close	e All	object address.
		Save the waveform of the source to the
		selected address. Whatever the <b>Type</b> of
		save menu is set, you can save the
		waveform by just pressing the <b>Copy</b> panel
Save		button in any user interface.
		Select <b>Type</b> in the bottom menu, in the
		right <b>Format</b> menu, you can select the
		storage format.

Storage	Internal External	Save to internal storage or USB storage. When External is selected, save the waveform according to the current record length (see " <i>Record Length menu</i> " on P47); the file name is editable. The BIN waveform file could be open by the waveform analysis software (on the supplied CD).
When the type is <b>Configure</b>	, the menu sh	nows as following:
Configure	Setting0  Setting19	The setting address
Save		Save the current oscilloscope configure to the internal storage
Load		Recall the configure from the selected address
When the type is <b>Image</b> , the	menu shows	as following:
Save		Save the current display screen. The file can be only stored in a USB storage, so a USB storage must be connected first. The file name is editable. The file is stored in BMP format.

## Save and Recall the Waveform

The oscilloscope can store 50 waveforms, which can be displayed with the current waveform at the same time. The stored waveform called out can not be adjusted.

In order to save the waveform of CH1, CH2 and Math into the address 1, the operation steps should be followed:

- 1. Turn on CH1, CH2 and Math channels.
- 2. Push the **Save** button.
- 3. Saving: Select Type in the bottom menu, select Wave in the left menu.
- 4. Select **Storage** in the bottom menu, select **Internal** in the right menu.
- 5. Select **Source** in the bottom menu, select **All** in the right menu for Source.
- 6. Select **Object & Show** in the bottom menu, select **1** as object address in the left menu.
- 7. Select **Save** in the bottom menu to save the waveform.
- 8. **Recalling**: Select **Object & Show** in the bottom menu, select **1** in the left menu. In the right menu, select **Show** as **ON**, the waveform stored in the address will be shown, the address number and relevant information will be displayed at the top left of the screen.

In order to save the waveform of CH1 and CH2 into the USB storage as a BIN file, the operation steps should be followed:

- 1. Turn on CH1 and CH2 channels, turn off the Math channel.
- 2. Push the **Save** button.
- 3. Saving: Select Type in the bottom menu, select Wave in the left menu.
- 4. Select **Storage** in the bottom menu, select **External** in the right menu.
- 5. Select **Type** in the bottom menu, select **BIN** in the right menu as the storage format.
- 6. Select **Source** in the bottom menu, select **All** in the right menu for Source.
- 7. Select **Save** in the bottom menu, an input keyboard used to edit the file name will pop up. The default name is current system date and time. Select the ← key in the keyboard to confirm.
- 8. **Recalling**: The BIN waveform file could be open by the waveform analysis software (on the supplied CD).

#### Tip:

Whatever the **Type** of save menu is set, you can save the waveform by just pressing the **Copy** panel button in any user interface. If the **Storage** of the save menu is set as "**External**", you should install the USB disk. Please refer to the contents below to install the USB disk and name the file to be saved.

## Save the current screen image:

The screen image can only be stored in USB disk, so you should connect a USB disk with the instrument.

- Install the USB disk: Insert the USB disk into the "USB Host port" of "Figure 3-1 Front panel". If an icon appears on the top right of the screen, the USB disk is installed successfully. If the USB disk cannot be recognized, format the USB disk according to the methods in "USB disk Requirements" on P53.
- 2. After the USB disk is installed, push the **Save** panel button, the save menu is displayed at the bottom of the screen.
- 3. Select **Type** in the bottom menu, select **Image** in the left menu.
- 4. Select **Save** in the bottom menu, an input keyboard used to edit the file name will pop up. The default name is current system date and time. Select the ← key in the keyboard to confirm.

## **USB disk Requirements**

The supported format of the USB disk: FAT32 file system, the allocation unit size cannot exceed 4K, mass storage USB disk is also supported. If the USB disk doesn't

work properly, format it into the supported format and try again. Follow any of the following two methods to format the USB disk: using system-provided function and using the formatting tools. (The USB disk of 8 G or 8 G above can only be formatted using the second method – using the formatting tools.)

## Use system-provided function to format the USB disk

- 1. Connect the USB disk to the computer.
- 2. Right click **Computer**  $\rightarrow$  **Manage** to enter Computer Management interface.
- 3. Click Disk Management menu, and information about the USB disk will display on the right side with red mark 1 and 2.

File Action View Help											
Þ 🔿 🔁 📅 🖬 🕄 🕻	K 🖀 🖻 🖳 📓										
Computer Management (Local	Volume	Layout Ty	pe   File Sys	tem Statu	\$				1	Actions	
System Tools	🚍 file (G:)	Simple Ba			hy (Logical D			2		Disk Management	1
	KINGSTON (L:)					rimary Partiti	on)			More Actions	
Event Viewer	ife (Ht) software (F:)	Simple Ba Simple Ba			hy (Logical D hy (Logical D					more Actions	
Shared Folders	win7 (C:)	Simple Ba					a Active Cra	sh Dump, Prima			
b A Local Users and Groups (N) Performance	win8 (E:)	Simple Ba			hy (Logical D		C, MUNC, CIO	sn vang, enne	"y		
Device Manager	work (1:)	Simple Ba			hy (Logical D						
Storage	urxp (D:)	Simple Ba	sic NTFS		hy (Logical D						
Disk Management								1			
Service and Applications								+			
1. 22 (March 1) 20 (March 1)											
Click "Disk											
Management"											
0									_		
	4										
	* [		<u>, Ш.</u> ,						-		
	Cilling O						_				
	Disk 0 Basic	win7 (C:	m xp (D:)	win8 (E;	software	file (G:)	life (H:)	work (I:)			
	Disk 0 Basic 461.29 GB	40.00 G8	xp (D:) 40.01 GB	40.01 GB	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB			
	Disk 0 Basic		xp (D:)				80.01 GB !				
	Disk 0 Basic 461.29 GB	40.00 G8	xp (D:) 40.01 GB	40.01 GB	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB			
	Disk 0 Basic 461.29 GB Online	40.00 G8	xp (D:) 40.01 GB	40.01 GB	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB	· · · · · · · · · · · · · · · · · · ·		
	Disk 0 Basic 461.29 GB	40.00 GB Healthy (	xp (D:) 40.01 GB Healthy	40.01 GB	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB			
	Disk 0 Basic 461.29 GB Online Disk 1 Removable 7.21 GB	40.00 G8 Healthy ( KINGSTO 7.21 G8 FA	xp (D:) 40.01 GB Healthy 1 (L:) 132	40.01 GB Healthy (	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB	· · · · · · · · · · · · · · · · · · ·		
	Disk 0 Basic 461.29 GB Online Disk 1 Removable	40.00 G8 Healthy ( KINGSTO 7.21 G8 FA	xp (D:) 40.01 GB Healthy	40.01 GB Healthy (	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB			
	Disk 0 Basic 461.29 GB Online Disk 1 Removable 7.21 GB	40.00 G8 Healthy ( KINGSTO 7.21 G8 FA	xp (D:) 40.01 GB Healthy 1 (L:) 132	40.01 GB Healthy (	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB			
	Disk 0 Basic 461.29 GB Online Disk 1 Removable 7.21 GB Online	40.00 G8 Healthy ( KINGSTO 7.21 G8 FA	xp (D:) 40.01 GB Healthy 1 (L:) 132	40.01 GB Healthy (	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB			
	Carlos of the second se	40.00 G8 Healthy ( KINGSTO 7.21 G8 FA	xp (D:) 40.01 GB Healthy 1 (L:) 132	40.01 GB Healthy (	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB	► ] • [ •		
	Disk 0 Basic 461.29 GB Online Disk 1 Removable 7.21 GB Online	40.00 G8 Healthy ( KINGSTO 7.21 G8 FA	xp (D:) 40.01 GB Healthy 1 (L:) 132	40.01 GB Healthy (	80.01 GB 1	80.01 GB 1	80.01 GB !	101.22 GB	× ] • [		

Figure 4-2: Disk Management of computer

4. Right click 1 or 2 red mark area, choose **Format**. And system will pop up a warning message, click **Yes**.

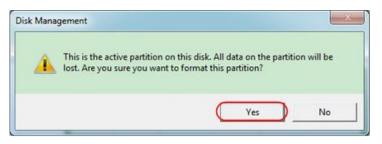


Figure 4-3: Format the USB disk warning

 Set File System as FAT32, Allocation unit size 4096. Check "Perform a quick format" to execute a quick format. Click OK, and then click Yes on the warning message.

<u>V</u> olume label:	KINGSTON	N
<u>File system:</u>	FAT32	
Allocation unit size:	4096	
Perform a quick for	mat	

Figure 4-4: Formatting the USB disk setting

6. Formatting process.

Computer Management (Local	Volume	Layout Ty	pe   File Sys	tem Status						Actions	-
System Tools	file (G:) KINGSTON (L:)	Simple Ba Simple Ba			y (Logical D tting : (2%)	rive)				Disk Management	
Event Viewer     Event Viewer     Event Viewer     Event Viewer and Groups     Performance     Device Manager     Storage     Storage     Storage     Storage     Storage	un life (H) un software (F) un win7 (C:) un win8 (E) un work (E) un work (E) un xp (D:)	Simple Ba Simple Ba Simple Ba Simple Ba Simple Ba Simple Ba	isic NTFS isic NTFS isic NTFS isic NTFS	Health Health Health Health	iy (Logical D iy (Logical D iy (System, E iy (Logical D iy (Logical D iy (Logical D	rive) Soot, Page Fil rive) rive)	ie, Active, Cra	sh Dump, Prin	nary	More Actions	
	* [	_	og III.je			_			•		
	Disk 0 Basic 461.29 GB Online	win7 (C: 40.00 G8 Healthy (	m xp (D:) 40.01 GB Healthy	win8 (E; 40.01 GB Healthy (	software 80.01 GB M Healthy (I	file (G:) 80.01 GB f Healthy (I	life (H:) 80.01 GB f Healthy (L	work (I:) 101.22 GB Healthy (L	-		
	Basic 461.29 GB	40.00 GB	xp (D:) 40.01 GB Healthy N (L:)	40.01 GB	80.01 GB !	80.01 GB f	80.01 GB P	101.22 GB	• <u>•</u> •		

Figure 4-5: Formatting the USB disk

7. Check whether the USB disk is FAT32 with allocation unit size 4096 after formatting.

## **Use Minitool Partition Wizard to format**

Download URL: <u>http://www.partitionwizard.com/free-partition-manager.html</u>

**Tip:** There are many tools for the USB disk formatting on the market, just take Minitool Partition Wizard for example here.

- 1. Connect the USB disk to the computer.
- 2. Open the software **Minitool Partition Wizard.**

3. Click **Reload Disk** on the pull-down menu at the top left or push keyboard F5, and information about the USB disk will display on the right side with red mark 1 and 2.

Reload Dick F5			2	4		0	-
Apply Changes Dil+A		👂 🏹 🤘	🥖 🌠 "	9	0 🙆	9	<b>1</b> (1)
Undo Last Changes Otl+Z Move/F	Resize Merge Delete Fo	mat Copy Lat	el Propertes	н	elp Contact	us Bootable CD	Share Benate!
Chincard All Changes Chil+D 🦿							
Ege	KINGSTONINT						
	Basic 7.21 GB	() ()					
Copy Patition Woard	Patton	County 1	Used	Unused	File System	Туре	Status
Copy Disk Wizard     Pattion Recovery Wizard		Capacity	Used	Unused	File System	1 ype	Status
B Pattion Recovery Wizard	Tisk 1						
Operations 📀		47.03 MB	8.91 MB	38.13 MB	FAT	Primary	Hidden
Format Partition	C:WIN/P	19.53 GB	14.51 GB	5.02 GB	NTFS	Primary	Active & Boot & Sys
Celete Partition	D:	49.02 GB	34.75 GB	14.27.68	FAT32	Logical	None
Move/Resize Patition	E	68.36 GB	39.39 GB	28.97 G8	NTFS	Logical	None
A Merge Partition	E F	79.10 GB	49.72 68	29.38 68	FAT32	Logical	None
Splk Parition	G.#1882	82.03 G8	4.03 GB	78.00 GB	FAT32	Logical	None
Copy Partition	Pisk 2						
🧑 Set Label	THINGSTON	7 21 68	37.57 MI	7.10.68	NTES	E Preser	4.494
🦼 Align Parition	(Trailas tor	7.40.00	2012/10/0	(2)19,103	(6193).		1000
Hide Partition							
M Set Inactive							
Change Drive Letter							
Change Cluster Size							
Change Serial Number							
Change Partition Type ID							
- Surface Test							
Wee Partition							
Show Pattion Properties							

Figure 4-6: Reload Disk

4. Right click 1 or 2 red mark area, choose Format.



Figure 4-7: Choose format

5. Set File System FAT32, Cluster size 4096. Click **OK**.

🛜 Format Partiti

Partition Label:	KINGSTON	4		
File System	FAT32	$\supset$	•	
Cluster Size:	4 KB		-	

X

Figure 4-8: Format setting

6. Click **Apply** at the top left of the menu. Then click **Yes** on the pop-up warning to begin formatting.



Figure 4-9: Apply setting

7. Formatting process

Apply Pendin	g Operation(s)	? )
	1 of 1 pending operations. Format Partition Partition Letter: I: Partition Labet NEVV VOLUME Disk Index: 2 Partition Index: 1	
	Totat:	
4	Format partition:	
	100%	
	Format partition	
	100%	

Figure 4-10: Format process

8. Format the USB disk successfully



Figure 4-11: Format successfully

# How to Record/Playback Waveforms

Wave Record function can record the input current wave. You can set the interval between recorded frames in the range of 10 ms - 10 s. The max frame number reaches 1000, and you can get better analysis effect with playback and storage function. The storage medium contains two kinds: Internal and External.

When the storage medium is Internal, Wave Record contains four modes: OFF,

## Record, Playback and Storage.

When storage medium is External, Wave Record contains two modes: OFF, Record.

Menu	Setting	Instruction
	OFF	Close wave record function
Mode	Record	Set record menu
Widde	Playback	Set playback menu
	Storage	Set storage menu
	End frame	Turn the M rotary control to select the number of
Record mode		frames to record (1 - 1000)
FrameSet	Interval	Turn the M rotary control to select the interval
	Interval	between recorded frames (10ms - 10s)
Refresh	ON	Refresh wave during recording
Kellesli	OFF	Stop refreshing
Ononoto	Play	Begin to record
Operate	Stop	Stop recording

**Record**: To record wave according to the interval until it reaches the end frame set. Record menu (Internal Storage) shows as follows:

#### Note:

Both of the waveforms of Channel 1 and Channel 2 will be recorded. If a Channel is turned off while recording, the waveform of the channel is invalid in the playback mode.

#### **Playback**: Play back the wave recorded or saved.

Menu	Setting	Instruction
	Start frame	Turn the <b>M</b> rotary control to select the number of
		start frame to playback (1 - 1000)
	End frame	Turn the $\mathbf{M}$ rotary control to select the number of
Playback Mode		end frame to playback (1 - 1000)
FrameSet	Cur frame Turn the <b>M</b> rotary control to select the number	
		current frame to playback (1 - 1000)
	Interval	Turn the $\mathbf{M}$ rotary control to select the interval
		between played back frames (10ms - 10s)
Dlay mode	Loop	Play back the wave continuously
Play mode	Once	Play back the wave just one time
Onorata	Play	Begin to record
Operate	Stop	Stop recording

Playback menu shows as follows:

**Storage**: Save the current wave according to the start frame and end frame set. Storage menu shows as follows:

Menu	Setting	Instruction
Storage	Start frame	Turn the M rotary control to select the number of

Mode		start frame to store (1 - 1000)
Frame Set	End frame	Turn the <b>M</b> rotary control to select the number of end frame to store (1 - 1000)
Save		Save the waveform record file to the internal memory
Load		Load the waveform record file from the memory

To use wave record function, do as follows:

- (1) Push Save button.
- (2) Select **Type** in the bottom menu, in the left menu, turn the **M** rotary control to select **Record**.
- (3) Select **Mode** in the bottom menu, select **OFF** in the right menu.
- (4) In the bottom menu, select **Storage** as **Internal**.
- (5) Select **Mode** in the bottom menu, select **Record** in the right menu.
- (6) Select **FrameSet** in the bottom menu, set **End frame** and **Interval** in the right menu.
- (7) In the bottom menu, set **Refresh**.
- (8) In the bottom menu, select **Operate** as **Play**.
- (9) Select Mode in the bottom menu, select Playback in the right menu. Set FrameSet and Playmode, select Operate as Play.
- (10) To save the wave recorded, select **Mode** in the bottom menu, select **Storage** in the right menu. Select **FrameSet** in the bottom menu to set the range of frames to store, select **Save** in the bottom menu.
- (11)To load the waveform from the internal memory, select **Load** in the bottom menu, then enter the **Playback** of the **Mode** to analyze the wave.

**Note:** When playbacking the waveform, the sampling, trigger, or display function is not available.

# When storage medium is External, Wave Record contains two modes: OFF, Record.

Menu	Setting	Instruction		
Mode	OFF	Close wave record function		
Widde	Record	Set record menu		
	End frame	Turn the M rotary control to select the number of		
Record mode		frames to record (1 - 900,000)		
FrameSet	Interval	Turn the M rotary control to select the interval		
FrameSet	mervar	between recorded frames (10ms - 10s)		
	Infinity	Record infinitely until the storage medium is full		
Refresh	ON	Refresh wave during recording		
Kellesh	OFF	Stop refreshing		
Operate	Play	Begin to record		
Operate	Stop	Stop recording		

Record menu (External Storage) shows as follows:

Note:

Both of the waveforms of Channel 1 and Channel 2 will be recorded. If a Channel is turned off while recording, the waveform of the channel is invalid in the playback mode.

To use wave record to external, do as follows:


- 1. Push **Save** button.
- 2. Select **Type** in the bottom menu, in the left menu, turn the **M** rotary control to select **Record**.
- 3. Select **Mode** in the bottom menu, select **OFF** in the right menu.
- 4. In the bottom menu, select **Storage** as **External**.
- 5. Select **Mode** in the bottom menu, select **Record** in the right menu.
- 6. Select **FrameSet** in the bottom menu, set **End frame** and **Interval** in the right menu. If you want to record wave to external infinitely, select **Infinity** in the right menu, the End frame will display "-".
- 7. In the bottom menu, set **Refresh**.
- 8. In the bottom menu, select **Operate** as **Play**.

# Connect external device to the computer, and *wave\_record\_0.bin* is the recorded file. Open the software, and do as follows to play back the waveform.

- 1. Choose Communications  $\rightarrow$  Auto Player.
- 2. Transform recording waveform from machine.
- 3. Add the well transformed files.
- 4. Set play mode and time delay.
- 5. Click the green button on the left corner to begin playing back the waveform.

Ctrl+A

Communications Language Help

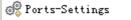

🖏 Get Data

🌼 Continue Data Download

📕 Stop Data Download

#### 🛃 Auto Player

Begin to play back

🕎 Remote Control (USB and LAN Supported)

			Ad	the well tran	nsformed file		rm recordin i from mach	-	
🛼 Auto Player								E	
History:	C:\Documents	and Settings\A	deinistrator\Æ	fii\55 🔽 🦲	Add	Transf	orm recording	waveform from	nachine
Flay Mode:	Turn			💌 Tine I	Delay(nS):	1000	\$		
Folder Path:	C:\Documents	and Settings\A	ministrator\A	面\55					
- A									1
· ·									1
00	0			1/50			C1	026	
1									

Figure 4-12: Play back waveform by software

# How to Clone a waveform


You can clone the waveform of one or both channels between two cursors, and save it in the internal memory or on a USB memory device. You can save four cloned waveforms in the instrument internal memory. The waveform files saved to a USB memory device are saved with the extension "ota".

Menu	Setting	Instruction			
	CH1	Clone the waveform of CH1			
Source	CH2	Clone the waveform of CH2			
	CH1&CH2	Clone the waveform of CH1 and CH2			
	a	Turn the <b>M</b> rotary control to move line a.			
	b	Turn the <b>M</b> rotary control to move line b.			
Line	ab	Two cursors are linked. Turn the <b>M</b> rotary control to move the pair of cursors.			
	Х	Set the cursors to select the entire screen automatically.			
	Save	Save the waveform between two cursors			
Save	Memory	Internal USB Select the memory location			

Clone Wave menu shows as follows:

#### To clone waveform and save to the internal/USB memory:

- (1) Push Save button.
- (2) Select **Type** in the bottom menu, in the left menu, turn the **M** rotary control to select **Clone**.
- (3) Select **Source** in the bottom menu, select one channel (**CH1/CH2**) or two channels (**CH1&CH2**) in the right menu for Source.
- (4) Select Line in the bottom menu. If a or b is selected, turn the M rotary control to move the cursor. If ab is selected, turn the M rotary control to move the pair of cursors. If x is selected, the entire screen will be selected automatically. The waveform information is displayed at the left bottom corner of the screen.

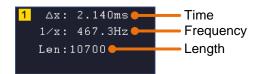

Note: If "Out Of Limits" appears in the information or a message "Waveform points beyond the limit." appears on the screen, that means the length of the cloned waveform exceeds the limit. When the source is CH1 or CH2, the maximum length is 2M; When the source is CH1&CH2, the maximum length is 1M. Push the Acquire button, select Length in the bottom menu, and set the record length to a smaller value.

- (5) Select **Save** in the bottom menu.
  - To save the waveform to internal memory, select Storage in the right menu as Internal. Turn the M rotary control to select an object in the left menu, select Save in the right menu.
  - To save the waveform onto a USB memory device, insert a USB memory device into the port on the front panel. If the icon appears on the top right of the screen, the USB memory device is installed successfully. If the USB memory device cannot be recognized, format the USB memory device according to the methods in "USB disk Requirements" on P53. Select Storage in the right menu as External. Select Save in the right menu. An input keyboard used to edit the file name will pop up. The name is default as current system date and time. Turn the M rotary control to select the keys, push the rotary control to input. Select the  $\checkmark$  key in the keyboard to confirm. The cloned waveform will be saved onto the USB memory device as a file with the ota suffix.

#### Data format description of OTA waveform file

If the source is CH1 or CH2, OTA file consists of two parts: the file header and the data. If the source is CH1&CH2, OTA file consists of three parts: file header, CH1data, and CH2 data. The file header represents the parameter of file data, which is expressed in "parameter name + value". Each parameter name is a case-sensitive string of 4 bytes. The parameter value is at least 4 bytes.

#### 1.Format description of the file header:

1) HEAD			
Parameter name	Meaning	Value	Comment
HEAD	Header size	4 bytes int	
2) TYPE			
Parameter name	Meaning	Value	Comment
ТҮРЕ	Model	12 bytes char	
3) BYTE			
Parameter name	Meaning	Value	Comment
BYTE	Data length in bit	4 bytes int	
4) SIZE			
Parameter name	Meaning	Value	Comment
SIZE	File size	4 bytes int	Used to check the file
			integrity
5) VOLT			
Parameter name	Meaning	Value	Comment
VOLT	Voltage division,	4 bytes float	The value indicates voltage
	divided by 400 is		(the unit is mV), such as 200
	ADC resolution.		mV.
	(When the source is		
	CH1&CH2, it is CH1		
	voltage division.)		

6) SAMP				
Parameter name	Meaning	Value	Comment	
SAMP	Sample rate 4 bytes float The unit is Sa/s.		The unit is Sa/s.	
7) ADCB				
Parameter name	Meaning	Value	Comment	
ADCB	ADC bit, ADC	4 bytes int	8-bit or 12-bit	
	resolution			
8) CHAN				
Parameter name	Meaning	Value	Comment	
CHAN	Number of channels	4 bytes int	1 or 2	
9) VOL2				
Parameter name	Meaning	Value	Comment	
VOL2	Voltage division,	4 bytes float	The value indicates voltage	
	divided by 400 is		(the unit is mV), such as 200	
	ADC resolution.		mV.	
	(When the source is			
	CH1&CH2, it is CH2			
	voltage division.)			

#### 2.Data

The data type is signed integer. You can determine the data type (**char**, **short int** or **int**) based on the BYTE parameter. The valid range is determined by the ADCB parameter, e.g. the valid range for 8-bit ADC is -127 to +127.

# How to Implement the Auxiliary System Function Setting

# • Config

Push the **Utility** button, select **Function** in the bottom menu, select **Configure** in the left menu.

The description of **Configure Menu** is shown as the follows:

<b>Function Menu</b>	Setting		Description
Longuaga			Choose the display language of the operating
Language			system.
	Diaplay	ON	On/Off the date display
	Display C	OFF	On/On the date display
Set Time	Hour Min Day Month Year		Setting Hour/Minute
			Setting Date/Month
			Setting Year
			Lock all keys. Unlock method: push Trigger
KeyLock			Menu button in trigger control area, then push
			Force button, repeat 3 times.
About			Version number and serial number showing

## • Display

Push the **Utility** button, select **Function** in the bottom menu, select **Display** in the left menu.

The description of **Display Menu** is shown as the follows:

Function Menu	Setting	Description
BackLight	0% - 100%	Turn the $\mathbf{M}$ rotary control to adjust the
DuckLight	070 10070	backlight.
Graticule		Select the grid type
Menu Time	OFF, 5s - 30s	Set the disappear time of menu

## •Adjust

Push the **Utility** button, select **Function** in the bottom menu, select **Adjust** in the left menu.

Function Menu	Description	
Self Cal	Carry out the self-calibration procedure.	
Default	Call out the factory settings.	
ProbeCh. Check whether probe attenuation is good.		

The description of **Adjust Menu** is shown as the follows:

## **Do Self Cal (Self-Calibration)**

The self-calibration procedure can improve the accuracy of the oscilloscope under the ambient temperature to the greatest extent. If the change of the ambient temperature is up to or exceeds  $5^{\circ}$ C, the self-calibration procedure should be executed to obtain the highest level of accuracy.

Before executing the self-calibration procedure, disconnect all probes or wires from the input connector. Push the **Utility** button, select **Function** in the bottom menu, the function menu will display at the left, select **Adjust**. If everything is ready, select **Self Cal** in the bottom menu to enter the self-calibration procedure of the instrument.

## **Probe checking**

To check whether probe attenuation is good. The results contain three circumstances: Overflow compensation, Good compensation, Inadequate compensation. According to the checking result, users can adjust probe attenuation to the best. Operation steps are as follows:

- 1. Connect the probe to CH1, adjust the probe attenuation to the maximum.
- 2. Push the **Utility** button, select **Function** in the bottom menu, select **Adjust** in the left menu.
- 3. Select **ProbeCh.** in the bottom menu, tips about probe checking shows on the screen.
- 4. Select **ProbeCh.** again to begin probe checking and the checking result will occur after 3s; push any other key to quit.

## • Pass/Fail

The **Pass/Fail** function monitors changes of signals and output pass or fail signals by comparing the input signal that is within the pre-defined mask.

Push the **Utility** button, select **Function** in the bottom menu, select **Pass/fail** in the left menu.

<b>Function Menu</b>	Setting	Description	
operate	Enable	Control enable switch	
	Operate	Control operate switch	
	Pass	Signal tested corresponds with the rule	
	Fail	Signal tested not correspond with the rule	
Output	Beep	Beep when it satisfies the rule	
	Stop	Stop once satisfying the rule	
	Info	Control the display status of info frame	
	Source	Select source CH1, CH2 or Math	
	Horizontal	Change the Horizontal tolerance value by turning the	
Rule		M rotary control	
	Vertical	Change the Vertical tolerance value by turning the M	
		rotary control	
	Create	Use the rule set as testing rule	
SaveRule	Number	Select any one from Rule1 - Rule8 as your rule name	
	Save	Select Save to save the rule	
	Load	Load some rule as the testing rule	

The description of **Pass/fail Menu** is shown as the follows:

#### Pass/Fail test:

Detect whether the input signal is within the limits of the rule, if it exceeds limits of the rule, it is "Fail"; otherwise it is "Pass". Also it can output fail or pass signal by built-in and configurable output port. To run the test, read the following steps:

- 1. Push the **Utility** button, select **Function** in the bottom menu, select **Pass/fail** in the left menu.
- 2. Enable switch on: Select Operate in the bottom menu, select Enable in the right menu as ON.
- 3. Create rule: Select Rule in the bottom menu. Select Source in the right menu, select the source in the left menu. Set Horizontal tolerance and Vertical tolerance in the right menu. Select Create in the right menu to create the rule.
- 4. Set output type: Select Output in the bottom menu to enter output option setting.

Choose any one or two of the options "**Pass**", "**Fail**" or "**Beep**". "**Pass**" and "**Fail**" are mutually exclusive options, which could not be chosen simultaneously. "**Stop**" means stop once the condition satisfies your setting.

- 5. Begin to test: Select Operate in the bottom menu, select Operate in the right menu as Start, the test will begin.
- 6. **Save rule:** Select **SaveRule** in the bottom menu. Select the save location in the left menu, and then select **Save** in the right menu to save the rules, which could be called up at once when need. Select **Load** to call up the rule saved.

#### Note:

- 1. When Pass/Fail is ON, if XY or FFT is ready to run, then Pass/Fail will be closed; under the mode of XY or FFT, Pass/Fail is unable.
- 2. Under the mode of Factory, Auto Scale and Auto Set, Pass/Fail will be closed.
- **3.** When no save setting left in the rule save, tip will be given to show "NO RULE SAVED".
- **4.** Under the status of stop, data comparing will stop, and when it goes on running, the number of Pass/Fail will increase from the former number, not from zero.
- 5. When the waveform playback mode is on, Pass/Fail is used to test the played-back waveform specially.

## • Output

Push the **Utility** button, select **Function** in the bottom menu, select **Output** in the left menu.

**Output** menu item in the bottom menu sets the output type of Trig Out(P/F) port in Figure 3-3 Rear Panel on P6. In the bottom menu, select **Output**. The description of **Output menu** is shown as the follows:

Function Menu	Setting	Description	
Туре	Trig level	Output trig signal synchronously	
	Pass/fail	Output High Level when Pass, and Low Level when Fail	

**Video** menu item in the bottom menu sets the output port of video. In the bottom menu, select **Video**. The description of **Video menu** is shown as the follows:

Function Menu	Setting	Description	
Video	OFF	Turn off video output	
	AV	Connect the AV port to an external monitor or	
		projector. Select the port in this menu, the oscilloscope	
		display can be shown on an external monitor or projector.	

**Device** and **Print Setup** menu items set the print output, refer to "*How to Print the Screen Image*" on page 79.

## • LAN Set

Using the LAN port, the oscilloscope can be connected with a computer. Refer to "*Communication with PC*" on page 80 for the operation steps.

## • Update

Use the front-panel USB port to update your instrument firmware using a USB memory device. Refer to "*Error! Reference source not found.*" on page 67.

# How to Measure Automatically

Push the **Measure** button to display the menu for the settings of the Automatic Measurements. At most 8 types of measurements could be displayed on the bottom left of the screen.

The oscilloscopes provide 30 parameters for auto measurement, including Period, Frequency, Mean, PK-PK, RMS, Max, Min, Top, Base, Amplitude, Overshoot, Preshoot, Rise Time, Fall Time, +PulseWidth, -PulseWidth, +Duty Cycle, -Duty Cycle, Delay  $A \rightarrow B \ddagger$ , Delay  $A \rightarrow B \ddagger$ , Cycle RMS, Cursor RMS, Screen Duty, Phase, +PulseCount, -PulseCount, RiseEdgeCnt, FallEdgeCnt, Area, and Cycle Area.

Function Menu		Setting	Description	
Add	Meas Type (left menu)		Select the measure types	
	Source	CH1	Select the source	
		CH2		
			Add the selected measure types (shown	
	Add		at the left bottom, you could only add 8	
			types at most)	
Remove	Meas Type	Select the types need to be deleted		
	(left menu)		Select the types need to be deleted.	
	Remove		Remove the chosen measure type	
	Remove All		Remove all the measures	
Show	ON	Show all the measures of CH1 on the screen		
CH1	OFF	Hide the window of CH1 measures		
Show	ON	Show all the measures of CH2 on the screen		
CH2	OFF	Hide the window of CH2 measures		

The "Automatic Measurements" menu is described as the following table:

#### Measure

Only if the waveform channel is in the ON state, the measurement can be performed. The automatic measurement can not be performed in the following situation: 1) On the saved waveform. 2) On the Dual Wfm Math waveform. 3) On the Video trigger mode.

On the Scan format, period and frequency can not be measured.

Measure the period, the frequency of the CH1, following the steps below:

- 1. Push the **Measure** button to show the automatic measurement function menu.
- 2. Select Add in the bottom menu.
- 3. In the right menu, select CH1 in the Source menu item.
- 4. In the left Type menu, turn the M rotary control to select Period.
- 5. In the right menu, select Add. The period type is added.
- 6. In the left Type menu, turn the M rotary control to select Frequency.
- 7. In the right menu, select Add. The frequency type is added.

The measured value will be displayed at the bottom left of the screen automatically (see *Figure 4-13*).

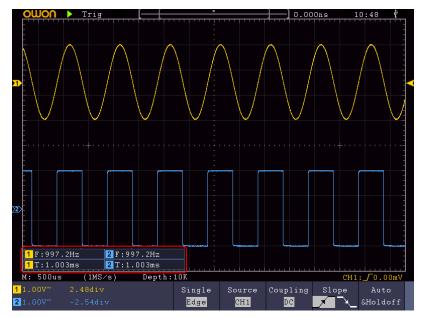


Figure 4-13 Automatic measurement

#### The automatic measurement of voltage parameters

The oscilloscopes provide automatic voltage measurements including Mean, PK-PK, RMS, Max, Min, Vtop, Vbase, Vamp, OverShoot, PreShoot, Cycle RMS, and Cursor RMS. *Figure 4-14* below shows a pulse with some of the voltage measurement points.

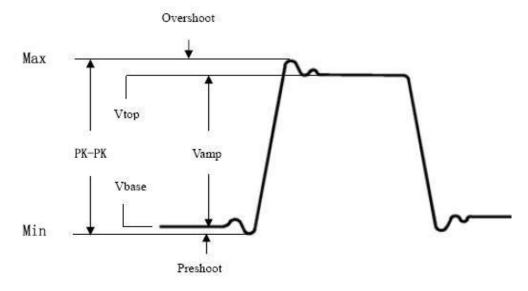


Figure 4-14

Mean: The arithmetic mean over the entire waveform.

**PK-PK:** Peak-to-Peak Voltage.

RMS: The true Root Mean Square voltage over the entire waveform.

- **Max:** The maximum amplitude. The most positive peak voltage measured over the entire waveform.
- **Min:** The minimum amplitude. The most negative peak voltage measured over the entire waveform.
- Vtop: Voltage of the waveform's flat top, useful for square/pulse waveforms.
- Vbase: Voltage of the waveform's flat base, useful for square/pulse waveforms.

Vamp: Voltage between Vtop and Vbase of a waveform.


- **OverShoot:** Defined as (Vmax-Vtop)/Vamp, useful for square and pulse waveforms.
- **PreShoot:** Defined as (Vmin-Vbase)/Vamp, useful for square and pulse waveforms.
- **Cycle RMS:** The true Root Mean Square voltage over the first entire period of the waveform.

Cursor RMS: The true Root Mean Square voltage over the range of two cursors.

#### The automatic measurement of time parameters

The oscilloscopes provide time parameters auto-measurements include Period, Frequency, Rise Time, Fall Time, +D width, -D width, +Duty, -Duty, Delay  $A \rightarrow B \clubsuit$ , Delay  $A \rightarrow B \clubsuit$ , and Duty cycle.

Figure 4-15 shows a pulse with some of the time measurement points.

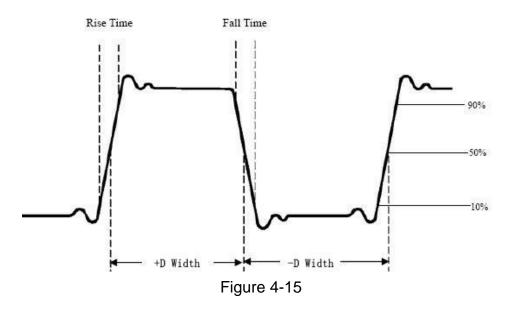

- **Rise Time:** Time that the leading edge of the first pulse in the waveform takes to rise from 10% to 90% of its amplitude.
- **Fall Time:** Time that the falling edge of the first pulse in the waveform takes to fall from 90% to 10% of its amplitude.

+D width: The width of the first positive pulse in 50% amplitude points.

-D width: The width of the first negative pulse in the 50% amplitude points.

+**Duty:** +Duty Cycle, defined as +Width/Period.

**-Duty:**-Duty Cycle, defined as -Width/Period.

**Delay**  $A \rightarrow B \blacksquare$ : The delay between the two channels at the rising edge.

**Delay**  $A \rightarrow B$   $\ddagger$ : The delay between the two channels at the falling edge.

**Screen Duty:** Defines as (the width of the positive pulse)/(Entire period)

**Phase**: Compare the rising edge of CH1 and CH2, calculate phase difference of two channels.

Phase difference=(Delay between channels at the rising edge+Period)×360°.

#### **Other measurements**

+**PulseCount** : The number of positive pulses that rise above the mid reference crossing in the waveform.

-PulseCount : The number of negative pulses that fall below the mid reference crossing in the waveform.

**RiseEdgeCnt** The number of positive transitions from the low reference value to the high reference value in the waveform.

**FallEdgeCnt** The number of negative transitions from the high

reference value to the low reference value in the waveform.

Area : The area of the whole waveform within the screen and the unit is voltage-second. The area measured above the zero reference (namely the vertical offset) is positive; the area measured below the zero reference is negative. The area measured is the algebraic sum of the area of the whole waveform within the screen.

**Cycle Area** f: The area of the first period of waveform on the screen and the unit is voltage-second. The area above the zero reference (namely the vertical offset) is positive and the area below the zero reference is negative. The area measured is the algebraic sum of the area of the whole period waveform. Note: When the waveform on the screen is less than a period, the period area measured is 0.

### How to Measure with Cursors

Push the **Cursor** button to turn cursors on and display the cursor menu. Push it again to turn cursors off.

### The Cursor Measurement for normal mode:

Function Menu	Setting	Description		
	Voltage	Display the voltage measurement cursor and menu.		
	Time	Display the time measurement cursor and menu.		
Туре	Time&Voltage	Display the time and voltage measurement cursor		
Type		and menu.		
	AutoCursr	The horizontal cursors are set as the intersections of		
		the vertical cursors and the waveform		
Line Type	Time	Makes the vertical cursors active.		
(Time&Vol tage type)	Voltage	Makes the horizontal cursors active.		
Window				
(Wave	Main	Measure in the main window.		
zoom mode)	Extension	Measure in the extension window.		
moue)	a	Turn the <b>M</b> rotary control to move line a.		
T in a	b	Turn the <b>M</b> rotary control to move line b.		
Line	ab	Two cursors are linked. Turn the M rotary control		
		to move the pair of cursors.		
Source	CH1	Display the channel to which the cursor		
Source	CH2	measurement will be applied.		

The description of the **cursor menu** is shown as the following table:

Perform the following operation steps for the time and voltage cursor measurement of the channel CH1:

- 1. Push **Cursor** to display the cursor menu.
- 2. In the bottom menu, select **Source** as **CH1**.
- 3. Select the first menu item in the bottom menu, the **Type** menu will display at the right of the screen. In the right menu, select **Time&Voltage** for Type, two blue dotted lines displayed along the horizontal direction of the screen, two blue dotted lines displayed along the vertical direction of the screen. Cursor measure window at the left bottom of the screen shows the cursor readout.
- 4. In the bottom menu, select **Line Type** as **Time** to make the vertical cursors active. If the **Line** in the bottom menu is select as **a**, turn the **M** rotary control to move line a to the right or left. If **b** is selected, turn the **M** rotary control to move line b.
- 5. In the bottom menu, select **Line Type** as **Voltage** to make the horizontal cursors active. Select **Line** in the bottom menu as **a** or **b**, turn the **M** rotary control to move it.
- 6. Push the **Horizontal HOR** button to enter wave zoom mode. In the bottom cursor menu, select **Window** as **Main** or **Extension** to make the cursors shown in the main window or zoom window.


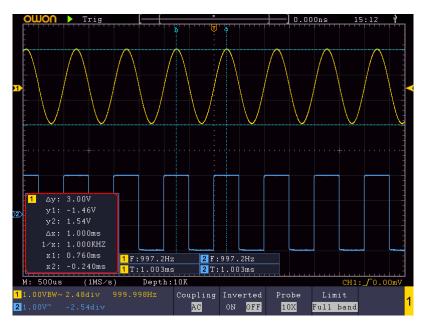


Figure 4-16 Time&Voltage Cursor Measurement

### **Auto Cursor**

For the AutoCursr type, the horizontal cursors are set as the intersections of the vertical cursors and the waveform.

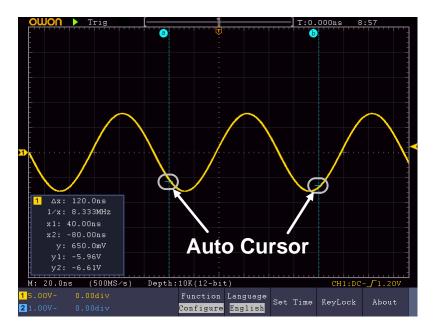

### The Cursor Measurement for FFT mode

In FFT mode, push the **Cursor** button to turn cursors on and display the cursor menu. The description of the **cursor menu** in FFT mode is shown as the following table:

Function Menu	Setting	Description			
	Vamp (or Phase)	Display the Vamp (or Phase) measurement cursor and menu.			
	Freq	Display the Freq measurement cursor and menu.			
Туре	Freq&Vamp (or Freq&Phase)	Display the corresponding measurement cursor and menu.			
	AutoCursr	The horizontal cursors are set as the intersections of the vertical cursors and the waveform			
Line Type (Freq&Vamp	Freq	Makes the vertical cursors active.			
or Freq&Phase type)	Vamp (or Phase)	Makes the horizontal cursors active.			
Window	Main	Measure in the main window.			
(Wave zoom mode)	Extension	Measure in the FFT extension window.			
	a	Turn the $\mathbf{M}$ rotary control to move line a.			
Line	b	Turn the <b>M</b> rotary control to move line b.			
	ab	Two cursors are linked. Turn the <b>M</b> rotary control to move the pair of cursors.			
Source	Math FFT	Display the channel to which the cursor measurement will be applied.			

Perform the following operation steps for the amplitude and frequency cursor measurement of math FFT:

- 1. Press the **Math** button to display the math menu in the bottom. Select **FFT**. In the right menu, select **Format**. In the left menu, turn the **M** rotary control to select amplitude unit (**V RMS** or **Decibels**).
- 2. Push Cursor to display the cursor menu.
- 3. In the bottom menu, select **Window** as **Extension**.
- 4. Select the first menu item in the bottom menu, the **Type** menu will display at the right of the screen. In the right menu, select **Freq&Vamp** for Type, two blue dotted lines displayed along the horizontal direction of the screen, two blue dotted lines displayed along the vertical direction of the screen. Cursor measure window at the left bottom of the screen shows the cursor readout.
- 5. In the bottom menu, select **Line Type** as **Freq** to make the vertical cursors active. If the **Line** in the bottom menu is select as **a**, turn the **M** rotary control to move line a to the right or left. If **b** is selected, turn the **M** rotary control to move line b.
- 6. In the bottom menu, select **Line Type** as **Vamp** to make the horizontal cursors active. Select **Line** in the bottom menu as **a** or **b**, turn the **M** rotary control to move it.
- 7. In the bottom cursor menu, you can select **Window** as **Main** to make the cursors shown in the main window.

### How to Use Autoscale

This is a very useful function for first time users to carry out a simple and quick test on the input signal. The function is applied to follow-up signals automatically even if the signals change at any time. Autoscale enables the instrument to set up trigger mode, voltage division and time scale automatically according to the type, amplitude and frequency of the signals.

The menu is as follows:				
Function Menu	Setting	Instruction		
	ON	Turn on Autoscale.		
Autoscale	OFF	Turn off Autoscale.		
		Follow-up and adjust both vertical and horizontal settings.		
Mode		Follow-up and only adjust horizontal scale.		
	$\sim \sim$	Follow-up and only adjust vertical scale.		
	$\wedge \wedge \wedge$	Show Multi-period waveforms.		
Wave		Only show one or two periods.		

If you want to measure the two-channel signal, you can do as the follows:

- 1. Push the Autoscale button, the function menu will appear.
- 2. In the bottom menu, select **ON** in the **Autoscale** menu item.
- 3. In the bottom menu, Select **Mode**. In the right menu, select
- 4. In the bottom menu, Select **Wave**. In the right menu, select

Then the wave is displayed in the screen, shown as Figure 4-17.

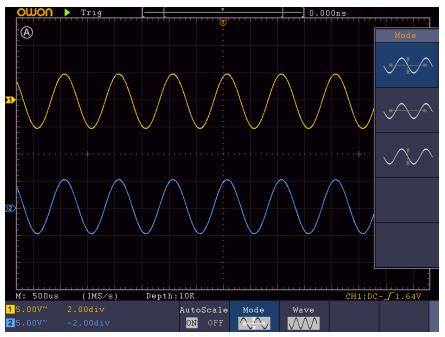


Figure 4-17 Autoscale Horizontal-Vertical multi-period waveforms

#### Note:

- 1. Entering into Autoscale function and the symbol (A) will be flickering on the top left of the screen.
- 2. In the mode of Autoscale, the oscilloscope can self-estimate Trigger Mode (Edge, Video). At this point, the trigger menu is not available.
- 3. At the mode of XY and STOP status, when entering into Autoscale, DSO switches to YT mode and AUTO triggering.
- 4. At the mode of Autoscale, DSO is always set as DC coupling with AUTO triggering.
- 5. At the mode of Autoscale, if adjust the vertical position, voltage division, trigger level or time scale of CH1 or CH2, the oscilloscope will turn off Autoscale function. To back to Autoscale, Push **Autoset**.
- 6. Turn off the submenu at the Autoscale menu, the Autoscale is off and turn on the submenu still enters into the function.
- 7. When video triggering, the horizontal time scale is 50us. If one channel is showing edge signal, the other channel is showing video one, the time scale refers to 50us as video one as standard.
- 8. While the Autoscale is working, the settings below will be made forcibly: The DSO will switch from the wave zoom mode to the normal mode.

### How to Use Built-in Help

- 1. Push **Help** button, the catalog will display in the screen.
- 2. In the bottom menu, press **Prev Page** or **Next Page** to choose help topic, or just turn the **M** rotary control to choose.
- 3. Press **OK** to view the details about the topic, or just push the M rotary control.
- 4. Press Quit to exit the help, or just do other operations.

### How to Use Executive Buttons

Executive Buttons include Autoset, Run/Stop, Single, Copy.

### Autoset

It's a very useful and quick way to apply a set of pre-set functions to the incoming signal, and display the best possible viewing waveform of the signal and also works out some measurements for user as well.

The details of functions applied to the signal when using **Autoset** are shown as the following table:

Function Items	Setting
Vertical Coupling	Current
Channel Coupling	Current
Vertical Scale	Adjust to the proper division.
Bandwidth	Full
Horizontal Level	Middle or $\pm 2 \text{ div}$
Horizontal Sale	Adjust to the proper division
Trigger Type	Slope or Video
Trigger Source	CH1 or CH2
Trigger Coupling	DC
Trigger Slope	Current
Trigger Level	3/5 of the waveform
Trigger Mode	Auto
Display Format	YT
Force	Stop
Help	Exit
Pass/Fail	Off
Inverted	Off
Zoom Mode	Exit

### Judge waveform type by Autoset

#### Five kinds of types: Sine, Square, video signal, DC level, Unknown signal.

#### Menu as follow:

Sine: (Multi-period, Single-period, FFT, Cancel Autoset)



Square: (Multi-period, Single-period, Rising Edge, Falling Edge, Cancel Autoset)



Video signal:

Type <mark>line</mark> fiel	Odd	Even	Line NO. 1	Cancel Autoset	

DC level, Unknown signal:

		Cancel	
		Autoset	

#### **Description for some icons:**

Multi-period:	To display multiple periods
Single-period:	To display single period
FFT:	Switch to FFT mode
Rising Edge:	Display the rising edge of square waveform
Falling Edge:	Display the falling edge of square waveform
Cancel Autoset:	Go back to display the upper menu and waveform information

Note: The Autoset function requires that the frequency of signal should be no lower

than 20Hz, and the amplitude should be no less than 5mv. Otherwise, the Autoset function may be invalid.

**Run/Stop:** Enable or disable sampling on input signals.

Notice: When there is no sampling at STOP state, the vertical division and the horizontal time base of the waveform still can be adjusted within a certain range, in other words, the signal can be expanded in the horizontal or vertical direction.

When the horizontal time base is  $\leq$ 50ms, the horizontal time base can be expanded for 4 divisions downwards.

- **Single:** Push this button you can set the trigger mode as single directly, so when trigger occurs, acquire one waveform then stop.
- **Copy:** You can save the waveform by just pushing the **Copy** panel button in any user interface. The source wave and the storage location are according to the settings of the **Save** function menu when the Type is **Wave**. For more details, please see "*Save Function Menu*" on P50.

### How to Print the Screen Image

To print an image of what appears on the oscilloscope screen, do as the follows:

- (1) Connect the printer to the **USB Device port** on the rear panel of the oscilloscope. Note: The USB Device port supports PictBridge compatible printers.
- (2) Push the **Utility** button, select **Function** in the bottom menu, select **Output** in the left menu.
- (3) In the bottom menu, select **Device** as **PICT**. (When **PC** is selected, you can get an image by Oscilloscope software.)
- (4) In the bottom menu, select **Print Setup**. In the right menu, set up print parameters. The **On** selection of **Ink Saver** will print out a copy with a white background.
- (5) Once you have connected a printer to your oscilloscope and set up print parameters, you can print current screen images with a single push of the **Print** button on the front panel.

## **5.** Communication with PC

The oscilloscope supports communications with a PC through USB or LAN port. You can use the Oscilloscope communication software to store, analyze, display the data and remote control.

To learn about how to operate the software, you can push F1 in the software to open the help document.

Here is how to connect with PC. First, install the Oscilloscope communication software on the supplied CD. Then there are several ways of connection to choose from.

### **Using USB Port**

- (1) **Connection:** Use a USB data cable to connect the **USB Device port** in the right panel of the Oscilloscope to the USB port of a PC.
- (2) **Install the driver:** Run the Oscilloscope communication software on PC, push F1 to open the help document. Follow the steps of title "**I. Device connection**" in the document to install the driver.
- (3) **Port setting of the software:** Run the Oscilloscope software; click "Communications" on the menu bar, choose "Ports-Settings", in the setting dialog, choose "Connect using" as "USB". After connect successfully, the connection information in the bottom right corner of the software will turn green.

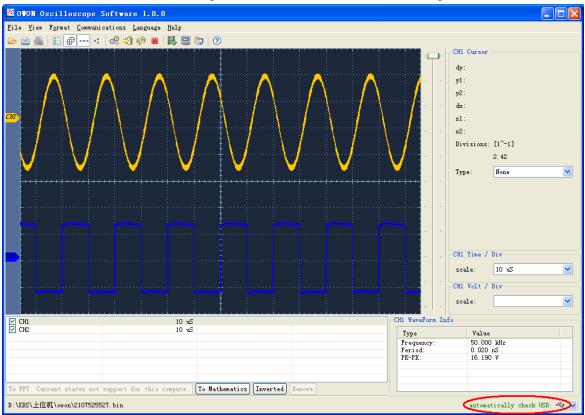


Figure 5-1 Connect with PC through USB port

### **Using LAN Port**

### **Connect directly**

- (1) **Connection**. Plug in the LAN cable to the LAN port in the back of the oscilloscope; plug the other end into the LAN interface of the computer.
- (2) Set the network parameters of the computer. Since the oscilloscope can not support obtaining an IP address automatically, you should assign a static IP address. Here we set the IP address to 192.168.1.71.

ernet Protocol (TCP/IP) P	Properties
ieneral	
	l automatically if your network supports ed to ask your network administrator for
O Obtain an IP address autor	natically
O Use the following IP address	s]
<u>I</u> P address:	192 . 168 . 1 . 71
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
Default gateway:	192.168.1.1
Obtain DNS server address	automatically
Server Strate Strate Contract Contract Strate Strat	ver addresses:
Preferred DNS server:	192.168.1.1
Alternate DNS server:	* * *
	Ad <u>v</u> anced
	OK Cancel

Figure 5-2 Set the network parameters of the computer

(3) Set the network parameters of the OWON Oscilloscope Software. Run the software on the computer; choose the "Ports-settings" of the "Communications" menu item. Set "Connect using" to LAN. About the IP, the first three bytes is same as the IP in the step (2), the last byte should be different. Here, we set it to 192.168.1.72. The range of the port value is 0 - 4000, but the port which under 2000 is always used, so it is suggested to set it to the value above 2000. Here, we set it to 3000.

User Manual

e <sup>o</sup> ,Ports-settings
Connect using LAN
IP 192.168.1.72 port: 3000
Custom USB Transfer Instructions(Some Types can choose to get bin / bmp or deep-memory data)
🔿 WaveForm 💿 Image 🔿 High Memory Depth
Get Image File ".bmp"
Setting:
Keep Getting Delay(ms): 2000 🤤
Save data file automatically to below directory
Browse
For there is a limit number of files in one single directory of Windows File System(FAT16, FAT32, NTFS), the number of files to be saved is not certain, it is recommended to choose a directory in NTFS disk drive, turn off the storage channels in device, and use short directory path to save more files.
<u>QK</u> Get Data now! Keep Getting now!

Figure 5-3 Set the network parameters of the OWON Oscilloscope Software

(4) Set the network parameters of the oscilloscope. In the oscilloscope, push the Utility button. Select Function in the bottom menu. Select LAN Set in the left menu. In the bottom menu, set the Type item as LAN, and select Set. In the right menu, set IP and Port to the same value as the "Ports-settings" in the software in step (3). Select Save set in the bottom menu, it prompts "Reset to update the config". After resetting the oscilloscope, if you can get data normally in the oscilloscope software, the connection is successful.



Figure 5-4 Set the network parameters of the oscilloscope

### **Connect through a router**

- (1) **Connection**. Use a LAN cable to connect the oscilloscope with a router, the LAN port of the oscilloscope is in the right side panel; the computer should be connected to the router too.
- (2) Set the network parameters of the computer. Since the oscilloscope can not support obtaining an IP address automatically, you should assign a static IP address. The Default gateway and Subnet mask should be set according to the router. Here we set the IP address to 192.168.1.71, Subnet mask is 255.255.255.0, Default gateway is 192.168.1.1.

ernet Protocol (TCP/IP) P	
	automatically if your network supports ed to ask your network administrator for
O Obtain an IP address autor	natically
⊙ Use the following IP addres	s
<u>I</u> P address:	192.168.1.71
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
<u>D</u> efault gateway:	192 . 168 . 1 . 1
Obtain DNS server address	automatically
O Use the following DNS served and the served of the served and the served of the	rer addresses:
<u>P</u> referred DNS server:	192.168.1.1
Alternate DNS server:	* * *
	Ad <u>v</u> anced
	OK Cancel

Figure 5-5 Set the network parameters of the computer

(3) Set the network parameters of the OWON Oscilloscope Software. Run the software on the computer; choose the "Ports-settings" of the "Communications" menu item. Set "Connect using" to LAN. About the IP, the first three bytes is same as the IP in the step (2), the last byte should be different. Here, we set it to 192.168.1.72. The range of the port value is 0 - 4000, but the port which under 2000 is always used, so it is suggested to set it to the value above 2000. Here, we set it to 3000.

User Manual

e <sup>o</sup> ,Ports-settings
Connect using LAN
IP 192.168.1.72 port: 3000
Custom USB Transfer Instructions(Some Types can choose to get bin / bmp or deep-memory data)
🔿 WaveForm 💿 Image 🔿 High Memory Depth
Get Image File ".bmp"
Setting:
Keep Getting Delay(ms): 2000 🤤
Save data file automatically to below directory
Browse
For there is a limit number of files in one single directory of Windows File System(FAT16, FAT32, NTFS), the number of files to be saved is not certain, it is recommended to choose a directory in NTFS disk drive, turn off the storage channels in device, and use short directory path to save more files.
<u>QK</u> Get Data now! Keep Getting now!

Figure 5-6 Set the network parameters of the OWON Oscilloscope Software

(4) Set the network parameters of the oscilloscope. In the oscilloscope, push the Utility button. Select Function in the bottom menu. Select LAN Set in the left menu. In the bottom menu, set the Type item as LAN, and select Set. In the right menu, set IP and Port to the same value as the "Ports-settings" in the software in step (3). The Netgate and Net mask should be set according to the router. Select Save set in the bottom menu, it prompts "Reset to update the config". After resetting the oscilloscope, if you can get data normally in the oscilloscope software, the connection is successful.

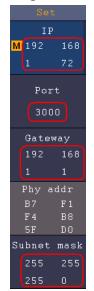


Figure 5-7 Set the network parameters of the oscilloscope

## 6. Demonstration

### **Example 1: Measurement a Simple Signal**

The purpose of this example is to display an unknown signal in the circuit, and measure the frequency and peak-to-peak voltage of the signal.

#### 1. Carry out the following operation steps for the rapid display of this signal:

- (1) Set the probe menu attenuation coefficient as **10X** and that of the switch in the probe switch as **10X** (see "*How to Set the Probe Attenuation Coefficient*" on P12).
- (2) Connect the probe of **Channel 1** to the measured point of the circuit.
- (3) Push the **Autoset** button.

The oscilloscope will implement the **Autoset** to make the waveform optimized, based on which, you can further regulate the vertical and horizontal divisions till the waveform meets your requirement.

#### 2. Perform Automatic Measurement

The oscilloscope can measure most of the displayed signals automatically. To measure the period, the frequency of the CH1, following the steps below:

- (1) Push the **Measure** button to show the Measure menu.
- (2) Select **Add** in the bottom menu.
- (3) In the right menu, select CH1 in the Source menu item.
- (4) In the left Type menu, turn the **M** rotary control to select **Period**.
- (5) In the right menu, select Add. The period type is added.
- (6) In the left Type menu, turn the **M** rotary control to select **Frequency**.
- (7) In the right menu, select **Add**. The frequency type is added.

The measured value will be displayed at the bottom left of the screen automatically (see *Figure 6-1*).

User Manual

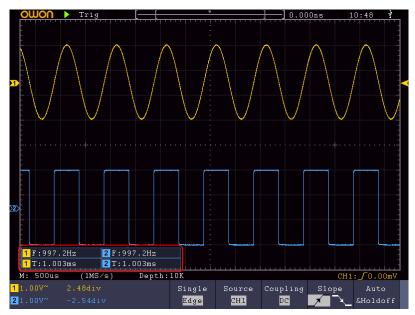


Figure 6-1 Measure period and frequency value for a given signal

### **Example 2: Gain of a Amplifier in a Metering Circuit**

The purpose of this example is to work out the Gain of an Amplifier in a Metering Circuit. First we use Oscilloscope to measure the amplitude of input signal and output signal from the circuit, then to work out the Gain by using given formulas.

Set the probe menu attenuation coefficient as **10X** and that of the switch in the probe as **10X** (see "*How to Set the Probe Attenuation Coefficient*" on P12).

Connect the oscilloscope CH1 channel with the circuit signal input end and the CH2 channel to the output end.

### **Operation Steps:**

- (1) Push the **Autoset** button and the oscilloscope will automatically adjust the waveforms of the two channels into the proper display state.
- (2) Push the **Measure** button to show the Measure menu.
- (3) Select **Add** in the bottom menu.
- (4) In the right menu, select CH1 in the Source menu item.
- (5) In the left Type menu, turn the  $\mathbf{M}$  rotary control to select  $\mathbf{PK}$ - $\mathbf{PK}$ .
- (6) In the right menu, select Add. The peak-to-peak type of CH1 is added.
- (7) In the right menu, select CH2 in the Source menu item.
- (8) In the left Type menu, turn the **M** rotary control to select **PK-PK**.
- (9) In the right menu, select Add. The peak-to-peak type of CH2 is added.
- (10)Read the peak-to-peak voltages of Channel 1 and Channel 2 from the bottom left of the screen (see *Figure 6-2*).
- (11)Calculate the amplifier gain with the following formulas.

Gain = Output Signal / Input signal

```
Gain (db) = 20 \times \log (gain)
```

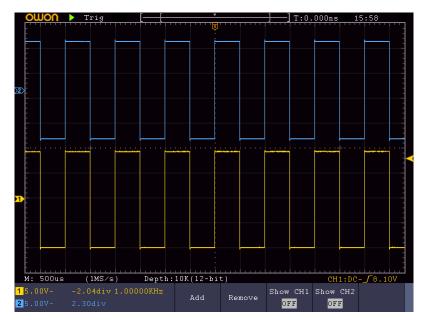


Figure 6-2 Waveform of Gain Measurement

### **Example 3: Capturing a Single Signal**

It's quite easy to use Digital Oscilloscope to capture non-periodic signal, such as a pulse and burr etc. But the common problem is how to set up a trigger if you have no knowledge of the signal? For example, if the pulse is the logic signal of a TTL level, the trigger level should be set to 2 volts and the trigger edge be set as the rising edge trigger. With various functions supported by our Oscilloscope, user can solve this problem by taking an easy approach. First to run your test using auto trigger to find out the closest trigger level and trigger type, this helps user to make few small adjustments to achieve a proper trigger level and mode. Here is how we achieve this.

#### The operation steps are as follows:

- (1) Set the probe menu attenuation coefficient to 10X and that of the switch in the probe to 10X (see "*How to Set the Probe Attenuation Coefficient*" on P12).
- (2) Adjust the **Vertical Scale** and **Horizontal Scale** rotary controls to set up a proper vertical and horizontal ranges for the signal to be observed.
- (3) Push the Acquire button to display the Acquire menu.
- (4) Select Acqu Mode in the bottom menu. Select Peak Detect in the right menu.
- (5) Push the **Trigger Menu** button to display the Trigger menu.
- (6) Select the first menu item in the bottom menu. Select **Single** in the right menu.
- (7) In the left menu, select **Edge** as the mode.
- (8) Select **Source** in the bottom menu. Select **CH1** in the right menu.

- (9) Select **Coupling** in the bottom menu. Select **DC** in the right menu.
- (10)In the bottom menu, select **Slope** as (rising).
- (11)Turn the **Trigger Level** rotary control and adjust the trigger level to the roughly 50% of the signal to be measured.
- (12) Check the Trigger State Indicator on the top of the screen, if it is not Ready, push down the **Run/Stop** button and start acquiring, wait for trigger to happen. If a signal reaches to the set trigger level, one sampling will be made and then displayed in the screen. By using this approach, a random pulse can be captured easily. For instance, if we want to find a burst burr of high amplitude, set the trigger level to a slightly higher value of the average signal level, push the **Run/Stop** button and wait a trigger. Once there is a burr occurring, the instrument will trigger automatically and record the waveform during the period around the trigger time. By turning the **Horizontal Position** rotary control in the horizontal control area in the panel, you can change the horizontal triggering position to obtain the negative delay, making an easy observation of the waveform before the burr occurs (see *Figure 6-3*).

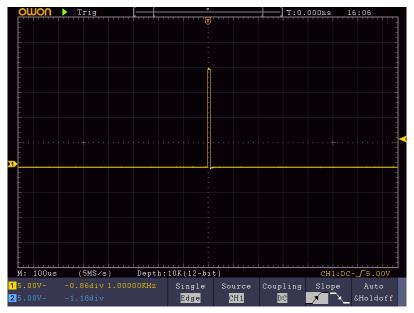


Figure 6-3 Capturing a Single Signal

### **Example 4: Analyze the Details of a Signal**

Noise is very common inside most of the electronic signal. To find out what's inside the noise and reduce the level of noise is very important function our oscilloscope is capable to offer.

Noise Analysis

The level of noise sometime indicates a failure of electronic circuit. The Peak Detect functions acts an important role to help you to find out the details of these noise. Here is how we do it:

- (1) Push the Acquire button to display the Acquire menu.
- (2) Select Acqu Mode in the bottom menu.
- (3) Select **Peak Detect** in the right menu.

The signal displayed on the screen containing some noise, by turning on Peak Detect function and changing time base to slow down the incoming signal, any peaks or burr would be detected by the function (see *Figure 6-4*).

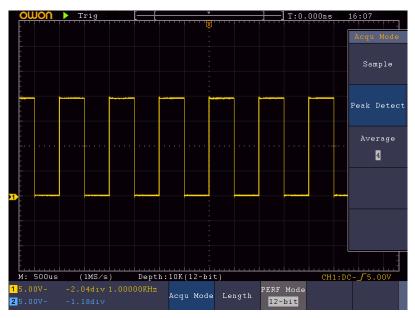


Figure 6-4 Signal with Noises

#### Separate Noises from the Signal

When focusing on signal itself, the important thing is to reduce the noise level as lower as possible, this would enable user to have more details about the signal. The Average function offered by our Oscilloscope can help you to achieve this.

Here are the steps for how to enable Average function.

- (1) Push the **Acquire** button to display the Acquire menu.
- (2) Select Acqu Mode in the bottom menu.
- (3) Select **Average** in the right menu, turn the **M** rotary control and observe the waveform obtained from averaging the waveforms of different average number.

User would see a much reduced random noise level and make it easy to see more details of the signal itself. After applying Average, user can easily identify the burrs on the rising and falling edges of some part of the signal (see *Figure 6-5*).

#### User Manual

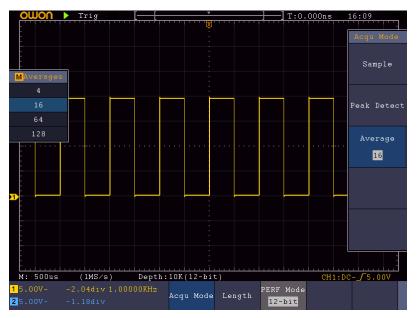


Figure 6-5 Reduce Noise level by using Average function

### **Example 5: Application of X-Y Function**

#### **Examine the Phase Difference between Signals of two Channels**

Example: Test the phase change of the signal after it passes through a circuit network.

X-Y mode is a very useful when examining the Phase shift of two related signals. This example takes you step by step to check out the phase change of the signal after it passes a specified circuit. Input signal to the circuit and output signal from circuit are used as source signals.

For the examination of the input and output of the circuit in the form of X-Y coordinate graph, please operate according to the following steps:

- (1) Set the probe menu attenuation coefficient for **10X** and that of the switch in the probe for **10X** (see "*How to Set the Probe Attenuation Coefficient*" on P12).
- (2) Connect the probe of channel 1 to the input of the network and that of Channel 2 to the output of the network.
- (3) Push the **Autoset** button, with the oscilloscope turning on the signals of the two channels and displaying them in the screen.
- (4) Turn the **Vertical Scale** rotary control, making the amplitudes of two signals equal in the rough.
- (5) Push the **Display** button and recall the Display menu.
- (6) Select **XY Mode** in the bottom menu. Select **Enable** as **ON** in the right menu. The oscilloscope will display the input and terminal characteristics of the network in the Lissajous graph form.
- (7) Turn the Vertical Scale and Vertical Position rotary controls, optimizing the

waveform.

(8) With the elliptical oscillogram method adopted, observe and calculate the phase difference (see *Figure 6-6*).

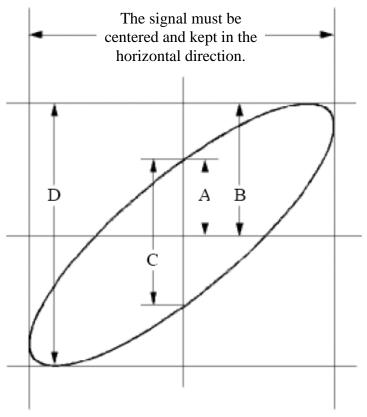


Figure 6-6 Lissajous Graph

Based on the expression sin (q) =A/B or C/D, thereinto, q is the phase difference angle, and the definitions of A, B, C, and D are shown as the graph above. As a result, the phase difference angle can be obtained, namely,  $q =\pm \arcsin (A/B)$  or  $\pm \arcsin (C/D)$ . If the principal axis of the ellipse is in the I and III quadrants, the determined phase difference angel should be in the I and IV quadrants, that is, in the range of  $(0 - \pi / 2)$  or  $(3\pi / 2 - 2\pi)$ . If the principal axis of the ellipse is in the II and IV quadrants, the determined phase difference angle is in the II and III quadrants, that is, within the range of  $(\pi / 2 - \pi)$  or  $(\pi - 3\pi / 2)$ .

### **Example 6: Video Signal Trigger**

Observe the video circuit of a television, apply the video trigger and obtain the stable video output signal display.

#### **Video Field Trigger**

For the trigger in the video field, carry out operations according to the following steps:

(1) Push the **Trigger Menu** button to display the trigger menu.

- (2) Select the first menu item in the bottom menu. Select **Single** in the right menu.
- (3) In the left menu, select **Video** as the mode.
- (4) Select **Source** in the bottom menu. Select **CH1** in the right menu.
- (5) Select **Modu** in the bottom menu. Select **NTSC** in the right menu.
- (6) Select **Sync** in the bottom menu. Select **Field** in the right menu.
- (7) Turn the **Vertical Scale**, **Vertical Position** and **Horizontal Scale** rotary controls to obtain a proper waveform display (see *Figure 6-7*).

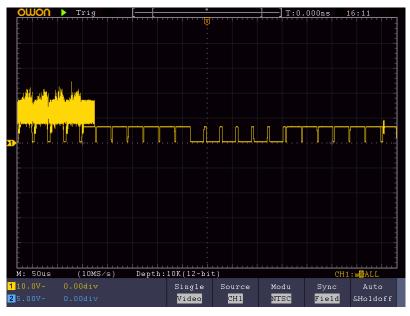


Figure 6-7 Waveform Captured from Video Field Trigger

## 7. Troubleshooting

#### 1. Oscilloscope is powered on but no Display.

- Check whether the power connection is connected properly.
- Check whether the fuse which is beside the AC power input jack is blew (the cover can be pried open with a straight screwdriver).
- Restart the instrument after completing the checks above.
- If the problem persists, please contact OWON and we will be under your service.

# 2. After acquiring the signal, the waveform of the signal is not displayed in the screen.

- Check whether the probe is properly connected to the signal connecting wire.
- Check whether the signal connecting wire is correctly connected to the BNC (namely, the channel connector).
- Check whether the probe is properly connected with the object to be measured.
- Check whether there is any signal generated from the object to be measured (the trouble can be shot by the connection of the channel from which there is a signal generated with the channel in fault).
- Make the signal acquisition operation again.

### 3. The measured voltage amplitude value is 10 times or 1/10 of the actual value.

Look at the attenuation coefficient for the input channel and the attenuation ration of the probe, to make sure they are match (see "*How to Set the Probe Attenuation Coefficient*" on P12).

- 4. There is a waveform displayed, but it is not stable.
  - Check whether the **Source** item in the **TRIG MODE** menu is in conformity with the signal channel used in the practical application.
  - Check on the trigger **Type** item: The common signal chooses the **Edge** trigger mode for **Type** and the video signal the **Video**. If Alternate trigger is selected, both of the channel 1 and channel 2 trigger levels should be adjusted to the proper position. Only if a proper trigger mode is applied, the waveform can be displayed steadily.
  - Try to change the trigger coupling into the high frequency suppress and the low frequency suppress to smooth the high frequency or low frequency noise triggered by the interference. (Only for the models that have this function.)

### 5. No Display Responses to the Push-down of Run/Stop.

Check whether Normal or Single is chosen for Polarity in the TRIG MODE menu and the trigger level exceeds the waveform range.

If it is, make the trigger level is centered in the screen or set the trigger mode as Auto. In addition, with the **Autoset** button pressed, the setting above can be completed automatically.

6. The displaying of waveform seems getting slow after increasing AVERAGE value in Acqu Mode (see "*How to Implement Sampling Setup*" on P46 ), or a longer duration is set in the Persist in Display (see "*Persist*" on P49).

It's normal as the Oscilloscope is working hard on many more data points.

## 8. Technical Specifications

Unless otherwise specified, the technical specifications applied are for dual-channel series only, and Probes attenuation set as 10X. Only if the oscilloscope fulfills the following two conditions at first, these specification standards can be reached.

- This instrument should run for at least 30 minutes continuously under the specified operating temperature.
- If change of the operating temperature is up to or exceeds 5°C, do a "Self-calibration" procedure (see "*How to Implement Self-calibration*" on P13).

All specification standards can be fulfilled, except one(s) marked with the word "Typical".

Performance Characteristics		Instruction			
Bandwidth		100 MHz			
Vertical	Resolution (A/D)			12 bits	
	Channel		2 +	1 (External)	
Wavefo	rm Refresh Rate		55,0	00 wfms/s	
	Mode	Nor	Normal, Peak detect, Averaging		
Acquisition	Sample rate (real time)	Dual CH Single CH	500 MS, 8 bits mode 12 bits	1 GS/s	
			mode	500 MS/s	
	Input coupling	DC, AC,	Ground	1	
	Input impedance	1 MΩ±2%, in parallel with 15 pF±5 pF		el with 15 pF±5 pF	
	Input coupling	0.001X - 10	0.001X - 1000X, step by 1 – 2 - 5		
Input	Max input voltage	1MΩ: ≤300 Vrms			
•	Bandwidth limit	20 MHz, full bandwidth		idth	
	Channel –channel isolation	50Hz: 100 : 1 10MHz: 40 : 1			
	Time delay between channel(typical)	150ps			
		Dual CH	0.05 S/s $\sim$ 500 MS/s		
	Sampling rate range	Single CH	8 bits mode	0.05 S/s - 1 GS/s	
Horizontal System		Single CH	12 bits mode	0.05 S/s - 500 MS/s	
•	Interpolation	(Sinx)/x, x		inx)/x, x	
	Record length	2 channels ON: max 10M;			
		1 channel ON: max 20M.			

Performance Characteristics		Inc	struction
i chomu		113	
	Scanning speed (S/div)	2ns/div - 1000s/div	, step by 1 – 2 - 5
	Sampling rate / relay time accuracy	$\pm$ 1 ppm (Typical, T	a = +25℃)
	Interval( $\triangle$ T) accuracy	Single: $\pm$ (1 interval time+: Average>16:	1 ppm×reading+0.6 ns);
	(DC - 100MHz)		1 ppm×reading+0.4 ns)
	Sensitivity	1 mV/div $\sim$ 10 V/div	1
	Displacement	±2 V (1 mV/div – 50 n ±20 V (100 mV/div – ±200 V (2 V/div – 10 V	1 V/div);
	Analog bandwidth	100 MHz	
	Single bandwidth	Full bandwidth	
	Low Frequency	$\geqslant$ 10 Hz (at input, A	C coupling, -3 dB)
Vertical system	Rise time (at input, Typical)	≤ 3.5 ns	
	DC gain accuracy	1 mV 2 mV	3% 2%
		≥ 5 mV	1.5%
			en any two averages of
	DC accuracy (average)		cquired with the same
		±(3% rdg + 0.05 div)	nbient conditions ( $ riangle$ V): )
	Waveform inverted ON/OFF		
	Cursor	$\triangle V, \triangle T, \triangle T \& \triangle$ auto cursor	V between cursors,
		Period, Frequency,	Mean, PK-PK, RMS,
Measurement	Automatic	· · •	se, Amplitude, Overshoot, me, Fall Time, +Pulse
			lth, +Duty Cycle, -Duty
			$\mathbf{F}$ , Delay A $\rightarrow$ B $\mathbf{E}$ , Cycle
			S, Screen Duty, Phase,
		+Pulse Count, -P	ulse Count, Rise Edge
		-	Count, Area, and Cycle
		Area.	
	Waveform Math		FTrms, Intg, Diff, Sqrt,
		pass, high pass, ban	ion, digital filter (low d pass_band reject)
	Decoding Type	RS232, I2C, SPI, C	
	Waveform storage	50 waveforms	

User Manual

Performance Characteristics		eristics	Instruction
	Lissajous figure	Bandwidth	Full bandwidth
		Phase difference	±3 degrees
Communication	Standard	USB, USB Ho	ost (USB storage); Trig Out(P/F); LAN port
port	Optional	VGA port an	d AV port
Counter	Support		

### Trigger

Performance	Characteristics	Instruction	
	Internal	$\pm 5$ div from the screen center	
Trigger level range	EXT	±2 V	
	EXT/5	±10 V	
Trigger level	Internal	±0.3 div	
	EXT	$\pm$ (10 mV + 6% of Set Value)	
Accuracy (typical)	EXT/5	$\pm$ (50 mV +6% of Set Value)	
Trigger displacement	According to Record	length and time base	
Trigger Holdoff range	100 ns - 10 s		
50% level setting (typical)	Input signal frequence	$y \ge 50 \text{ Hz}$	
Edge trigger	slope	Rising, Falling	
Video Trigger	Modulation	Support standard NTSC, PAL and SECAM broadcast systems	
	Line number range	1-525 (NTSC) and 1-625 (PAL/SECAM)	
	Trigger condition	Positive pulse: $>, <, =$	
Pulse trigger		Negative pulse: >, <, =	
	Pulse Width range	30 ns to 10 s	
	Trigger condition	Positive pulse: $>, <, =$	
Slope Trigger		Negative pulse: $>, <, =$	
	Time setting	30 ns to 10 s	
Runt Trigger	Polarity	Positive, Negative	
	Pulse Width	>, =, <	
	Condition		
	Pulse Width Range	30 ns to 10 s	
	Polarity	Positive, Negative	
Windows Trigger	Trigger Position	Enter, Exit, Time	
	Windows Time	30 ns to 10 s	
Timeout Trigger	Edge Type	Rising, Falling	

User Manual			
	Idle Time	30 ns to 10 s	
Nth Edge Trigger	Edge Type	Rising, Falling	
	Idle Time	30 ns to 10 s	
	Edge Number	1 to 128	
	Logic Mode	AND, OR, XNOR, XOR	
Logio Triggor	Input Mode	H, L, X, Rising, Falling	
Logic Trigger	Output Mode	Goes True, Goes False, Is True >, Is True <, Is True =	
	Polarity	Normal, Inverted	
	Trigger Condition	Start, Error, Check Error, Data	
RS232 Trigger	Baud Rate	Common, Custom	
	Data Bits	5 bit, 6 bit, 7 bit, 8 bit	
	Trigger Condition	Start, Restart, Stop, ACK Lost, Address, Data, Addr/Data	
I2C Trigger	Address Bits	7 bit, 8 bit, 10 bit	
	Address Range	0 to 127, 0 to 255, 0 to 1023	
	Byte Length	1 to 5	
	Trigger Condition	Timeout	
	Timeout Value	30 ns to 10 s	
SPI Trigger	Data Bits	4 bit to 32 bit	
	Data Line Setting	H, L, X	
CAN Trigger	Signal Type	CAN_H, CAN_L, TX, RX	
	Trigger Condition	Start of Frame, Type of Frame, Identifier,	
		Data, ID & Data, End of Frame, Missing	
		Ack, Bit Stuffing Error	
	Baud Rate	Common, Custom	
	Sample Point	5% to 95%	
	Frame Type	Data, Remote, Error, Overload	

### **General Technical Specifications**

### Display

Display Type	8" Colored LCD (Liquid Crystal Display)
Display Resolution	800 (Horizontal) $\times$ 600 (Vertical) Pixels
Display Colors	65536 colors, TFT screen

#### **Output of the Probe Compensator**

Output Voltage (Typical)	About 5 V, with the Peak-to-Peak voltage $\geq 1 \text{ M}\Omega$ .
Frequency (Typical)	Square wave of 1 KHz

#### Power

Mains Voltage	100V - 240 VACRMS, 50/60 Hz, CAT II
Power Consumption	< 15 W
Fuse	2 A, T class, 250 V

#### Environment

Temperature	Working temperature: $0 \degree C - 40 \degree C$
Temperature	Storage temperature: -20 $^{\circ}$ C - 60 $^{\circ}$ C
Relative Humidity	$\leq 90\%$
Unight	Operating: 3,000 m
Height	Non-operating: 15,000 m
Cooling Method	Fan cooling

### **Mechanical Specifications**

Dimension	340 mm× 177 mm×90 mm (L*H*W)
Weight	Approx. 2.6 kg (without accessories)

### **Interval Period of Adjustment:**

One year is recommended for the calibration interval period.

## 9. Appendix

### **Appendix A: Enclosure**

(The accessories subject to final delivery.)

### **Standard Accessories:**











Power Cord

CD Rom

Quick Guide

USB Cable

Probe



**Probe Adjust** 

### **Options:**



Q9



Soft Bag

### **Appendix B: General Care and Cleaning**

#### **General Care**

Do not store or leave the instrument where the liquid crystal display will be exposed to direct sunlight for long periods of time.

**Caution:** To avoid any damage to the instrument or probe, do not exposed it to any sprays, liquids, or solvents.

### Cleaning

Inspect the instrument and probes as often as operating conditions require. To clean the instrument exterior, perform the following steps:

- 1. Please wipe the dust from the instrument and probe surface with a soft cloth. When cleaning the LCD, do not scratch the transparent LCD protective screen.
- 2. Wipe the instrument in power off status by soft cloth that is lightly moistened. It is allowed to be cleaned by soft detergent or fresh water. Do not use any abrasive chemical detergent to avoid the instrument or the probe being damaged.



**Warning:** Before running please confirm that the instrument has been dried out so as to avoid electrical short circuit and personal injury caused by moisture during storage or shipping.

# INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronics Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China LS12 2QQ PO Box 13362 Dublin 2