

USA OFFICE  
Suite 202  
364 Pennsylvania Avenue,  
Glen Ellyn  
Illinois 60137  
USA  
Tel +1 (630) 469 2981

UK OFFICE  
14 Bentinck Court  
Bentinck Road  
West Drayton  
UB7 7RQ  
ENGLAND  
Tel +44 (0) 1895 431421

[www.keymat.com](http://www.keymat.com) email: [sales@keymat.com](mailto:sales@keymat.com)

**Section 1. Table of Contents**

<u>Section</u>	<u>Page</u>
Section 1. Table of Contents.....	2
Section 2. Overview / Applications.....	3
<b>Features / Specifications</b>	
<b>EMC</b>	
<b>Application :</b> Use of 420 Series Encoder to drive LCD and provide RS232 output on Storm Integrated Keypad / Display Module.	
<b>Application :</b> Use of 420 Series Encoder to provide RS232 output from Storm K Range Keypads	
Section 3. Communications Protocol .....	4
<b>Physical Link Layer</b>	
<b>Data buffering</b>	
<b>Character echoing</b>	
Section 4. LCD Display.....	5
<b>Power-up message</b>	
<b>LCD operating principles</b>	
<b>Special characters</b>	
<b>Typical implementations</b> .....	6
<b>LCD adjustment</b>	
<b>Supported Displays, Display Pinout</b>	
Ordering Details, Part Numbering.....	7
Appendix 1    Connection Details .....	8
Appendix 2    Configuration Switch Options - Keypad Legends and ASCII Codes	
4 Way Keypads .....	9
12 Way / 16 Way Telephone Layout Keypads .....	10
12 Way / 16 Way Calculator Layout Keypads .....	11
Integrated 20 Way Keypads and Display .....	12
6000 Series Keypads .....	13
6000 Series Keypads - Illuminated .....	14
Appendix 3    LCD Character Map .....	15

## Section 2. Overview

The Storm 420 Series Encoder provides an interface between keypad and host system. It can be supplied either as a separate encoder module or pre-assembled into a Storm keypad to suit end user requirements.

### Features / Specifications

- Input Power + 5V  $\pm$  0.25V dc
- RS232 Output via 6 pin Molex 2.54mm (.100") Pitch KK® Series Connector
- Drives Powertip 80 Character LCD Display from keypad
- Direct connection to underpanel mounted 12 key, 16 key, 20 key Storm Keypads.
- Ribbon Cable needed for top panel fixing 4 key, 12 key, 16 key Storm Keypads
- Overall Footprint 89mm x 66mm

### Electromagnetic Compatibility (EMC)

Storm 420 Series Encoders are classified as a component with regard to the European Community EMC regulations. It is the equipment manufacturers responsibility to ensure that systems using the Storm 420 Series Encoder are compliant with the appropriate EMC standards.

If the electronic system requires input protection against high voltage transients (to meet CE requirements) it is recommended that an external interface board is located at the point where the external wiring enters the electronic system enclosure.

### Application : Use of 420 Series Encoder to drive LCD and provide RS232 output on Storm Integrated Keypad / Display Module.

As a combination the Storm Integrated Keypad/ Display Module with Encoder forms a complete serial communications device. Alphanumeric output from the unit is communicated via the familiar RS232 physical link layer.

The keypad has 20 keys including ten numeric keys and a further ten special function keys. The LCD module displays 80 characters across 4 lines. Both the keypad and LCD module may be backlit from the controller board.

The module has been designed in such a way that it can be used as part of an embedded application, possibly using a separate host microcontroller or PC to communicate with the module. Alternatively it may be used as an input interface since the keypad and LCD functions have been designed to be familiar to most users.

The keypad is arranged as a 5-row, 4 column matrix and is scanned and debounced by the module's built-in microprocessor. The debounce filter is set at 64ms. No typematic key rollover function is implemented. Multi-key lockout is, however, implemented in the firmware.

### Application : Use of 420 Series Encoder to provide RS232 output from Storm K Range Keypads

The encoder can either be fitted directly to the rear of a standard Storm K Range Keypad, or remotely by a ribbon cable.

Where Storm K Range Keypads are underpanel mounted the 420 Encoder can be directly connected, requiring no additional mounting hardware.

The overall depth required to house the 420 Encoder is 32mm (1.25in) when measured from back of keypad.

Where Storm K Range Keypads are fixed to a panel surface, a ribbon cable and mounting hardware are required (these items not included with encoder)



## Section 3. Communications Protocol

### **Physical Link Layer**

The module transmits and receives data using RS232 signalling with a voltage swing of approximately  $\pm 9V$ . DIP Configuration Switch 8 selects between 9600 baud (DIP switch off) and 1200 baud (DIP Switch on). In both conditions, 8-bit data is used with no parity and one stop bit. This may be summarised as follows...

DIP8 OFF	9600,8,N,1
DIP8 ON	1200,8,N,1

No software or hardware handshaking is used since the data rate is low relative to the bandwidth of the communications protocol.

Only the TX, RX and Ground signals are employed. The chosen nomenclature is that TX means transmission out of the module.

### **Data buffering**

Both data transmission and reception are controlled by the module's built in microprocessor using a pair of stacks - one for transmitted characters and one for received characters. These allow the application to send data to and from the unit largely without consideration of the timing constraints of the RS232 physical link layer.

Provided the stacks are not filled, data can be freely sent to and received from the module and the module will buffer the characters until such times as it is able to process them.

The buffer sizes are as follows...

Data transmission (keypad data out of module)	16 bytes
Data reception (LCD data into module)	48 bytes

Should the buffers be filled, further characters will not be pushed onto the stacks, but instead are discarded.

### **Character echoing**

Characters received from the host terminal/microprocessor may be echoed back to the host by setting DIP Configuration Switch 2 to ON. With DIP Switch 2 OFF the characters are not echoed.

Characters resulting from key strokes are never echoed to the LCD display, but are simply sent via the RS232 TX pin to the host application.

### Section 4. LCD Display

*The LCD display comprises 80 characters in all, arranged as 20 characters on each of 4-lines. The full range of standard ASCII characters are available, including lower case letters. Some, but not all, of the extended ASCII characters are available. Appendix 3 lists the available characters.*

#### **Power-up message**

*At power-on the LCD display shows hardware and software version numbers and communications information for a period of approximately 5 seconds. After this time the display automatically clears and the cursor is located at the first character on the left of line 1.*

#### **LCD operating principles**

*The LCD interface is designed to be suitable either for keypad data input (for example as a data entry terminal) or for embedded microprocessor applications.*

*It has been designed to operate in a similar way to a teletype terminal since this is a familiar environment to most users and is consequently intuitive.*

*The cursor begins on the left of line 1. Entered characters move the cursor progressively further to the right of line 1 until the end of the line is reached. Entering one further character automatically moves the cursor to the beginning of line 2, i.e. automatic text wrapping is implemented. This applies to all lines.*

*Once the end of line 4 is reached, entering one further character results in all lines moving up one place, resulting in the contents line 1 being discarded, line 2 moves to line 1, line 3 moves to line 2 and line 4 moves to line 3. Line 4 is subsequently cleared and the cursor moves to the beginning of line 4.*

#### **Special characters**

*The Carriage Return key is supported (ASCII character 0x0D) and results in the cursor moving to the beginning of the next line, exactly as described above. The Line Feed key (ASCII character 0x0A , or Ctrl-J in HyperTerminal ) is also supported and gives the same functionality as carriage return.*

*The backspace key (ASCII character 0x7F) and Del key (ASCII character 0x08) may be used to delete the last entered character and move the cursor back one place. This can be repeated until the cursor is at the beginning of the current line, but no further (exactly as a teletype terminal).*

*The Tab key (ASCII character 0x09) is supported, and enters four spaces, even if this involves a line-wrap.*

*The Form Feed key (ASCII character 0x0C, Ctrl-L in HyperTerminal) is implemented as a 'clear screen' function and returns the cursor to the beginning of line 1..*

**Section 4 LCD Display (continued).**

**Typical implementations**

An embedded application where the LCD is written to by a separate microprocessor or computer would typically send a Form Feed character followed by up to 80 characters, possibly interspersed with carriage returns to reduce the number of characters to be transmitted.

It is unlikely that such an application would make use of the backspace function since there are unlikely to be errors in data entry, although the line-wrap feature may be used to allow the microprocessor to treat the display as a contiguous array of 80 characters with no requirement for carriage returns.

A terminal-like application, however, where the user is permitted to type any characters on the LCD (perhaps using an application such as HyperTerminal) would almost certainly make use of all the features built into the module such as line-wrap and special characters to make the interface more user friendly.

**LCD adjustment**

A potentiometer is provided on the module interface circuit board to allow the contrast of the LCD display to be adjusted. Wide Temp Range Displays require 0V to -9V ; Std Temp Range Displays require 0V to +5V

**Supported Displays**

**POWERTIP TECHNOLOGY CORP.**

20 Char x 4 Line Display PC 2004LRU-AWA-H, PC 2004LRU-ASO-H Wide Temp Range

Pin	Symbol	Function
1	Vss	Power supply(GND)
2	Vdd	Power supply(+)
3	Vo	Contrast Adjust
4	RS	Register select signal
5	R/W	Data read / write
6	E	Enable signal
7	DB0	Data bus line
8	DB1	Data bus line
9	DB2	Data bus line
10	DB3	Data bus line
11	DB4	Data bus line
12	DB5	Data bus line
13	DB6	Data bus line
14	DB7	Data bus line
15	A	Power supply for LED B/L (+)
16	K	Power supply for LED B/L ( )

This document is provided for use and guidance of engineering personnel engaged in the installation or application of STORM data entry products manufactured by Keymat Technology Ltd. Please be advised that all information, data, and illustrations contained within this document remain the exclusive property of Keymat Technology Ltd. and are provided for the express and exclusive use as described above. This document is not supported by Keymat Technology's engineering change note, revision or reissue system. Data contained within this document is subject to periodic revision, reissue or withdrawal. Whilst every effort is made to ensure the information, data and illustrations are correct at the time of publication, Keymat Technology Ltd. are not responsible for any errors or omissions contained within this document.



## 420 Series RS232 Encoder for Keypad Applications *Application / Engineering Manual*

### Part Numbering Scheme


Product Code	Description
4200-00[x]	RS232 ENCODER, KEYMAT STD, NO CABLE
<b>4200-001-0398</b>	<b>RS232 ENCODER CUSTOM INP398</b>
4200-01[x]	RS232 ENCODER, KEYMAT STD, 0.23m CABLE
4200-02[x]	RS232 ENCODER, KEYMAT STD, 2.0m CABLE

*The Product Identification Code is shown on the label on the encoder. The (non-upgradeable) firmware version is shown on the back of the controller eg Version 5.01 (or alternatively 5v01 )*

*Packaging variant denoted by [x] - contact your Storm distributor for details.*

## Appendix 1. Connection Details

### RS232 Cable Pinout Connection

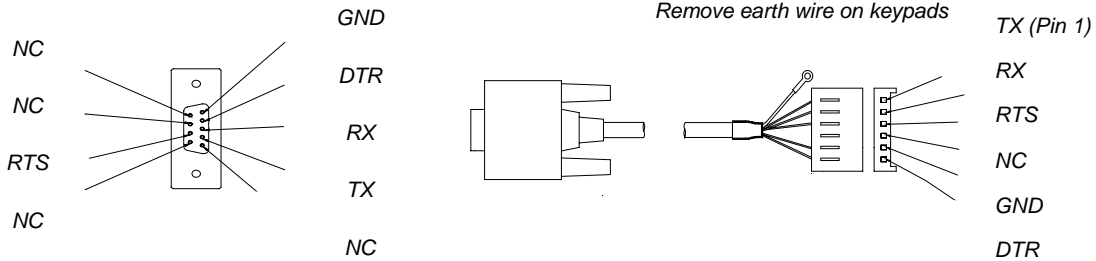

### Encoder Connections

Keypad Connector (on reverse of pcb)

✓ = pin connection made

Direct connection to rear of keypad ?

KEYPAD TYPE

20 WAY BACKLIT	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	YES
20 WAY NOT BACKLIT	Fit polarising pin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pin	YES
12 / 16 WAY BACKLIT	Fit polarising pin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pins	YES —fit polarising pins to positions 1,12 and 13	
12 / 16 WAY NOT BACKLIT	Fit polarising pins	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pins	YES		
4 WAY BACKLIT	Fit polarising pin	✓	Fit polarising pin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pin	✓	NO —separate cable required STD version needs 5 way cable BACKLIT version needs 7 way cable Fit polarising pins as required	
4 WAY NOT BACKLIT	Fit polarising pins	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	Fit polarising pins	✓		


Encoder Pin	1	2	3	4	5	6	7	8	9	10	11	12	13
To Keypad	LED CATHODE	TAMPER IN	R1	R2	C1	C2	C3	C4	R4	R3	R5 FUNCTION KEYS	TAMPER OUT	LED ANODE

<b>RS232 OUTPUT</b>
DTR
GND
NC
RTS
RX
TX (Pin 1)

<b>JUMPER CONTROLS</b>
<b>LED COLOUR</b>
RED
GREEN
JP8
FACTORY USE ONLY

**Power Terminals**

**LCD Contrast Adjustment**

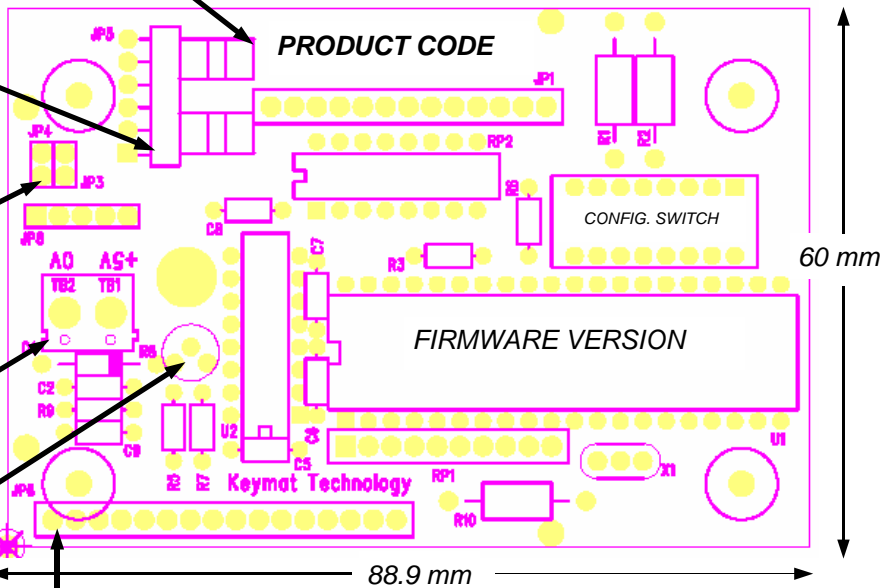

<b>LCD Connector, 16 pins, 0.1" square pins</b>																
Pin	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Symbol	Vss	Vdd	Vo	RS	R/W	E	DB0	DB1	DB2	DB3	DB4	DB5	DB6	DB7	A	K

This document is provided for use and guidance of engineering personnel engaged in the installation or application of STORM data entry products manufactured by Keymat Technology Ltd. Please be advised that all information, data, and illustrations contained within this document remain the exclusive property of Keymat Technology Ltd. and are provided for the express and exclusive use as described above. This document is not supported by Keymat Technology's engineering change note, revision or reissue system. Data contained within this document is subject to periodic revision, reissue or withdrawal. Whilst every effort is made to ensure the information, data and illustrations are correct at the time of publication, Keymat Technology Ltd. are not responsible for any errors or omissions contained within this document.




## Appendix 2. Configuration Switch Options - Keypad Legends / ASCII Codes

Configuration Switch Settings	1	2	3	4	5	6	7	8	Installation Checklist
4 Way Keypads	ON	CHARACTER ECHOING SELECTOR ON = ECHO ON OFF = ECHO OFF	OFF	ON	ON	ON	OFF	BAUD RATE SELECTOR OFF=9600 BAUD ON=1200 BAUD	<ul style="list-style-type: none"> <li>✓ Keypad</li> <li>✓ Encoder , configuration switch set</li> <li>✓ Panel Fixing prepared</li> <li>✓ +5V regulated supply</li> <li>✓ RS 232 cable with 6 way Molex socket</li> <li>✓ Ribbon cable keypad to encoder if needed</li> <li>✓ LCD and 16 way ribbon cable if needed</li> <li>✓ Polarising pins fitted to encoder</li> </ul>

4 Key Cursor

4 Key Function

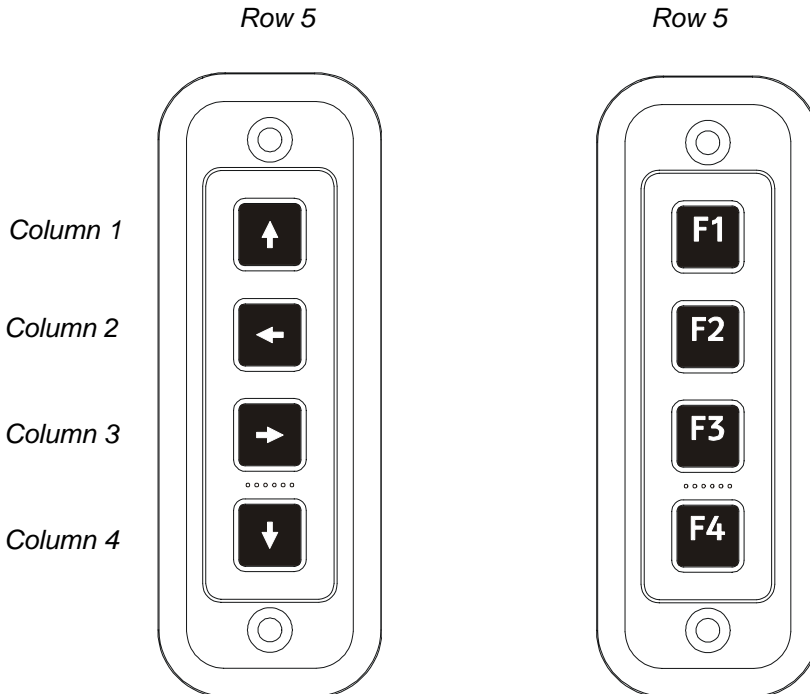

ENCODER PIN	TO	KEYPAD PIN
		Non-illuminated / Illuminated
2		NC / 1
11		1 / 2
5		5 / 6
6		4 / 5
7		3 / 4
8		2 / 3
13		NC / 7

4 WAY KEYPAD CONTACT CONNECTIONS (REAR VIEW)

PINS	•	•	•	•	•
PIN NUMBER	5	4	3	2	1

CONTACT MATRIX

PIN	ROW / COLUMN
1	R5
2	C4
3	C3
4	C2
5	C1

4 WAY BACKLIT KEYPAD CONTACT CONNECTIONS (REAR VIEW)

PINS	•	•	•	•	•	•
PIN NUMBER	7	6	5	4	3	2

CONTACT MATRIX

PIN	ROW / COLUMN
1	LED POWER
2	R5
3	C4
4	C3
5	C2
6	C1
7	LED POWER

ASCII CODES

COLUMN	Row 5
C1	11
C2	12
C3	13
C4	14

NOTE 1 : These codes are non-printing ASCII device control codes. The application software will need to assign usage


NOTE 2 : The COMMON pin on a 4 way is termed ROW 5 to be consistent with applications using 4 function keys.

## Appendix 2. Configuration Switch Options - Keypad Legends / ASCII Codes

Configuration Switch Settings		1	2	3	4	5	6	7	8	Installation Checklist
12 and 16 Way Telephone Layout Keypads	ON	CHARACTER ECHOING SELECTOR ON = ECHO ON OFF = ECHO OFF	OFF OFF OFF OFF ON					BAUD RATE SELECTOR OFF=9600 BAUD ON=1200 BAUD		
									<ul style="list-style-type: none"> <li>✓ Keypad</li> <li>✓ Encoder, configuration switch set</li> <li>✓ Panel Fixing prepared</li> <li>✓ +5V regulated supply</li> <li>✓ RS 232 cable with 6 way Molex socket</li> <li>✓ Ribbon cable keypad to encoder if needed</li> <li>✓ LCD and 16 way ribbon cable if needed</li> <li>✓ Polarising pins fitted to encoder</li> </ul>	

12 Key Telephone Layout Keypad

16 Key Telephone Layout Keypad

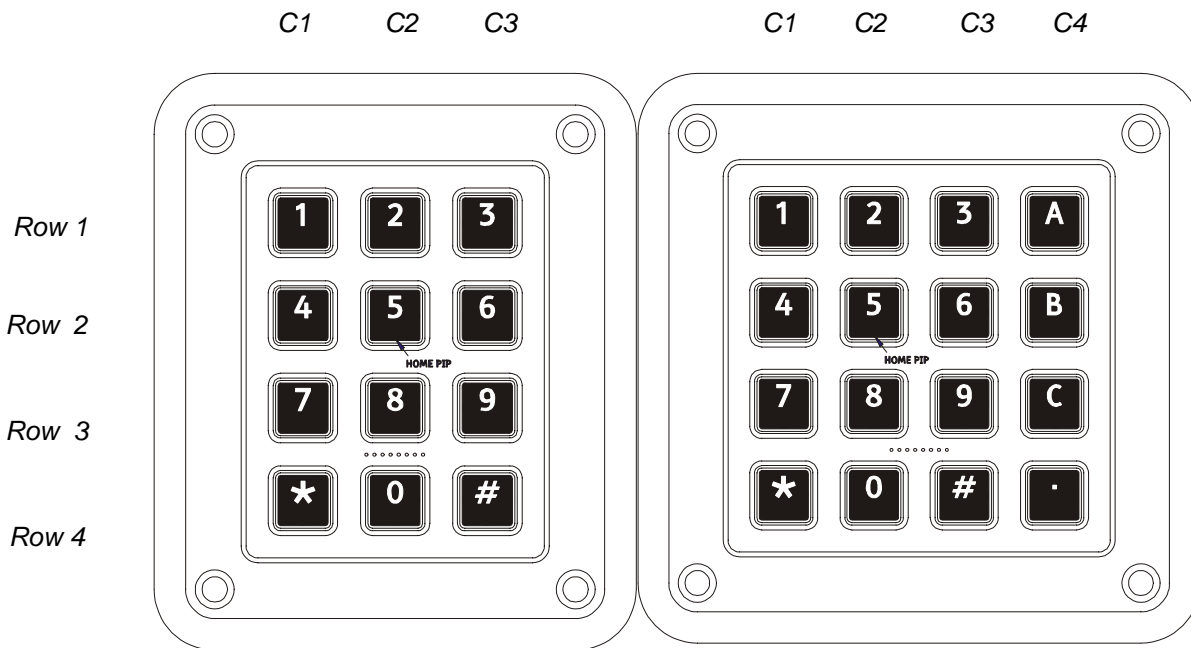

12 / 16 WAY KEYPAD CONTACT CONNECTIONS (REAR VIEW)

12 / 16 WAY KEYPAD CONTACT CONNECTIONS (REAR VIEW)

PINS	• • • • • • • •
PIN NUMBER	8 7 6 5 4 3 2 1

PINS	• • • • • • • •
PIN NUMBER	10 9 8 7 6 5 4 3 2 1

CONTACT MATRIX

CONTACT MATRIX

PIN	ROW / COLUMN
1	R1
2	R2
3	C1
4	C2
5	C3
6	C4 (16 WAY ONLY)
7	R4
8	R3

PIN	ROW / COLUMN
1	LED POWER
2	R1
3	R2
4	C1
5	C2
6	C3
7	C4 (16 WAY ONLY)
8	R4
9	R3
10	LED POWER

ASCII Codes

ROW / COLUMN	C1	C2	C3	C4
R1	31	32	33	61
R2	34	35	36	62
R3	37	38	39	63
R4	2A	30	23	2E


This document is provided for use and guidance of engineering personnel engaged in the installation or application of STORM data entry products manufactured by Keymat Technology Ltd. Please be advised that all information, data, and illustrations contained within this document remain the exclusive property of Keymat Technology Ltd. and are provided for the express and exclusive use as described above. This document is not supported by Keymat Technology's engineering change note, revision or reissue system. Data contained within this document is subject to periodic revision, reissue or withdrawal. Whilst every effort is made to ensure the information, data and illustrations are correct at the time of publication, Keymat Technology Ltd. are not responsible for any errors or omissions contained within this document.

## Appendix 2. Configuration Switch Options - Keypod Legends / ASCII Codes

Configuration Switch Settings	1	2	3	4	5	6	7	8	Installation Checklist
		CHARACTER ECHOING SELECTOR						BAUD RATE SELECTOR	<ul style="list-style-type: none"> <li>✓ Keypad</li> <li>✓ Encoder, configuration switch set</li> <li>✓ Panel Fixing prepared</li> <li>✓ +5V regulated supply</li> <li>✓ RS 232 cable with 6 way Molex socket</li> <li>✓ Ribbon cable keypad to encoder if needed</li> <li>✓ LCD and 16 way ribbon cable if needed</li> <li>✓ Polarising pins fitted to encoder</li> </ul>
12 and 16 Key Calculator Layout Keypads	ON	ON = ECHO ON	OFF	ON	OFF	OFF	ON	OFF=9600 BAUD	
		OFF = ECHO OFF						ON=1200 BAUD	

12 Key Calculator Layout Keypad

16 Key Calculator Layout Keypad

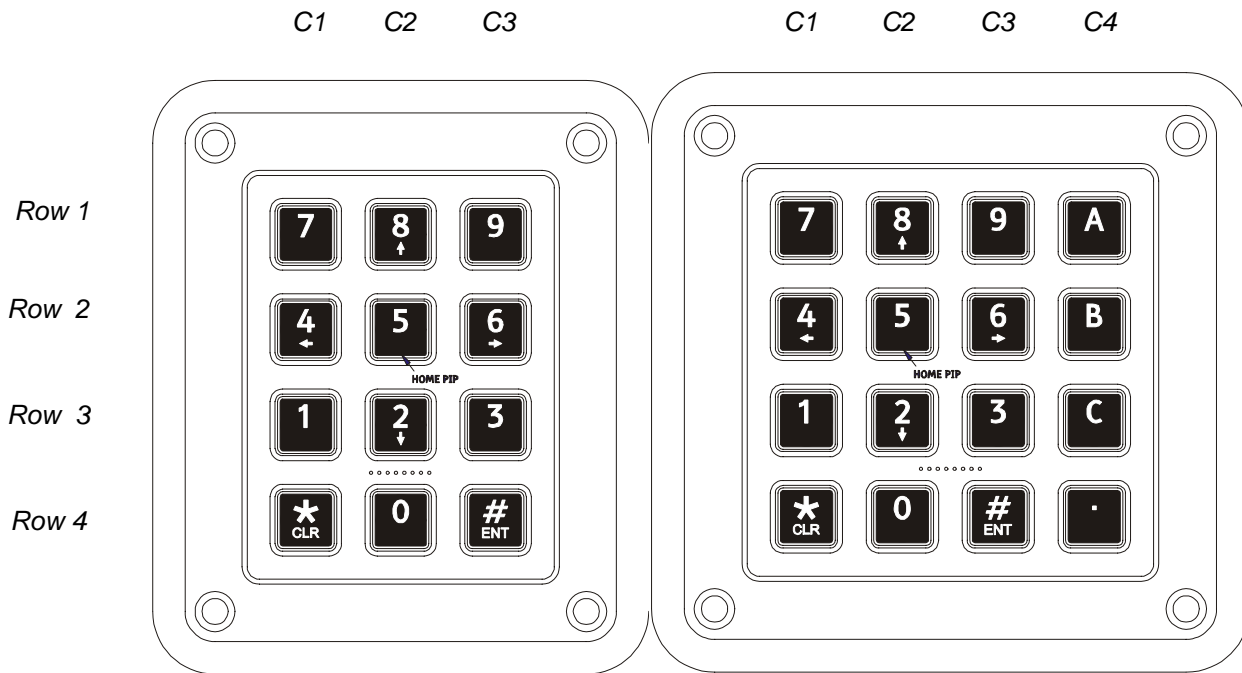

12 / 16 WAY KEYPAD CONTACT CONNECTIONS (REAR VIEW)

12 / 16 WAY KEYPAD CONTACT CONNECTIONS (REAR VIEW)

PINS	• • • • • • • •
PIN NUMBER	8 7 6 5 4 3 2 1

PINS	• • • • • • • •
PIN NUMBER	10 9 8 7 6 5 4 3 2 1

CONTACT MATRIX

CONTACT MATRIX

PIN	ROW / COLUMN
1	R1
2	R2
3	C1
4	C2
5	C3
6	C4 (16 WAY ONLY)
7	R4
8	R3

PIN	ROW / COLUMN
1	LED POWER
2	R1
3	R2
4	C1
5	C2
6	C3
7	C4 (16 WAY ONLY)
8	R4
9	R3
10	LED POWER

ASCII Codes

ROW / COLUMN	C1	C2	C3	C4
R1	37	38	39	1B
R2	34	35	36	0C*
R3	31	35	33	05
R4	7F	30	0D	2E


\* = Form Feed Code to give CLEAR function

## Appendix 2. Configuration Switch Options - Keypod Legends / ASCII Codes

Configuration Switch Settings	1	2	3	4	5	6	7	8	Installation Checklist
Integrated 20 Way Keypad and Display - Telephone Layout	OFF	CHARACTER ECHOING SELECTOR  ON = ECHO ON  OFF = ECHO OFF	ON	OFF	OFF	ON	OFF	BAUD RATE SELECTOR  OFF=9600 BAUD  ON=1200 BAUD	<ul style="list-style-type: none"> <li>✓ Integrated 20 way Keypad</li> <li>✓ Encoder , configuration switch set</li> <li>✓ LCD and 16 way ribbon cable if needed</li> <li>✓ Panel Fixing prepared</li> <li>✓ +5V regulated supply</li> <li>✓ RS 232 cable with 6 way Molex KK socket</li> <li>✓ 13 way ribbon cable keypad to encoder if needed</li> <li>✓ Polarising pins fitted to encoder</li> </ul>
Integrated 20 Way Keypad and Display - Calculator Layout	OFF		ON	ON	ON	ON	OFF		
<p>Note : Remove Jumpers from JP3 and JP4 in this configuration.</p>									

### ROW / COLUMN DESIGNATIONS ( KEYPAD FRONT VIEW)

For Example R1C2 = Row 1 Column 2. NB : A 20 way keypad is treated as 4 way + 16 way.

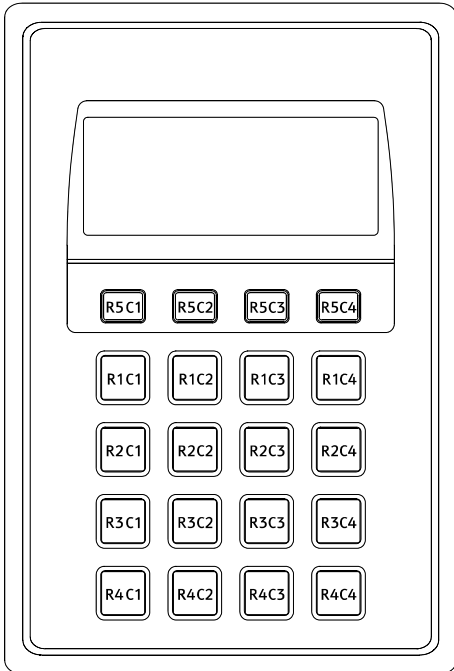


### ASCII CODE TABLES

Row / Column	Telephone Layout		Calculator Layout	
	Character	ASCII	Character	ASCII
R5C1	▲	11	▲	11
R5C2	▲	12	▲	12
R5C3	▲	13	▲	13
R5C4	▲	14	▲	14
R1C1	1	31	1	31
R1C2	2 ABC	32	2	32
R1C3	3 DEF	33	3	33
R1C4	A	41	ENTER	1B
R2C1	4 GHI	34	4	34
R2C2	5 JKL	35	5	35
R2C3	6 MNO	36	6	36
R2C4	B	42	CLEAR	0C
R3C1	7 PQRS	37	7	37
R3C2	8 TUV	38	8	38
R3C3	9 WXYZ	39	9	39
R3C4	C	43	?	05
R4C1	* CLR	2A	*	7F
R4C2	0	30	0	30
R4C3	# ENT	23	#	0D
.	ENTER	2E	CANCEL	2E
ANTI-TAMPER OPEN CIRCUIT		07*		07*
* = CODE REPEATS EVERY 10 SECONDS WHILST CONDITION REMAINS ACTIVE				

### PIN-OUT FOR 20 WAY KEYPAD

20 WAY KEYPAD  
CONTACT CONNECTIONS  
(REAR VIEW)



CONTACT MATRIX


PIN	ROW / COLUMN
1	NOT USED
2	TAMPER IN
3	R1
4	R2
5	C1
6	C2
7	C3
8	C4
9	R4
10	R3
11	R5
12	TAMPER OUT
13	NOT USED

This document is provided for use and guidance of engineering personnel engaged in the installation or application of STORM data entry products manufactured by Keymat Technology Ltd. Please be advised that all information, data, and illustrations contained within this document remain the exclusive property of Keymat Technology Ltd. and are provided for the express and exclusive use as described above. This document is not supported by Keymat Technology's engineering change note, revision or reissue system. Data contained within this document is subject to periodic revision, reissue or withdrawal. Whilst every effort is made to ensure the information, data and illustrations are correct at the time of publication, Keymat Technology Ltd. are not responsible for any errors or omissions contained within this document.

## Appendix 2. Configuration Switch Options - Keypad Legends / ASCII Codes

Configuration Switch Settings	R3	1	2	3	4	5	6	7	8	Installation Checklist
6000 Series Pinpad - Basic Layout	fitted	OFF	CHARACTER ECHOING SELECTOR	ON	OFF	ON	OFF	OFF	BAUD RATE SELECTOR  OFF=9600 BAUD  ON=1200 BAUD	<ul style="list-style-type: none"> <li>✓ Keypad</li> <li>✓ Encoder, configuration switch set</li> <li>✓ Panel Fixing prepared</li> <li>✓ +5V regulated supply</li> <li>✓ RS 232 cable with 6 way Molex KK socket</li> <li>✓ 13 way ribbon cable keypad to encoder if needed</li> <li>✓ Polarising pins fitted to encoder</li> </ul>
6000 Series Pinpad - UK Layout	Remove before use	OFF		ON	OFF	ON	OFF	OFF		
6000 Series Pinpad - USA Layout	Remove before use	OFF		ON = ECHO ON	ON	ON	ON	OFF		
Note: R3 may need to be removed depending on the configuration required.			OFF = ECHO OFF							


**BASIC LAYOUT**

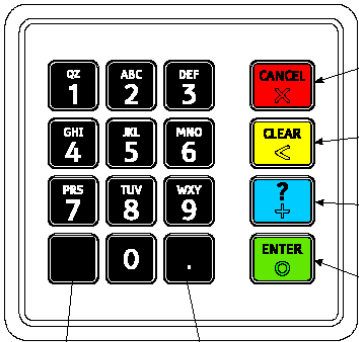

**BLANK KEY**  
No Key Code with Standard Firmware

Key Code = Decontact Point

**UK LAYOUT**

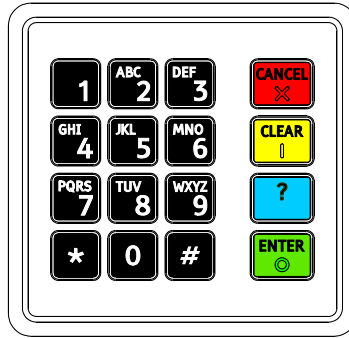


**USA LAYOUT**




### ASCII CODE TABLES

#### ROW / COLUMN DESIGNATIONS

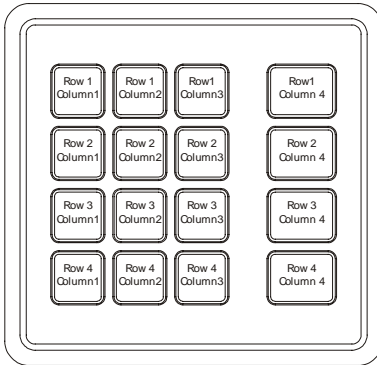

MATRIX WAY KEYPAD CONTACT CONNECTIONS (REAR VIEW)



#### CONTACT MATRIX

PIN	ROW / COLUMN
1	TAMP
2	R1
3	R2
4	C1
5	C2
6	C3
7	C4
8	R4
9	R3
10	TAMP


Row / Column	Basic Layout			UK Layout			USA Layout		
	Key Legend	Key	ASCII	Key Legend	Key	ASCII	Key Legend	Key	ASCII
R1C1	1 QZ	Black	31	1	Black	31	1 QZ	Black	31
R1C2	2 ABC	Black	32	2 ABC	Black	32	2 ABC	Black	32
R1C3	3 DEF	Black	33	3 DEF	Black	33	3 DEF	Black	33
R1C4	CANCEL	Red with raised Cross	0D	CANCEL	Red with raised Cross	0D	ENTER	Green with raised circle	1B
R2C1	4 GHI	Black	34	4 GHI	Black	34	4 GHI	Black	34
R2C2	5 JKL	Black with Homepip	35	5 JKL	Black with Homepip	35	5 JKL	Black with Homepip	35
R2C3	6 MNO	Black	36	6 MNO	Black	36	6 MNO	Black	36
R2C4	CLEAR	Yellow with raised vertical line	7F	CLEAR	Yellow with raised vertical line	7F	CLEAR	Yellow with raised vertical line	7F
R3C1	7 PRS	Black	37	7 PQRS	Black	37	7 PRS	Black	37
R3C2	8 TUV	Black	38	8 TUV	Black	38	8 TUV	Black	38
R3C3	9 WXY	Black	39	9 WXYZ	Black	39	9 WXY	Black	39
R3C4	?	Blue with raised Plus	05	?	Blue	05	?	Blue	05
R4C1		Black	No Code	*	Black	2A	*	Black	2A
R4C2	0	Black	30	0	Black	30	0	Black	30
R4C3	.	Black	2E	#	Black	23	#	Black	23
R4C4	ENTER	Green with raised circle	1B	ENTER	Green with raised circle	1B	CANCEL	Red with raised Cross	0D
ANTI-TAMPER OPEN CIRCUIT			07*			07*			07*

\*= CODE REPEATS EVERY 10 SECONDS WHILST CONDITION REMAINS ACTIVE. TO RESET—DISCONNECT POWER FOR 30 SECONDS.


## Appendix 2. Configuration Switch Options - Keypod Legends / ASCII Codes

Configuration Switch Settings	R3	1	2	3	4	5	6	7	8	Installation Checklist
6000 Illuminated Pinpads			CHARACTER ECHOING SELECTOR						BAUD RATE SELECTOR	<ul style="list-style-type: none"> <li>✓ Keypad</li> <li>✓ Encoder , configuration switch set</li> <li>✓ Panel Fixing prepared</li> <li>✓ +5V regulated supply</li> <li>✓ RS 232 cable with 6 way Molex KK socket</li> <li>✓ 13 way ribbon cable keypad to encoder if needed</li> <li>✓ Polarising pins fitted to encoder</li> </ul>
6000 Series Pinpad - UK and USA Layout	Remove before use	OFF		ON	ON	ON	OFF	OFF		
Note : Remove R3 in this configuration.			ON = ECHO ON					ON=1200 BAUD		
			OFF = ECHO OFF							

### ROW / COLUMN DESIGNATIONS

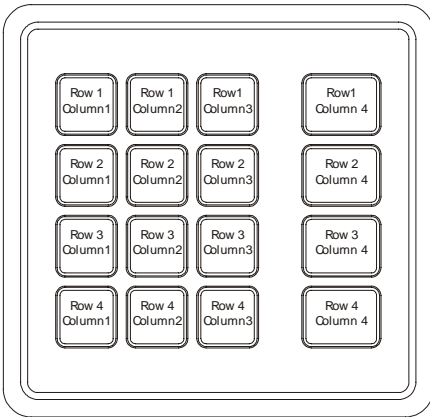

### UK LAYOUT

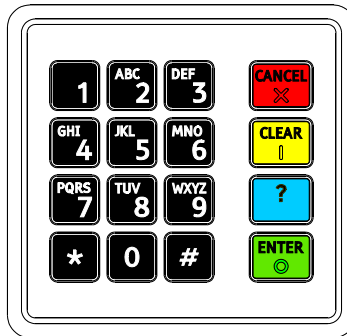

### USA LAYOUT



### CONTACT CONNECTIONS (REAR VIEW)



### CONTACT MATRIX

PIN	ROW / COLUMN
1	+5 Volts
2	TAMPER
3	R1
4	R2
5	C1
6	C2
7	C3
8	C4
9	R4
10	R3
11	NC
12	TAMPER
13	0 Volts

### ILLUMINATION - REQUIRES POWER SUPPLY 5 VOLTS, 0.5 AMPS

OPERATING VOLTAGE	+5 V dc (max)
	+/- 0.25V
OPERATING CURRENT	10mA (max)

### JUMPER SETTINGS

JP4  $\ominus$   $\rightarrow$   $\ominus$   
JP3  $\ominus$   $\rightarrow$   $\ominus$

JP8 FACTORY USE ONLY

Row / Column	USA Key Legend	UK Key Legend	Key	Raised Symbol	Backlight Colour	ASCII
R1C1	1 QZ	1	Black Legend on White Key		White	31
R1C2	2 ABC	2 ABC	Black Legend on White Key		White	32
R1C3	3 DEF	3 DEF	Black Legend on White Key		White	33
R1C4	CANCEL	CANCEL	Black Legend on White Key	X	Red	0D
R2C1	4 GHI	4 GHI	Black Legend on White Key		White	34
R2C2	5 JKL	5 JKL	Black Legend on White Key	Homepip	White	35
R2C3	6 MNO	6 MNO	Black Legend on White Key		White	36
R2C4	CLEAR	CLEAR	Black Legend on White Key	I	Yellow	7F
R3C1	7 PRS	7 PQRS	Black Legend on White Key		White	37
R3C2	8 TUV	8 TUV	Black Legend on White Key		White	38
R3C3	9 WXY	9 WXYZ	Black Legend on White Key		White	39
R3C4	?	?	Black Legend on White Key		Blue	05
R4C1	*	*	Black Legend on White Key		White	2A
R4C2	0	0	Black Legend on White Key		White	30
R4C3	#	#	Black Legend on White Key		White	23
R4C4	ENTER	ENTER	Black Legend on White Key	O	Green	1B
ANTI-TAMPER OPEN CIRCUIT						07*

\* = CODE REPEATS EVERY 10 SECONDS WHILST CONDITION REMAINS ACTIVE. TO RESET—DISCONNECT POWER FOR 30 SECONDS.

**Appendix 3. LCD Character Map PC 2004LRU Display**

Higher Lower 4bit 4bit	0000	0010	0011	0100	0101	0110	0111	1010	1011	1100	1101	1110	1111
xxxx0000		0	a	P	`	f		-	9	E	o	p	
xxxx0001	!	1	A	Q	a	q		u	7	7	4	5	q
xxxx0010	"	2	B	R	b	r		r	4	v	x	e	e
xxxx0011	#	3	C	S	c	s		j	o	t	e	e	e
xxxx0100	\$	4	D	T	d	t		\	i	k	f	w	a
xxxx0101	%	5	E	U	e	u		.	o	*	1	o	U
xxxx0110	&	6	F	V	f	v		7	h	-	o	o	Z
xxxx0111	'	7	G	W	g	w		7	7	x	o	q	π
xxxx1000	(	8	H	X	h	x		4	o	*	U	r	x
xxxx1001	)	9	I	Y	i	y		o	7	J	w	'	U
xxxx1010	*	:	J	Z	j	z		5	o	n	k	i	7
xxxx1011	+	:	K	C	k	c		o	o	C	D	*	A
xxxx1100	,	<	L	*	l	l		o	o	7	o	o	A
xxxx1101	-	=	M	I	m	i		u	Z	\	o	t	÷
xxxx1110	.	>	N	^	n	^		o	e	t	'	n	
xxxx1111	/	?	O	_	o	o		w	v	7	"	o	■