




TWR-KL25Z48M Quick Start Guide

Development Kit for Kinetis
KL2/1 MCU Families

Tower System
Development Board
Platform

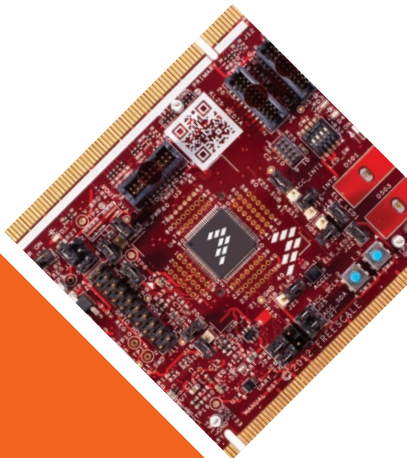

Get to Know the TWR-KL25Z48M

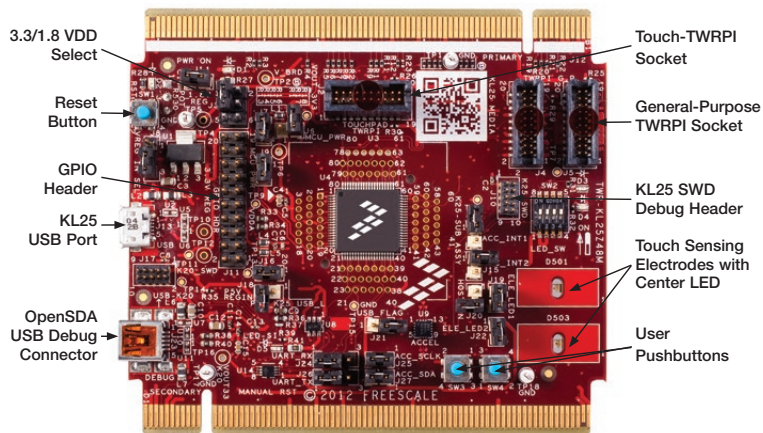


Figure 1: Front side of TWR-KL25Z48M board



Figure 2: Back side of TWR-KL25Z48M board



TWR-KL25Z48M

Freescale Tower System Development Board Platform

The TWR-KL25Z48M board is designed to work either in standalone mode or as part of the Freescale Tower System, a modular development board platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Take your design to the next level and begin constructing your Tower System evaluation board platform today by visiting freescale.com/Tower for additional Tower System boards and compatible peripherals.

TWR-KL25Z48M Features

- Tower System-compatible board
- MKL25Z128VLK4 MCU (48 MHz, 128 KB flash, 16 KB RAM, low power, 80 LQFP package)
- Tower System-compatible board
- Dual role USB interface with Micro-AB USB connector
- Touch Tower plug-in socket
- General-purpose Tower plug-in (TWRPI) socket
- Onboard debug circuit MK20D50 OpenSDA with virtual serial port
- Three axis accelerometer (MMA8451Q)
- Four (4) user-controllable LEDs
- Two (2) capacitive touchpads
- Two (2) user pushbuttons switch
- Infrared transmit and receive
- Potentiometer
- General-purpose pin header to directly access MCU signals

Tools

- Freescale CodeWarrior Development Studio for Microcontrollers V10.3 (CW-MCU10)
- IAR EWARM V6.40
- Processor Expert software configuration tool with MQX™ Lite RTOS integration available for CodeWarrior IDE or a standalone for integrating generated code into other IDEs

Step-by-Step Installation Instructions

1

Download Software and Tools

Download installation software and documentation under **“Jump Start Your Design”** at freescale.com/TWR-KL25Z48M.



2

Install Software and Tools

Install the OpenSDA Tower Toolkit to install the OpenSDA and USB-to-Serial drivers.

3

Configure the Hardware

Connect one end of the USB cable to the PC and the other end to the Power/OpenSDA mini-B connector on the TWR-KL25Z48 board. Allow the PC to automatically configure the USB drivers if needed.

4

Touch Electrodes

Touch the pads and the LEDs will turn on.

5

Tilt the Board

When board is picked up, the four LEDs will toggle in the direction of the inclination. Toggling frequency will increase as the tilt angle increases.

6

Move the Potentiometer

The TWR-KL25Z48M LED will blink at a frequency proportional to the resistance of the potentiometer.

7

Explore Further

Explore Kinetis KL2/1 MCU ultra-low-power modes and USB communication by conducting the additional labs located at freescale.com/TWR-KL25Z48M.

TWR-KL25Z48M Jumper Options

The following is a list of all the jumper options. The default installed jumper settings are listed in the last column.

Jumper	Jumper Designator	Signal	Default Option
V_BRD	J7	X-V_BRD X	DEF: 1-2 VBRD to MCU_PWR
	J9	VDDA_HDR	DEF: 1-2 VDDA to MCU_PWR
VREG IN Selector	J8	VREG IN SELECTOR	DEF: 1-2 Regulator powered by OpenSDA USB
Board Power Selection	J3	Board Power Selection	DEF: 1-3 P3.3V_REG powers V_BRD (MCU_PWR)
USB	J18	KL25 USB VREGIN	DEF: OPEN
	J20	K25 USB ENA	DEF: OPEN
	J21	K25 USB FLGA	DEF: OPEN
Infra-Red	SW2 6-3	IRDAJ-X	OPEN
	SW2 5-4	CMPO_IN0	OPEN
Potentiometer	J1	POT 5K	DEF: 1-2

Jumper	Jumper Designator	Signal	Default Option
Accelerometer	J27	SDA Accelerometer Enable	DEF: 1-2
	J25	SCL Accelerometer Enable	DEF: 1-2
	J14	ACCELEROMETER INT1	DEF: OPEN
	J15	ACCELEROMETER INT2	DEF: OPEN
LEDs	J19	LED Orange Enable	DEF: 1-2
	J22	LED Yellow Enable	DEF: 1-2
	SW2 8-1	LED Green Enable	OPEN
	SW2 7-1	LED Red Enable	OPEN
UART	J24	KL25 UART RX (OpenSDA or Elevator)	OPEN
	J26	KL25 UART TX (OpenSDA or Elevator)	DEF: 2-3
Potentiometer	J1	POT 5K	DEF: 2-3



Get Started

Download installation software and documentation under
“**Jump Start Your Design**” at freescale.com/TWR-KL25Z48M.

Support

Visit freescale.com/support for a list of phone numbers within your region.

Warranty

Visit freescale.com/warranty for complete warranty information.

For more information, visit freescale.com/Tower
Join the online Tower community at towergeeks.org

Freescale, the Freescale logo, CodeWarrior, the Energy Efficient Solutions logo, Kinetis and Processor Expert are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Tower is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© 2012, 2014 Freescale Semiconductor, Inc.



Doc Number: TWRKL25Z48M REV 1 Agile Number: 926-27472 REV B