

Model Number

NCB2-12GM35-N0

Features

2 mm flush • • Usable up to SIL 2 acc. to IEC 61508

Accessories

EXG-12 Quick mounting bracket with dead stop BF 12 Mounting flange, 12 mm

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

ICCIIIIC			
General spe	cifications		
Switching e	element function		NAMUR, NC
	ating distance	s _n	2 mm
Installation			flush
Output pola			NAMUR
	perating distance	sa	0 1.62 mm
	rating distance	s _r	1.8 2.2 mm typ.
Reduction			0.23
Reduction			0.21
Reduction			0.7
Nominal rati	-		
Nominal vo		U _o	8.2 V (R _i approx. 1 kΩ)
Switching f	requency	f	0 1000 Hz
Hysteresis		Н	1 10 typ. 3 %
	larity protection		reverse polarity protected
	it protection		yes
Current cor			yes, Reverse polarity protection diode not required
	g plate not detected		≥ 3 mA
	g plate detected		≤1 mA
•	tate indicator		all direction LED, yellow
	afety related parameter	ers	
MTTFd	(T .)		2698 a
Mission Tin			20 a
	Coverage (DC)		0 %
Ambient cor			
Ambient ter			-25 100 °C (-13 212 °F)
Storage ten			-40 100 °C (-40 212 °F)
Mechanical	specifications		
Connection			cable PVC , 2 m
Core cross			0.34 mm ²
Housing ma			Stainless steel 1.4305 / AISI 303
Sensing fac			PBT
Degree of p	protection		IP66 / IP67
Cable			10 v coble diameter
Bending			> 12 x cable diameter
General info			
Scope of d			2 self locking nuts in scope of delivery
	hazardous area		see instruction manuals
Category			1G; 2G; 3G; 1D; 3D
Compliance	with standards and di	rective	S
Standard co	onformity		
NAMUR			EN 60947-5-6:2000
			IEC 60947-5-6:1999
Electrom	agnetic compatibility		NE 21:2007
Standard	• • •		EN 60947-5-2:2007
	-		IEC 60947-5-2:2007
Approvals a	nd certificates		
FM approv	ral		
Control d			116-0165
	*		
UL approva			cULus Listed, General Purpose
CSA appro			cCSAus Listed, General Purpose
CCC appro	oval		CCC approval / marking not required for products rated ≤36 V

Dimensions

Technical Data

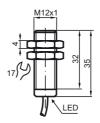


F PEPPERL+FUCHS



NCB2-12GM35-N0

Electrical Connection

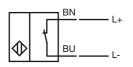

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group USA www.pepperl-fuchs.com fa-info@

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

Equipment protection level Ga Instruction	Manual electrical apparatus for hazardous areas
Device category 1G	
EC-Type Examination Certificate	for use in hazardous areas with gas, vapour and mist PTB 00 ATEX 2048 X
CE marking	C C C 1 02
ATEX marking	II 1G Ex ia IIC T6T1 Ga The Ex-related marking can also be printed on the enclosed label.
Directive conformity	94/9/EG
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NCB2-12GMN0
Effective internal inductivity C _i	\leq 90 nF ; a cable length of 10 m is considered.
Effective internal inductance L _i	\leq 100 μ H ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Ambient temperature	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the temperature class, and the effective internal reac- tance values can be found on the EC-type examination certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127- 1 has already been applied to the temperature table for category 1.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related appara- tus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met. If the Ex- related marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indelible, including in the event of possible chemical corrosion.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Equipment protection level Gb	
Instruction	Manual electrical apparatus for hazardous areas
Device category 2G	for use in hazardous areas with gas, vapour and mist
EC-Type Examination Certificate	PTB 00 ATEX 2048 X
CE marking	CE 0102
ATEX marking	$\langle\!$
Directive conformity	94/9/EG
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NCB2-12GMN0
Effective internal inductivity C _i	\leq 90 nF ; a cable length of 10 m is considered.
Effective internal inductance L _i	\leq 100 μH ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Maximum permissible ambient temperature T _{amb}	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the temperature class, and the effective internal reac- tance values can be found on the EC-type examination certificate.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. If the Ex-related marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indelible, including in the event of possible chemical corrosion.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Equipment protection level Gc (nL) Note

Instruction

Device category 3G (nL) CE marking

ATEX marking

Directive conformity Standard conformity

Effective internal capacitance Ci Effective internal inductance Li

General

Installation, commissioning

Maintenance

Special conditions

for Pi=34 mW li=25 mA T6 for Pi=34 mW, li=25 mA, T5 for Pi=34 mW, li=25 mA, T4-T1 for Pi=64 mW, li=25 mA, T6 for Pi=64 mW li=25 mA T5 for Pi=64 mW. li=25 mA. T4-T1 for Pi=169 mW, li=52 mA, T6 for Pi=169 mW, li=52 mA, T5 for Pi=169 mW, li=52 mA, T4-T1 for Pi=242 mW, li=76 mA, T6 for Pi=242 mW, li=76 mA, T5 for Pi=242 mW. li=76 mA. T4-T1

Protection from mechanical danger

Protection from UV light

Protection of the connection cable

Electrostatic charge

Connection parts

This instruction is only valid for products according to EN 60079-15:2005, valid until 01-May-2013

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist €0102

(x) II 3G Ex nL IIC T6 X The Ex-significant identification is on the enclosed adhesive label

94/9/EG EN 60079-15:2005 Ignition protection category "n" Use is restricted to the following stated conditions

 \leq 90 nF ; a cable length of 10 m is considered.

 \leq 100 μ H ; A cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be observed!

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with energy-limited circuits, which satisfy the requirements of IEC 60079-15. The explosion group depends on the connected and energy-limited supply circuit.

The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease! The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

55 °C (131 °F)
55 °C (131 °F)
52 °C (125.6 °F)
52 °C (125.6 °F)
52 °C (125.6 °F)
44 °C (111.2 °F)
44 °C (111.2 °F)
44 °C (111.2 °F)

The sensor must not be exposed to ANY FORM of mechanical danger. When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas

The connection cable must be prevented from being subjected to tension and torsional loading

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Inductive sensor	NCB2-12GI
Equipment protection level Gc (ic)	
Instruction	Manual electrical apparatus for hazardous areas
Device category 3G (ic)	for use in hazardous areas with gas, vapour and mist
Certificate of Compliance	PF 13 CERT 2895 X
CE marking	CE
ATEX marking	↔ II 3G Ex ic IIC T6T1 Gc The Ex-significant identification is on the enclosed adhesive label
Directive conformity	94/9/EG
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection catego Use is restricted to the following stated conditions
Effective internal inductivity C _i	\leq 90 nF ; a cable length of 10 m is considered.
Effective internal inductance L _i	\leq 100 μH ; A cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the c and in this instruction manual. The data stated in the data sheet are restrict operating instruction! The special conditions must be observed!
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage must be observed. The sensor must only be operated with energy-limited which satisfy the requirements of IEC 60079-11. The explosion group com the connected, supplying, power limiting circuit. If the Ex-relevant identifica printed exclusively on the adhesive label provided, this label must be affixe immediate vicinity of the sensor! The background surface to which the adhe is to be applied must be clean and free from grease! The applied label must ble and remain legible, with due consideration of the possibility of chemica sion!
Maintenance	No changes can be made to apparatus, which are operated in hazardous a Banairs to these apparatus are not nossible

Special conditions

for Pi=34 mW. li=25 mA. T6 for Pi=34 mW, li=25 mA, T5 for Pi=34 mW, li=25 mA, T4-T1 for Pi=64 mW, li=25 mA, T6 for Pi=64 mW, li=25 mA, T5 for Pi=64 mW. li=25 mA. T4-T1 for Pi=169 mW, li=52 mA, T6 for Pi=169 mW, li=52 mA, T5 for Pi=169 mW, li=52 mA, T4-T1 for Pi=242 mW, li=76 mA, T6 for Pi=242 mW, li=76 mA, T5 for Pi=242 mW, li=76 mA, T4-T1 Protection from mechanical danger

Electrostatic charge

Connection parts

ory "ic"

135-N0

lata sheet ed by this

ge goal circuits, plies with . ation is ed in the esivelabel st be duraal corro-

areas. Repairs to these apparatus are not possible.

55 °C (131 °F)
55 °C (131 °F)
52 °C (125.6 °F)
52 °C (125.6 °F)
52 °C (125.6 °F)
44 °C (111.2 °F)
44 °C (111.2 °F)
44 °C (111.2 °F)
The sensor must r

The sensor must not be mechanically damaged. When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.



Equipment protection level Da	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1D	for use in hazardous areas with combustible dust
EC-Type Examination Certificate	PTB 00 ATEX 2048 X
CE marking	CE 0102
ATEX marking	$\langle\!$
Directive conformity	94/9/EG
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NCB2-12GMN0
Effective internal inductivity C _i	\leq 90 nF ; a cable length of 10 m is considered.
Effective internal inductance L _i	\leq 100 μ H ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Maximum permissible ambient temperature T_{amb}	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the surface temperature, and the effective internal reactance values can be found on the EC-type-examination certificate. The maximum permissible ambient temperature of the data sheet must be noted, in addition, the lower of the two values must be maintained.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related appara- tus and according to the proof of intrinsic safety. If the Ex-related marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indeli- ble, including in the event of possible chemical corrosion.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

avoided by incorporating these in the equipotential bonding. Do not attach the nameplate provided in areas where electrostatic charge can build up.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Equipment protection level Dc	
Note	This instruction is only valid for products according to EN 50281-1-1, valid until 30-September-2008 Note the ex-marking on the sensor or on the enclosed adhesive label
Instruction	Manual electrical apparatus for hazardous areas
Device category 3D CE marking	for use in hazardous areas with non-conducting combustible dust C ϵ 0102
ATEX marking	↔ II 3D IP67 T 109 °C (228.2 °F) X The Ex-significant identification is on the enclosed adhesive label
Directive conformity	94/9/EG
Standards	EN 50281-1-1 Protection via housing Use is restricted to the following stated conditions
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered to!
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease! The affixed adhesive label must be readable and durable, taking account of the possi- bility of chemical corrosion!
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Maximum operating voltage U _{Bmax}	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances are not permitted.
Minimum series resistance R _V	A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance with the following list. This can also be assured by using a switch amplifier.
Maximum heating (Temperature rise)	Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series resistance Rv.
at U _{Bmax} =9 V, R _V =562 Ω	9 K
using an amplifier in accordance with EN 60947-5-6	9 K
Protection from mechanical danger	The sensor must not be mechanically damaged.
Protection of the connection cable	The connection cable must be prevented from being subjected to tension and torsional loading.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
USA: +1 330 486 0001
G

www.pepperl-fuchs.com
fa-info@us.pepperl-fuchs.com
fa

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Equipment protection level Dc (tc)	
Instruction	Manual electrical apparatus for hazardous areas
Device category 3D	for use in hazardous areas with combustible dust
Certificate of Compliance	PF 15CERT3774 X
CE marking	€€0102
ATEX marking	ເ⊛ II 3D Ex tc IIIC T80°C Dc The Ex-related marking can also be printed on the enclosed label.
Directive conformity	94/9/EG
Standards	EN 60079-0:2012+A11:2013, EN 60079-31:2014 Protection by enclosure "tc" Some of the information in this instruction manual is more specific than the information provided in the datasheet.
General	The corresponding datasheets, declarations of conformity, EC-type examination certifi- cates, certifications, and control drawings, where applicable (see datasheets), form an integral part of this document. These documents can be found at www.pepperl- fuchs.com. The maximum surface temperature of the device was determined without a layer of dust on the apparatus. Some of the information in this instruction manual is more specific than the information provided in the datasheet.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. If the Ex-relevant identification is printed exclusively on the adhesive label provided, this label must be affixed in the immediate vicinity of the sensor! The back- ground surface to which the adhesivelabel is to be applied must be clean and free from grease! The applied label must be durable and remain legible, with due consideration of the possibility of chemical corrosion!
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Minimum series resistance R _V	A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance with the following list. This can also be assured by using a switch amplifier.
Maximum operating voltage U _{Bmax}	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances are not permitted.
Maximum permissible ambient temperature T _{Umax}	Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series resistance Rv.
at U _{Bmax} =9 V, R _V =562 Ω	61 °C (141.8 °F)
using an amplifier in accordance with EN 60947-5-6	61 °C (141.8 °F)
Protection from mechanical danger	The sensor must not be exposed to ANY FORM of mechanical danger.
Protection from UV light	The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas.
Protection of the connection cable	The connection cable must be prevented from being subjected to tension and torsional loading.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dan- gerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding. Do not attach the nameplate provided in areas where electrostatic charge can build up.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

