



# JUMPFLEX® Signal Conditioners

Temperature Signal Conditioner for Thermocouples of Types J and K

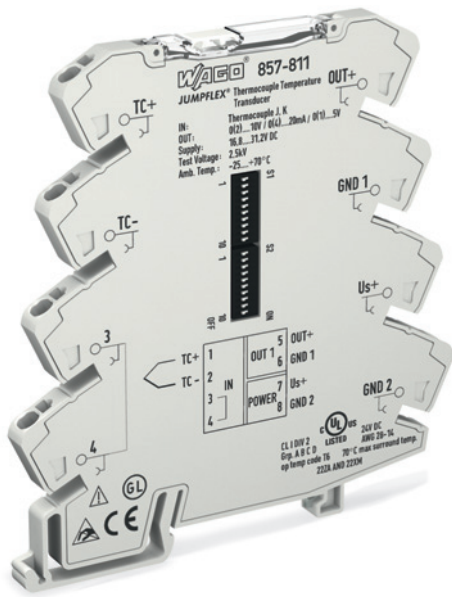

Configuration via:

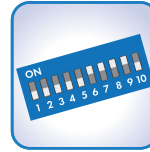



DIP switch



Interface configuration software



Interface configuration app

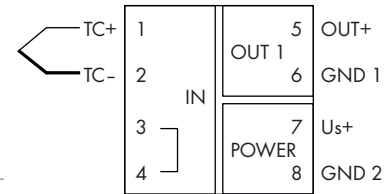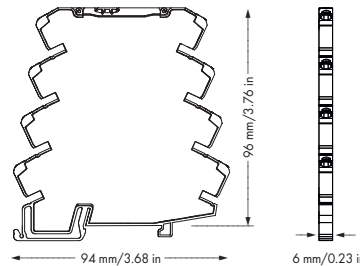

## Short description:

The 857-811 Thermocouple Temperature Signal Conditioner is suitable for the connection of type J and K thermocouples. On the output side, the thermocouple temperature signal conditioner converts the temperature signal into an analog standard signal.

## Characteristics:

- PC configuration interface
- For thermocouples of type J and K (E, R, N, S, T, B, C)
- Cold junction compensation (on/off)
- Calibrated scale switching
- Sensor's wire break
- Measuring range underflow/overflow
- Clipping capability allows analog standard signal limitation to upper range values
- Safe 3-way isolation with 2.5kV test voltage to EN 61140

## Technical Data

### Configuration:

Configuration DIP switch, interface configuration software, interface configuration app

### Input:

Input signal Thermocouples  
 Sensor types Thermocouples of types J and K \*  
 Temperature range Type J: -150 °C ... +1200 °C  
 Type K: -150 °C ... +1350 °C

### Output:

Output signal 0 ... 10 mA, 2 ... 10 mA,  
 0 ... 20 mA, 4 ... 20 mA,  
 0... 5 V, 1 ... 5 V,  
 0 ... 10 V, 2 ... 10 V \*  
 Load impedance  $\leq 600 \Omega$  (Out = mA)  
 $\geq 2 k\Omega$  (Out = V)  
 Cold junction compensation on / off (default: on) \*  
 Cold junction error 3 K (typ. 2 K)  
 Step response 60 ms without cold junction compensation/  
 120 ms with cold junction compensation

### General specifications:

Nominal supply voltage  $V_s$  24 VDC  
 Supply voltage range  $V_s$  -30 % ... +30 %  
 Current consumption at 24 VDC  $\leq 40$  mA  
 Min. measuring span 100 K (configurable)  
 Transmission error  $\leq 0.1$  % at max. measuring span (Typ J, K)  
 Transmission error of set measuring span (150 K / set measuring span [K]) %  
 Temperature coefficient  $\leq 0.04$  % /K

## Description

**JUMPFLEX® Signal Conditioner, for DIN 35 857-811**  
 Temperature Signal Conditioner for Thermocouples of Types J and K \*

Item No.

Pack. Unit

## Technical Data

### Environmental requirements:

Ambient operating temperature -25 °C ... +70 °C  
 Storage temperature -40 °C ... +85 °C

### Safety and protection:

Test voltage (input/output/supply) 2.5 kV AC, 50 Hz, 1 min

### Connection and type of mounting:

Wire connection Push-in CAGE CLAMP®  
 Cross sections solid:  
 0.08 mm<sup>2</sup> ... 2.5 mm<sup>2</sup> / AWG 28 ... 14  
 fine-stranded:  
 0.34 mm<sup>2</sup> ... 2.5 mm<sup>2</sup> / AWG 22 ... 14  
 Strip lengths 9 ... 10 mm / 0.35 ... 0.39 in

### Dimensions and weight:

Dimensions (mm) W x H x L 6 x 96 x 94  
 Height from upper-edge of DIN 35 rail  
 Weight 49.2 g

### Standards and approvals:

Conformity marking CE  
 UL 508  
 ANSI/ISA 12.12.01 Class I, Div. 2, Grp. ABCD, T4  
 Shipbuilding GL, PRS, NKK, DNV, BV  
 EMC immunity of interference EN 61000-6-2  
 EMC emission of interference EN 61000-6-4

### Accessories

see pages 226 ... 236

(\* Additional setting options as well as output signal inversion via PC configuration software or smartphone app)

# DIP Switch Adjustability

● = ON

857-811

## DIP Switch S1

1	Cold junction compensation	Sensor type			Output signal			7	8	Measuring range underflow	Measuring range overflow	Wire break
		2	3	4	5	6						
	on			J						Lower limit of output range - 5 % *	Upper limit of output range + 2,5 % *	Upper limit of output range + 5 % *
●	off	●		K	●					Lower limit of output range	Upper limit of output range + 2,5 %	Upper limit of output range + 5 %
						●			●	Lower limit of output range	Upper limit of output range + 2,5 %	Upper limit of output range + 5 %
						●	●		●	Lower limit of output range	Upper limit of output range	Upper limit of output range + 5 %
						●	●		●	Lower limit of output range	Upper limit of output range	Lower limit of output range

DIP 9 and 10 n.c.

\* acc. to NAMUR NE 43

## DIP Switch S2

Start temperature						End temperature																													
1	2	3	4	°C	°F	5	6	7	8	9	10	°C	°F	5	6	7	8	9	10	°C	°F	5	6	7	8	9	10	°C	°F						
														●														●				●	●	1025	1877
●				-200	-328	●						0	32	●					●				●				●				●	●	1050	1922	
	●			-175	-283		●					10	50		●				●				●	●			●				●	●	1075	1967	
●	●			-150	-283	●	●					20	68	●	●				●				●	●			●				●	●	1100	2012	
		●		-125	-193			●				30	86			●			●				●			●					●	●	1125	2057	
●	●			-100	-148	●		●				40	104	●		●			●				●			●					●	●	1150	2102	
	●	●		-90	-130		●	●				50	122		●	●			●				●			●					●	●	1175	2147	
●	●	●		-80	-112	●	●	●				60	140	●	●	●			●				●			●					●	●	1200	2192	
			●	-70	-94				●			70	158				●	●	●				●			●					●	●	1225	2237	
●			●	-60	-76	●			●			80	176	●			●	●	●				●			●					●	●	1250	2282	
	●		●	-50	-58		●	●	●			90	194		●		●	●	●				●			●					●	●	1275	2327	
●	●		●	-40	-40	●	●	●	●			100	212	●	●		●	●	●				●			●					●	●	1300	2372	
		●	●	-30	-22			●	●			125	257			●	●	●	●				●			●					●	●	1325	2417	
●	●	●		-20	-4	●		●	●			150	302	●		●	●	●	●				●			●					●	●	1350	2462	
	●	●	●	-10	14		●	●	●			175	347		●	●	●	●	●				●			●					●	●	1375	2507	
●	●	●	●	0	32	●	●	●	●			200	392	●	●	●	●	●	●				●			●					●	●	1400	2552	

The minimum distance from the start temperature to the end temperature may not fall short of 100K degrees on the Celsius (C) scale or 212K degrees on the Fahrenheit (F) scale.

## Default Settings

All DIP switches are in „OFF“ position for delivery. This is the position used to parameterize the device via PC configuration software.

Cold junction compensation	on
Thermocouple	Type J
Start temperature	0 °C
End temperature	1000 °C
Output signal	0 ... 20 mA
Measuring range underflow	0 mA
Measuring range overflow	20.5 mA
Wire break	21 mA