

Specifications

Environment	HDMI 1.3a (Supports the 3D feature of HDMI 1.4)	
Devices	DVD, plasma, projectors, monitors, TV, PC, laptops, servers supporting HDMI.	
Transmission	Transparent to the user	
Bandwidth	340 MHz	
Signals	HDMI 1.3a protocol	
Connectors	One (1) HDMI receptacle. One (1) RJ45S for Cat 5e/6 unshielded or shielded twisted pair. Two (2) 3.5mm jacks for IR emitter and sensor One (1) DB9 Connector for RS-232 <i>Note: HDMI cables not included.</i>	
Maximum Distance	Cat 5e/6: 230 ft (70 m) up to 1080p Deep Color 115 ft (35 m) for 4K; 3840 X 2160/24,25,30 Hz <i>Note: When installed in an electrically noisy environment, an STP cable must be used. Also, cross-connection reduces the effective distance depending on the grade of twisted cable used.</i>	
RJ45 Pin Configuration	RJ45 Link Pin 1 (R) Pin 2 (T) Pin 3 (R) Pin 6 (T) Pin 4 (R) Pin 5 (T) Pin 7 (R) Pin 8 (T)	
	<i>Reverse Polarity Sensitive. Use EIA/TIA 568A or 568B straight-through wiring.</i>	
Cable	One (1) Cat 5e/6 or better twisted pair cable required	
Power Supply	500454: Two (2) 110-240V/5VDC power supplies with interchangeable blades 500454-POE: One POE power supply	
Power Consumption	Transmitter: 1.6 Watt	Receiver: 3.2 Watt
Temperature	Operating: 0° to 40°C	Storage: -20° to 85°C
	Humidity: Up to 95% non-condensing	
Enclosure	Metal	
Dimensions	4.40" x 3.00" x 1.00" (11.2 x 7.6 x 2.5 cm)	
Weight	1.4 lb (0.6 kg)	
Compliance	Regulatory: FCC, CE, RoHS	Flammability: 94V0
Warranty	2 years	
Order Information	500454	HDMI / RS232 Extender Kit
	500454-RX	HDMI / RS232 Receiver
	500454-POE	HDMI / RS232 Extender Kit with POE
	500454-POE-RX	HDMI / RS232 Receiver with POE



8495 Dalton Road, Mount Royal, Quebec, Canada. H4T 1V5
 Tel: (514) 905-0588 Fax: (514) 905-0589
 Toll Free (North America): (877) 689-5228
 E-mail: videoease@muxlab.com URL: www.muxlab.com



HDMI / RS232 Extender Kit

500454 (Kit), 500454-RX (Receiver only)

500454-POE (Kit), 500454-POE-RX (Receiver only)

Quick Installation Guide

Overview

The HDMI / RS232 Extender Kit (500454 or 500454-POE) allows HDMI equipment to be connected up to 230 ft (70 m) @ 1080p via one (1) Cat 5e/6 unshielded twisted pair cable in a point-to-point configuration. The 500454 includes one (1) Transmitter and one (1) Receiver as well as an IR Emitter (500998) and IR Sensor (500999) for remote control applications. The 500454-POE comes with one (1) power supply, as it does not require a power supply on the receiver side. The 500454-RX or 500454-POE-RX receivers are used in conjunction with MuxLab's HDMI Matrix Switch. For installation instructions, please refer to the HDMI Matrix Switch Installation Guide.

Applications

Applications include digital signage, commercial and residential AV systems, classroom projector systems, boardroom systems, collaborative PC systems, and medical information systems.

Installation

1. Identify the connectors on the Transmitter and Receiver as indicated on the product end panels.




2. Verify that the distance between the HDMI Transmitter and Receiver is within MuxLab specifications (see specifications table).
3. To install the Transmitter:
 - 3a. Connect the Transmitter to the HDMI video source with an HDMI compliant cable.
 - 3b. Connect one (1) length of Cat 5e/6 (or higher) grade UTP cable to the RJ45 LINK connector on the Transmitter.

4. To install the Receiver:
 - 4a. Connect the Receiver to the HDMI display equipment with an HDMI compliant cable.

Note: When used with MuxLab's HDMI Matrix Switch, please consult the Matrix Switch Installation Guide.

 - 4b. Connect one (1) Cat 5e/6 cable to RJ45 LINK connector on the Receiver.
 5. Connect the 5 VDC power supply to the Receiver first, and then plug the power supply into an AC power outlet. Connect the 5 VDC power supply to the Transmitter first, and then plug the power supply into an AC power outlet. If power is present, the green power LED of the Transmitter and the Receiver will be ON.
- Note: Power-up the HDMI / RS232 Extender only after all connections are made.**
6. Power-up the HDMI equipment and verify the image quality.
 7. This product support bi-directional IR control. If infrared remote control is needed to control the Source equipment from the Display, connect the IR Sensor to the 3.5mm Stereo Jack of the receiver and the IR Emitter to the 3.5mm Mono Jack of the Transmitter.
- Note: The IR Sensor can be distinguished from the IR Emitter by looking at the 3.5-mm plug. The IR Sensor has a 3.5mm stereo plug (3 Contacts) and the IR Emitter has a 3.5mm mono plug (2 Contacts).**
8. Position the IR Sensor so that it is aimed toward the hand-held remote control. For clear IR signal reception, aim the hand-held remote control toward the top of the IR Sensor enclosure.
 9. Position the IR Emitter as close as possible to the source's IR Sensor (i.e. DVD player). For a clear IR signal reception, the IR Emitter may be affixed to the source's IR Sensor. The IR Emitter's signal is transmitted from the side of the enclosure.
 10. If infrared remote control is needed to control the Display equipment from the Source, connect the IR Emitter to the Receiver's 3.5mm stereo jack and connect the IR Sensor to the Transmitter's 3.5mm mono jack.
 11. The 500454 also supports RS232 pass-thru in order to allow a device such as commercial monitors to be controlled as in digital signage application. Please refer to the following diagram for the cabling connection.
 12. The following diagram shows the final configuration.

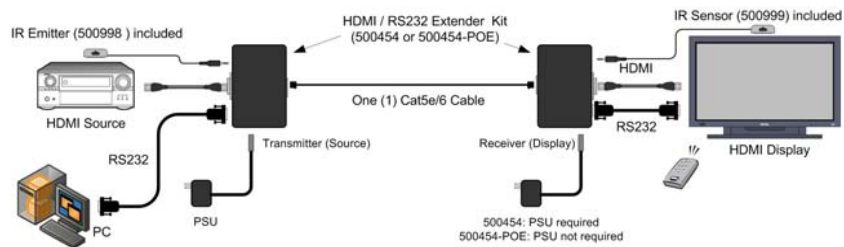

Troubleshooting

The following table describes some of the symptoms, probable causes and possible solutions in respect to the installation of the HDMI / RS232 Extender:

Symptom	Tx LEDs			Rx LEDs			Probable Cause	Possible Solutions
	Power	HDMI	RJ45	Power	HDMI	RJ45		
No Image	OFF	OFF	OFF	OFF	OFF	OFF	No power	• Check power connections
No Image	ON	OFF	OFF	ON	OFF	OFF	UTP Cable	• Check the UTP cables.
No Image	ON	OFF	ON	ON	OFF	ON	HDMI Cable	• Check the HDMI Cable.
No Image	ON	ON	ON	ON	ON	ON	Synchronisation	• Check cable length.
Flickering Image	ON	ON	ON	ON	ON	ON	Synchronisation	• Check cable length • Check the HDMI Cable Quality.
Choppy sound	ON	ON	ON	ON	ON	ON	Synchronisation	• Check cable length • Check the HDMI Cable Quality.
Green or pink hue	ON	ON	ON	ON	ON	ON	DDC communication	• Cycle power of the HDMI Extender. • Check UTP cables and replace.
Image flickers when powering up nearby equipment	ON	ON	ON	ON	ON	ON	Interference	• Use STP cables
IR not functioning	ON	ON	ON	ON	ON	ON	Remote control not directed to the IR Sensor or IR Emitter not directed to the source.	• Make sure the IR Sensor is directed towards the remote and the IR Emitter to the equipment
IR not functioning	ON	ON	ON	ON	ON	ON	Interference from sunlight, Fluorescent, Neon or Halogen lights	• Place the IR equipment away for the interfering light
IR not functioning	ON	ON	ON	ON	ON	ON	Interference from RF radiation from the TV	• Place the IR equipment away for the RF radiation

If you still cannot diagnose the problem, please call MuxLab Customer Technical Support at 877-689-5228 (toll-free in North America) or (+1) 514-905-0588 (International).