


# Ultra-small, power/signal contact design for Board-to-Board/FPC-to-Board providing 3A max current

## BM29 Series

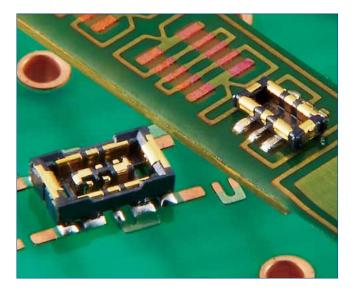


## **■**Features


1. Space-saving design


Compact and flexible design ideal for mobile devices. (Fig.1)


•Pitch: 0.35mm, Depth: 1.5mm, Stacking height: 0.6mm

- 2. Equipped with power contacts capable of handling up to 3A current. (Fig.2)
  - ·Rated current: 3A (power contact), 0.3A (signal contact)
- 3. The proprietary metal guide prevents the connector from being damaged against offset mating. (Fig.3)
- 4. A tactile click ensures secure mating. (Fig.4)
- 5. 2-points of contact offer high contact reliability.

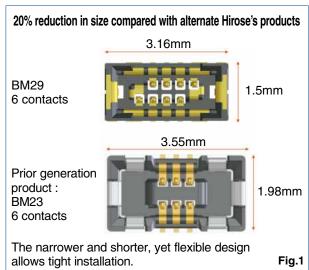

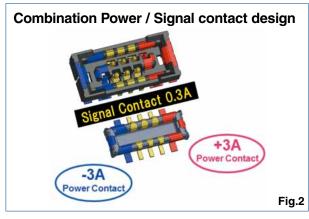

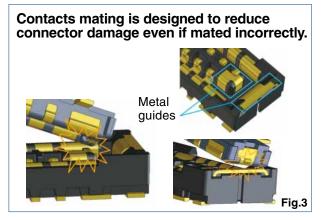

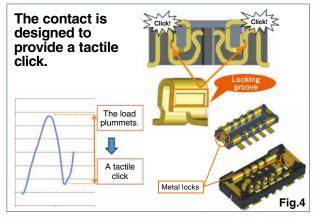

## **■**Product Specifications

Rated current	Power contact : 3A Signal contact : 0.3A	Operation temperature range	-40 to 85°C (Note 1)	Storage temperature range	-10 to 60°C (Note 2)	
Rated voltage	ated voltage 30V AC/DC Operation humidity range		90% RH or below (Note 3)	Storage humidity range	90% RH or below (Notes 2 and 3)	

Items	Specifications	Conditions
1. Insulation resistance	Minimum of $1000M\Omega$	Measured at 100V DC
2. Withstanding voltage	There shall be no flashover or dielectric breakdown.	150V AC for 1 minute
3. Contact resistance	Signal contact : 100m $\Omega$ max. Power contact : 30m $\Omega$ max.	Measured at 20mV AC, 1kHz, and 1mA
I /I VINTATION PARISTANCA		Frequency: 10 to 55 Hz, Half amplitude: 0.75mm, in 3 axis directions for 10 cycles each (5 minutes/cycle)
5. Moisture resistance	Contact resistance : Signal contact : $100m\Omega$ max. Power contact : $30m\Omega$ max. Insulation resistance : $100M\Omega$ min.	Temperature: 40±2°C, Humidity: 90 to 95%, left as it is for 96 hours
6. Temperature cycle	Contact resistance : Signal contact : $100m\Omega$ max. Power contact : $30m\Omega$ max. Insulation resistance : $100M\Omega$ min.	(-55°C for 30 minutes → 5 to 35°C for 10 minutes → 85°C for 30 minutes → 5 to 35°C for 10 minutes) in 5 cycles
7. Mating durability	Contact resistance : $100m\Omega$ max.	Mating times : 10 times
8. Soldering heat resistance	There shall be no dissolution of the resin part affecting the performance.	Reflow: according to the Recommended temperature profile Hand soldering: temperature of soldering iron at 350°C for within 3 seconds

Note 1: Includes temperature rise caused by current flow.

Note 2: Storage refers to long-term-storage of unused items before they are mounted on the PCB. Operating temperature / humidity range applies to the state of temporary storage such as non-powered after mounting on the PCB, and during transportation, etc.

Note 3: Avoid a high humidity environment.

## ■Materials / Finish

Product	Part	Material	Finish	UL specification	
5	Insulator	LCP	Black	UL94V-0	
Receptacle Header	Signal contact		Cold plotod		
ricadei	Power contact	Phosphor bronze	Gold plated		

## **■**Product Number Structure

Refer to the chart below when determining the product specifications from the product number. Please select from the product numbers listed in this catalog when placing orders.


### •Receptacle


Series Name : BM	5 Connector type DS : Receptacle	Gold plating specification and			
2 Series No. : 29B	6 Number of Power Contacts : 2	packaging (51) Cold plating thickness 0.05 um			
3 Stacking height	Contact Pitch : 0.35mm	(51): Gold plating thickness 0.05µm Emboss tape packaging (20,000 pcs/ reel)			
4 Number of Signal Contacts : 2	8 Terminal shape V : Straight SMT				

### ●Header


Series Name : BM	6 Contact Pitch : 0.35mm
2 Series No. : 29B	▼ Terminal shape V : Straight SMT
3 Number of Signal Contacts : 2	Gold plating specification and packaging
4 Connector type DP : Header	(51) : Gold plating thickness 0.05μm
6 Number of Power Contacts : 2	Emboss tape packaging (20,000 pcs/reel)

## **■**Receptacle

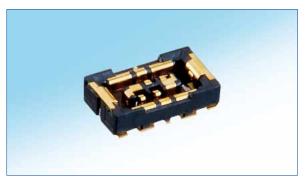

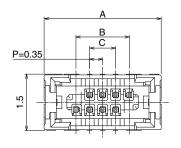

# 

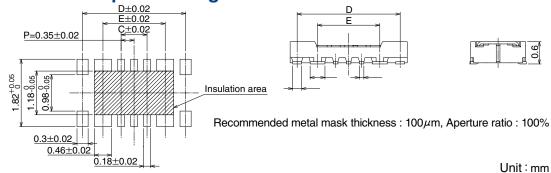


Dowt No.	HRS No.	No. of Contacts		۸	В			_
Part No.		Signal	Power	A	В	C	D	
BM29B0.6-2DS/2-0.35V(51)	673-7001-0 51	2	2	2.46	0.7	_	2.08	0.98
BM29B0.6-6DS/2-0.35V(51)	Under development	6	2	3.16	1.44	0.7	2.78	1.68
BM29B0.6-10DS/2-0.35V(51)	Under development	10	2	3.86	2.14	1.4	3.48	2.38

Note 1: Please place your orders for full reel quantities of embossed tape packages.


Note 2: This connector has no polarity.

## ■Header



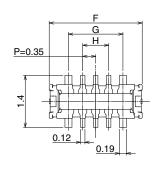

## ◆Recommended PCB pattern diagram

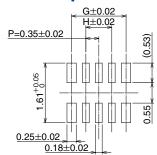



Recommended metal mask thickness: 100 \( \mu \)m, Aperture ratio: 80%

Unit: mm

Part No.	HRS No.	No. of Contacts			G	П
Fait No.		Signal	Power	F	4	П
BM29B-2DP/2-0.35V(51)	673-7002-0 51	2	2	1.81	0.77	_
BM29B-6DP/2-0.35V(51)	Under development	6	2	2.51	1.47	0.7
BM29B-10DP/2-0.35V(51)	Under development	10	2	3.21	2.17	1.4


Note 1: Please place your orders for full reel quantities of embossed tape packages.

Note 2: This connector has no polarity.

# **●**Embossed Tape Dimensions (conforms to JIS C 0806)


## ● Receptacle


## ●Reel dimensions

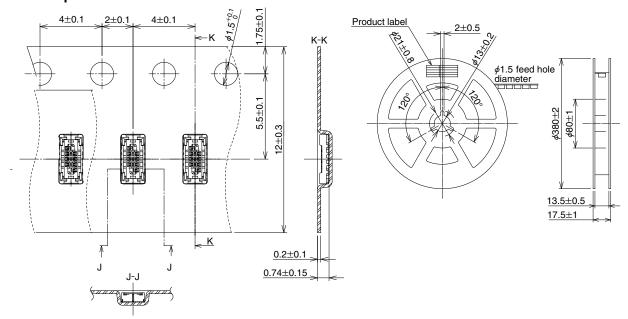


## ●Header

## Reel dimensions

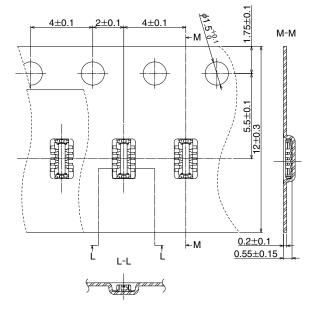

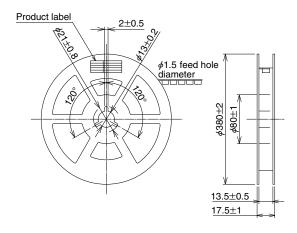

## Precautions

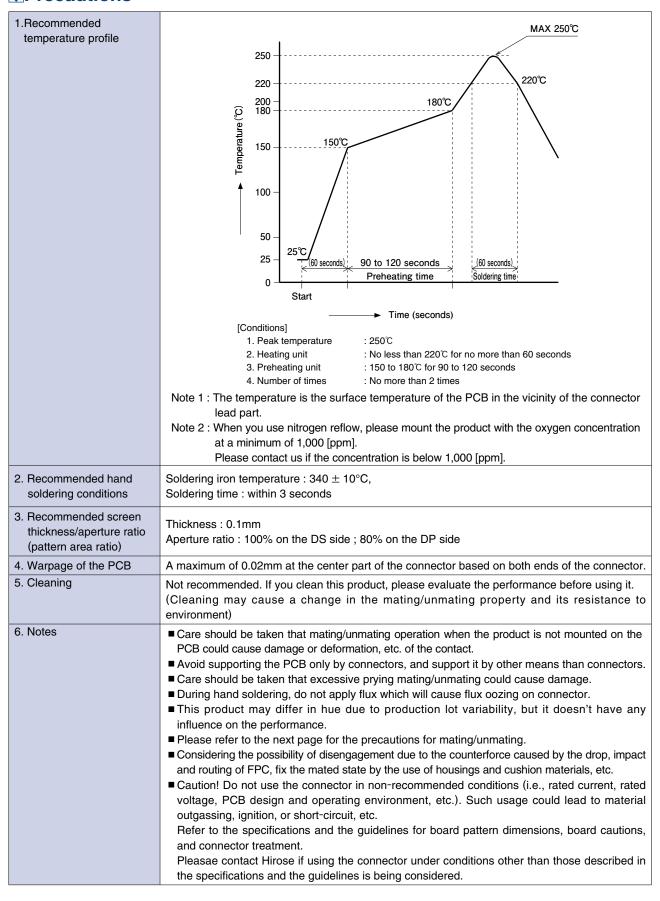


## Notes when mating connector

## Be sure to mate this product manually.

## **Mating procedure**

### 1) Align the connector at the guide.


A guide rib (tapered metal) is provided on the outer wall of the connector for mating support. Align the connector to this guide rib.

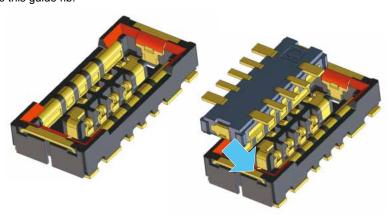

#### 2) The connector enters automatically.

The connector slightly lowers when aligned correctly.

Find the guide by moving the connector in the X and Y directions.

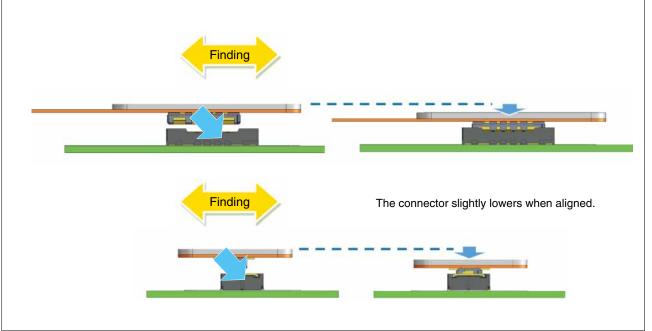

### 3) Once aligned, mate the connector fully.

The connector becomes parallel when aligned. You cannot move it laterally and longitudinally.


### 4) Confirm the mated connector.

If incorrectly mated, remove, and mate it again.

## Notes when unmating connector


#### 1) Vertical direction

When removing the connector, remove it vertically. Number of contacts, FPC thickness, or other factors may make the vertical removal difficult.

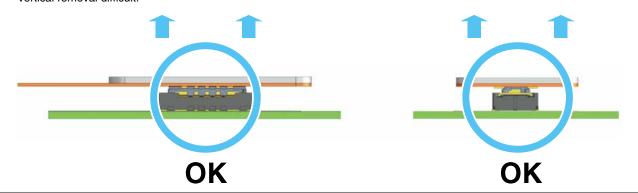


## 2) Longitudinal removal

Remove the connector in the pitch direction in a slanted manner.

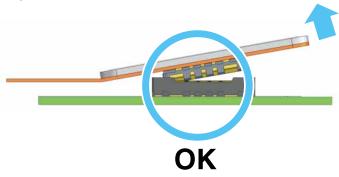


#### 3) Lateral removal

Pull out the tip end of the FPC in the vertical direction. Applying a large force horizontally could deform the contacts.

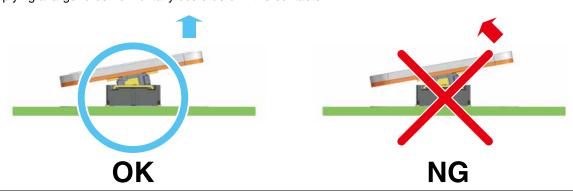

#### 4) Evaluate the mated state for thin FPCs.

Connector breakage or peeling off at soldering area could occur if the FPC does not have enough rigidity, please check the action in advance on the same type of FPC.

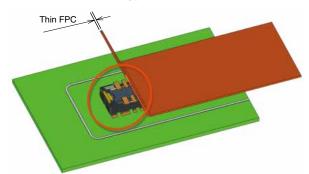

#### USA:

### HIROSE ELECTRIC (U.S.A.), INC. HEADQUARTERS CHICAGO OFFICE

2300 Warrenville Road. Suite 150. Downers Grove, IL 60515 Phone: +1-630-282-6700 http://www.hirose.com/us/

#### THE NETHERLANDS: HIROSE ELECTRIC EUROPE B.V.

Hogehillweg #8 1101 CC Amsterdam Z-O

Phone: +31-20-6557460 Fax: +31-20-6557469 http://www.hirose.com/eu/

#### GERMANY:

#### HIROSE ELECTRIC EUROPE B.V. HANOVER OFFICE

Bayernstr. 3, Haus C 30855 Langenhagen, Germany

Phone: +49-511 97 82 61 30 Fax: +49-511 97 82 61 35 http://www.hirose.com/eu/

#### CHINA:

#### HIROSE ELECTRIC (SHANGHAI) CO., LTD.

1601, Henderson Metropolitan, NO.300, East Nanjing Road, Huangpu District, Shanghai, China 200001

Phone: +86-21-6391-3355 Fax: +86-21-6391-3335 http://www.hirose.com/cn/

#### HONG KONG:

#### HIROSE ELECTRIC HONGKONG TRADING CO., LTD.

Room 1001, West Wing, Tsim Sha Tsui Centre, 66 Mody Road, Tsim Sha Tsui East, Kowloon, Hong Kong Phone: +852-2803-5338

Fax: +852-2591-6560 http://www.hirose.com/hk/

#### SINGAPORE:

#### HIROSE ELECTRIC SINGAPORE PTE. LTD.

10 Anson Road #26-16, International Plaza 079903, Singapore

Phone: +65-6324-6113 Fax: +65-6324-6123 http://www.hirose.com/sg/

#### MALAYSIA:

#### PENANG REPRESENTATIVE OFFICE

1-21-01, Suntech @ Penang Cybercity (1164), Lintang Mayang Pasir 3,11950, Bayan Baru, Penang, Malaysia.

Phone: +604-619-2564 Fax: +604-619-2574 http://www.hirose.com/sg/

#### USA:

#### HIROSE ELECTRIC (U.S.A.), INC. SAN JOSE OFFICE

2841 Junction Ave. Suite 200 San Jose, CA, 95134 Phone: +1-408-253-9640 Fax: +1-408-253-9641 http://www.hirose.com/us/

#### HIROSE ELECTRIC EUROPE B.V. GERMAN BRANCH

Schoenbergstr. 20, 73760 ostfildern Phone: +49-711-456002-1 Fax: +49-711-456002-299 http://www.hirose.com/eu/

#### FRANCE:

#### HIROSE ELECTRIC EUROPE B.V. PARIS OFFICE

Regus La Garenne Colombes, Place de La Belgique, 71 Boulevard National La Garenne Colombes, 92250, France

Phone: +33 (0) 1 7082 3170 Fax: +33 (1) 7082 3101 http://www.hirose.com/eu/

#### CHINA:

#### HIROSE ELECTRIC (SHANGHAI) CO.,LTD. BEIJING BRANCH

A1001, Ocean International Center, Building 56# East 4th Ring Middle Road, ChaoYang District, Beijing, 100025

Phone: +86-10-5165-9332 Fax: +86-10-5908-1381 http://www.hirose.com/cn/

## HIROSE ELECTRIC TAIWAN CO., LTD.

103 8F. No.87, Zhengzhou Rd., Taipei Phone: +886-2-2555-7377

Fax: +886-2-2555-7350 http://www.hirose.com/tw/

#### HIROSE ELECTRIC SINGAPORE PTE. LTD. DELHI LIAISON OFFICE

Office NO.552, Regus-Green Boulevard, Level5, Tower C, Sec62, Plot B-9A, Block B, Noida, 201301, Uttar Pradesh, India

Phone: +91-12-660-8018 Fax: +91-120-4804949 http://www.hirose.com/sg/

#### **THAILAND:**

#### **BANGKOK OFFICE (REPRESENTATIVE OFFICE)**

Unit 4703, 47th FL., 1 Empire Tower, South Sathorn Road, Yannawa, Sathorn, Bangkok 10120 Thailand

Phone: +66-2-686-1255 Fax: +66-2-686-3433 http://www.hirose.com/sg/

#### USA:

#### HIROSE ELECTRIC (U.S.A.), INC. DETROIT OFFICE (AUTOMOTIVE)

17197 N. Laurel Park Drive. Suite 253.

Livonia, MI 48152 Phone: +1-734-542-9963 Fax: +1-734-542-9964 http://www.hirose.com/us/

#### HIROSE ELECTRIC EUROPE B.V. NUREMBERG OFFICE

Neumeverstrasse 22-26, 90411 Nurnberg

Phone: +49-911 32 68 89 63 Fax: +49-911 32 68 89 69 http://www.hirose.com/eu/

#### **UNITED KINGDOM:**

#### HIROSE ELECTRIC EUROPE BV (UK BRANCH)

4 Newton Court, Kelvin Drive, Knowlhill,

Milton Keynes, MK5 8NH Phone: +44-1908 202050 Fax: +44-1908 202058 http://www.hirose.com/eu/

#### CHINA:

### HIROSE ELECTRIC TECHNOLOGIES (SHENZHEN) CO., LTD.

Room 09-13, 19/F, Office Tower Shun Hing Square, Di Wang Commercial Centre, 5002 Shen Nan Dong Road, Shenzhen City, Guangdong Province, 518008

Phone: +86-755-8207-0851 Fax: +86-755-8207-0873 http://www.hirose.com/cn/

## HIROSE KOREA CO.,LTD.

250, Huimanggongwon-ro, Siheung-si, Gveonggi-do, Korea, 15083 Phone: +82-31-496-7000 or 7124

Fax: +82-31-496-7100 http://www.hirose.co.kr/

#### HIROSE ELECTRIC SINGAPORE PTE. LTD. BANGALORE LIAISON OFFICE

Unit No-403, 4th Floor, No-84, Barton Centre, Mahatma Gandhi (MG) Road, Bangalore 560 001, Karnataka, India

Phone: +91-80-4120 1907 Fax: +91-80-4120 9908 http://www.hirose.com/sg/



# HIROSE ELECTRIC CO.,LTD.

2-6-3, Nakagawa Chuoh, Tsuzuki-Ku, Yokohama-Shi 224-8540, JAPAN TEL: +81-45-620-3526 Fax: +81-45-591-3726

http://www.hirose.com

http://www.hirose-connectors.com