

Users Manual



For P808

High Performance Microstepping Driver

Thank you for purchasing the Astrosyn P808 drive. Please read this manual thoroughly before installing and operating the driver, and always keep the manual where it is readily accessible.



Astrosyn International Teqhaology Ltd The Old Courthouse, New Road Avenue, Chatham, Kent, ME4 6BE England Telephone: +44 (0) 1634 815175 Fax: +44 (0) 1634 826552 Email: <u>astrosyn@btinternet.com</u> Web: http:// <u>www.astrosyn.com</u> Registered office: Montague Place, Quayside, Chatham Maritime, Kent, ME4 4QU Registered in England No. 1188550

Table of Contents

1.	General	Page 1				
	Features of the Driver	1				
	Applications of the Driver	1				
2.	Specifications and Operating Environment	2				
	 Electrical Specifications 	2				
	 Operating Environment and Parameters 	2				
3.	Driver Connectors, P1 and P2	3				
	Control Signal Connector P1 Pins	3				
	Power Connector P2 Pins	3				
4.	Power Supply Selection	4				
	Maximum Voltage Input	4				
	 Regulated or Unregulated Power Supply 	4				
	 Multiple Drivers 	4				
5.	Driver Voltage and Current Selection	5				
	 Selecting Supply Voltage 	5				
	 Setting Proper Output Current 	5				
6.	Microstep Resolution and Driver Current Output	6				
	 Microstep Resolution Selection 	6				
	 Current Setting 	6				
	 DIP Setting for current during motion 	6				
	 DIP Setting for current during Standstill 	6				
7.	Control Signal Connector (P1) Interface	7				
8.	Driver Connection to Stepper Motors	8				
9.	Connection Diagram	9				
10	. Control Signal Waveform and Timing	10				
11	1. Drive Dimensions 11					

1. GENERAL

The P808 is a high performance microstepping driver based on the most advanced technology in the world today.

It is suitable for driving any 2-phase and 4-phase hybrid stepping motors (Current 7.7A).

By using advanced bipolar constant-current chopping techniques, it can output more speed and power from the same motor, compared with traditional technologies such as L/R drivers. It has patented current control technology, which allows coil currents to be accurately controlled, generating much less current ripple and motor heating than other drivers on the market.

Features of this Driver:

- High Performance, low cost
- Supply voltage to +90VDC, current to 7.7A for P808
- Inaudible 20khz chopping frequency
- TTL compatible and optically isolated input signals
- Automatic idle-current reduction
- Mixed-decay current control for less motor heating
- > 14 Selectable step resolutions in decimal and binary
- Microstep resolutions up to 51,200 steps/rev
- Suitable for 4, 6 or 8 lead motors
- > Over-current, over-voltage and short-circuit protection
- Small size

Applications of this Driver:

Suitable for a wide range of stepping motors of Size NEMA 17, 23, 34 and 42. Usable for various kinds of machines, such as X - Y Tables, labelling machines, laser cutters, engraving machines, and pick-place devices; particularly useful in applications with low noise, low vibration, high speed and high precision requirements.

2. SPECIFICATIONS AND OPERATING ENVIRONMENT

Electrical Specifications (T = 25°C)

			P808	
Parameters	Min	Typical	Max	Remark
Peak Output Current	2.8A	By User	7.7A	By DIP Switch
Supply Voltage (DC)	+24V	+68V	+90V	
Logic Signal Current	6mA	10mA	30mA	
Pulse Input Frequency	0	By User	300 kHz	
Isolation Resistance	500MΩ			

Operating Environment and Parameters

Coolant	Natural Cooling or Forced convection			
Environment	Space Avoid water, dust, oil, frost and corrosive			
		gases		
	Temperature	0° to 50°C		
	Humidity	40 to 90%RH		
	Vibration	5.9m/s ² Max		
Storage Temp.	-20 °C to +65°C			
Weight	About 0.45Kg			

3 DRIVER CONNECTORS, P1 AND P2

The following is a brief description of the two connectors of the Driver. More detailed descriptions of the pins and related issues are presented in Sections 4 and 6 - 9.

Control Signal Connector P1 Pins

Pin No.	Signal	Functions
1	Pul + (+5V)	Pulse Signal: In single pulse (Pulse/direction) mode, this
2	Pul - (Pulse)	input represents pulse signal, effective for each upward- rising edge; in double pulse mode (Pulse/pulse) this input represents clockwise (CW) pulse. For reliable response, pulse width should be longer than 3μ s
3	Dir + (+5V)	Direction Signal: In single pulse mode, this signal has
4	Dir - (Dir)	low/high voltage levels, representing two directions of motor rotation; in double-pulse mode (set by inside jumper JMPI), this signal is counter-clock (CCW) pulse, effective on each rising edge. For reliable motion response, direction signal should be sent to driver 2μ s before the first pulse of a motion direction reversal.
5	Ena + (+5V)	Enable Signal: this signal is used for enable/disable, high
6	Ena - (Ena)	level for enabling driver and low level for disabling driver. Usually left unconnected (Enabled)

<u>*Remark 1:*</u> Pul/dir is the default mode; internal jumper JMPI can be used to switch to CW/CCW double-pulse mode.

<u>Remark 2</u>: Please note motion direction is also related to motor-driver wiring match. Exchanging the connection of two wires for a coil to the driver will reverse motion direction. (For example, reconnecting motor A+ to driver A- and motor A- to driver A+ will invert motor direction).

Power Connector P2 Pins

Pin No.	Signal	Functions
1	Gnd	DC Power Ground
2	+ V	DC Power Supply, +24VDC + 90VDC, Including voltage
		fluctuation and EMF voltage.
3, 4	Phase A	Motor coil A (leads A + and A -)
5, 6	Phase B	Motor coil B (leads B + and B -)

4 POWER SUPPLY SECTION

It is important to choose the appropriate power supply to make the driver operate properly.

Maximum Voltage Input:

The power Mosfet inside the driver can actually operate within +24V to +90VDC, including power input fluctuation and back EMF voltage generated by motor coils during motor shaft deceleration.

Higher voltage will damage the driver. Therefore, it is suggested to use power supplies with theoretical output voltage of no more than +85V, leaving room for power line fluctuation and back EMF

Regulated or unregulated power supply:

Both regulated and unregulated power supplies can be used to supply DC power to the driver. However, unregulated power supplies are preferred due to their ability to withstand current surge. If regulated power supply (Such as most switching supplies.) is indeed used, it is important to have large current output rating to avoid problems like current clamp, for example using 4A supply for 3A motor-driver operation. On the other hand, one may use a power supply of lower current rating than that of motor (typically 50% ~ 70% of motor current). The reason is that the driver draws current from the power supply capacitor only during the ON duration of the PWM cycle, but not during OFF duration. Therefore, the average current withdrawn from power supply is considerably less than motor current. For example, two 3A motors can be well supplied by one power supply of 4A rating.

Multiple Drivers:

It is recommended that multiple drivers share one power supply to reduce cost, provided that the supply has enough capacity. **DO NOT** daisy-chain the power supply input pin of the drivers (Connect them to power supply separately) to avoid cross interference.

Higher supply voltage will allow higher motor speed to be achieved, at the price of more noise and heating. If the motion speed requirement is low, it is better to use lower supply voltage to improve noise, heating and reliability.

<u>NEVER</u> connect power and ground in the wrong, it will damage the driver.

5 DRIVER VOLTAGE AND CURRENT SELECTION

This driver can match small-medium size step motors (NEMA 17, 23, 34 and 42).

To achieve good driving results, it is important to select supply voltage and output current properly. Generally, supply voltage determines the high-speed performance of the motor, while output current determines the output torque of the motor (particularly at lower speed).

Selecting Supply Voltage:

Higher supply voltage can increase motor torque at higher speeds; this is helpful for avoiding losing steps. However, higher voltage may cause more motor vibration at lower speed, and it may also cause over-voltage protection and even driver damage.

Therefore, it is suggested to choose only sufficiently high supply voltage for intended applications.

Setting Proper Output Current

For a given motor, higher driver current will make the motor to output more torque, but at the same time causes more heating in the motor and driver. Therefore, output current is generally set to be such that the motor will not overheat during lengthy operation.

Since parallel and serial connections of motor coils will significantly change resulting inductance and resistance, it is important to set driver output current depending on motor phase current, motor leads and connection methods.

Phase current rating supplied by motor manufacturer is important in selecting driver current, but the selection also depends on leads and connection.

6. MICROSTEP RESOLUTION AND DRIVER CURRENT OUTPUT

This driver uses an 8-bit DIPswitch to set microstep resolution, dynamic current and standstill current, as shown below:

Current during motion	Microstep resolution

1 2 3 4 5	6 7	8
-----------	-----	---

Standstill current (half/full)

Microstep Resolution Selection

Microstep Resolution is set by SW5, 6, 7, 8 as shown in the following table:

Microstep	Step/Rev (For 1.8°Motor)	SW5	SW6	SW7	SW8
0	No rotation	Off	Off	Off	Off
2	400	On	On	On	On
4	800	On	Off	On	On
8	1600	On	On	Off	On
16	3200	On	Off	Off	On
32	6400	On	On	On	Off
64	12800	On	Off	On	Off
128	25600	On	On	Off	Off
256	51200	On	Off	Off	Off
5	1000	Off	On	On	On
10	2000	Off	Off	On	On
25	5000	Off	On	Off	On
50	10000	Off	Off	Off	On
125	25000	Off	On	On	Off
250	50000	Off	Off	On	Off

Current Setting

The first three bits (SW1, 2, 3) of the DIP switch are used to set the current during motion (dynamic current), while SW4 is used to select standstill current.

P808 DIP Selection for current during motion:

Current for P808	SW1	SW2	SW3
2.8A	On	On	On
3.5A	Off	On	On
4.2A	On	Off	On
4.9A	Off	Off	On
5.7A	On	On	Off
6.4A	Off	On	Off
7.0A	On	Off	Off
7.7A	Off	Off	Off


Note that due to motor inductance, actual coil current may be smaller than dynamic current settings, particularly at higher speeds.

DIP Setting for current during standstill:

SW4 is used for this purpose, current setting due to coil inductance. OFF meaning that the standstill current is set to be half of the dynamic current and ON meaning that standstill current is set to be the same as the dynamic current.


7 CONTROL SIGNAL CONNECTOR (P1) INTERFACE

This driver uses differential inputs to increase noise immunity and interface flexibility. Single-ended control signals from the indexer/controller can also be accepted by this interface. The input circuit has built-in high-speed optocoupler, and can accept signals in the format of line driver, open-collector, or PNP output. Line driver (differential) signals are suggested for reliability. In the following figures, connections to open-collector and PNP signals are illustrated.

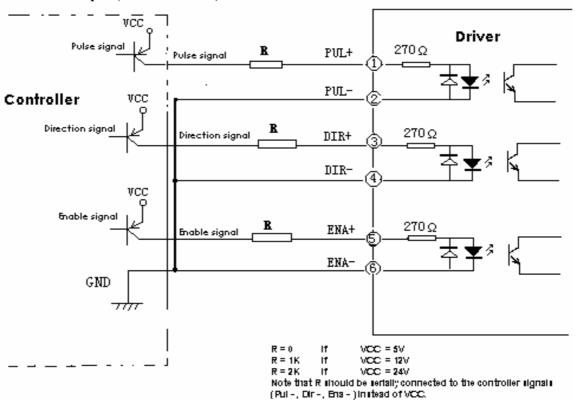


PNP Output (common anode)


Open-Collector Signal (Common -)

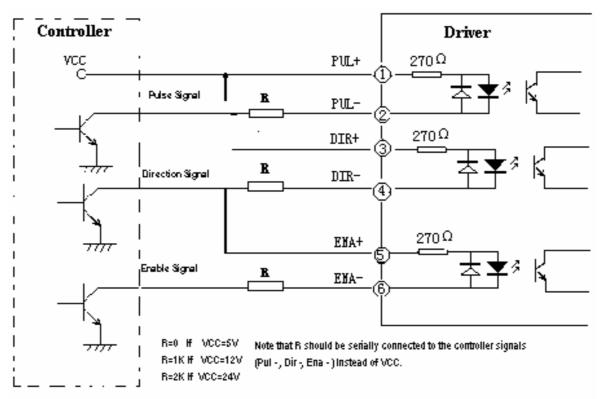


DRIVER CONNECTION TO STEP MOTORS

The P808 driver can drive any 4, 6, or 8 lead hybrid stepper motors. The following diagrams illustrate connection to various kinds of motor leads:

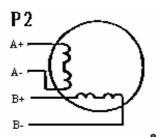


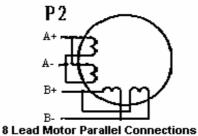

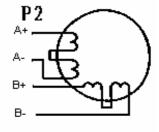

4 Lead Motor Connection

8 Lead Motor Series Connections

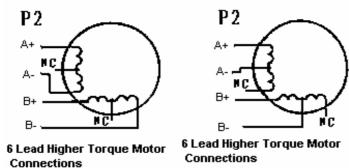


Note that when two coils are connected in parallel, coil inductance is reduced by half and motor speed can be significantly increased. Serial connection will lead to increased inductance and thus the motor can be run well only at lower speeds.

9 CONNECTION DIAGRAM

A complete stepping system should include stepping motor, stepping driver, power supply and controller (pulse generator).


A typical connection is shown below:

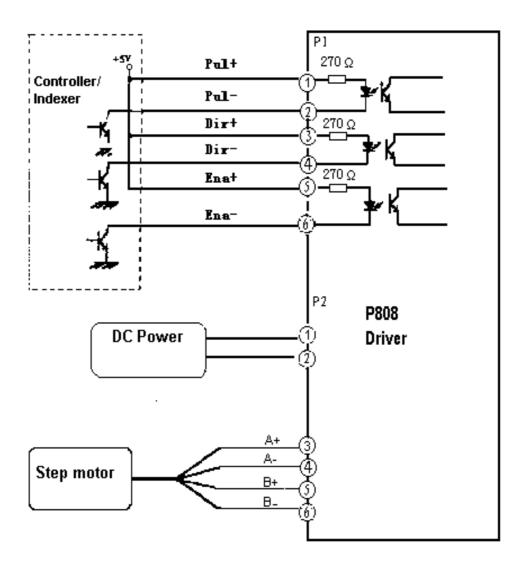

10 CONTROL SIGNAL WAVEFORM AND TIMING

This driver can accept pulse control signals up to 300khz.

Before a direction reversal, the direction signal needs to be established at least 2 μ s before the first pulse of the next pulse train. Please examine the timing diagrams of the three control signals as follows:

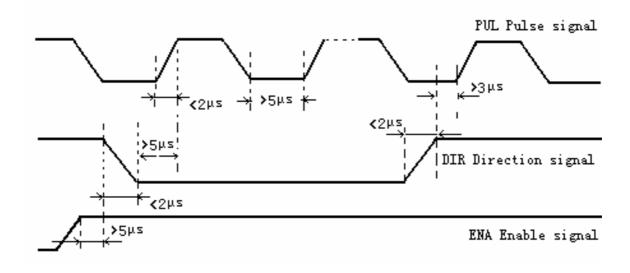

11. DRIVE DIMENSIONS

External Dimensions are shown in mm

