



Simple wiring with Push-in technology

IDEC CORPORATION





All thoughts focused on the same goal

Since the late 1970s, IDEC has continued to instill and pursue "Save and Safe", as part of our corporate DNA. Along with the rapid advancement in machine intelligence and demands for environmental resistance and high reliability in recent years, we need to face societal issues such as shortage in workforce.

To solve these issues, we have set as our goals "Safe, Simple & Smart=S³ (S cube)", aiming to provide society with products and services that will bring about greater innovation and lasting quality.

Safe

Products anyone can use with safety and assurance, from a company seeking to be number one in safety

Simple

Products appreciated by all our customers for their ease of connection regardless of experience

Smart

Products that make labor-saving and space-saving a reality


User+Ability = Usability

In an age of worker diversity, products need to be usable by anyone, safely and easily. By supporting experience with technology, we are opening up possibilities of all kinds.







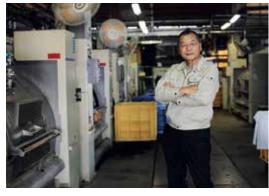



Push-in

Simple wiring for greater work efficiency

Ferrules and solid wires can be connected simply by push-in insertion, without a screwdriver. (*1) To remove, a flat-blade screwdriver is inserted in a simple two-action process.

Since wiring can be performed regardless of the operator's skill level, wiring time is reduced.

*1) When connecting stranded wire, insert the wire while holding down the pusher with a flat-blade screwdriver.




Push the wire straight in as far as it will go.



Connection is completed. Pull lightly to make sure it is firmly in place.



Insert a screwdriver into the opening.

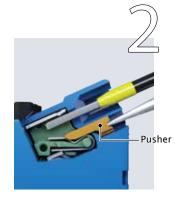


With the screwdriver in place, pull out the wire.

Time saving and efficient

Push-in connections are made simple by inserting the wire, reducing wiring time by approximately 55% compared to conventional screw terminals.

[Conditions]

Push-in: Insert wire with ferrule.
Screw terminals: With screw loosened, insert wire, then tighten with electric driver.

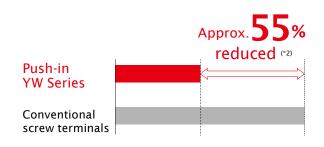

 * 2) As of IDEC research (as of November 2019)

Reliable and easy

Finger-safe structure and vibration resistance.


What's more, the space-saving design means better workability in a smaller space.

Stays firmly in place

Since the ferrule is held in place by a spring load, the wiring remains taut and vibration resistance is improved.

Finger-safe structure -

IP20 finger-safe structure enables wiring to be performed without direct contact between screwdriver and conductive part.

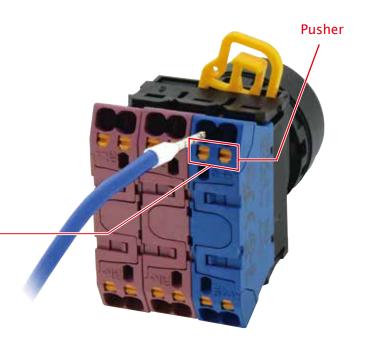

Wiring procedure comparison

Work can be performed without using tools and regardless of the operator's skill level.

*1) When ferrule is used.

Conventional screw terminal

Remove Pass wire through screw crimping terminal

Tighten screw

Check

Push-in terminal (*1)



Simple one-step operation

Pull lightly to confirm

No additional tightening needed

Because screws are not used on push-in terminals, re-tightening of screws is not required.

Product Upgrade

The superior functions of the conventional YW Series still remain while improving ease of use.

Space-Saving

Contact block depth reduced

Saves space inside panel and enables downsizing of equipment.



Conventional YW Series (pushbuttons)

Panel depth reduced by

 $3.5\,\text{mm}$





Push-in YW Series (pushbuttons)



Conventional YW Series (pilot light full voltage type)

Panel depth reduced by 20mm



Push-in HW Series (pilot light full voltage type)

Smart


Angled ConnectionsEnables flexible wiring.





Test point

A test point is available to check connectivity of the wiring. Check the connectivity easily using a tester.

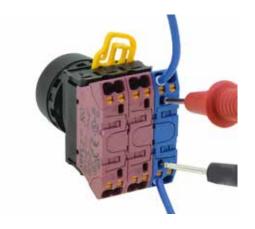

Sub-Assembled Units

Sub-assembled units can be ordered for flexible use, such as sudden changes in design.



Ø22 YW Series Push-in Switches & Pilot Lights

Products

Pushbuttons: see page 10
Selector Switches: see page 12
Key Selector Switches: see page 14
Emergency Stop Switches: see page 16

Notice

- YW series Push-in products below will be released in summer 2020.
 Illuminated pushbuttons
 Illuminated emergency stop switches
- For Push-in pilot lights, use HW series. (See page 17)

- Push-in terminal connection reduces wiring time.
- Safety enhanced with IP20 finger-safe protection.



See website for details on approvals and standards.

Specifications and Ratings


Contact Ratings

HW-P10 (NO contact), HW-P01 (NC contact)

Rated insulation vol	sulation voltage			d insulation voltage 600V (*1)							
Rated continuous current			10A								
Rated operating vol	ed operating voltage			48V	50V	110V	220V	440V			
	AC	Resistance Load (AC-12)	10A	_	10A	10A	6A	2A			
Operating Current	50/60 Hz	Inductive Load (AC-15)	10A	_	7A	5A	3A	1A			
Operating ourtein	DC	Resistance Load (DC-12)	10A	5A	_	2.2A	1.1A	_			
	БО	Inductive Load (DC-13)	5A	2A	1	1.1A	0.6A	_			

- The operating current represents making and breaking currents (IEC 60947-5-1).
- Contact materials: Silver contacts
- $\bullet \ \ \text{Minimum applicable load: 3V AC/DC, 5 mA (applicable range may vary with operating conditions)}\\$
- *1) Key selector switches: 250V (pollution degree 3, impulse withstand voltage 2.5kV) 400V (pollution degree 2, impulse withstand voltage 4.0kV)

Push-in Contact Block (HW-P)

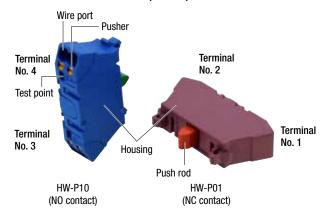

Part No.	HW-P10	HW-P01			
Contact	_/_				
Johnson	1NO	1NC			
Contact No.	3-4	1-2			
Housing	Blue	Purple red			
Push Rod	Green	Red			
Weight	Approx. 8g				

• Up to 2 blocks (1 layer) can be attached to an operator.

Specifications

Switch Type		Pushbuttons	Selector Switches	Key Selector	Switches	Emergency Stop Switches		
Operating Te	mperature	-20 to +55°C (no freezing)	-25 to +55°C (no freezing)					
Operating Humidity 45 to 85% RH (no condensation)								
Storage Tem	perature	-45 to +80°C (no freezing)						
Storage Hun	nidity	95% RH maximum						
Contact Resi	stance	50 mΩ maximum (initial value	e)					
Insulation Re	esistance	100 MΩ minimum (500V DC r	negger)					
Overvoltage	Category							
Impulse With	stand Voltage	4.0kV	4.0kV	2.5kV	4.0kV	4.0kV		
Pollution Deg	gree	3	3	3 (*1)	2 (*1)	3		
Dielectric St	rength	2500V AC, 1 minute						
Vibration	Damage limits	30 Hz, amplitude 1.5 mm	10 to 500 Hz, Amplitude 0.35 mm, Acceleration 50m/s ²					
Resistance	Operating extremes	5 to 55Hz, amplitude 0.5 mm	10 to 500 Hz, Amplitude 0.35 mm, Acceleration 50m/s ²					
Shock	Damage limits	1,000 m/s ²	1,000 m/s ²					
Resistance	Operating extremes	100 m/s ²				150 m/s ²		
Degree of Pr	otection	Terminal: Finger-safe (IP20) structure Panel front: IP65 (IEC 60529						
Recommended Tightening Torque for Locking Ring		2.0 N·m						
Terminal Sty	le	Push-in terminal						
Mechanical (minimum o		Momentary: 5,000,000 (*2) Maintained: 250,000 (*2)						
Electrical Lif	е	100,000 operations minimum						

^{*1)} For key selector switches, rated insulated voltage is 250V at pollution degree 3 and 400V at pollution degree 2.

(Dimensions in mm)

Direct Opening Function Specification

Emergency Stop Switches

Type	Emergency stop switches
Minimum Force Required for Direct Opening Action	60N
Minimum Operator Stroke Required for Direct Opening Action	8.3mm
Maximum Operator Stroke	8.3mm

Key Selector Switches

Туре	2-position	3-position
Minimum Operator Angle for Direct Opening Action	90°	45°
Minimum Operator Torque for Direct Opening Action	0.45N·m	0.45N·m
Maximum Operator Stroke	90°	45°


Degree of Protection

Unit	IEC 60529
All models	IP65 (*4)

^{*4)} When using a nameplate with the YW series, IP65 protection degree is achieved only when nameplates shown on page 18, 20 are used. (IP40 when other ø22 namplates such as NWA are used)

Mounting Hole Layout

Panel Cut (IEC60947-5-1)

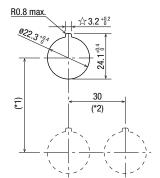

- When high temperature is expected, take necessary measures such as securing sufficient mounting centers or using a cooling fan.
- The 3.2 mm recess is for preventing rotation and is not necessary when the nameplate or anti-rotation ring is not used.

Minimum Mounting Centers

(Dimensions in mm)

Unit	Vertical (*1)	Horizontal (*2)
ø40mm mushroom button	50 minimum	40 minimum
Pushbutton, Selector switch, Key selector switch	50 minimum	30 minimum
Emergency Stop Switch	50 minimum	50 minimum

Ordering Information

- Specify the Ordering No. when ordering.
 When ordering, specify button color, lens color, key removal specification, or key number codes.
- Some combinations cannot be ordered. For details, contact IDEC.
- Nameplates and accessories for mono-lever switch are ordered separately. See page 18 to 22.

^{*2)} Switching frequency 1,800 operations/h, duty ratio 40%

^{*3)} Switching frequency 900 operations/h, duty ratio 40%

Pushbuttons

Sub-Assembled



Package Quantity: 1

		Operator Unit		Contact Unit			
1	Name / Shape	Part No. (Ordering No.)	② Operation	⑤ Button Color Code	Shape	Contact Configuration	Part No. (Ordering No.)
Flush						1NO	YW-CNP10
(plastic)				B (black)		1NC	YW-CNP01
		YW1B-215-PS		G (green)	A	1NO-1NC	YW-CNP11
			M: Momentary	R (red)		1NO-2NC	YW-CNP12
			A: Maintained		炎星	2N0	YW-CNP20
Flush			A. Wallianieu	Y (yellow)		2NC	YW-CNP02
(metal)		YW4B-215-PS		S (blue)		2NO-1NC	YW-CNP21
		2 @ 1 @ 1 0		W (white)		3N0	YW-CNP30
						3NC	YW-CNP03
Extended						1NO	YW-CNP10
(plastic)				B (black) G (green) R (red)		1NC	YW-CNP01
		YW1B-225-PS				1NO-1NC	YW-CNP11
			M: Momentary			1NO-2NC	YW-CNP12
			A: Maintained	Y (yellow)	表 图 1	2N0	YW-CNP20
Extended (motal)			A. Maillailleu	, ,		2NC	YW-CNP02
(metal)		YW4B-225-PS		S (blue)		2NO-1NC	YW-CNP21
		1W4D-@2@-13		W (white)		3NO	YW-CNP30
						3NC	YW-CNP03
ø40mm						1NO	YW-CNP10
Mushroom				D (11 1)		1NC	YW-CNP01
(plastic)		YW1B-245-PS		B (black)	A 0	1NO-1NC	YW-CNP11
				G (green)		1NO-2NC	YW-CNP12
			M: Momentary	R (red)	成 注 【 20	2N0	YW-CNP20
ø40mm			A: Maintained	Y (yellow)		2NC	YW-CNP02
Mushroom (metal)		YW4B-245-PS		S (blue)		2NO-1NC	YW-CNP21
(motal)		1 W4D-6/400-P3		W (white)		3NO	YW-CNP30
						3NC	YW-CNP03

- Specify the operation type in place of ② and button color code in place of ⑤.
- See page 19 for contact configuration of contact units.


Part No. Example

Assembled and sub-assembled unit

Operator unit YW1B - M 1 B - PS ⑤ Button Color Code ${\small \textcircled{1}} \, \mathsf{Bezel} \, \, \mathsf{shape} \,$ 1: Round (plastic) B (black) G (green) 4: Round (metal) R (red) ② Operation Y (yellow) M: Momentary S (blue) A: Maintained W (white) 3 Button style 1: Flush 2: Extended 4: ø40mm Mushroom Contact unit

YW - CN P 10 **4** Contacts (see page 19)


Assembled

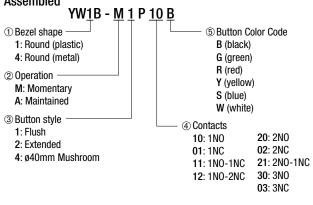


Pushbuttons

Dimensions All dimensions in mm.


• Flush

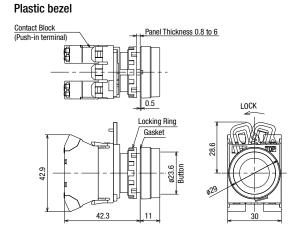


Metal bezel

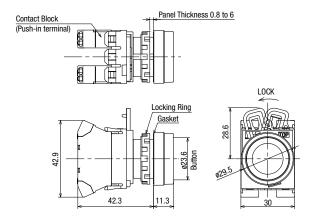

Extended Plastic bezel

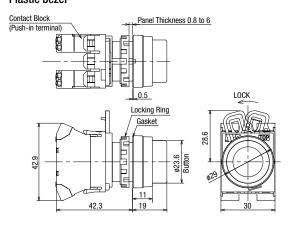


Metal bezel

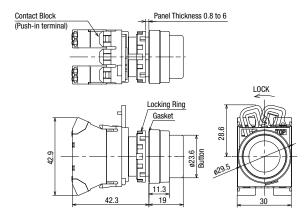


• ø40mm Mushroom

Plastic bezel

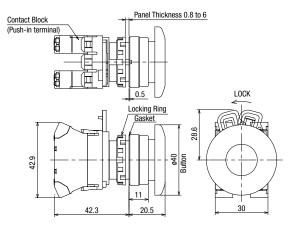

Metal bezel

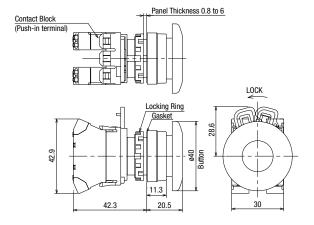

Selector Switches (Knob Operator)

Sub-Assembled



		Oners	ator Unit		Contact	t Block	Oner	ator Po	eition	Pa Contac	ckage Quantity: 1
Name / Shape	No. of Positions	Part No. (Ordering No.)	©Operator position code	Contact Configuration			4	2	Julion	Shape	Part No. (Ordering No.)
				1NO (10)	(1) (2) (3)	1N0 —		•			YW-CNP10
			_	1NC (01)	(1) (2) (3)	— — 1NC	•				YW-CNP01
		YW1S-②-PS 1NO-1NC (11)		V1S-②-PS	1NO-1NC (11)	(1) (2) (3)	1NO — 1NC	•	•		
Knob Operator (Plastic bezel)				1NO-2NC (12)	(1) (2) (3)	1NC 1NO 1NC	•	•			YW-CNP12
60	90° 2-position		2: Maintained 21: Spring Return from Right	2NO (20)	(1) (2) (3)	1N0 — 1N0		•			YW-CNP20
(Image:2-position)				2NC (02)	(1) (2) (3)	1NC 1NC		•			YW-CNP02
		YW4S-②-PS		2NO-1NC (21)	(1) (2) (3)	1NO 1NO 1NC	•	•			YW-CNP21
				3NO (30)	(1) (2) (3)	1NO 1NO 1NO		•			YW-CNP30
				3NC (03)	(1) (2) (3)	1NC 1NC 1NC	•				YW-CNP03
			ator Unit	Contact	Contact	t Block	_	ator Po		Contac	Ť
	No. of Positions	Part No. (Ordering No.)	@Operator position code	Configuration	Mounting Position	Contact		0	2	Shape	Part No. (Ordering No.)
				2NO (20)	(1) (2) (3)	1N0 — 1N0	•		•		YW-CNP20
				2NO (20N1)	(1) (2) (3)	1NO 1NO	•		•		YW-CNP20N1
Knob Operator (Metal bezel)		YW1S-@-PS		2NC (02)	(1) (2) (3)	1NC — 1NC					YW-CNP02
	45°		3: Maintained 31: Spring Return from Right	2NO-1NC (21)	(1) (2) (3)	1NO 1NO 1NC	•	•	•		YW-CNP21
(Image: 3-position)	3-position		32: Spring return from left 33: Spring return two-way	1NO-1NC (11)	(1) (2) (3)	1NO — 1NC	•				YW-CNP11
				1NO-2NC (12)	(1) (2) (3)	1NC 1NO 1NC	•		•		YW-CNP12
		YW4S-②-PS		3NO (30)	(1) (2) (3)	1NO 1NO 1NO	•		•		YW-CNP30
			3NC (03)	(1) (2) (3)	1NC 1NC 1NC		•			YW-CNP03	

 $[\]bullet$ Specify the Operator position code in place of $\ensuremath{\mathfrak{D}}_{\raisebox{-.4ex}{\textbf{.}}}$

For other contact units, see page 19.

Selector Switches (Knob Operator)

Part Number Development

Assembled and sub-assembled unit

Operator Unit

YW1S - 2 - PS

① Bezel shape ② Operator position code

1: Round (plastic) 2: 2-position, maintained


4: Round (metal) 21: 2-position, spring return from right

3: 3-position, maintained

31: 3-position, spring return from right 32: 3-position, spring return from left

33: 3-position, spring return two way

Assembled Part No. Example YW1S - 2P10

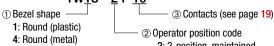

2: 2-position, maintained

21: 2-position, spring return from right

3: 3-position, maintained

31: 3-position, spring return from right

32: 3-position, spring return from left **33**: 3-position, spring return two way

Contact unit


YW - CNP 10 3 Contacts (see page 19)

2 Operator position code


Maintained (90° 2-position)	Spring Return (90° 2-position)	Maintained (45° 3-position)	S	pring Return (45° 3-position	n)
	Spring Return from Right		Spring Return from Right	Spring return from left	Spring return two-way
1 2	1 2	1 0 2	1 0 2	1 2	1 0 2

Dimensions All dimensions in mm.

Plastic bezel

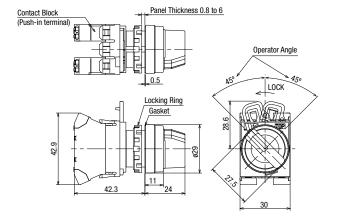


Metal bezel

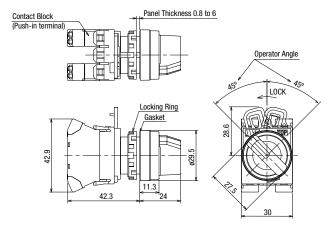

Key Selector Switches (Disc Tumbler Key)

Sub-Assembled

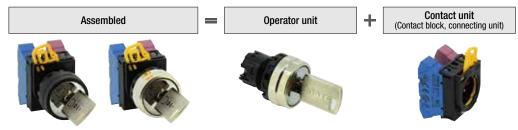

Plastic bezel Metal bezel

Package Quantity: 1

Name / Shape No. of Pert No. Position code Position			Operator Ui	nit			Contact	t Block	Oner	ator Po	sition	Conta	act Unit
No. of Part No. Position Posi	Name / Shane	No of			③Key removal		Mounting	Diooix	1		OILIOII		
Mo (10) 10 10 10 10 10 10 10	Namo / Onapo			position code		Configuration	Position	Contact	(B)			Shape	
No. of Part No. Position Part No. Position Part No. Position Part No. Part			(* * * 3 * *)					1NO					(* * * * * * * * * * * * * * * * * * *
No. of Part No. of Pastions Pastions Pastions Pastions Pastion roote Pastion roote Pastions						1NO (10)		_		<u> </u>		1	YW-CNP10
No. of Part No. of Pert No. Of Pert No. of Positions (Ordering No.) Position Right Position Right Position Right Position						1110 (10)		_				1	
No. of Position Po								_					
No. of Part No. Postions						1NC (01)		_				-	YW-CNP01
No. of Part No. Part No. Position Ordering No. Ordering								1NC	•			1	
Webster Webs										•		-	
A Removable in all positions A Removable in the left only C Removable in left only C Removable in the left only C			YW1K-(2)(3)-PS				(2)					1	YW-CNP11
No. 2pc Selector (Plastic bezel) Fig. Spring Return from Right Spring Return from Return						(11)	(3)	1NC	•				
A Removable in the right only The ri								1NC	•			1	
Canada C					A: Domovable in		(2)	1N0		•			YW-CNP12
Care	(Plastic Dezel)	=				(12)	(3)	1NC	•]	
Contact Unit Contact Unit Contact Block		sitic		2: Maintained				1N0		•			
Contact Unit Contact Unit Contact Block		우		21: Spring Return		2NO (20)	(2)	—					YW-CNP20
Contact Unit Contact Unit Contact Block	A CONTRACTOR OF THE PERSON OF)° 2			_		(3)	1N0		•		長屋 1	
Ward	V 26)6		_			(1)						
YW4K-23-PS	(Image: 2-nosition)				une right only	2NC (02)				•			YW-CNP02
VW4K-@3-PS VW4	(iiiiago. 2 position)									•			
VW4K-23-PS VW4						2NO-1NC							
No. of Part No. Position										•			YW-CNP21
No. of Positions VWIK-2 3-PS VWIK-2 3-			YW4K-23-PS			\			•			_	
Contact Unit						0110 (00)				_		_	MAL ON DOG
No. of Part No. Positions Operator Unit No. of Positions Operator Unit No. of Positions Operator Op						3NO (30)	(2)					-	YW-CNP30
Contact Block Operator Position Operator Unit Operator Unit Operator Unit Operator Position Ordering No.) Ordering No. O						2NC (02)				•			
No. of Positions Operator Unit Operator Unit Operator Unit Operator Unit Operator Ope													VW CNDO2
No. of Part No. Part No. Positions Part No. Position Position Position Position Position Part No.								IIIV	•				I I W-GNEGO
No. of Positions Part No. Position Part No. Position Part No. Position Part No. Position Part No. P						0140 (00)	(3)					1	
Positions (Ordering No.) position code position			Operator U	nit		0110 (00)	(3)	1NC	_	ator Po	sition	Conta	
YW1K-23-PS YW1K-23-PS YW1K-23-PS YW4K-23-PS YW4		No. of	·		③Kev removal	Contact	(3) Contact	1NC Block	Oper		2		act Unit
YW1K-23-PS YW1K-23-PS YW1K-23-PS YW4K-23-PS YW4			Part No.	@Operator		Contact	(3) Contact	1NC Block	Oper	0	2		act Unit Part No.
YW1K-23-PS YW1K-23-PS YW1K-23-PS YW4K-23-PS YW4			Part No.	@Operator		Contact	(3) Contact Mounting Position	1NC t Block Contact	Opera 1	0	2		act Unit Part No.
YW1K-23-PS YW1K-23-PS YW1K-23-PS YW1K-23-PS YW4K-23-PS YW4			Part No.	@Operator		Contact Configuration	(3) Contact Mounting Position (1)	1NC t Block Contact	Opera 1	0	2		Part No. (Ordering No.)
YW1K-23-PS YW1K-23-PS YW1K-23-PS YW1K-23-PS YW4K-23-PS YW4			Part No.	@Operator		Contact Configuration	(3) Contact Mounting Position (1) (2)	1NC t Block Contact 1NO	Opera 1	0	2		Part No. (Ordering No.)
YW1K-②③-PS YW1K-②③-PS YW1K-②③-PS YW1K-②③-PS YW4K-②③-PS YW4K-②④-PS YW4K-③-PS YW4K			Part No.	@Operator	position	Contact Configuration 2NO (20)	(3) Contact Mounting Position (1) (2) (3)	1NC t Block Contact 1NO	Opera 1	0	2		Part No. (Ordering No.)
Wath Selection (Metal bezel) Selection			Part No.	@Operator	position A: Removable in	Contact Configuration 2NO (20) 2NO	(3) Contact Mounting Position (1) (2) (3) (1) (2)	1NC t Block Contact 1NO 1NO 1NO	Opera	0	2		ct Unit Part No. (Ordering No.) YW-CNP20
Spring Return from Right 32: Spring return from left 33: Spring return two-way 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100			Part No.	@Operator	position A: Removable in all positions	Contact Configuration 2NO (20) 2NO	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3)	1NC t Block Contact 1NO 1NO 1NO 1NO	Opera	0	•		ct Unit Part No. (Ordering No.) YW-CNP20
Spring Return from Right 32: Spring return from left 33: Spring return from left 33: Spring return from left 33: Spring return two-way Spr	Key Selector		Part No. (Ordering No.)	@Operator	position A: Removable in all positions B: Removable in	Contact Configuration 2NO (20) 2NO (20N1)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (1)	1NC t Block Contact 1NO 1NO 1NO 1NO	Opera	0	•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1
Second S			Part No. (Ordering No.)	@Operator	A: Removable in all positions B: Removable in the left and	Contact Configuration 2NO (20) 2NO (20N1)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC t Block Contact 1NO 1NO 1NO 1NO 1NO	Opera	0	•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1
Center C			Part No. (Ordering No.)	©Operator position code	A: Removable in all positions B: Removable in the left and center	Contact Configuration 2NO (20) 2NO (20N1)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC t Block Contact 1NO 1NO 1NO 1NO 1NC 1NC	Opera	0	•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1
(Image: 3-position) YW4K-②③-PS Troil left Center only E: Removable in right and left G: Removable in left only H: Removable in right only TNO-2NC (12) (11) 1NC (2)		Positions	Part No. (Ordering No.)	©Operator position code 3: Maintained	A: Removable in all positions B: Removable in the left and center C: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1)	1NC t Block Contact 1NO 1NO 1NO 1NO 1NO 1NC 1NC	Opera		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1
(Image: 3-position) YW4K-②③-PS Troil left Center only E: Removable in right and left G: Removable in left only H: Removable in right only TNO-2NC (12) (11) 1NC (2)		Positions	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return	A: Removable in all positions B: Removable in the left and center C: Removable in the right and	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2)	1NC t Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NO	Opera		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1
Salar Spring return two-way Salar Sala		Positions	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC t Block Contact 1NO 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NO 1NO 1NO 1NO	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1
YW4K-②③-PS Solution Continue Continue		Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (1)	1NC t Block Contact 1NO 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NO 1NO 1NO 1NO	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1 YW-CNP02
YW4K-②③-PS G: Removable in left only H: Removable in right only NO-2NC (12) (12) (13) 1NO-2NC (2) (11) (2) 1NO ◆ (3) 1NC (3) 1NC (4) (12) (13) (14) (15) (15) (16) (17) (17) (17) (18) (18) (18) (19) (10) (10) (11) (11) (11) (11) (12) (13) (14) (15) (15) (16) (17) (17) (17) (18) (18) (18) (18) (19) (10) (10) (11) (11) (11) (11) (12) (13) (14) (15) (15) (16) (17) (17) (17) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) (18) ((Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1 NC t Block Contact 1 NO 1 NO 1 NO 1 NO 1 NC 1 NC 1 NO	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1 YW-CNP02
YW4K-②③-PS left only	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC Block Contact 1NO 1NO 1NO 1NO 1NC 1NO	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1 YW-CNP02
YW4K-②③-PS H: Removable in right only 3NO (30) (1) 1NO ● (2) 1NO ● (2) 1NO ● (3) 1NO (4) 1NO (4) 1NO (5) 1NO (5) 1NO (6) 1NO (6) 1NO (6) 1NO (7) 1NO	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (1) (2) (3) (1) (1) (2) (3) (1) (1)	1NC Block Contact 1NO 1NO 1NO 1NO 1NC	Oper.		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1 YW-CNP02 YW-CNP21
3NO (30) (2) 1NO ● YW-CNP30 YW-CNP30 3NC (03) (2) 1NC ■ YW-CNP30 YW-CNP03	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left G: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NC 1NO 1NC	Oper.		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1 YW-CNP02 YW-CNP21
3) 1NO •	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left G: Removable in left only	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NC 1NO 1NC	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20N1 YW-CNP02 YW-CNP21
3NC (03) (2) 1NC	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left G: Removable in left only H: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11) 1NO-2NC (12)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (1) (2) (3) (1) (1) (2) (3) (1) (1) (2) (3) (1) (1) (2) (3) (1) (1)	1NC Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NO 1NC 1NO 1NC	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20 YW-CNP21 YW-CNP11 YW-CNP12
3NC (03) (2) 1NC	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left G: Removable in left only H: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11) 1NO-2NC (12)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NC 1NO 1NC	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20 YW-CNP21 YW-CNP11 YW-CNP12
(3) 1NC	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left G: Removable in left only H: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11) 1NO-2NC (12)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC 1Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NC 1NO 1NC	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20 YW-CNP21 YW-CNP11 YW-CNP12
1 1 1 10/ 1 110 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	(Metal bezel)	Positions up:	Part No. (Ordering No.)	©Operator position code 3: Maintained 31: Spring Return from Right 32: Spring return from left 33: Spring return from left	A: Removable in all positions B: Removable in the left and center C: Removable in the right and center D: Removable in center only E: Removable in right and left G: Removable in left only H: Removable in	Contact Configuration 2NO (20) 2NO (20N1) 2NC (02) 2NO-1NC (21) 1NO-1NC (11) 1NO-2NC (12) 3NO (30)	(3) Contact Mounting Position (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3) (1) (2) (3)	1NC 1Block Contact 1NO 1NO 1NO 1NO 1NC 1NC 1NO 1NC	Oper 1		•		Part No. (Ordering No.) YW-CNP20 YW-CNP20 YW-CNP21 YW-CNP11 YW-CNP12 YW-CNP30

[•] Specify the Operator position code in place of ② and key removal position in place of ③ • Two keys are supplied.

[•] For other contact units, see page 19.

Key Selector Switches (Disc Tumbler Key)

Part Number Development

Assembled and sub-assembled unit


Operator Unit

YW1K - 2 A - PS ① Bezel shape 1: Round (plastic) 4: Round (metal)

- 2 Operator position code
 - 2: 2-position, maintained
 - 21: 2-position, spring return from right
 - 3: 3-position, maintained
 - 31: 3-position, spring return from right
 - 32: 3-position, spring return from left
 - 33: 3-position, spring return two way

- ③ Key removal position
 - 2-position
 - A: Removable in all positions
 - B: Removable in the left only
 - C: Removable in the right only
 - 3-position
 - A: Removable in all positions
 - B: Removable in the left and center
 - C: Removable in the right and center
 - D: Removable in center only
 - E: Removable in right and left
 - G: Removable in left only
 - H: Removable in right only

Contact unit

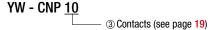


2 Operator position code

Maintained (90° 2-position)	Spring Return (90° 2-position)	Maintained (45° 3-position)
	Spring Return from Right	
1 2	1 -2	1 0 2

Spring Return (45° 3-position)						
Spring Return from Right Spring return from left Spring return two-way						
1 0 2	1 2	1 0 2				

Assembled Part No. Example

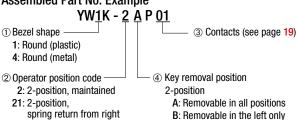

- spring return from right
- 3: 3-position, maintained
- 31: 3-position,
- spring return from right
- 32: 3-position, spring return from left
- 33: 3-position,
- spring return two way
- 3-position A: Removable in all positions

C: Removable in the right only

- B: Removable in the left and center
- C: Removable in the right and center
- D: Removable in center only
- E: Removable in right and left
- G: Removable in left only
- H: Removable in right only

4 Key removal position

90° 2-position

Key Retained Position (Cam code: blank)					
A: Key removable in all positions	B: Key removable at left	C: Key removable at right			


45° 3-position

	Key Retained Position							
A: Key removable	B: Key removable	C: Key removable	D: Key removable					
in all positions	at left / center	at center / right	at center					
0 0 2	0 0 2	0 0 2	0 0 0					
E: Key removable	G: Key removable	H: Key removable						
at right / left	at left	at right						
0 0 2	0 0	0 0 2						


①①②: Key removal position **00** : Key retained position Note: The key cannot be removed in a spring return position.

All dimensions in mm. **Dimensions**

Plastic bezel

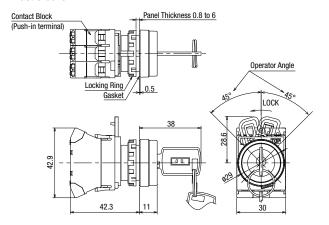

Metal bezel

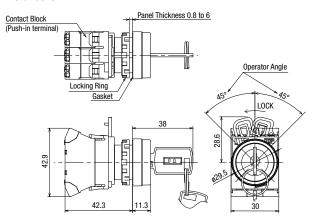

Emergency Stop Switches

Sub-Assembled



<Assembled> Ordering No.

Package Quantity: 1

	Operator Unit		Contact Unit			
Name / Shape	Operation type	Part No. (Ordering No.)	Shape	Contact Configuration	Part No. (Ordering No.)	
ø40mm Mushroom				1NC	YW-CNP01	
Pushlock Turn Reset			2NC	YW-CNP02		
	Pushlock Turn Reset	YW1B-V4R-PS		3NC	YW-CNP03	
				1NO-1NC	YW-CNP11	
				1NO-2NC	YW-CNP12	
				2NO-1NC	YW-CNP21	

- Pushlock turn reset Button is maintained when pressed and is reset when turned clockwise.
- See page 19 for contact configuration of contact units.

Part Number Development

Assembled and sub-assembled unit

Operator Unit

Contact unit



Assembled Part No. Example YW1B - V 4 P 11 R

① Operation type - Button Color Code V: Pushlock Turn Reset **3 Contact Configuration Code**


01: 1NC ② Button style 4: ø40mm Mushroom 02: 2NC

03: 3NC 11: 1NO-1NC 12: 1NO-2NC 21: 2NO-1NC

• For emergency stop purposes, these switches must contain at least one NC contact block.

Dimensions

All dimensions in mm.

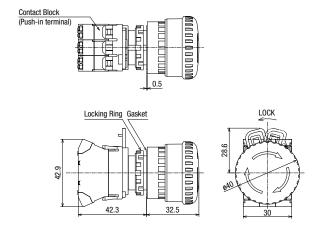

ø22 HW Series Push-in Short Body Pilot Lights

Assembled




Package Quantity: 1

Name / Shape	Rated operating voltage	Part No. (Ordering No.)	Color code ① for lens		
Extended (Dome)	6V AC/DC HW1P-2JPQ2①				
I NW I P	12V AC/DC	HW1P-2JPQ3①	R (red) G (green)		
	24V AC/DC	HW1P-2JPQ4①	Y (yellow) A (Amber)		
	100/120V AC/DC	HW1P-2JPRH①	S (blue) ' PW (Pure white)		
	200/240V AC/DC	HW1P-2JPCM①	(. 6.0)		
Square Flush HW2P	6V AC/DC	HW2P-1JPQ2①			
nwzp	12V AC/DC	HW2P-1JPQ3①	R (red) G (green)		
	24V AC/DC	HW2P-1JPQ4①	Y (yellow) A (Amber)		
	100/120V AC/DC	HW2P-1JPRH①	S (blue) PW (Pure white)		
	200/240V AC/DC	HW2P-1JPCM①	, , , , , , , , , , , , , , , , , , , ,		


- Built-in BA9S base LED lamp. For LED Lamps, refer to "ø22 HW Series Push-in Switches & Pilot Lights".
- For square flush pilot lights, legends and symbols can be engraved on marking plates, or printed film can be inserted.
 For details on marking plates or film, refer to "ø22 HW Series Push-in Switches & Pilot Lights".
 Engraving and films must be prepared by the customer.
- \bullet Specify a lens color code in place of $\ensuremath{\mathfrak{D}}$ in the Part No.

Dimensions All dimensions in mm.


Extended (Dome) 6V, 12V, 24V AC/DC

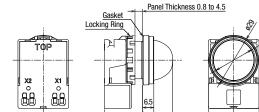


100/110V AC/DC, 200/220V AC

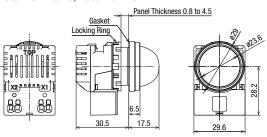

Square Flush 6V, 12V, 24V AC/DC

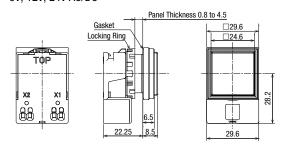

100/110V AC/DC, 200/220V AC

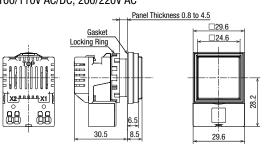

Nameplates

When ordering, specify the Ordering No.

	Description Legend	Material	Part No.	Ordering No.	Package Quantity	Dimensions (mm)								
IDA/ANA	Order marking plate	Diaglia (klasi)	LUMANA	HWAM	1	HWNP-□ marking plate (sold separately) is necessary. Continue Continue								
HWAM	(round) separately.	Plastic (black)	HWAM	HWAMPN10	10	R14.9 14.9 1.5 1.5 1								
						HWNP-□ marking plate (sold separately) is necessary.								
HWAQ	Order marking plate	Plastic (black)	HWAQ	HWAQ	1	(Marking Plate) 27 (Marking Plate) 2.7								
	(square) separately.	Tractic (black)	HWAQ				-	-	-	-		HWAQPN10	10	R14.9 14.9 1.9 1.9 1.1
HWAS	Blank	Plactic (black)	HWAS-0	HWAS-0	1	1.6, 0.9								
IIWAS	HWAS Blank Plastic	Plastic (black) HWAS-0		HWAS-0PN10	10	022								

Marking Plates for HWAM/HWAQ

When ordering, specify the Ordering No.

	Description	Material	Part No.	Ordering No.	Package Quantity	Dimensions (mm)	
	HWNP	Aluminum (black)	HWNP-□	HWNP-□	1	White legend on black background.	← 27
ı	ПИИГ	Thickness = 1.0mm	HWINF-L	HWNP-□PN10	10	Engraving area: W25×H7	12

 $[\]bullet$ Specify a legend code in place of \square in the Ordering No.

Legends

Code	Legend
0	(blank)
1	ON
2	0FF
3	START
4	STOP STOP
31	OFF-ON
35	HAND-AUTO
53	HAND-OFF-AUTO

[•] See page 24 for how to install nameplates/marking plates, and how to remove marking plates.

Contact Unit

Contact Unit Part No. / Contact Table

Package Quantity: 1

Contact Port No. Mounting						Applicable (Package Quantity: 1	
Shape	Configuration	Part No. (Ordering No.)	Mounting Position	Contact	D b		Key Selector Switches	Emergency Stop
	(Code)		FUSILIUII		Pushbuttons	90° 2-position	45° 3-position	Switches
			(1)	1NO				
	1NO (10)	YW-CNP10	(2)	_	0	0	_	_
			(3)	_				
			(1)					
	1NC (01)	YW-CNP01	(2)		0	0	_	0
			(3)	1NC				
			(1)	1NO				
	1NO-1NC (11)	YW-CNP11	(2)		0	0	0	0
			(3)	1NC				
	1NO-1NC		(1)	1NC				
	(11N1)	YW-CNP11N1	(2)		_	_	0	_
	, ,		(3)	1NO				
	1NO-1NC		(1)	1NO				
	(11N2)	YW-CNP11N2	(2)	1NC	_	_	0	_
	, ,		(3)					
	1NO-1NC		(1)					
	(11N3)	YW-CNP11N3	(2)	1NC	_	_	0	_
	,		(3)	1NO				
	1NO-1NC		(1)	_				
	(11N4)	YW-CNP11N4	(2)	1NO	_	_	0	
	, ,		(3)	1NC				
			(1)	1NO				
(3)	2NO (20)	YW-CNP20	(2)		0	0	0	_
(1) (3)			(3)	1NO				
			(1)	_	_		0	_
政法	2NO (20N1)	YW-CNP20N1	(2)	1NO		_		
			(3)	1NO				
			(1)	1NC		0	0	0
	2NC (02)	YW-CNP02	(2)		0			
			(3)	1NC				
			(1)			_	0	
	2NC (02N1)	YW-CNP02N1	(2)	1NC	_			_
			(3)	1NC				
		\all \all \all \all \all \all \all \all	(1)	1NO	_		_	_
	2NO-1NC (21)	YW-CNP21	(2)	1NO	0	0	0	0
			(3)	1NC				
	2N01NC	MM ONDOANS	(1)	1NO				
	(21N1)	YW-CNP21N1	(2)	1NC	_	_	0	_
			(3)	1NO				
	110 010 (10)	MW OND40	(1)	1NC	-			6
	1NO-2NC (12)	YW-CNP12	(2)	1NO	0	0	0	0
			(3)	1NC				
	1NO-2NC	VW OND ON	(1)	1NC				
	(12N1)	YW-CNP12N1	(2)	1NO	_	_	0	_
			(3)	1NC				
	3NO (30)	VIAL CNDOO	(1)	1NO	_			
	3NO (30)	YW-CNP30	(2)	1NO	0	0	0	_
			(3)	1NO				
	3NC (03)	VW CNDO2	(1)	1NC	0			_
	3NC (03)	YW-CNP03	(2)	1NC	0	0	0	0
		<u> </u>	(3)	1NC				

[•] Contact unit includes a contact block and connecting unit.

SEMI S2 Compliant EMO Switch Guard

Package Quantity: 1

Shape	Part No. (Ordering No.)	Remarks	Dimensions (mm)
	HW9Z-KG1	SEMI S2-0703, 12.5.1 compliant. Widely used switch guard in many applications.	38 (0.2) 48 22 22 Gasket (2.0)
	HW9Z-KG2	 SEMI S2-0703, 12.5.1 compliant. SEMATECH Application Guide for SEMI S2-93, 12.4. compliant. The round shape is effective to prevent inadvertent operation from any direction. 	36.5 (0.2) 36.5 (0.2) Gasket (2.2)
	HW9Z-KG3	SEMI S2 compliant (The combination of IDEC's emergency stop switches and EMO switch guards are approved by TÜV Rheinland for compliance with SEMI S2 standard.) ISO 13850 compliant. The smallest switch guard for ø22 series switches.	35 (0.4) 35 (0.4) 63 (0.4) 63 (0.4)
	HW9Z-KG4Y	SEMI S2 compliant (The combination of IDEC's emergency stop switches and EMO switch guards are approved by TÜV Rheinland for compliance with SEMI S2 standard.) SEMATECH Application Guide for SEMI S2-93, 12.4. compliant. ISO 13850 compliant. Narrower than HW9Z-KG5. Saves more space.	35 (0.4) Gasket (2.2)
	HW9Z-KG5Y	SEMI S2 compliant (The combination of IDEC's emergency stop switches and EMO switch guards are approved by TÜV Rheinland for compliance with SEMI S2 standard.) SEMATECH Application Guide for SEMI S2-93, 12.4. compliant. ISO 13850 compliant. A nameplate can be installed.	75 63 36.2 (0.2) 19/889 060 (2.0)

[•] Material: polyamide (PA6), degree of protection: IP65 (IEC 60529)

Nameplate (for ø22 mm Emergency Stop Switches)

Package Quantity: 1

Chana	Lagand	Port No. (Ordering No.)	Domarko
Shape	Legend	Part No. (Ordering No.)	Remarks
	(blank)	HWAV-0-Y	HWAV-27-Y Nameplate color: yellow Legend color: black Panel thickness: 0.8 to 4.5 mm Material: polyamide
	EMERGENCY STOP	HWAV-27-Y	Note) Cannot be used on ø60 mushroom pushlock turn reset switches. Use a nameplate exclusive for ø60 mushroom e-stop. See XW series catalog.

^{• &}quot;EMERGENCY OFF" and white (blank) nameplates available. See website or catalog for SEMI Emergency off (EMO) switches and Stop switches.

Note) For machinery subject to ISO/IEC standards such as machine tools and food machinery, in compliant with the revised ISO13850, it is not recommended to display texts or symbols such as EMERGENCY STOP on the actuator or nameplate of an emergency stop device.

Accessories All dimensions in mm

When ordering, specify the Ordering No.

Name / Shape	Specification	Part No.	Ordering No.	Package Quantity	when ordering, specify the Ordering No. Remarks
Contact Block	NO contact Housing color: blue	HW-P10	HW-P10	5	
Contact Block	NC contact Housing color: reddish purple	HW-P01	HW-P01	5	
Connecting unit	Connecting unit for Push-in terminal	YW-CN	YW-CN	1	
Locking Ring Wrench	Metal (nickel-plated brass) Weight: approx. 150g	MW9Z-T1	MW9Z-T1	1	Used to tighten the locking ring when installing the HW switch onto a panel. 110 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100
Anti-rotation Ring	Ring: polyamide Gasket: nitril rubber	HW9Z-RL	HW9Z-RLPN10	10	Used to prevent the operator from turning. Generally used when using no nameplates on selector switches and pushbutton selectors. TOP 1.5 TOP 2.2 1.5 TOP 2.2 1.5 TOP 3.2 1.5 TOP 4.2
Rubber Mounting Hole Plug	Nitril rubber (black)	0B-31	OB-31PN05	5	Degree of protection: IP65 (round hole), IP40 (with anti-rotation function) Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of protection: Order of
Mounting Hole Plug	Plug: Metal (Zinc diecast) Locking nut: Polyamide Gasket: Nitrile rubber	LW9Z-BM	LW9Z-BM	1	Degree of protection: IP66 (round hole), IP40 (with anti-rotation function) Tightening torque: 1.2 N·m Gasket Locking Ring M22 P: 1 Panel Thickness 0.8 to 6
Padlock Cover	Polyarylate Gasket: Nitrile rubber	HW9Z-KL1	HW9Z-KL1	1	Used to protect pushbuttons, selector switches, and key selector switches. 82.5 Panel Thickness 0.8 to 3.2 Waterproof Rubber Gasket 0.5t 30

Maintenance Parts All dimensions in mm

When ordering, specify the Ordering No.

Name / Shape		Part No.	Ordering No.	Package Quantity		Remarks	
Button	Round extended	YW9Z-B12①	YW9Z-B12①PN10	10	* (Color Code) B (black) G (green) R (red) Y (yellow) S (blue) W (white)		9.3
	ø40 mushroom	YW9Z-B14①	YW9Z-B14①PN10	10	* (Color Code) B (black) G (green) R (red) Y (yellow) S (blue) W (white)		65. 10.8
Spare Key	Metal	YW9Z-SK00	YW9Z-SK00PN02	2			


Safety Precautions

- Turn off the power to the CW series switches & pilot lights before starting installation, removal, wiring, maintenance, and inspection of the products. Failure to turn power off may cause electrical shocks or fire hazard.
- For wiring, use wires of a proper size to meet the voltage and current requirements. and the number of connectable wires (page 26). Failure to tighten the terminal screws may cause overheating and fire.
- · Avoid using in places mentioned below to maintain performance of the product.
- -Exposed to direct sunlight
- -Subject to corrosive or flammable gases

Instructions

Panel Mounting


- 1. Remove the contact block from the operator.
- 2. Remove the locking ring from the operator
- 3. Insert the operator into the panel cut-out from the front. When mounting the nameplate, insert between the operator and panel.
- 4. Tighten the locking ring from the back.

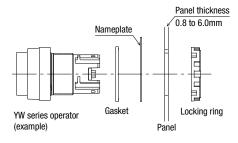

Mounting panel thickness is reduced by 1.5 mm when using a nameplate.

Removing the Contact Block


1. Remove the operator from the contact block by pushing and turning the locking lever in the direction of the arrow shown below. Then the operator can be pulled out.

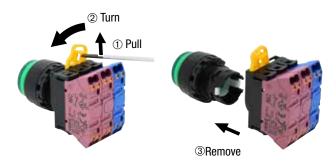

2. To reinstall, place the TOP marking on the operator and the lock lever in the same direction, and insert the operator into the contact block mounting adapter. Then turn the locking lever in the opposite direction.

Anti-rotation Ring and Mounting Panel

Turn the TOP marking on the operator and the \triangle mark on the antirotation ring to the recess on the mounting panel.

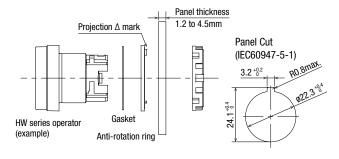

Notes for Panel Mounting

Locking ring wrench recommended torque Tighten the bezel to a tightening torque of 2.0 N·m.


Locking ring wrench (MW9Z-T1) can be used to tighten the bezel. Do not use pliers. Excessive tightening will damage the locking ring.



Locking ring wrench (MW9Z-T1)

Panel Thickness

HW series can be mounted on a panel with thickness of 0.8 to 6.0 mm. Take the thickness of nameplate and/or switch guard into consideration.

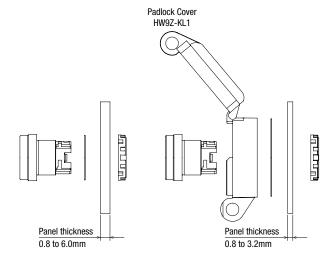

Instructions

Installing/Removing the Buttons

<To install>

<To remove>

Pushbutton Button

• Extended/Mushroom

Button has threads. Turn clockwise to install the button.




Turn the button counterclockwise to remove.



Note) Flush button is not removable.

Removing the Contact Block Removing

To remove the contact block, insert into the flat blade screwdriver latch and move in the direction of the arrow.

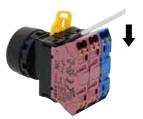


Installing

When installing the contact block, make sure that it snaps on to the operator.

- Note 1) Make sure to attach a correctly assembled connection unit to the operator.
- Note 2) When attaching the contact block to the connection unit, make sure that the connection is detached from the operator.

 If a contact block is installed with the operator attached to the connection unit, malfunction of the switch may occur.

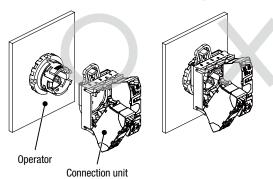

Nameplate

Mounting panel thickness is reduced by 1.5 mm when using a nameplate.


Installing a Marking Plate

Insert a marking plate tin the direction of the arrow 1, and press in as shown 2.



Removing a Marking Plate

Insert a flat screwdriver into the upper middle part of the marking plate and remove. When anti-rotation is not required, remove the projection from the nameplate using pliers.

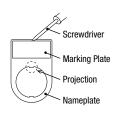

Selector Switches

Turn the operator such as knob, lever, and key to each position accurately. Releasing halfway may cause the operator to return to the former position, or to get stuck between. On spring return two-way types, the center of operators may be misaligned slightly.

Key Selector Switches

Insert the key completely before turning. Failure to do so may cause failures.

Applicable Wire

When wiring, use the applicable wires shown below.

Applicable Wire and Specifications

Applicable Wire	0.25 to 1.5mm ² (AWG16 to 24)
Wire Strip Length (*1)	8 ± 1mm
Ferrule Size (*2) (Weidmüller)	H0.25 to H1.5 (without insulated cover)
	H0.25 to H1.5 (with insulated cover)

- *1) Strip the sheath of the wire 8±1mm from the end.
- *2) For details on ferrules, see "Wire Size and Recommended Ferrules" table below.

Note: Make sure that the stranded wires do not loosen when using wiring without ferrules.

Wire Size and Recommended Ferrules

Ferrules without insulated covers (Weidmüller product)

Applicable Wire (Stranded Wire)		Wire Strip Length	Part No.	Ordering No.	
AWG	mm ²	Lengui			
24	0.25	5 to 6mm	H0.25/5	9018910000	
20	0.50	10 to 11mm	H0.5/10	9004050000	
18	0.75	10 to 11mm	H0.75/10	0542500000	
18	1.00	10 to 11mm	H1.0/10	0282800000	
16	1.50	10 to 11mm	H1.5/10	0186500000	


Ferrules with insulated covers (Weidmüller product)

Applicable Wire (Stranded Wire)		Wire Strip Length	Part No.	Ordering No.	
AWG	mm ²	Lengui			
24	0.25	10 to 11mm	H0.25/12 HBL	9025760000	
22	0.34	10 to 11mm	H0.34/12 TK	9025770000	
20	0.50	10 to 11mm	H0.5/14 OR	0690700000	
18	0.75	10 to 11mm	H0.75/14 W	0462900000	
18	1.00	10 to 11mm	H1.0/14 GE	0463000000	
16	1.50	10 to 11mm	H1.5/14 R	0463100000	

Recommended Tools (Weidmüller product)

Name	Part No.	Ordering No.
Crimping tool	PZ 6 Roto L	1444050000
Flat blade screwdriver	SDS 0.4×2.0×60	9037160000
rial biade sciewdilvei	SDS 0.4×2.5×75	9009030000

- Note 1) Note the crimping dimensions When using tools other than the recommended crimping tool. For details, see page 25.
- Note 2) Use a flat blade screwdriver with a blade size of 0.4×2.0 mm.

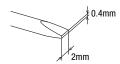


Instructions

Wiring Procedure


Connecting the wire

- 1) Stranded wires with ferrules or solid wire
- 1. Insert the wire to the back of the wire port.
- After wiring, tug lightly to make sure that the wire is properly connected.

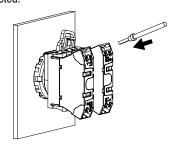


2) Stranded wire

- While pressing the pusher (orange button) using a flat blade screwdriver (recommended: SDS 0.4×2.0×60 (optional). Insert the wire fully in the wiring port. Wire is connected when the pusher is released.
- After wiring, tug lightly to make sure that the wire is properly connected.

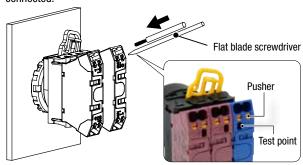

Crimping of Ferrules and Wiring


- Choose an appropriate ferrule for the wire.
- Cut the wire carefully to get a flat end.
- Make sure that ferrule sleeve is completely filled by the conductor.
 Depending on the cross section, the conductor should protrude approx. 0 to 1 mm from the ferrule sleeve.

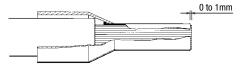

• When crimping, refer to the instructions of the crimping tool.

Faults which can occur during crimping:

- Cracks along the sides and die impressions
- · Splitting of the ferrules
- Asymmetrical crimping shape
- Extreme burrs formed along the sides
- Ferrule not filled by conductor
- Single conductors pushed back by protruding from the insulated cover
- · Single conductors squeezed off
- · Insulation cover damaged by the crimping jaw
- · Conductor insulation not pushed into the insulated cover
- Ferrule bent longitudinally after crimping

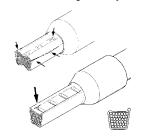


Formation of cracks at the sides. Sides spilt open

Formation of cracks at the impressions of the crimping jaw

Asymmetrical crimping shape. Burr formation on one side



Asymmetrical crimping shape. Burr formation on one side

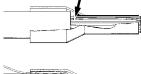


Single conductor squeezed off



Single conductor pushed back

Crimping dimensions: W2.4×H1.9 mm

Maximum connectable crimping size is W2.4×H1.9. Make sure that the ferrule size will be smaller than this dimension. (Recommended crimping tool: PZ 6 Roto (optional) Weidmüller

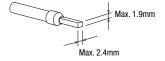


Note 1) If a tool other than the recommended crimping tool is used, the ferrule may not be crimped to the appropriate size and the clamp or spring inside the contact block may be deformed and may not operate normally.

Note 2) Pin crimp terminals cannot be used.

Instructions

Removing the Wire

When removing the wire, push the pusher using a flat blade screwdriver (recommended: SDS $0.4\times2.0\times60$) and pull wire out in the direction of the arrow.

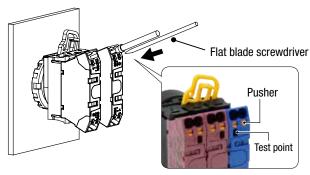

<Notes>

- Operate the pusher with a force of 20N. Do not press excessively.
 Otherwise, the switch may be damaged.
- Do not pull the wire out without depressing the pusher. When pulling the wire, be sure to pull in a straight direction. Otherwise, the socket may be damaged.


Number of Connectable Wires

Unit	Connectable wires		No. of connectable wires	
	Solid wire	0.25 to 1.5mm ² (AWG16 to 24)		
1	Stranded wire	0.25 to 1.5mm ² (AWG16 to 24)		
	Ferrule	Without insulated cover 0.25mm²: conductor length 5 to 10mm 0.5 to 1.0mm²: conductor length 6 to 10mm 1.5mm²: conductor length 8 to 10mm With insulated cover 0.25 to 1.0mm²: conductor length 6 to 10mm 1.5mm²: conductor length 8 to 10mm Note) Pin terminals cannot be used	2	

Note) Only one wire can be inserted into one wire port.

Test Point

- Note 1) Do not insert wires into the test point.
- Note 2) When conducting a continuity test on the contact block, make sure that the probes (ø2.0 maximum) of the tester are inserted vertically to the panel.

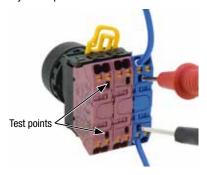

Emergency Stop Switches Instructions

When using the YW emergency stop switches in safety-related part of a control system, observe safety standards and regulations of the relevant country or region. Also be sure to perform a risk assessment before operation.


Chattering / Contact Bounce

When the button is reset by pulling or turning, the NC main contacts will bounce. When pressing the button, the NO monitor contacts will bounce. When designing a control circuit, take the contact bounce time into consideration (reference value: 20 ms).

Also, do not apply shock to the switch as chattering may occur.

Nameplate or Switch Guard

When anti-rotation is not required, remove the projection from the nameplate or switch guard using pliers.

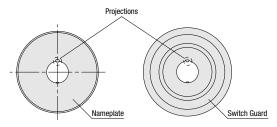

Handling

Do not expose the switch to excessive shocks and vibrations, otherwise the switch may be deformed or damaged, causing malfunction or operation failure.



ø22 HW Series Push-in Short Body Pilot Lights Instructions

Installing the Pilot Light

Detach the operator unit from the LED unit. After mounting the operator from the front of the panel, attach the LED unit.

Installing / Removing the LED Unit

 Detach the LED unit by lifting the latch using a small flat blade screwdriver width 0.5mm max.)



2. To install, align the TOP marking on the operator with the TOP marking on the LED unit.



Replacing LED lamps

Lamps can be replaced using the lamp holder tool (OR-55) from the front of the panel, or by removing the contact block from the operator unit.

Removing the LED lamp from the front of the panel

Removing

To remove, slip the lamp holder tool onto the lamp head lightly. Then push slightly, and turn the lamp holder tool counterclockwise.



Installing

1. Insert the lamp head into the lamp holder tool.



Place the pins on the lamp base to the grooves in the lamp socket. Insert the lamp and turn it clockwise.

Notes for LED Units

Make sure not to apply load the the light guide part.

Installing / Removing the Lenses

<To install>

<To remove>

Pilot Light Lens

Extended/Mushroom

Lens has threads. Turn clockwise to install the lens.



Turn the lens counterclockwise to remove.



Round Flush/Square Flush

Push in the lens holder into the operator unit.



Insert a flat screwdriver between the lens and the bezel to remove.



Installing/Removing the Lenses and Marking Plates

Removing

Removing the lens unit

Insert a flat screwdriver in groove of the lens (TOP mark side of the operator or opposite side) to remove the lens unit (lens/marking plate/lens holder).



Removing the lens

Remove the lens by pushing the lens from the rear to disengage the latches between the lens and the lens holder, using a flat screwdriver as shown below.




Note) The filter inside the lens holder it water and oil-proof and cannot be removed.

Installing

- Place the marking plate on the lens holder with the anti-rotation projection engaged and press the lens onto the lens holder to engage the latches.
- 2. Place the marking plate in the correct orientation.

For Square Lens (square flush lens) *Note the orientation of the parts.

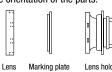

IDEC CORPORATION

Head Office

6-64, Nishi-Miyahara-2-Chome, Yodogawa-ku, Osaka 532-0004, Japan

USA IDEC Corporation Germany APEM GmbH Singapore IDEC Izumi Asia Pte. Ltd. Thailand IDEC Asia (Thailand) Co., Ltd Australia IDEC Australia Pty. Ltd. India

Tel: +1-408-747-0550 opencontact@idec.com Tel: +49-40-25 30 54-0 service@eu.idec.com Tel: +65-6746-1155 info@sg.idec.com Tel: +66-2-392-9765 sales@th.idec.com Tel: +61-3-8523-5900 sales@au.idec.com IDEC Controls India Private Limited Tel: +91-80679-35328 info_india@idec.com

Taiwan **Hong Kong** China/Shanghai China/Shenzhen China/Beijing Japan

IDEC Taiwan Corporation IDEC Izumi (H.K.) Co., Ltd. IDEC (Shanghai) Corporation IDEC (Shenzhen) Corporation IDEC (Beijing) Corporation Tel: +86-10-6581-6131 idec@cn.idec.com **IDEC Corporation**

Tel: +852-2803-8989 Tel: +86-21-6135-1515 Tel: +81-6-6398-2527

Tel: +886-2-2577-6938 service@tw idec.com info@hk.idec.com idec@cn.idec.com Tel: +86-755-8356-2977 idec@cn.idec.com marketing@idec.co.jp



 ☐ www.idec.com