

INTRODUCTION

The Infresco-T 4kW is part of a family of controllers designed to provide energy saving when used with Quartz Infrared Halogen Lamps or other Heating and Lighting Products. The 'T' model switches the lamps on for a pre-determined time period of between 1 and 30 minutes.

The microcontroller-based unit incorporates zero-voltage switching and a soft-start function to eliminate the lamps' initial high inrush current – potentially increasing lamp life by as much as 30% and reducing the stress on the mains supply. Typical use is for Infra Red Heating lamps, Garden lighting

Installation is simple and once installed is relatively maintenance free.

Typical applications are Pub Patio areas, Smoking Shelters, Restaurants, Warehouses, Work shops.

APPLICATIONS

Any application where high inrush current is an issue or control is required. Typical use is for Infra Red Heating lamps, Garden lighting

FEATURES

Soft Start – up to 30% extended life of Lamp

Simple Installation – Ability to plug directly in 13A Plug up to 3kW

Energy Saving – Automated system. (Only heats when required)

Temperature Monitoring – If it's too warm the Infresco stays off

SAFETY FIRST

Please read these instructions before installing and operating this product.

Installation

The Infresco-T 4kW unit should be positioned with the cable glands facing down and securely fixed via the four mounting holes accessible from the front of the unit or by the alternative rear mounting holes underneath the PCB. For the latter option, remove the four screws securing the PCB and carefully remove the PCB to allow access to the rear mounting holes. Cover any holes used with caps supplied with the unit.

Wiring

Warning! Ensure the mains supply has been isolated before wiring this unit.

The unit is fitted with two cable glands. Only one cable should be fitted per gland to maintain the unit's IP rating. One additional cable glands can be fitted to allow the connection of up to two lamps. See Wiring diagram for alternative wiring configuration using junction box.


The mains supply connects to the terminal block marked 'LINE'. Connect the supply LIVE to the 'L' terminal, NEUTRAL to the 'N' terminal and EARTH to the 'E' terminal.

The lamps connect to the terminal block marked 'LOAD'. Connect the load LIVE to the 'L' terminal, NEUTRAL to the 'N' terminal and EARTH to the 'E' terminal. The load connections are paired to allow the connection of several lamps.


Important: Ensure all earth wires are connected to maintain earth continuity to the lamp fittings.

Check all wiring - particularly the line and load connections and make sure the cable glands are tightened.

DIMENSIONS

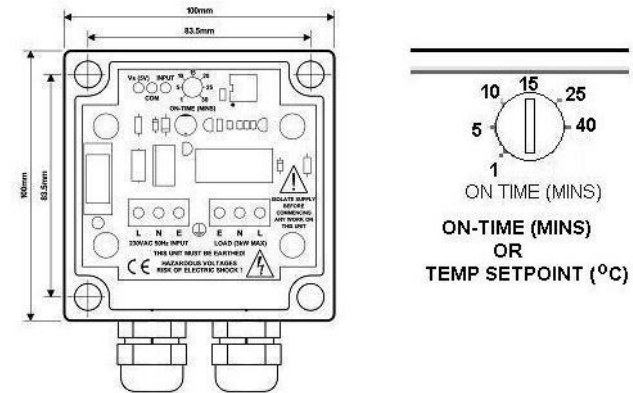

WIRING DIAGRAM

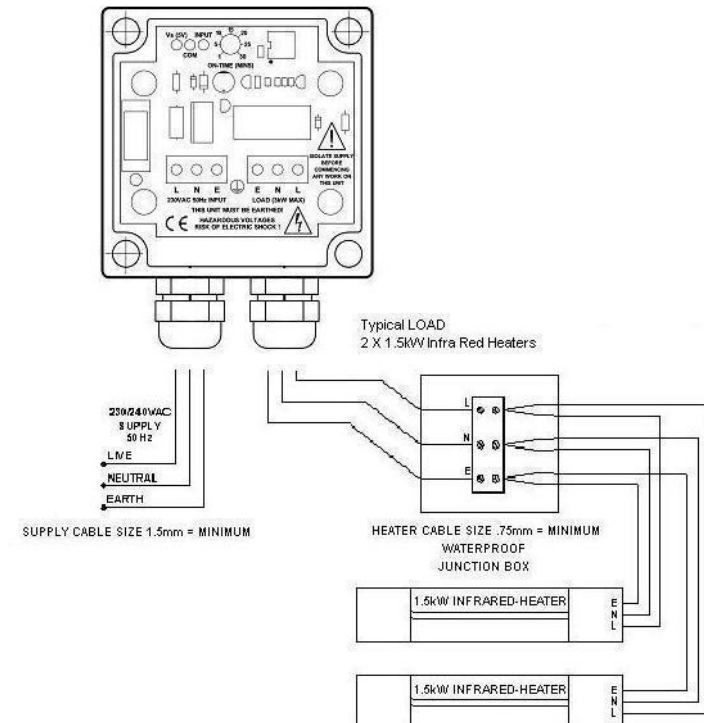

Technical Specification

Mains Voltage	230Vac +/- 10% 50 Hz
Operation Current	Max 16.6A
Power Consumption	50mA
Set Time Period	1 to 30 Minutes
Temperature trip point	20°C
Max load at 20°C ambient	4 kW
Max Unit Operating Temperature	65°C
IP Rating	65
Gland Diameter (Fitted)	Max Cable Entry 2.5mm ²
2 Lamp Installation	Must be fitted in Parallel

WARNING: THIS UNIT MUST BE EARTHED

Troubleshooting

Problem: Lamps do not switch on.

Solution:

- 1) Check the LINE and LOAD wiring connections to the unit and ensure the mains supply is switched on. Go to 2) if fault still exists.
- 2) Check the lamps/Lamp fittings. If possible, fit a known working lamp. Go to 3) if fault still exists.
- 3) Isolate the mains supply then check, and replace if necessary, the PCB-mounted fuse (F1). If the fault still exists, contact your supplier.

Problem: Lamps do not switch off.

Solution:

- 1) Check the on-time setting is set correctly. Any adjustment will only take effect the next time the lamp is activated. Go to 2) if fault still exists.

It is recommended that installation and maintenance of this equipment should be done with reference to the current edition of the I.E.E. wiring regulations (BS7671) by suitably qualified/trained personnel.

These regulations contain important requirements regarding safety of electrical equipment (for International Standards refer to I.E.C. directive IEC050)

UNITED AUTOMATION LIMITED

1 Southport Business Park
Kew
Southport, PR8 4HQ
ENGLAND

Tel: 0044 (0) 1704 – 516500 Main
Tel: 0044 (0) 1704 - 516516 Sales
Fax: 0044 (0) 1704 – 516501
Enquiry@united-automation.com

INFRESCO-T™

Users & Installation Manual for Infresco T 4Kw



RoHS Compliant
Directive
2002/95/EC

X10697 Issue 1 10/08/07

