

# GE863 Family Hardware User Guide

1v0300783 Rev.2 - 25/03/09





## Disclaimer

The information contained in this document is the proprietary information of Telit Communications S.p.A. and its affiliates ("TELIT").

The contents are confidential and any disclosure to persons other than the officers, employees, agents or subcontractors of the owner or licensee of this document, without the prior written consent of Telit, is strictly prohibited.

Telit makes every effort to ensure the quality of the information it makes available. Notwithstanding the foregoing, Telit does not make any warranty as to the information contained herein, and does not accept any liability for any injury, loss or damage of any kind incurred by use of or reliance upon the information.

Telit disclaims any and all responsibility for the application of the devices characterized in this document, and notes that the application of the device must comply with the safety standards of the applicable country, and where applicable, with the relevant wiring rules.

Telit reserves the right to make modifications, additions and deletions to this document due to typographical errors, inaccurate information, or improvements to programs and/or equipment at any time and without notice.

Such changes will, nevertheless be incorporated into new editions of this document.

Copyright: Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights are reserved.

Copyright © Telit Communications SpA 2009.©





7.1.	INPUT LINES (MICROPHONE) .....	51
7.1.1.	Short Description .....	51
7.1.2.	Input Lines Characteristics .....	51
7.2.	OUTPUT LINES (SPEAKER) .....	52
7.2.1.	Short Description .....	52
7.2.2.	Output Lines Characteristics.....	53
<b>8.</b>	<b>GENERAL PURPOSE I/O .....</b>	<b>54</b>
8.1.	GPIO LOGIC LEVELS .....	56
8.2.	USING A GPIO PAD AS INPUT .....	56
8.3.	USING A GPIO PAD AS OUTPUT.....	57
8.4.	USING THE RF TRANSMISSION CONTROL GPIO4.....	57
8.5.	USING THE RFTXMON OUTPUT GPIO5 .....	57
8.6.	USING THE ALARM OUTPUT GPIO6.....	57
8.7.	USING THE BUZZER OUTPUT GPIO7.....	58
8.8.	MAGNETIC BUZZER CONCEPTS .....	59
8.8.1.	Short Description .....	59
8.8.2.	Frequency Behavior .....	59
8.8.3.	Power Supply Influence.....	60
8.8.4.	Working Current Influence.....	60
8.9.	USING THE TEMPERATURE MONITOR FUNCTION .....	61
8.9.1.	Short Description .....	61
8.9.2.	Allowed GPIO .....	61
8.10.	INDICATION OF NETWORK SERVICE AVAILABILITY .....	62
<b>9.</b>	<b>RTC AND AUXILIARY SUPPLY .....</b>	<b>63</b>
9.1.	RTC BYPASS OUT.....	63
9.2.	VAUX1 POWER OUTPUT .....	63
<b>10.</b>	<b>PPS GPS OUTPUT (GE863-GPS ONLY).....</b>	<b>64</b>
10.1.	DESCRIPTION .....	64
10.2.	PULSE CHARACTERISTICS .....	64
<b>11.</b>	<b>DAC AND ADC SECTION .....</b>	<b>65</b>
11.1.	DAC CONVERTER.....	65
11.1.1.	Description.....	65
11.1.2.	Enabling DAC .....	65
11.1.3.	Low Pass Filter Example.....	66
11.2.	ADC CONVERTER.....	66
11.2.1.	Description.....	66
11.2.2.	Using ADC Converter .....	66
<b>12.</b>	<b>MOUNTING THE GE863 ON THE APPLICATION BOARD.....</b>	<b>67</b>
12.1.	GENERAL .....	67
12.1.1.	Module Finishing & Dimensions.....	67
12.1.2.	Recommended Foot Print for the Application.....	68
12.1.3.	Suggested Inhibit Area .....	69
12.1.4.	Debug of the GE863 in Production .....	70
12.1.5.	Stencil.....	70
12.1.6.	PCB Pad Design.....	71
12.1.7.	Solder Paste.....	72
12.1.8.	GE863 Solder Reflow .....	73
12.2.	PACKING SYSTEM .....	75



12.2.1. *Moisture Sensibility* ..... 77

**13. CONFORMITY ASSESSMENT ISSUES** ..... **78**

**14. SAFETY RECOMMENDATIONS**..... **80**

**15. DOCUMENT CHANGE LOG** ..... **81**



# 1. Overview

The aim of this document is the description of some hardware solutions useful for developing a product with the Telit GE863-GPS / QUAD / PY / SIM modules. In this document all the basic functions of a mobile phone is taken into account; for each one of them a proper hardware solution is suggested and eventually the wrong solutions and common errors to be avoided will be evidenced. Obviously this document cannot embrace the whole hardware solutions and products that may be designed. The wrong solutions to be avoided must be considered as mandatory, while the suggested hardware configurations must not be considered mandatory, instead the information given must be used as a guide and a starting point for properly developing your product with the Telit GE863-GPS / QUAD / PY / SIM modules. For further hardware details that may not be explained in this document refer to the Telit GE863 Product Description document where all the hardware information is reported.



**NOTICE:**

(EN) The integration of the GSM/GPRS GE863-GPS/QUAD/PY/SIM cellular module within user application must be done according to the design rules described in this manual.

(IT) L'integrazione del modulo cellulare GSM/GPRS GE863-GPS/QUAD/PY/SIM all'interno dell'applicazione dell'utente dovrà rispettare le indicazioni progettuali descritte in questo manuale.

(DE) Die Integration des GE863-GPS/QUAD/PY/SIM GSM/GPRS Mobilfunk-Moduls in ein Gerät muß gemäß der in diesem Dokument beschriebenen Konstruktionsregeln erfolgen

(SL) Integracija GSM/GPRS GE863-GPS/QUAD/PY/SIM modula v uporabniški aplikaciji bo morala upoštevati projektna navodila, opisana v tem priročniku.

(SP) La utilización del modulo GSM/GPRS GE863-GPS/QUAD/PY/SIM debe ser conforme a los usos para los cuales ha sido diseñado descritos en este manual del usuario.

(FR) L'intégration du module cellulaire GSM/GPRS GE863-GPS/QUAD/PY/SIM dans l'application de l'utilisateur sera faite selon les règles de conception décrites dans ce manuel.

(HE) האינטגרציה של המודול הג'י.פי.אס/קוואד/פי/סימ של המודם הסלולרי GE863-GPS/QUAD/PY/SIM עם המוצר.


The information presented in this document is believed to be accurate and reliable. However, no responsibility is assumed by Telit Communications S.p.A. for its use, nor any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Telit Communications S.p.A. other than for circuitry embodied in Telit products. This document is subject to change without notice.



## 2. GE863 Mechanical Dimensions

The Telit GE863 module's overall dimensions are:

- Length: 41,4 mm
- Width: 31,4 mm
- Thickness: 3,6 Mm

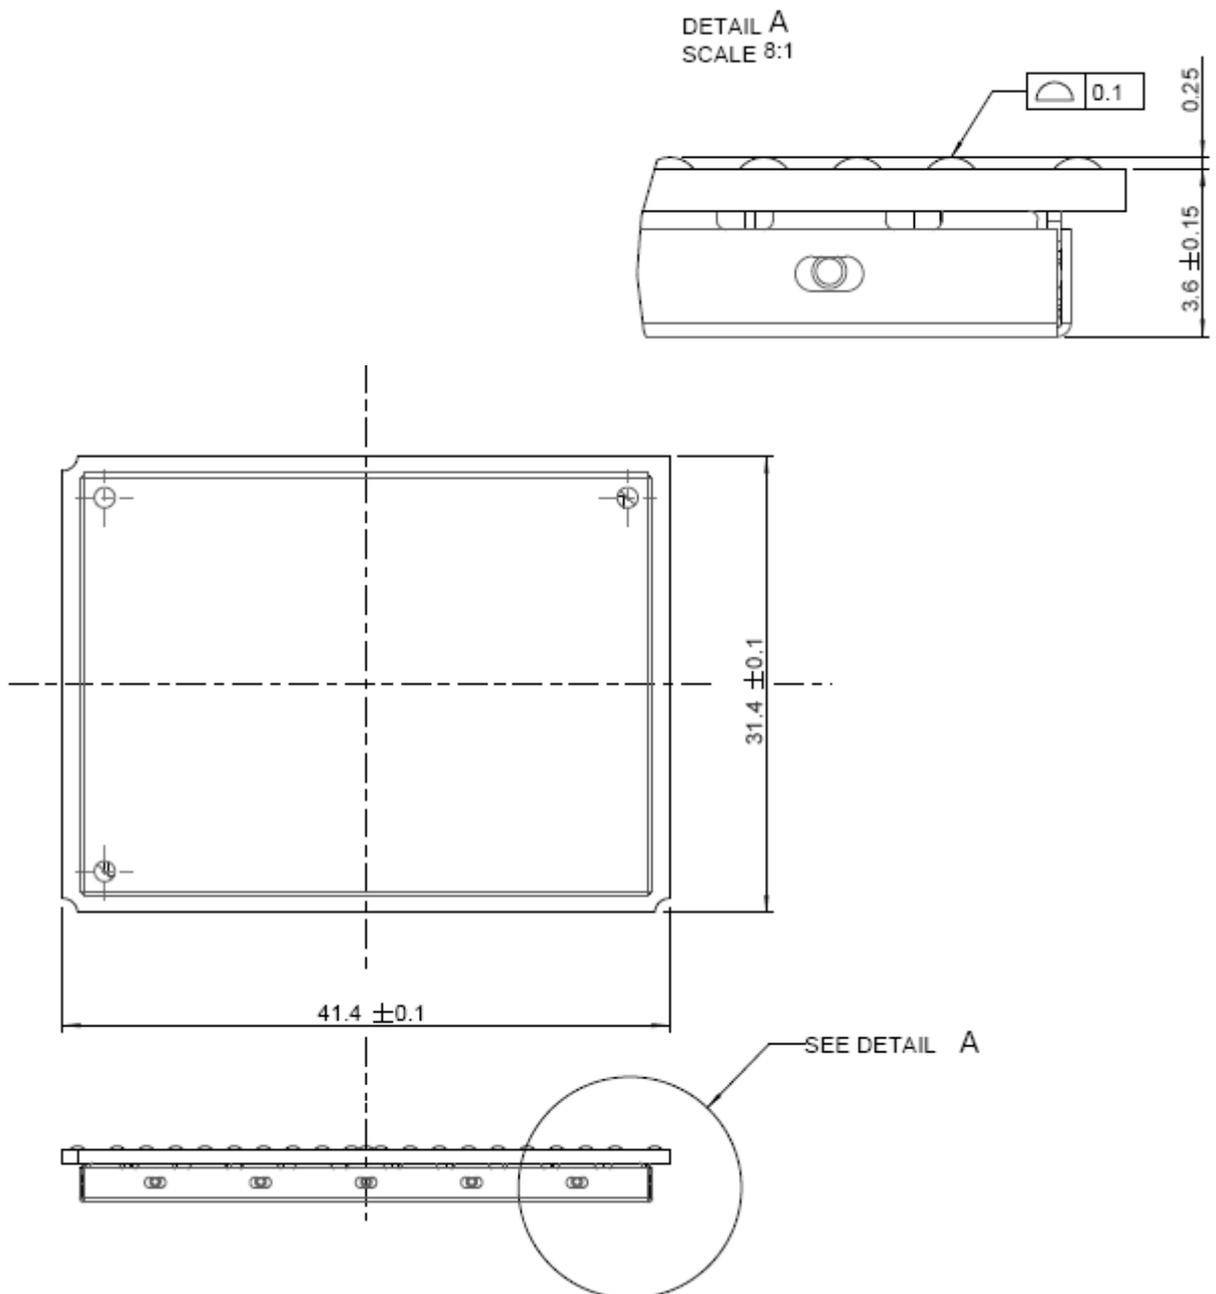

### 3. GE863 Module Connections

#### 3.1. PIN-OUT

BGA Ball	Signal	I/O	Function	Internal Pull up	Type
1	GPIO13	I/O	GPIO13		CMOS 2.8V
2	GPIO12	I/O	GPIO12	47K $\Omega$	CMOS 2.8V
3	GPIO11	I/O	GPIO11	4.7K $\Omega$	CMOS 2.8V
4	GPIO10	I/O	GPIO10		CMOS 2.8V
5	GPIO9	I/O	GPIO9		CMOS 2.8V
6	GPIO8	I/O	GPIO8		CMOS 2.8V
7	RESERVED	-	RESERVED		-
8	GND	-	Ground		Power
9	EAR_MT-	AO	Handset earphone signal output, phase -		Audio
10	EAR_MT+	AO	Handset earphone signal output, phase +		Audio
11	EAR_HF+	AO	Handsfree ear output, phase +		Audio
12	EAR_HF-	AO	Handsfree ear output, phase -		Audio
13	MIC_MT+	AI	Handset microphone signal input; phase+		Audio
14	MIC_MT-	AI	Handset microphone signal input; phase-		Audio
15	MIC_HF+	AI	Handsfree microphone input; phase +		Audio
16	MIC_HF-	AI	Handsfree microphone input; phase -		Audio
17	GND	-	Ground		Power
18	SIMCLK	O	External SIM signal - Clock		1.8/3V ONLY
19	SIMRST	O	External SIM signal - Reset		1.8/3V ONLY
20	SIMIO	I/O	External SIM signal - Data I/O		1.8/3V ONLY
21	SIMIN	I/O	External SIM signal - Presence (active low)	47K $\Omega$	CMOS 2.8V
22	SIMVCC	-	External SIM signal - Power		1.8/3V ONLY
23	ADC_IN1	AI	Analog /Digital converter input		A/D
24	VRTC	AO	VRTC Backup capacitor		Power
25	TX_TRACE		TX data for GPS control (TX data for Debug in case of GE863-QUAD/PY/SIM)		CMOS 2.8V
26	RX_TRACE		RX data for GPS control (RX data for Debug in case of GE863-QUAD/PY/SIM)		CMOS 2.8V
27	VBATT	-	Main power supply		Power
28	GND	-	Ground		Power
29	STAT_LED	O	Status indicator led		CMOS 1.8V
30	AXE	I	Handsfree switching	100K $\Omega$	CMOS 2.8V



BGA Ball	Signal	I/O	Function	Internal Pull up	Type
31	VAUX1	-	Power output for external accessories		-
32	GPIO4	I/O	GPIO4 Configurable general purpose I/O pin /	4.7K $\Omega$	CMOS 2.8V
33	GPIO2 / JDR	I/O	GPIO2 Configurable general purpose I/O pin / Jammer Detect Output		CMOS 2.8V
34	GPIO1	I/O	GPIO1 Configurable general purpose I/O pin		CMOS 2.8V
35	CHARGE	AI	Charger input		Power
36	GND	-	Ground		Power
37	C103/TXD	I	Serial data input (TXD) from DTE		CMOS 2.8V
38	C104/RXD	O	Serial data output to DTE		CMOS 2.8V
39	C108/DTR	I	Input for Data terminal ready signal (DTR) from DTE		CMOS 2.8V
40	C105/RTS	I	Input for Request to send signal (RTS) from DTE		CMOS 2.8V
41	C106/CTS	O	Output for Clear to send signal (CTS) to DTE		CMOS 2.8V
42	C109/DCD	O	Output for Data carrier detect signal (DCD) to DTE		CMOS 2.8V
43	C107/DSR	O	Output for Data set ready signal (DSR) to DTE		CMOS 2.8V
44	C125/RING	O	Output for Ring indicator signal (RI) to DTE		CMOS 2.8V
45	GND	-	Ground		Power
46	ON_OFF*	I	Input command for switching power ON or OFF (toggle command).	47K $\Omega$	Pull up to VBATT
47	RESET*	I	Reset input		
48	GND	-	Ground		Power
49	ANTENNA	O	GSM Antenna output - 50 ohm		RF
50	GND	-	Ground		Power
51	GPIO7 / BUZZER	I/O	GPIO7 / BUZZER output		CMOS 2.8V
52	PWRMON	O	Power ON Monitor		CMOS 2.8V
53	GPIO5 RFTXMON	I/O	GPIO5 / RF TX_ON signalling output		CMOS 2.8V
54	GPIO6 ALARM	I/O	GPIO6 / ALARM output		CMOS 2.8V
55	GPIO3	I/O	GPIO3	47K $\Omega$	CMOS 2.8V
56	GND	-	Ground		Power
57	RESERVED	-	RESERVED		-
58	CLK	I/O	Python Debug (CLK) (1)		CMOS 2.8V
59	GPIO17	I/O	GPIO		CMOS 2.8V



BGA Ball	Signal	I/O	Function	Internal Pull up	Type
60	<b>GPIO14</b>	I/O	GPIO		-
61	MRST	I/O	Python Debug (MRST) (1)		-
62	RESERVED	-	RESERVED		-
63	DAC_OUT	O	DAC out		
64	GPIO16	I/O	GPIO		CMOS 2.8V
65	RESERVED	-	RESERVED		-
66	MTSR	I/O	Python Debug (MTSR) (1)		-
67	GND	-	Ground		Power
68	TX_GPS	-	GPS serial Port (TX) (1)		-
69	GND	-	Ground		Power
70	RESERVED	-	RESERVED		-
71	GPIO15	I/O	GPIO		-
72	GND	-	Ground		Power
73	RX_GPS	-	GPS serial Port (RX) (1)		-
74	RESERVED	-	RESERVED		-
75	PPS	O	1 Pulse per Second signal (1)	100kOhm pull down	CMOS 2.8V
76	GPIO18	I/O	GPIO		-
77	GND	-	Ground		Power
78	RX_GPS_BIN	-	GPS serial Port (RX) - SIRF BINARY (1)		CMOS 2.8V
79	GND	-	Ground		Power
80	TX_GPS_BIN	-	GPS serial Port (TX) - SIRF BINARY (1)		CMOS 2.8V
81	RESERVED	-	RESERVED		-
82	GND	-	Ground		Power
83	GPS_ANT	-	GPS ANTENNA (1)		
84	GND_GPS	-	GPS_ANTENNA GND (1)		Power


Note:

(1) Available only on GE863-GPS (in case of GE863-QUAD/PY/SIM it has to be considered RESERVED)



## 3.2. PINS Layout


TOP VIEW

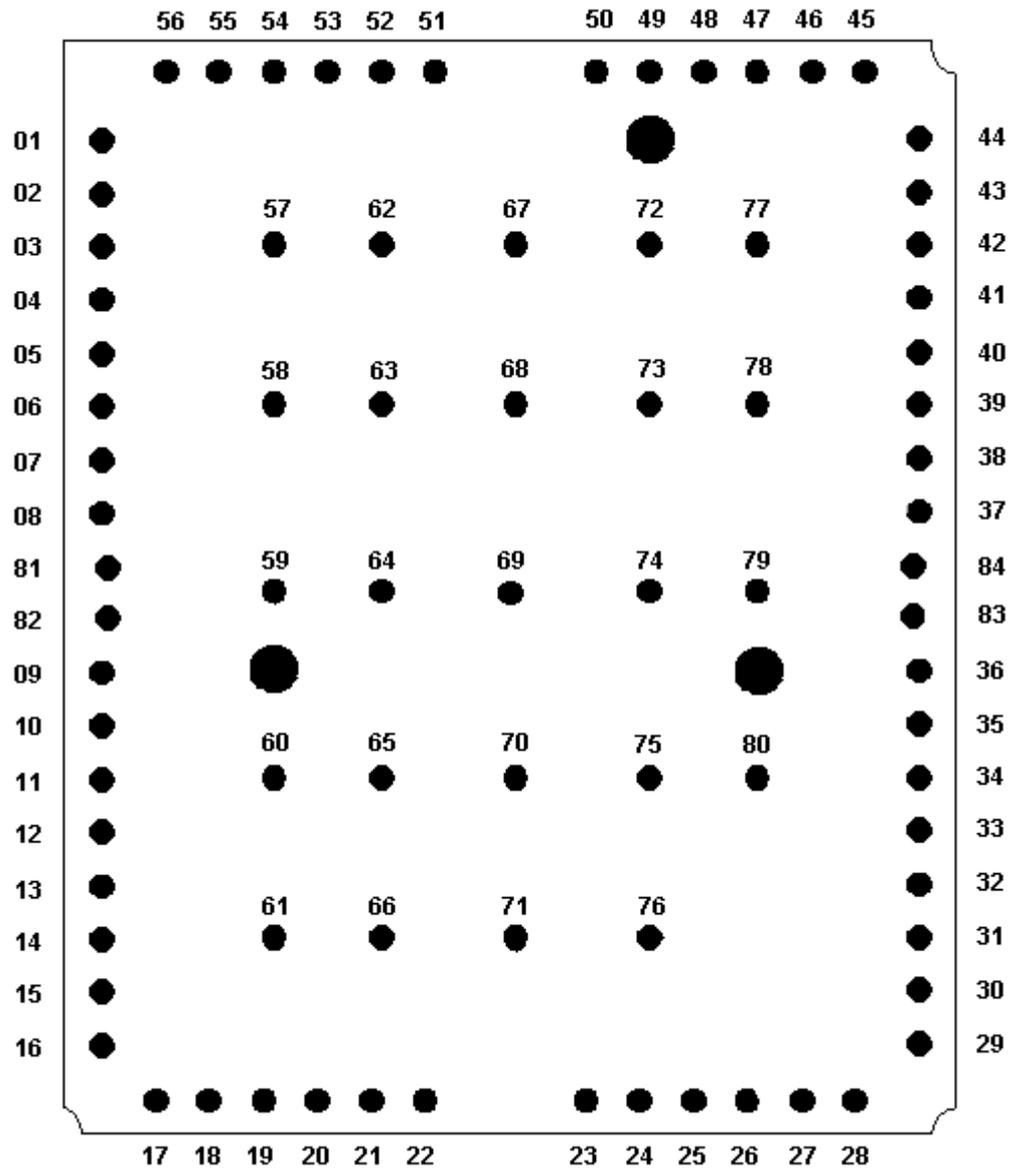




For example:

- 1- Let us assume you need to drive the ON# pad with a totem pole output of a +3/5 V microcontroller (uP\_OUT1):
- 2- Let us assume you need to drive the ON# pad directly with an ON/OFF button:

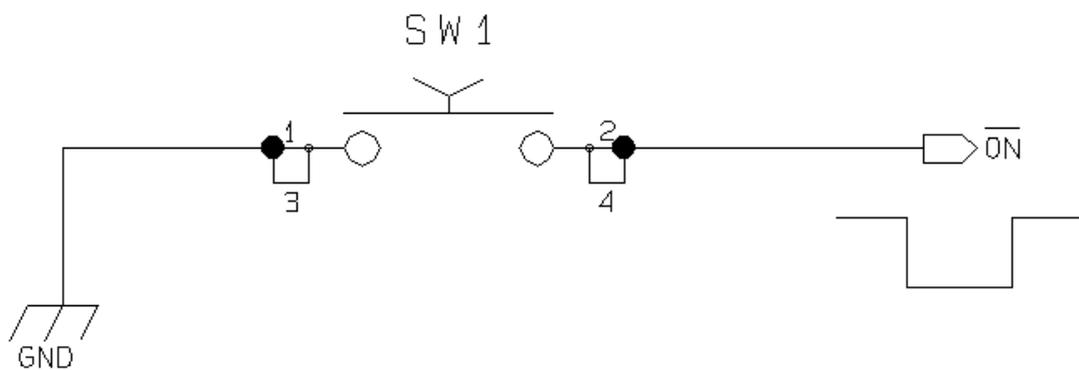

A flow chart with proper turn on procedure is detailed below:

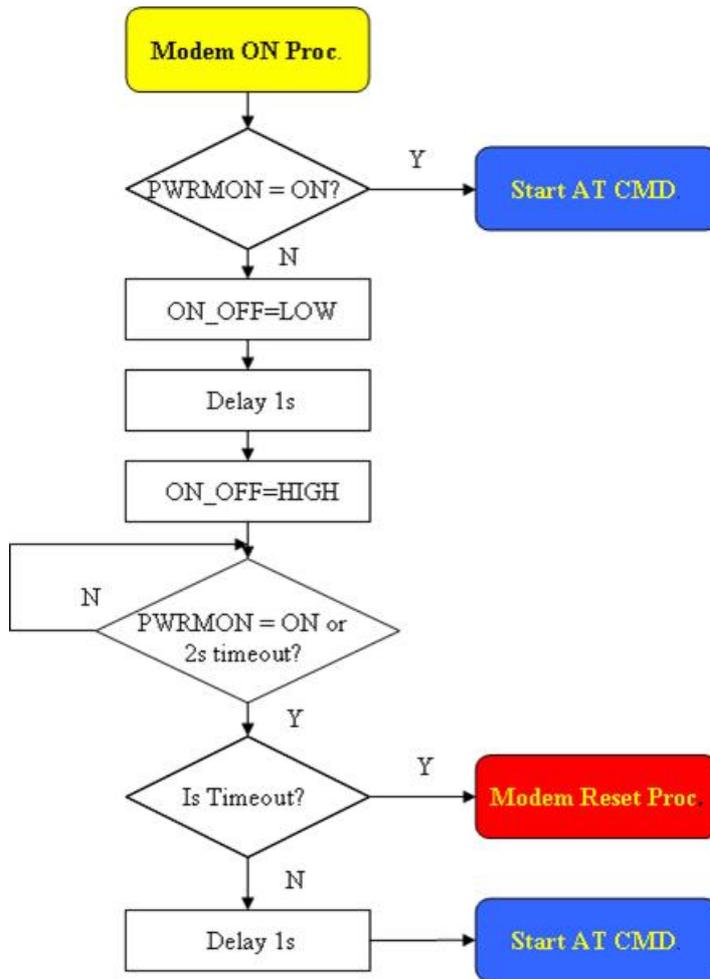





**TIP:**


To check if the device has powered off, the hardware line PWRMON must be monitored. When PWRMON goes low, the device has powered off.

**4.2.2. Hardware Unconditional Shutdown (for GE863-GPS only)**

To unconditionally shut down the GE863-GPS, the pad RESET# must be tied low for at least 200 milliseconds and then released.

The maximum current that can be drained from the ON# pad is 0,15 mA.

A simple circuit to do it is:

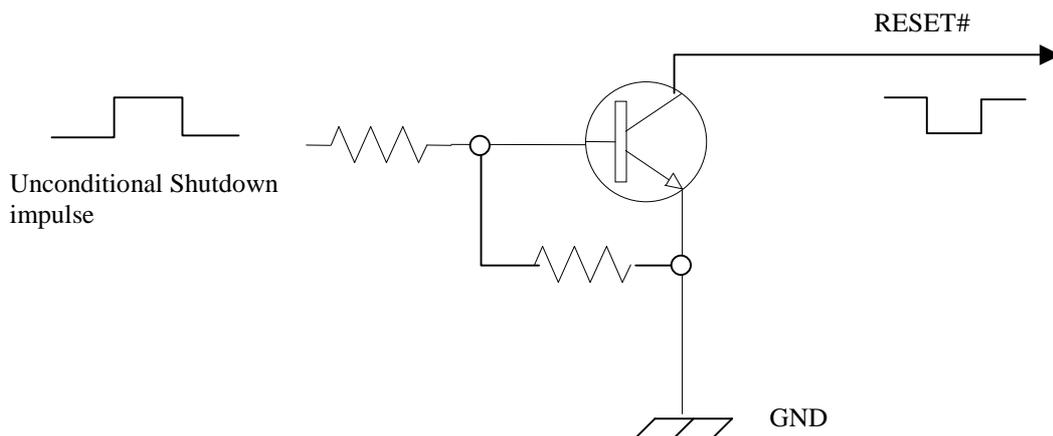



**NOTE:**


Do not use any pull up resistor on the RESET\* line nor any totem pole digital output. Using pull up resistor may bring to latch up problems on the GE863-GPS power regulator and improper functioning of the module. The line RESET\* must be connected only in open collector configuration.



**TIP:**


The unconditional hardware shutdown must be always implemented on the boards and the software must use it as an emergency exit procedure.

A flow chart with a proper restart procedure is detailed below:

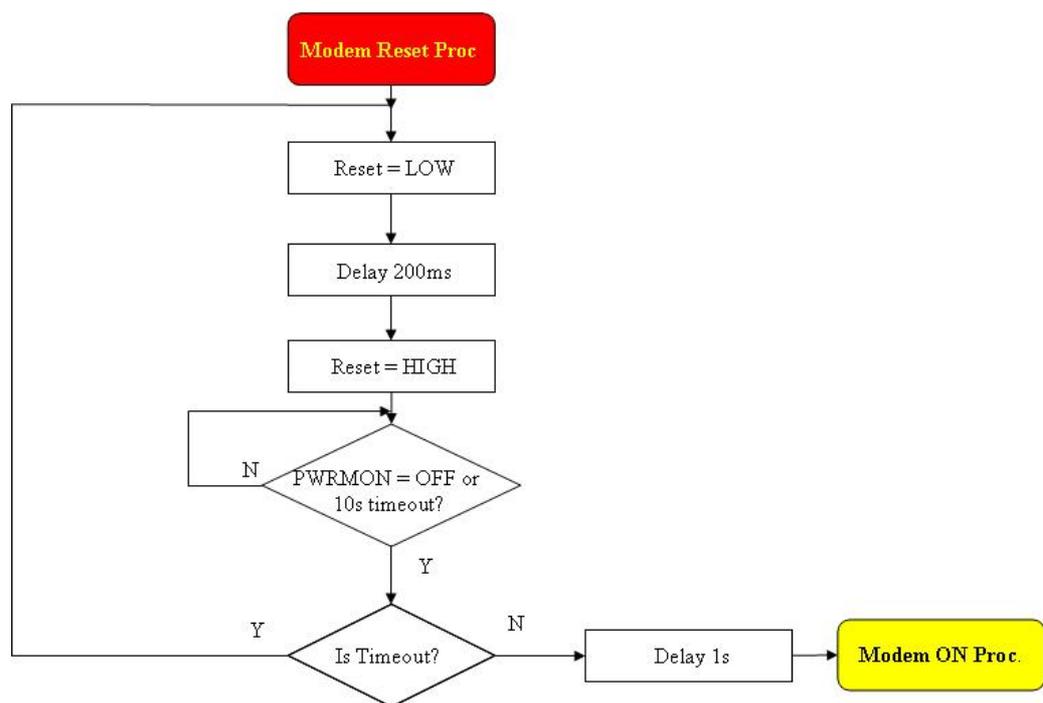

For example:

- 1- Let us assume you need to drive the RESET# pad with a totem pole output of a +3/5 V microcontroller (uP\_OUT2):

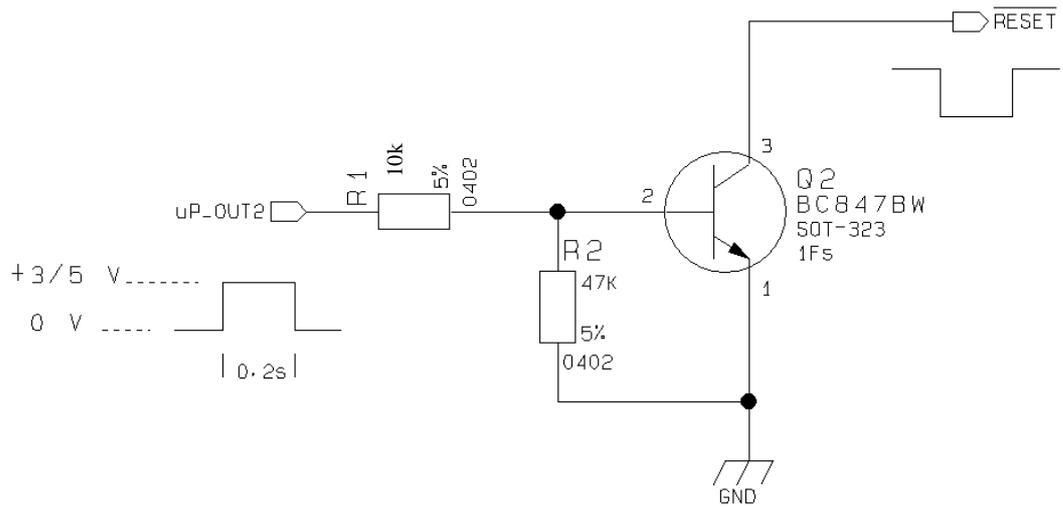


### 4.2.3. Hardware Unconditional Reboot (GE863-QUAD/PY/SIM only)

To unconditionally Reboot the GE863-QUAD/PY/SIM, the pad RESET# must be tied low for at least 200 milliseconds and then released.

The maximum current that can be drained from the ON# pad is 0,15 mA.

A simple circuit to do it is:

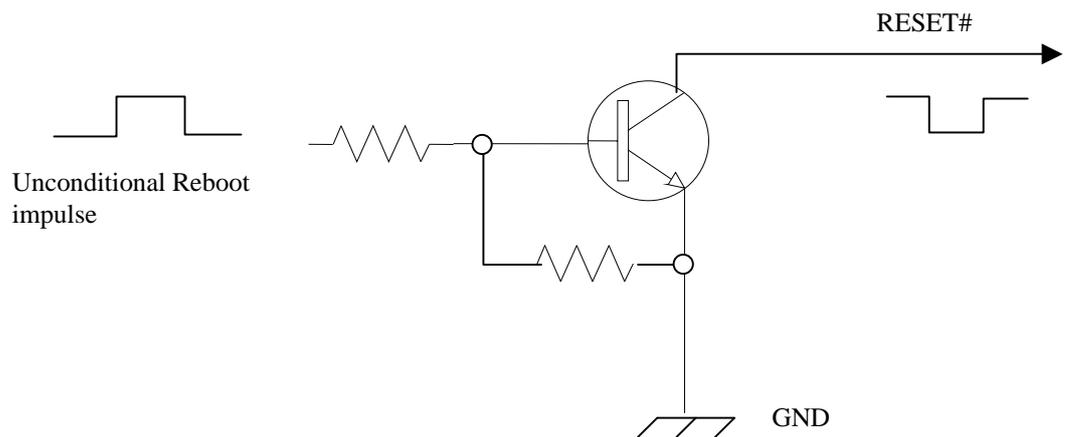

**NOTE:**

Do not use any pull up resistor on the RESET\* line nor any totem pole digital output. Using pull up resistor may bring to latch up problems on the GE863-QUAD/PY/SIM power regulator and improper functioning of the module. The line RESET\* must be connected only in open collector configuration.




**TIP:**

The unconditional hardware reboot must always be implemented on the boards and the software must use it as an emergency exit procedure.




In the following flow chart is detailed the proper restart procedure:

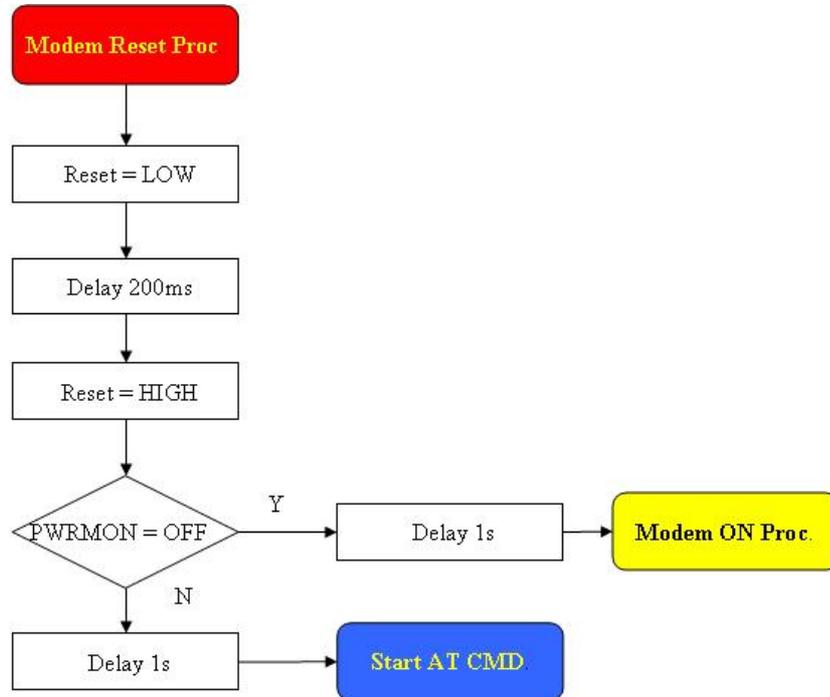

For example:

- 1- Let us assume you need to drive the RESET# pad with a totem pole output of a +3/5 V microcontroller (uP\_OUT2):

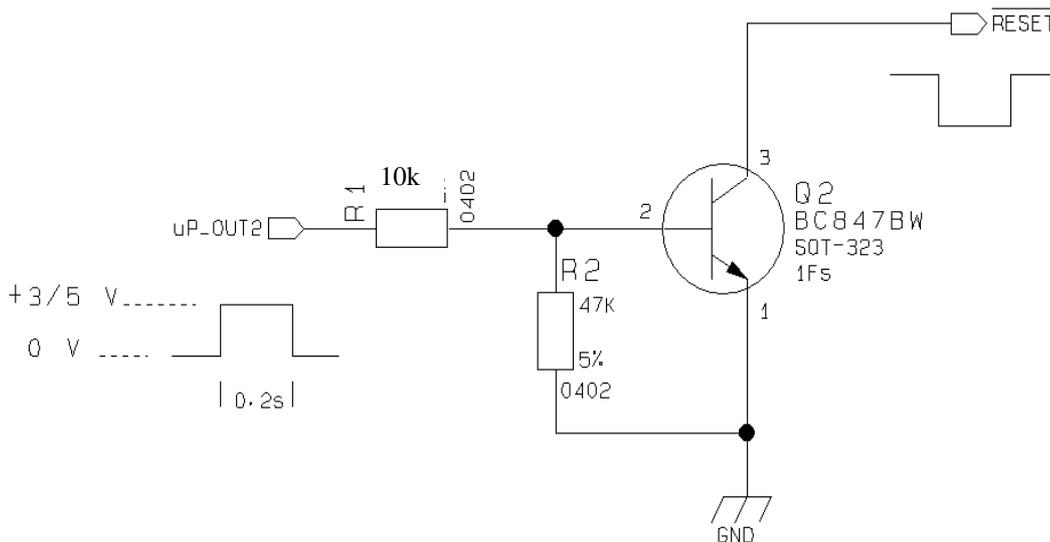

### 4.3. Power Supply

The power supply circuitry and board layout are very important parts in the full product design and they strongly reflect on the product overall performance, hence read carefully the requirements and the guidelines that follow for a proper design.

### 4.4. Power Supply Requirements

POWER SUPPLY		
	SW rel. 7.02.xx4 or older	SW rel. 7.03.x00 or newer
Nominal Supply Voltage	3.8 V	3.8 V
Max Supply Voltage	4.2 V	4.5 V
Supply voltage range	3.4 V - 4.2 V	3.22 V - 4.5 V

GE863-GPS		
Mode	Average [mA]	Mode Description
<b>Turned OFF</b>		
OFF	<26 uA	OFF current
<b>IDLE mode with GPS OFF</b>		
AT+CFUN=1	24,0	Stand by mode; no call in progress; GPS OFF
AT+CFUN=4	22,0	Normal mode: full functionality of the module
AT+CFUN=0 or AT+CFUN=5	2,6	Disabled TX and RX; module is not registered on the network Power saving: CFUN=0 module registered on the network and can receive voice call or an SMS; but it is not possible to send AT commands; module wakes up with an unsolicited code (call or SMS) or rising RTS line. CFUN=5 full functionality with power saving; module registered on the network can receive incoming calls and SMS
<b>IDLE mode with GPS ON<sup>1</sup> full power mode</b>		
AT+CFUN=1	113,0	Stand by mode; no call in progress; GPS ON
AT+CFUN=4	111,0	
<b>IDLE mode with GPS ON trickle power mode</b>		
AT+CFUN=1	64,0	Stand by mode; no call in progress; GPS consumption reduced maintaining the NMEA sentences
AT+CFUN=4	62,0	
<b>IDLE mode with GPS ON push to fix mode</b>		
AT+CFUN=1	24,0	Stand by mode; no call in progress; GPS performs a fix and then it switches off for the defined period
AT+CFUN=4	22,0	
AT+CFUN=5	10,0	
<b>RX mode</b>		
		GSM Receiving data mode
1 slot in downlink	53,0	
2 slot in downlink	65,0	
3 slot in downlink	78,0	
4 slot in downlink	91,0	
<b>GSM TX and RX mode GPS ON</b>		
		GSM Sending data mode
Min power level	135,0	
Max power level	254,0	

<sup>1</sup> The values reported are with GPS antenna current consumption (22mA) included



GPRS (class 10) TX and RX mode GPS ON		GPRS Sending data mode
Min power level	187,0	
Max power level	430,0	

The GSM system is made in a way that the RF transmission is not continuous, else it is packed into bursts at a base frequency of about 216 Hz, and the relative current peaks can be as high as about 2A. Therefore the power supply has to be designed in order to withstand these current peaks without big voltage drops; this means that both the electrical design and the board layout must be designed for this current flow.

If the layout of the PCB is not well designed a strong noise floor is generated on the ground and the supply; this reflects on all the audio paths producing an audible and annoying noise at 216 Hz; if the voltage drops, the peak current absorption is too much, and the device may even shutdown as a consequence of the supply voltage drop.



**TIP:**

The electrical design for the Power supply must be made ensuring it is capable of a peak current output of at least 2 A.








## GE863 Family Hardware User Guide 1v0300783 Rev.2 - 25/03/09

- A protection diode must be inserted close to the power input, in order to save the GE863 from power polarity inversion. This can be the same diode as for spike protection.

An example of switching regulator with 12V input is in the below schematic (it is split in 2 parts):

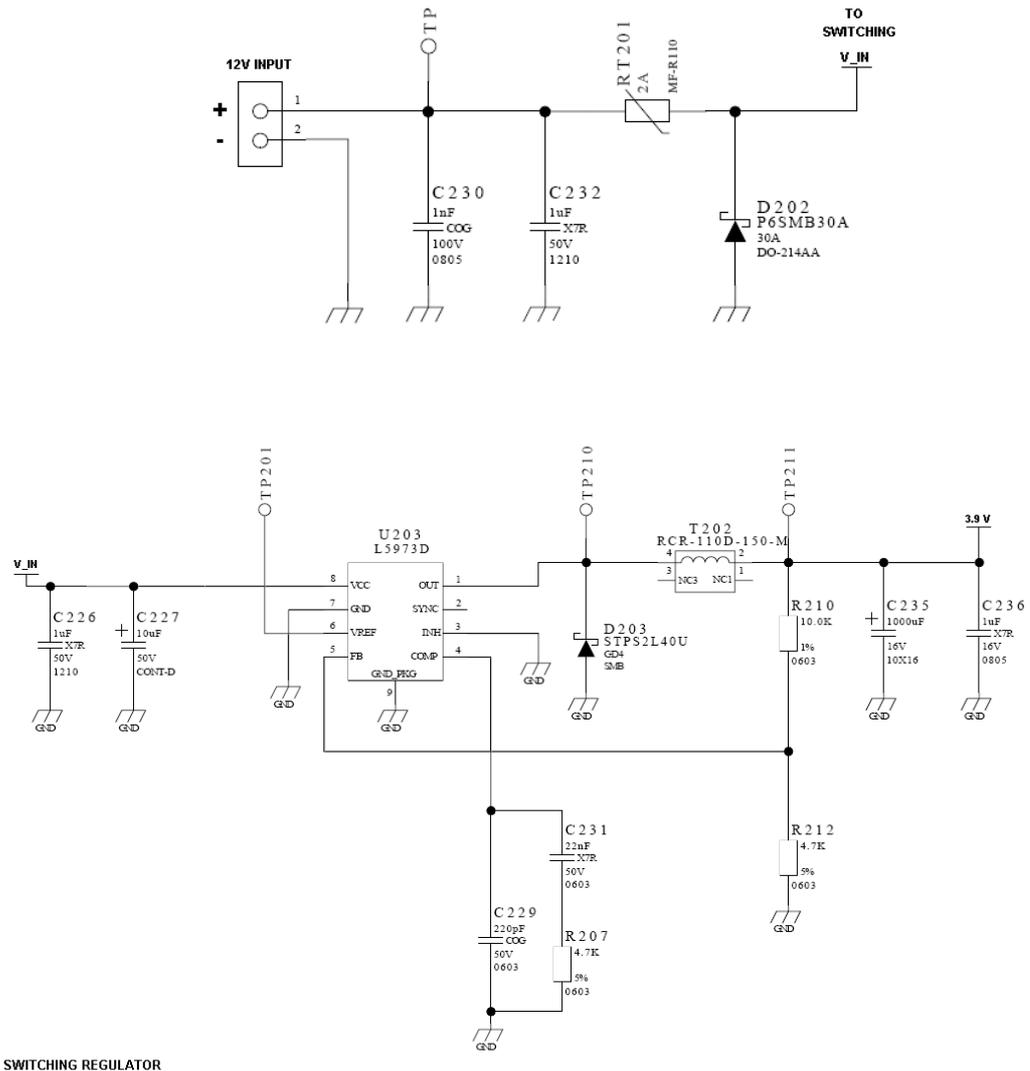

#### 4.5.1.3. Battery Source Power Supply Design Guidelines

- The desired nominal output for the power supply is 3.8V and the maximum voltage allowed is 4.2V (4.5 V if using SW release 7.03.x00 or newer), hence a single 3.7V Li-Ion cell battery type is suited for supplying the power to the Telit GE863 module.

The three cells Ni/Cd or Ni/MH 3,6 V Nom. battery types or 4V PB types **MUST NOT BE USED DIRECTLY** since their maximum voltage can rise over the absolute maximum voltage for the GE863-GPS and damage it.




---

#### **NOTE:**

Do not use any Ni-Cd, Ni-MH, and Pb battery types directly connected with GE863. Their use can lead to overvoltage on the GE863 and damage it. **USE ONLY Li-Ion battery types.**

---

- A Bypass low ESR capacitor of adequate capacity must be provided in order to cut the current absorption peaks. A 100µF tantalum capacitor is usually suited.
- Make sure the low ESR capacitor (usually a tantalum one) is rated at least 10V.
- A protection diode must be inserted close to the power input, in order to save the GE863 from power polarity inversion. Otherwise the battery connector must be done in a way to avoid polarity inversions when connecting the battery.
- The battery capacity must be at least 500mAh in order to withstand the current peaks of 2A; the suggested capacity is from 500mAh to 1000mAh.



#### 4.5.1.4. Battery Charge Control Circuitry Design Guidelines

The charging process for Li-Ion Batteries can be divided into 4 phases:

- qualification and trickle charging
- fast charge 1 - constant current
- final charge - constant voltage or pulsed charging
- maintenance charge

The qualification process consists of a battery voltage measure, indicating roughly its charge status. If the battery is deeply discharged, meaning its voltage is lower than the trickle charging threshold, then charging must start slowly, possibly with a current limited to the pre-charging process. The current must be kept very low with respect to the fast charge value.

During trickle charging the voltage across the battery terminals rises; when it reaches the fast charge threshold level the charging process goes into a fast charge phase.

During the fast charge phase the process proceeds with a current limited for charging; this current limit depends on the required time for completing the charge and on battery pack capacity. During this phase the voltage across the battery terminals still raises but at a lower rate. Once the battery voltage reaches its maximum voltage the process goes into its third state: Final charging. The voltage measure to change the process status into final charge is very important. It must be ensured that the maximum battery voltage is never exceeded, otherwise the battery may be damaged and even explode.

Moreover, for constant final chargers, the voltage phase (final charge) must not start before the battery voltage has reached its maximum value, otherwise the battery capacity will be slightly reduced.

The final charge can be of two different types: constant voltage or pulsed. GE863 uses constant voltage.

The constant voltage charge proceeds with a fixed voltage regulator (very accurately set to the maximum battery voltage) and the current decreases while the battery is becoming charged. When the charging current falls below a certain fraction of the fast charge current value, then the battery is considered fully charged, the final charge stops and eventually starts the maintenance.

The pulsed charge process has no voltage regulation, instead charge continues with pulses. Usually the pulse charge works in the following manner: the charge is stopped for some time, let us say few hundreds of ms, then the battery voltage will be measured and when it drops below its maximum value a fixed time length charging pulse is issued. As the battery approaches its full charge, the off time becomes longer and the duty-cycle of the pulses decreases. The battery is considered fully charged when the pulse duty-cycle is less than a threshold value, typically 10%, the pulse charge stops and eventually the maintenance starts.

The last phase is not properly a charging phase, since the battery at this point is fully charged and the process may stop after the final charge. The maintenance charge









are not overlapped to any noise sensitive circuitry as the microphone amplifier/buffer or earphone amplifier.

- The power supply input cables must be kept separate from noise sensitive lines such as microphone/earphone cables.

#### 4.5.4. Parameters for ATEX Application

In order to integrate the Telit's GE863 module into an ATEX application, the appropriate reference standard IEC EN xx and integrations must be followed.

Below are listed parameters and useful information to integrate the module in your application:

- GE863-QUAD & GE 863-PY
  - Total capacity: 78.394  $\mu$ F
  - Total inductance: 10.163  $\mu$ H
- GE863-GPS
  - Total capacity: 83.167  $\mu$ F
  - Total inductance: 10.264  $\mu$ H
- No voltage upper than supply voltage is present in the module.
- No step-up converters are present in the module.
- In abnormal conditions, the maximum RF output power is up 34 dBm max for few seconds.

For this particular application, we recommend the customer to involve TTSC (Telit Technical Support Center) in the design phase of the application.





conditions for satisfying RF exposure compliance. OEM integrators must ensure that the end user has no manual instructions to remove or install the GE863 module.

Antennas used for this OEM module must not exceed 3dBi gain for mobile and fixed operating configurations.

## 5.2. GSM Antenna - PCB Line Guidelines

- Ensure that the antenna line impedance is 50 ohm.
- Keep the antenna line on the PCB as short as possible, since the antenna line loss must be less than 0,3 dB.
- Antenna line must have uniform characteristics, constant cross section, avoid meanders and abrupt curves.
- Keep, if possible, one layer of the PCB used only for the Ground plane;
- Surround (on the sides, over and under) the antenna line on PCB with Ground, avoid having other signal tracks facing directly the antenna line track.
- The ground around the antenna line on PCB has to be strictly connected to the Ground Plane by placing vias once per 2mm at least.
- Place EM noisy devices as far as possible from GE863 antenna line.
- Keep the antenna line far away from the GE863 power supply lines.
- If you have EM noisy devices around the PCB hosting the GE863, such as fast switching ICs, take care of the shielding of the antenna line by burying it inside the layers of PCB and surround it with Ground planes, or shield it with a metal frame cover.
- If you do not have EM noisy devices around the PCB of GE863, by using a strip-line on the superficial copper layer for the antenna line, the line attenuation will be lower than a buried one.

## 5.3. GSM Antenna - Installation Guidelines

- Install the antenna in a place covered by the GSM signal.
- The Antenna must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
- Antenna must not be installed inside metal cases.
- Antenna must be installed also according Antenna manufacturer instructions.





As suggested on the Product Description the external active antenna for a Telit GE863-GPS device must fulfill the following requirements:

Antenna Requirements	
<b>Frequency range</b>	1575.42 MHz (GPS L1)
<b>Bandwidth</b>	+/- 1.023 MHz
<b>Gain</b>	1.5 dBi < Gain < 4.5 dBi
<b>Impedance</b>	50 ohm
<b>Amplification</b>	Typical 25dB (max 27dB)
<b>Supply voltage</b>	Must accept from 3 to 5 V DC
<b>Current consumption</b>	Typical 20 mA (40 mA max)

When using the Telit GE863-GPS, since there is no antenna connector on the module, the antenna must be connected to the GE863-GPS through the PCB with the antenna pad.

In the case that the antenna is not directly developed on the same PCB, hence directly connected at the antenna pad of the GE863-GPS, then a PCB line is needed in order to connect with it or with its connector.

This line of transmission must fulfill the following requirements:

Antenna Line on PCB Requirements	
<b>Impedance</b>	50 ohm
<b>No coupling with other signals allowed</b>	
<b>Cold End (Ground Plane) of antenna must be equipotential to the GE863-GPS ground pins</b>	

Furthermore if the device is developed for the US and/or Canada market, it must comply with the FCC and/or IC approval requirements:

This device is to be used only for mobile and fixed application.

## 5.5. GPS Antenna - PCB Line Guidelines

- Ensure that the antenna line impedance is 50 ohm.
- Keep the antenna line on the PCB as short as possible to reduce the loss.
- Antenna line must have uniform characteristics, constant cross section, avoid meanders and abrupt curves.
- Keep one layer of the PCB used only for the Ground plane, if possible.
- Surround (on the sides, over and under) the antenna line on PCB with Ground, avoid having other signal tracks facing directly the antenna line of track.
- The ground around the antenna line on PCB has to be strictly connected to the Ground Plane by placing vias once per 2mm at least.



- Place EM noisy devices as far as possible from GE863-GPS antenna line.
- Keep the antenna line far away from the GE863-GPS power supply lines.
- Keep the antenna line far away from the GE863-GPS GSM RF lines.
- If you have EM noisy devices around the PCB hosting the GE863-GPS, such as fast switching ICs, take care of the shielding of the antenna line by burying it inside the layers of PCB and surround it with Ground planes, or shield it with a metal frame cover.
- If you do not have EM noisy devices around the PCB of GE863-GPS, use a strip-line on the superficial copper layer for the antenna line. The line attenuation will be lower than a buried one.

## 5.6. GPS Antenna - Installation Guidelines

- The GE863-GPS due to its characteristics of sensitivity is capable to perform a Fix inside the buildings. (In any case the sensitivity could be affected by the building characteristics i.e. shielding).
- The Antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
- Antenna must not be installed inside metal cases.
- Antenna must be installed also according Antenna manufacturer instructions.









### 6.3. Modem Serial Port

Several configurations can be designed for the serial port on the OEM hardware, but the most common are:

- RS232 PC com port
- microcontroller UART @ 2.8V - 3V (Universal Asynchronous Receive Transmit)
- microcontroller UART@ 5V or other voltages different from 2.8V

Depending from the type of serial port on the OEM hardware a level translator circuit may be needed to make the system work. The only configuration that does not need a level translation is the 2.8V UART.

The serial port on the GE863 is a +2.8V UART with all the 7 RS232 signals. It differs from the PC-RS232 in the signal polarity (RS232 is reversed) and levels. The levels for the GE863 UART are the CMOS levels:

**Absolute Maximum Ratings -Not Functional**

Parameter	Min	Max
Input level on any digital pad when on	-0.3V	+3.6V
Input voltage on analog pads when on	-0.3V	+3.0 V

**Operating Range - Interface Levels (2.8V CMOS)**

Level	Min	Max
Input high level $V_{IH}$	2.1V	3.3V
Input low level $V_{IL}$	0V	0.5V
Output high level $V_{OH}$	2.2V	3.0V
Output low level $V_{OL}$	0V	0.35V












**NOTE:**

In order to be able to do in circuit reprogramming of the GE863 firmware, the serial port on the Telit GE863 must be available for translation into RS232 and either it is controlling device must be placed into tristate, disconnected or as a gateway for the serial data when module reprogramming occurs.

Only RXD, TXD, GND and the On/off module turn on pad are required to the reprogramming of the module, the other lines are unused.

All applicators must include in their design a way reprogramming the GE863.

An example of level translation circuitry of this kind is:

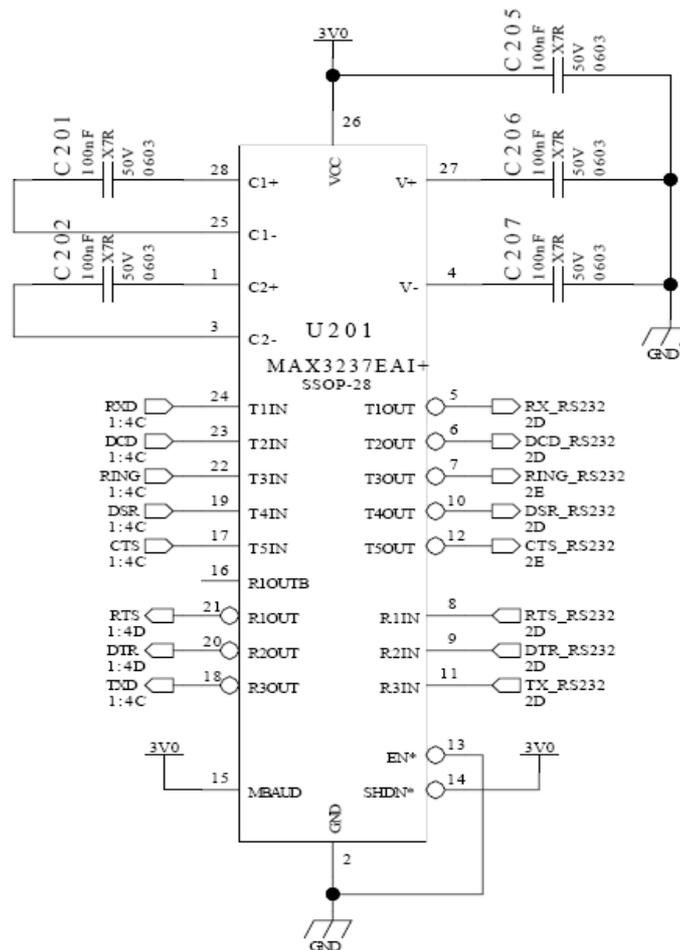


RS232 LEVEL TRSANSULATOR





## 6.7. 5V UART Level Translation

If the OEM application uses a microcontroller with a serial port (UART) that works at a voltage different from 2.8 - 3V, then a circuitry has to be provided to adapt the different levels of the two set of signals. As for the RS232 translation, there are a multitude of single chip translators. For example a possible translator circuit for a 5V TRANSMITTER/RECEIVER can be:

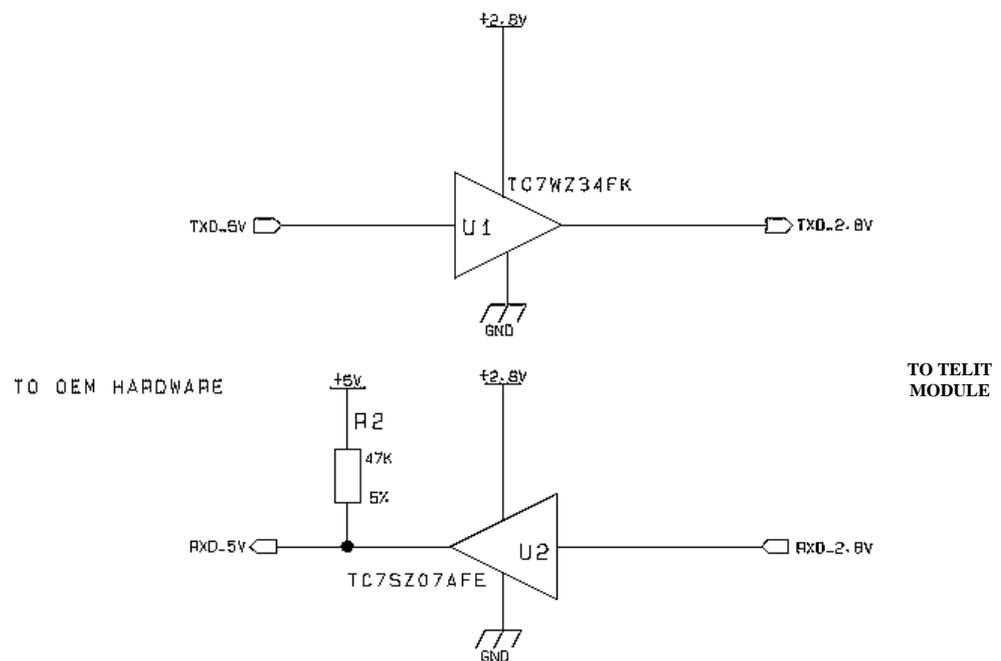

### TIP:

This logic IC for the level translator and 2.8V pull-ups (not the 5V one) can be powered directly from VAUX line of the GE863. Note that the TC7SZ07AE has open drain output, therefore the resistor R2 is mandatory.



### NOTE:

The UART input line TXD (rx\_uart) of the GE863 is NOT internally pulled up with a resistor, so there may be the need to place an external 47KΩ pull-up resistor. Either the DTR (dtr\_uart) or RTS (rts\_uart) input lines are not pulled up internally, so an external pull-up resistor of 47KΩ may be required.



## 7. Audio Section Overview

The Base Band Chip of the GE863 Telit Module provides two different audio blocks; both in transmit (Uplink) and in receive (Downlink) direction:

“MT lines” must be used for handset function,

“HF lines” is suited for hands -free function (car kit).


These two blocks can be activated one at a time, selectable by AXE hardware line or by AT command. The audio characteristics are equivalent in transmit blocks, but are different in the receive ones and this must be kept in mind when designing.

The Audio Paths are described in the block diagram on next page.

For a full description on how to design the Audio section on your application, please refer to the following document:

- M2M Telit Modules Audio Application Note code: 80000NT10007a



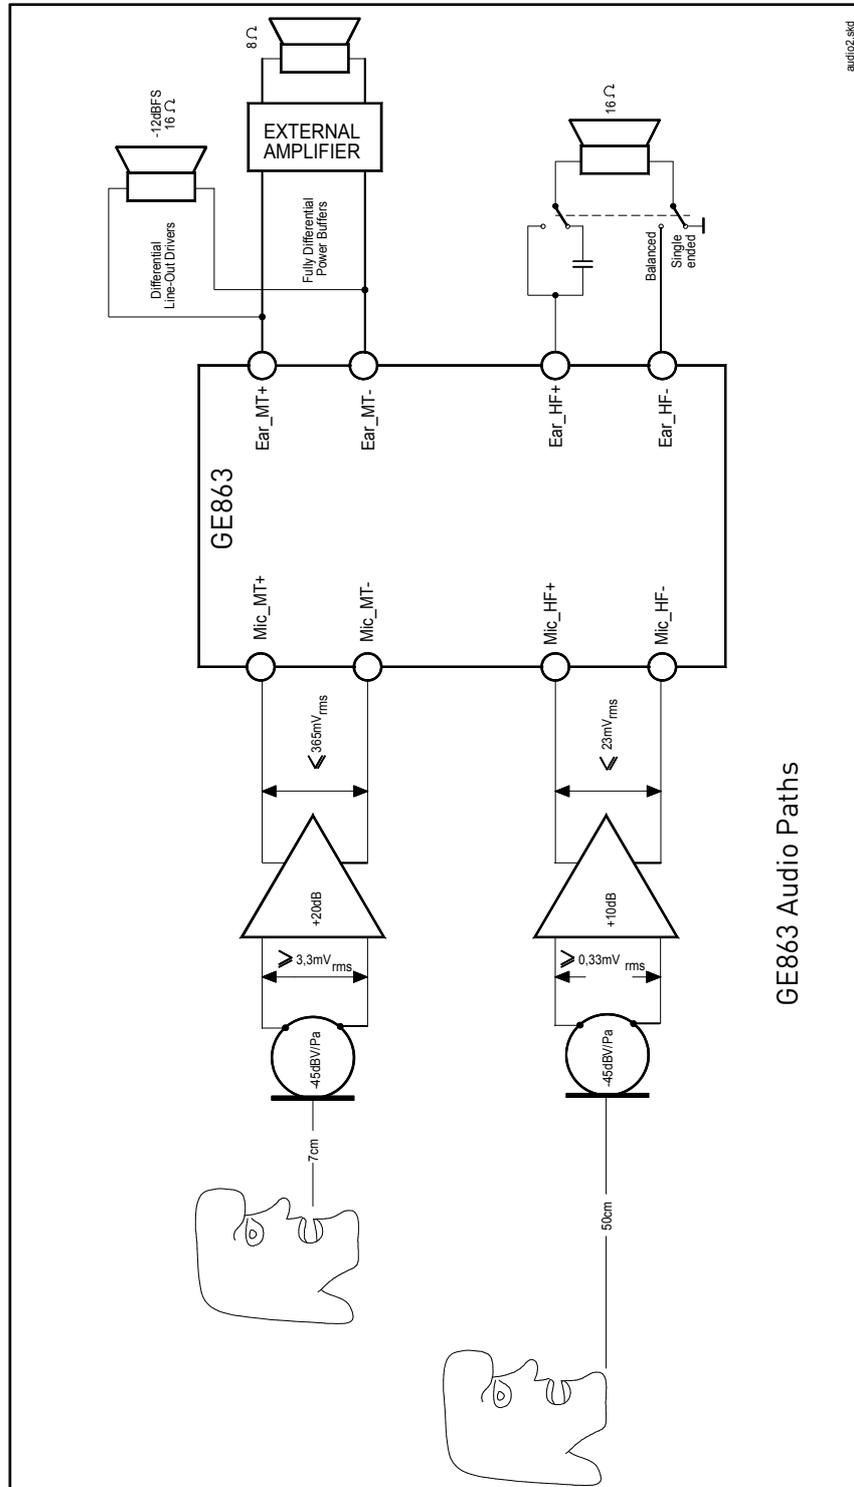





## 7.2.2. Output Lines Characteristics

“EAR_MT” Differential Line-out Drivers Path	
Line Coupling	DC
Line Type	Bridged
Output load resistance	$\geq 14 \Omega$
<b>Internal output resistance</b>	4 $\Omega$ (typical)
Signal bandwidth	150 - 4000 Hz @ -3 dB
Differential output voltage	328mV <sub>rms</sub> /16 $\Omega$ @ -12dBFS
SW volume level step	- 2 dB
Number of SW volume steps	10

“EAR_HF” Power Buffers Path	
Line Coupling	DC
Line Type	Bridged
Output load resistance	$\geq 14 \Omega$
<b>Internal output resistance</b>	4 $\Omega$ (>1,7 $\Omega$ )
Signal bandwidth	150 - 4000 Hz @ -3 dB
Max Differential output voltage	1310 mV <sub>rms</sub> (typ, open circuit)
Max Single Ended output voltage	656 mV <sub>rms</sub> (typ, open circuit)
SW volume level step	- 2 dB
Number of SW volume steps	10



## 8. General Purpose I/O

The general purpose I/O pads can be configured to act in three different ways:

- input
- output
- alternate function (internally controlled)

The following GPIO are available on the GE863:

Ball	Signal	I/O	Function	Type	Input / Output Current	Default State	ON_OFF state	State During Reset	Note
34	GPIO1	I/O	GPIO01 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
33	GPIO2	I/O	GPIO02 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		Alternate function (JDR)
55	GPIO3	I/O	GPIO03 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	1	1	47K Pull Up
32	GPIO4	I/O	GPIO04 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	1	1	4.7K Pull Up Alternate function (RF Transmission Control)
53	GPIO5	I/O	GPIO05 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		Alternate function (RFTXMON)
54	GPIO6	I/O	GPIO06 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	fig. 01	HIGH	Alternate function (ALARM)
51	GPIO7	I/O	GPIO07 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		Alternate function (BUZZER)
6	GPIO8	I/O	GPIO08 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
5	GPIO9	I/O	GPIO09 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
4	GPIO10	I/O	GPIO10 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
3	GPIO11	I/O	GPIO11 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	1	1	4.7K Pull Up
2	GPIO12	I/O	GPIO12 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	1	1	47K Pull Up
1	GPIO13	I/O	GPIO13 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
60	GPIO14	I/O	GPIO14 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
71	GPIO15	I/O	GPIO15 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
64	GPIO16	I/O	GPIO16 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
59	GPIO17	I/O	GPIO17 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		
76	GPIO18	I/O	GPIO18 Configurable GPIO	CMOS 2.8V	1µA / 1mA	INPUT	0		





## 8.1. GPIO Logic Levels

Where not specifically stated, all the interface circuits work at 2.8V CMOS logic levels. The following table shows the logic level specifications used in the GE863 interface circuits:

### Absolute Maximum Ratings - Not Functional

Parameter	Min	Max
Input level on any digital pin when on	-0.3V	+3.6V
Input voltage on analog pins when on	-0.3V	+3.0 V

### Operating Range - Interface Levels (2.8V CMOS)

Level	Min	Max
Input high level	2.1V	3.3V
Input low level	0V	0.5V
Output high level	2.2V	3.0V
Output low level	0V	0.35V

For 1.8V signals:

### Operating Range - Interface Levels (1.8V CMOS)

Level	Min	Max
Input high level	1.6V	2.2V
Input low level	0V	0.4V
Output high level	1,65V	2.2V
Output low level	0V	0.35V

## 8.2. Using a GPIO Pad as Input

The GPIO pads, when used as inputs, can be connected to a digital output of another device and report its status, provided this device has interface levels compatible with the 2.8V CMOS levels of the GPIO.

If the digital output of the device were to be connected with the GPIO input pad had interface levels different from the 2.8V CMOS, then it could be buffered with an open collector transistor with a 47K pull up to 2.8V.











## 8.9. Using the Temperature Monitor Function

### 8.9.1. Short Description

The Temperature Monitor is a function of the module that permits to control its internal temperature and if properly set (see the #TEMPMON command on AT Interface guide) it raises to High Logic level a GPIO when the maximum temperature is reached.

### 8.9.2. Allowed GPIO

The AT#TEMPMON set command could be used with one of the following GPIO:

Ball	Signal	Function	Type	Input / Output Current	Note
34	GPIO 01	GPIO01 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
6	GPIO 08	GPIO08 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
5	GPIO 09	GPIO09 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
4	GPIO 10	GPIO10 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
1	GPIO 13	GPIO13 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
60	GPIO 14	GPIO14 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
71	GPIO 15	GPIO15 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
64	GPIO 16	GPIO16 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
59	GPIO 17	GPIO17 Configurable GPIO	CMOS 2.8V	1µA / 1mA	
76	GPIO 18	GPIO18 Configurable GPIO	CMOS 2.8V	1µA / 1mA	

The set command could be used also with one of the following GPIO but in that case the alternate function is not usable:

Ball	Signal	Function	Type	Input / Output Current	Note
33	GPIO 02	GPIO02 Configurable GPIO	CMOS 2.8V	1µA / 1mA	Alternate function (JDR)
53	GPIO 05	GPIO05 Configurable GPIO	CMOS 2.8V	1µA / 1mA	Alternate function (RFTXMON)
51	GPIO 07	GPIO07 Configurable GPIO	CMOS 2.8V	1µA / 1mA	Alternate function (BUZZER)





## 9. RTC and Auxiliary Supply

### 9.1. RTC Bypass Out

The VRTC pin brings out the Real Time Clock supply, which is separate from the rest of the digital part, allowing only RTC going on when all the other parts of the device are off. A backup capacitor can be added to this power output in order to increase the RTC autonomy during power off of the battery. NO Devices must be powered from this pin.

### 9.2. VAUX1 Power Output

A regulated power supply output is provided in order to supply small devices from the module. This output is active when the module is ON and goes OFF when the module is shut down. The operating range characteristics of the supply are:

**Operating Range - VAUX1 power supply - GE863-GPS**

	Min	Typical	Max
<b>Output voltage</b>	2.75V	2.85V	2.95V
<b>Output current</b>			50mA
<b>Output bypass capacitor (inside the module)</b>			2.2µF

**Operating Range - VAUX1 power supply - GE863-QUAD/PY/SIM**

	Min	Typical	Max
<b>Output voltage</b>	2.75V	2.85V	2.95V
<b>Output current</b>			100mA
<b>Output bypass capacitor (inside the module)</b>			2.2µF



## 10. PPS GPS Output (GE863-GPS only)

### 10.1. Description

The Time Mark output 1PPS provides a one pulse-per-second signal to the user specific application. The 1PPS pulse is available at any time as soon as a fix is done. This signal is a positive logic, CMOS level output pulse that transitions from logic 'low' condition to logic 'high' at a 1 Hz rate.

### 10.2. Pulse Characteristics

The signal is available on BGA Ball # 75 on GE863-GPS and on pin 26 of PL104 on EVK2 Adapter board (CS1151).

Type: Output CMOS 2.8V  
Duration: Typically 1us  
Pull up/ down: Internal 100Kohm Pull down



**NOTE:**

The signal is available only when the receiver provides a valid Navigation solution.








## 12. Mounting the GE863 on the Application Board

### 12.1. General

The Telit GE863 modules have been designed in order to be compliant with a standard lead-free SMT process.

#### 12.1.1. Module Finishing & Dimensions

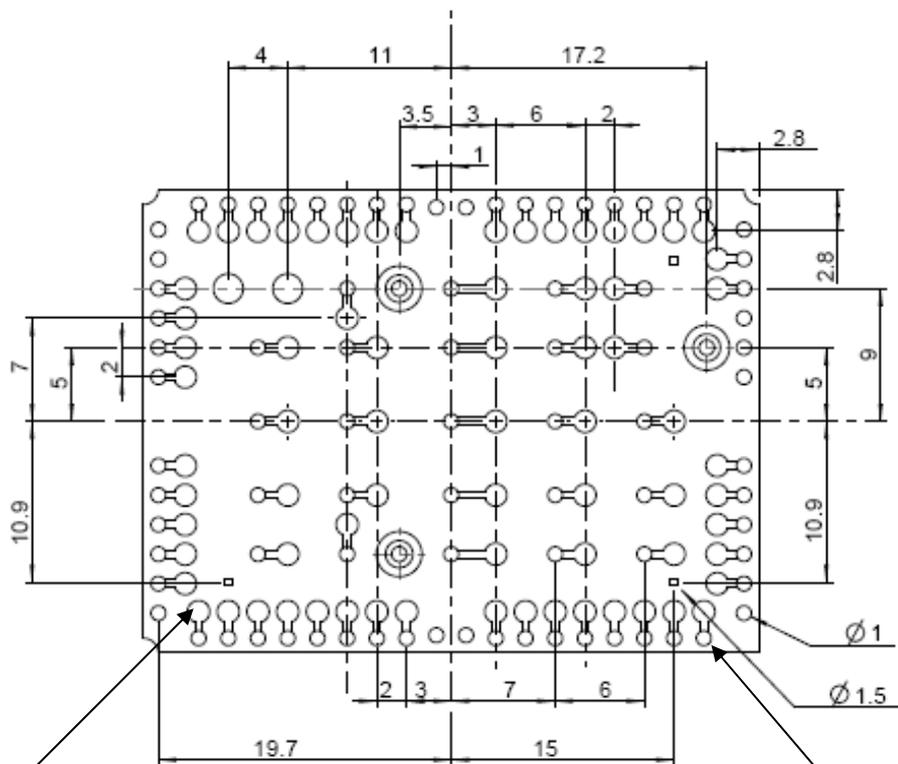


Surface finishing Ni/Au for all test pads

**Lead-free Alloy:**  
Surface finishing Sn/Ag/Cu for all solder pads



### 12.1.2. Recommended Foot Print for the Application

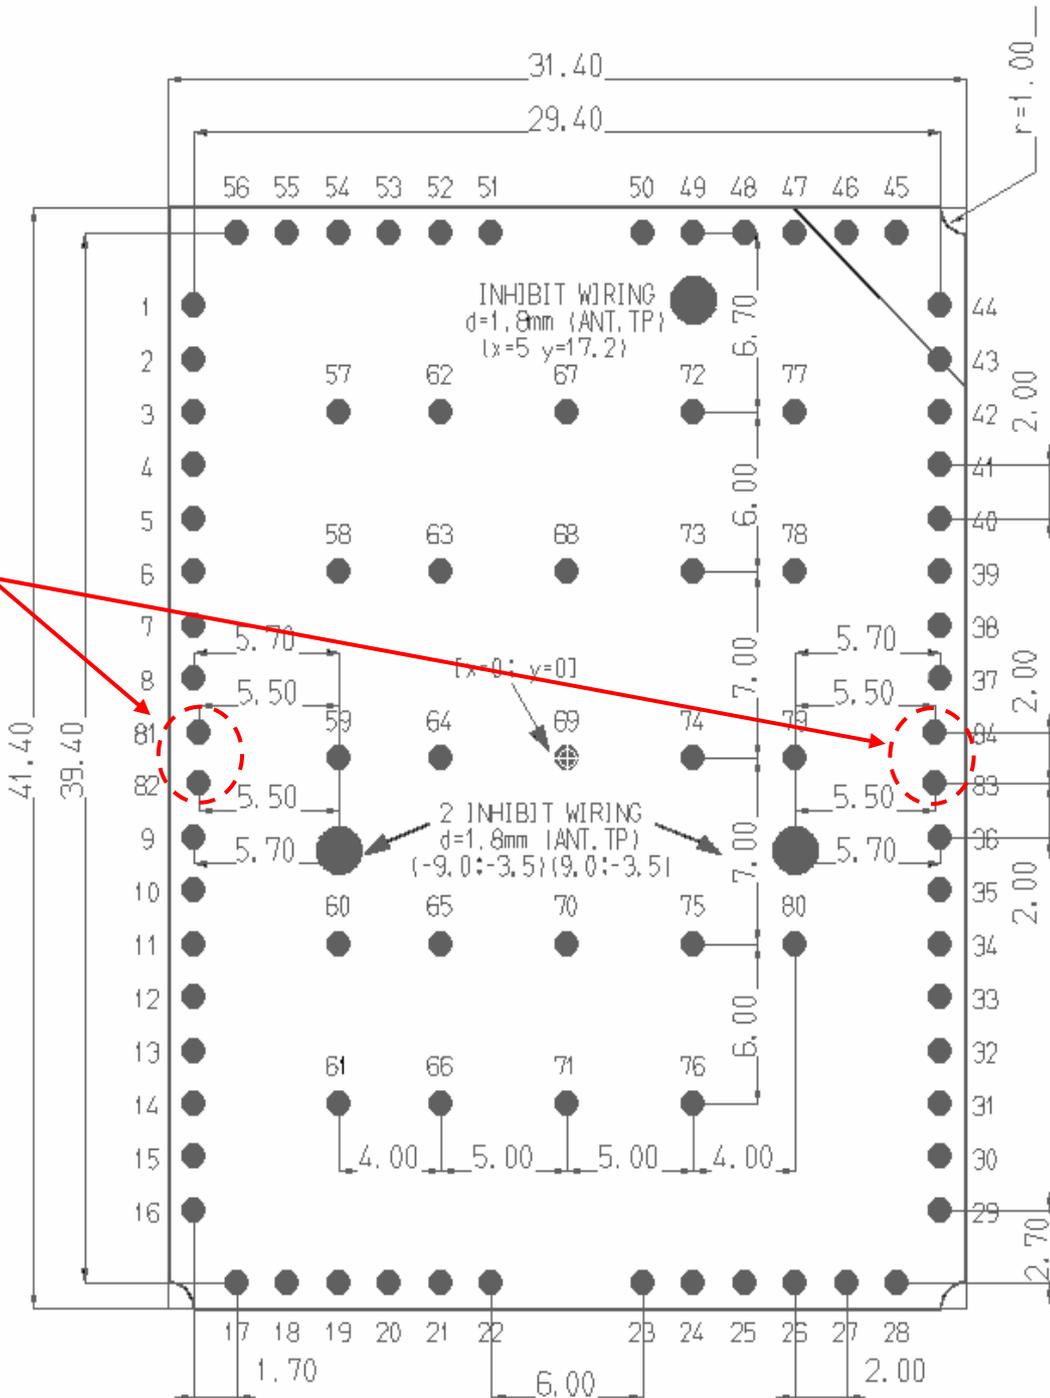

**NOTE:**  
Pads 81, 82, 83 and 84 are not in line with the others. Please check the quotes.





#### 12.1.4. Debug of the GE863 in Production

To test and debug mounting of the GE863, we strongly recommend to foresee test pads on the host PCB, in order to check the connection between the GE863 itself and the application and to test the performance of the module connecting it with an external computer. Depending by the customer application, these pads include, but are not limited to, the following signals:

- TXD
- RXD
- ON/OFF
- RESET
- GND
- VBATT
- TX\_TRACE
- RX\_TRACE
- PWRMON


#### 12.1.5. Stencil

Stencil's apertures layout can be the same of the recommended footprint (1:1), we suggest a thickness of stencil foil  $\geq 120\mu\text{m}$ .





Placement of microvias not covered by solder resist is not recommended, unless the microvia carries the same signal of the pad itself.

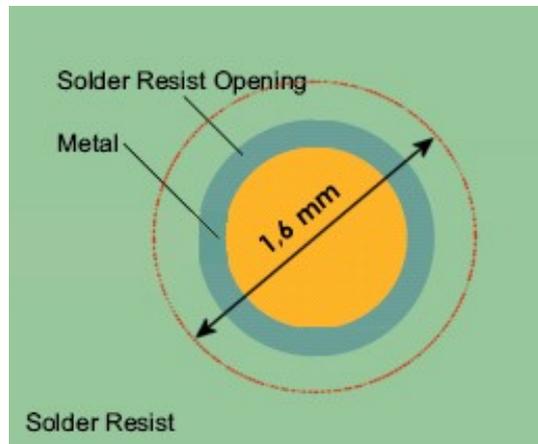

Holes in pad are allowed only for blind holes and not for through holes.

Recommendations for PCB pad surfaces:

Finish	Layer thickness [ $\mu\text{m}$ ]	Properties
Electro-less Ni / Immersion Au	3 - 7 / 0.05 - 0.15	Good solder ability protection, high shear force values


The PCB must be able to resist higher temperatures occurring at the lead-free process. This issue must be discussed with the PCB-supplier. Generally, the wet-ability of tin-lead solder paste on the described surface plating is better, compared to lead-free solder paste.

### 12.1.7. Solder Paste

	<b>Lead free</b>
<b>Solder paste</b>	Sn/Ag/Cu



**12.1.8. GE863 Solder Reflow**

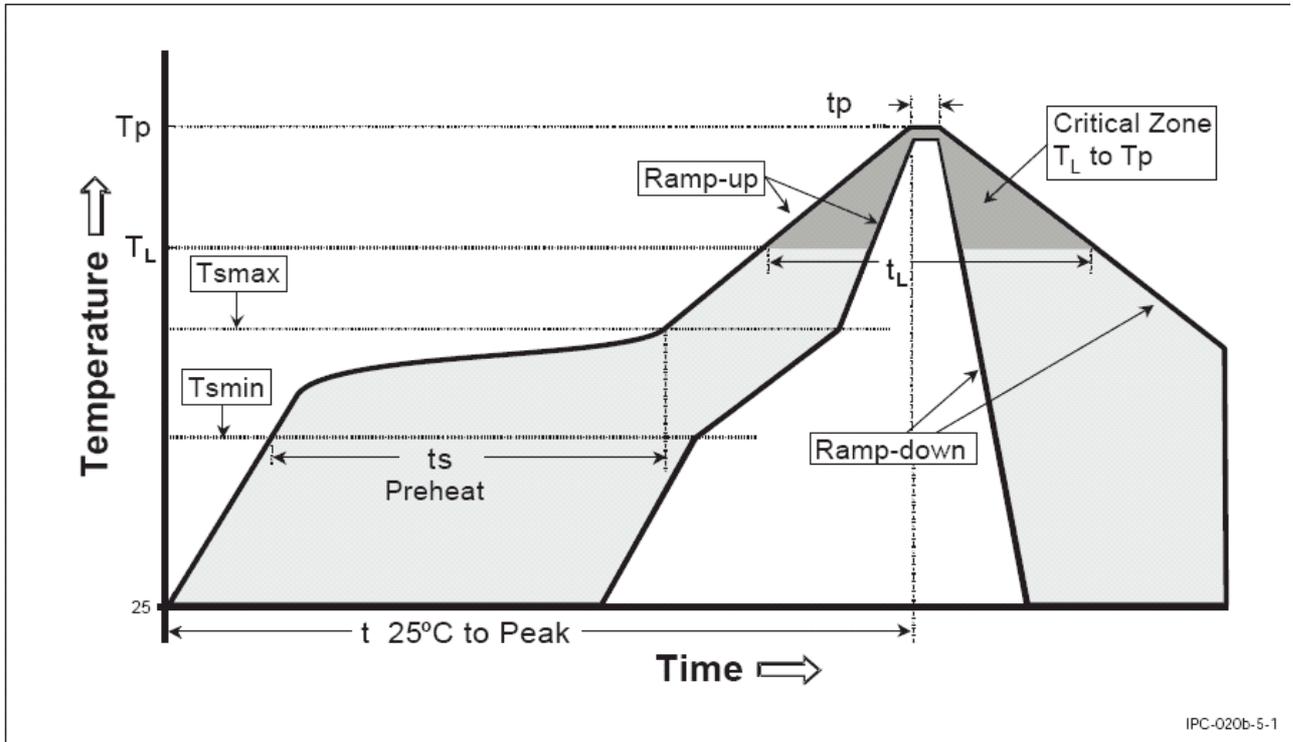

IPC-020b-5-1


Profile Feature	Pb-Free Assembly
<b>Average ramp-up rate (T<sub>L</sub> to T<sub>P</sub>)</b>	3°C/second max
<b>Preheat:</b> - Temperature Min (T <sub>smin</sub> ) - Temperature Max (T <sub>smax</sub> ) - Time (min to max) (t <sub>s</sub> )	150°C 200°C 60-180 seconds
<b>T<sub>smax</sub> to T<sub>L</sub>:</b> - Ramp-up Rate	3°C/second max
<b>Time maintained above:</b> - Temperature (T <sub>L</sub> ) - Time (t <sub>L</sub> )	217°C 60-150 seconds
<b>Peak Temperature (T<sub>P</sub>):</b>	245 +0/-5°C
<b>Time within 5°C of actual Peak</b>	10-30 seconds






## 12.2. Packing System

According to SMT processes, for picking & placing movement requirements, Telit GE863 modules are packaged on trays. Each tray contains 20 pieces with the following dimensions:

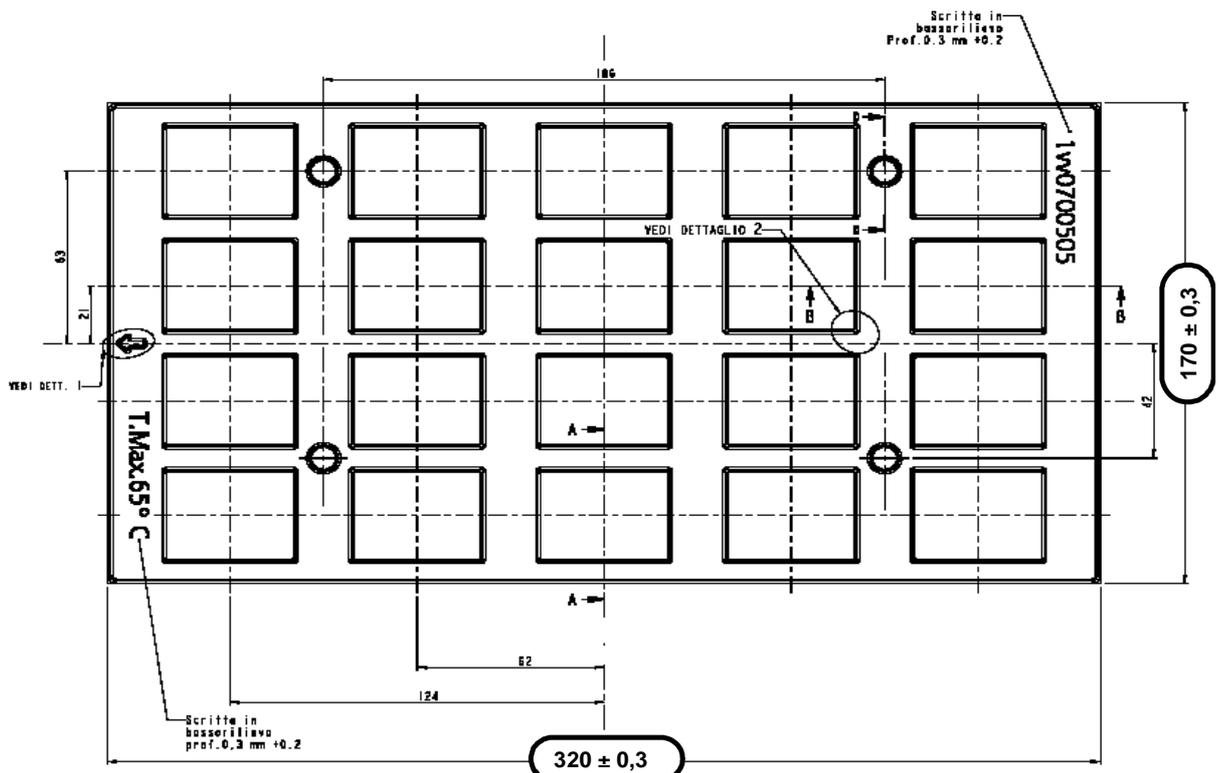

All quotes are in mm, general tolerance  $\pm 0.1$

Section A-A

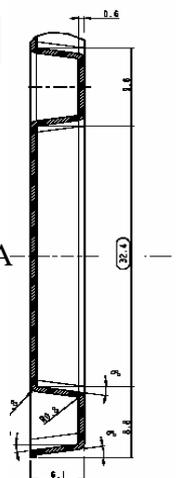

Note that trays can withstand a maximum temperature of 65° C.



Modules orientation on tray:

