15A (2C), 10A (4C) COMPACT **POWER RELAYS WITH HIGH SENSITIVITY**

mm inch

а

2 Form C, 4 Form C

 $30 \text{ m}\Omega$

2C: Approx. 0.392 N (40 g 1.41 oz)

4C: Approx. 0.196 N (20 g 0.71 oz) Stationary contact: Au flashed ÅgSnO2 type

Movable contact: AgSnO₂ type 2C: 15 A 250 V AC 10 A 30 V DC

> 4C: 10 A 250 V AC 10 A 30 V DC

2C: 3,750 VA, 300 W

4C: 2,500 VA, 300 W

2C, 4C: 250 V AC, 30 V DC

2C: 15 A (AC) 10 A (DC), 4C: 10 A

100 mA, 5 V DC

5 × 107

105

105

105


105

300 mW

150 mW

300 mW

SP RELAYS

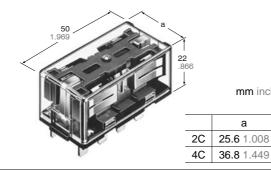

Panasonic

ideas for life

SPECIFICATIONS

Nominal switching capacity

Max. switching power

Max. switching voltage

Max. switching current

Min. switching capacity#1

Mechanical (at 180 cpm)

2C

4C

Electrical

(resistive

load)

Single side stable

(at 20 cpm)

Coil (polarized) at 20°C 68°F

15 A 250 V AC

10 A 30 V DC

10 A 250 V AC

10 A 30 V DC

Nominal operating power

Minimum set and reset power

Nominal set and reset power

Initial contact resistance, max

(By voltage drop 6 V DC 1 A)

Initial contact pressure

Contact material

Rating

load)

(resistive

Expected

life (min.

operations)

Latching

Contacts

Arrangement

FEATURES

- High Vibration/Shock Resistance Vibration resistance: 18 G, amplitude 3 mm (10 to 55 Hz) Shock resistance: 40 G (11 ms)
- Latching types available
- High Sensitivity in Small Size 150 mW pick-up, 300 mW nominal operating power
- Wide Switching Range From 1 mA to 15 A (2C) and 10 A (4C)

Characteristics (at 25°C 77°F 50% Relative humidity)

20 cpm			
1 000 MG / 500 V/ DO			
1,000 MΩ at 500 V DC			
1,500 Vrms			
3,000 Vrms			
3,000 Vrms			
Max. 30 ms (Approx. 25 ms)			
Max. 20 ms (Approx. 15 ms)			
Max. 40°C with nominal coil voltage			
and at nominal switching capacity			
Min. 392 m/s ² {40 G}			
Min. 980 m/s ² {100 G}			
176.4 m/s ² {18 G}, 10 to 55 Hz at double amplitude of 3 mm			
176.4 m/s² {18 G}, 10 to 55 Hz at double amplitude of 3 mm			
−50°C to +60°C −58°F to +140°F			
5 to 85% R.H.			
2C: 50 g 1.76 oz ; 4C: 65 g 2.29 oz			

#1 This value can change due to the switching frequency, environmental conditions, and desired reliability level, therefore it is recommended to check this with the actual load.

Remarks

Specifications will vary with foreign standards certification ratings

- *1 Measurement at same location as "Initial breakdown voltage" section
- *2 Detection current: 10 mA
- *3 Excluding contact bounce time
- *4 Half-wave pulse of sine wave: 11ms; detection time: 10μs

*5 Half-wave pulse of sine wave: 6ms

- *6 Detection time: 10µs
- *7 Refer to 6. Conditions for operation, transport and storage mentioned in AMBIENT ENVIRONMENT (p. 19, Relay Technical Information).

TYPICAL APPLICATIONS

ORDERING INFORMATION

Ex. SP	2 F		L2	[DC	24V	
Contact arrangement	Mounting of	classification		Operating functi	ion	Coil v	/oltage
2: 2 Form C	NIL: standard type with I	ASTON terminals		Nil: Single side s	table	DC 3, 5	, 6, 12,
4: 4 Form C	P: PC board type			L2: 2 coil latching	g	24,	48 V
	Standard - 1.4 mm x 0.5 Optional - 2.0 x 0.5 mm		narking)				

(Notes) 1. For PC board terminal types, please consult us for details.

- 2. 2 Form C: Carton: 20 pcs., Case: 200 pcs.
 - 4 Form C: Carton: 10 pcs., Case: 100 pcs.
- 3. UL/CSA, TÜV approved type is standard.
- 4. 1 coil latching type available.

NC machines, remote control panels, sophisticated business equipment.

TYPES AND COIL DATA (at 20°C 68°F)


Single side stable


Part No.		Nominal	Pick-up	Drop-out	Nominal	Coil resis-	Inductance.	Nominal	Maximum
2 Form C	4 Form C	voltage, V DC	voltage, V DC (max.)	voltage, V DC (min.)	operating current, mA	tance, Ω (±10%) 20°C	H (at 120 Hz)	operating power, mW	allowable voltage, V DC (40°C)
SP2-DC3V	SP4-DC3V	3	2.1	0.3	100.0	30	Approx. 0.05	300	4.5
SP2-DC5V	SP4-DC5V	5	3.5	0.5	60.2	83	0.1	300	7.5
SP2-DC6V	SP4-DC6V	6	4.2	0.6	50.0	120	0.2	300	9
SP2-DC12V	SP4-DC12V	12	8.4	1.2	25.0	480	0.7	300	18
SP2-DC24V	SP4-DC24V	24	16.8	2.4	12.5	1,920	3.0	300	36
SP2-DC48V	SP4-DC48V	48	33.6	4.8	6.2	7,700	11.2	300	72

2-coil latching

Part	Part No.		Set and reset	Nominal operating	Coil res Ω (±	istance, 10%)	Induc H (at 1	'	Nominal	Maximum allowable
2 Form C	4 Form C	voltage, V DC	voltage, V DC (max.)	current, mA	Coil I	Coil II	Coil I	Coil II	power, mW	voltage, V DC (40°C)
SP2-L2-DC3V	SP4-L2-DC3V	3	2.1	100.0	30	30	Approx. 0.03	Approx. 0.03	300	4.5
SP2-L2-DC5V	SP4-L2-DC5V	5	3.5	60.2	83	83	0.07	0.07	300	7.5
SP2-L2-DC6V	SP4-L2-DC6V	6	4.2	50.0	120	120	0.1	0.1	300	9
SP2-L2-DC12V	SP4-L2-DC12V	12	8.4	25.0	480	480	0.4	0.4	300	18
SP2-L2-DC24V	SP4-L2-DC24V	24	16.8	12.5	1,920	1,920	1.4	1.4	300	36
SP2-L2-DC48V	SP4-L2-DC48V	48	33.6	6.2	7,680	7,680	5.6	5.6	300	72

DIMENSIONS 2 Form C

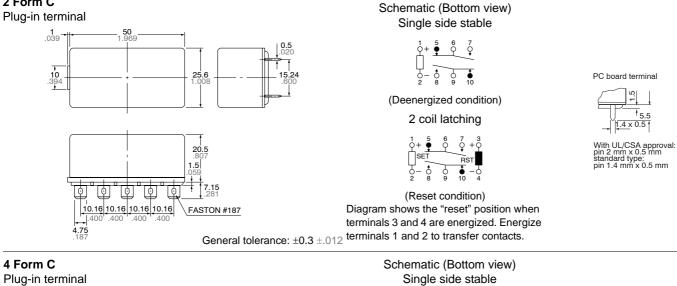

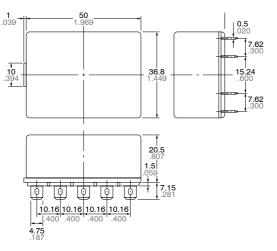

General tolerance: $\pm 0.3 \pm .012$

(Reset condition) Diagram shows the "reset" position when terminals 3 and 4 are energized. Energize terminals 1 and 2 to transfer contacts.

0 14

0 0 € 14 15 16

(Deenergized condition)

2 coil latching

12 13 Q Q

13 Q

PC board terminal

mm inch





With UL/CSA approval: pin 2 mm x 0.5 mm standard type: pin 1.4 mm x 0.5 mm


0 15 16


de 61110 0000 en en 454

REFERENCE DATA

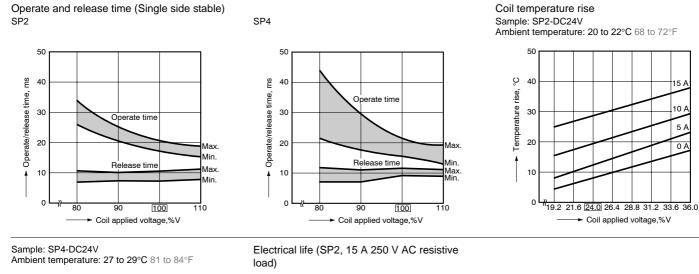


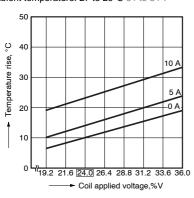


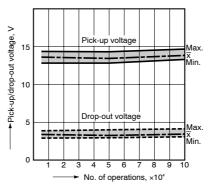

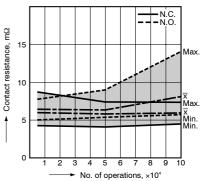

Electrical life (SP4, 10 A 250 V AC resistive load)

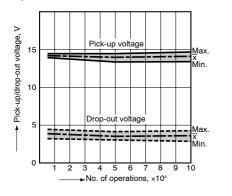

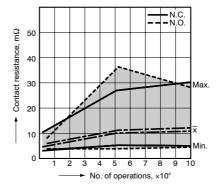

15 A

10 A


5 A

0 A


ACCESSORIES

Soldering socket SP2-SS


SP

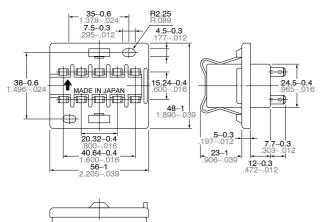



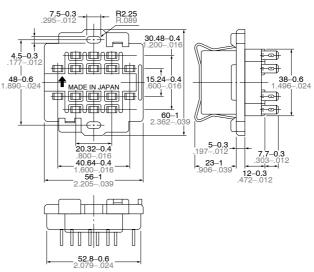


Wrapping socket SP2-WS 52.8-0.6 2.079-.02

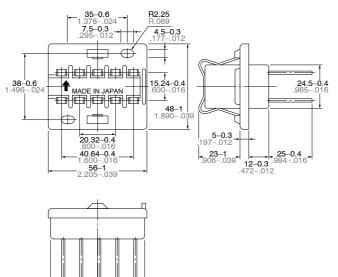

1.5


___II


SP4-WS

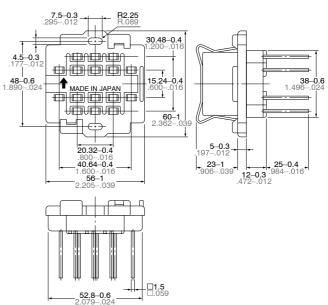

Mounting hole drilling diagram

52.8-0.6

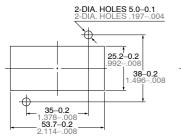

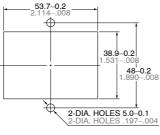

Performance profile

· •··• p·•								
Item	SP2, socket with solder	SP4, socket with solder	SP2, wrap- ping socket	SP4, wrap- ping socket				
Withstand voltage	AC 3,000V, 1 min., between each terminal							
Insulation resistance	1,000 MΩ min							
Ambient working temperature	-50 to +60°C -58 to +140°F							
Maximum current, ON current	15 A	10 A	12 A	10 A				

Note: Do not remove the relay while it is ON.

Notes:

 Mounting screws and the fastening bracket are included in the package.
 Mount the relay with the proper mounting direction — i.e. with the direction of the "M" mark on top of the relay case matching the direction of the "M" mark on the terminal block. (The ; direction of the terminal block is the upward direction of the relay.)


Mounting and removal of fastening bracket


1. Mounting

Insert the A part of the fastening bracket into the mounting groove of the socket, and then fit the B part into groove, while pressing with the tip of a minus screwdriver.


2. Removal

Slide the B part of the fastening bracket from the groove in the socket, while pressing with the tip of a minus screwdriver. While the bracket is in this position, keep pressing the C part of the bracket to the relay side with your finger, and lift up to the left side and remove from the groove, as in the diagram at right.

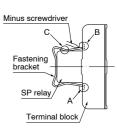

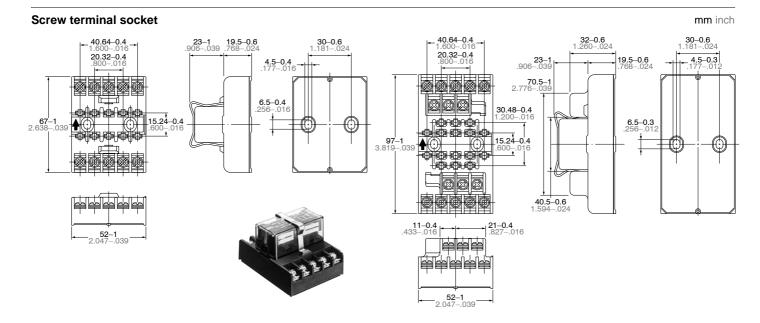

Mounting hole drilling diagram

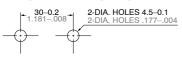

Notes:

(1) Mounting screws and the fastening bracket are included in the package.
(2) Mount the relay with the proper mounting direction — i.e. with the direction of the "M" mark on top of the relay case matching the direction of the "M" mark on the terminal block. (The ; direction of the terminal block is the upward direction of the relay.)


Fastening bracket mounting and removal

1. Mounting


Insert the A part of the fastening bracket into the mounting groove of the terminal block, and then fit the B part into groove, while pressing with the tip of a minus screwdriver.

2. Removal

Slide the B part of the fastening bracket from the groove in the terminal block, while pressing with the tip of a minus screwdriver. While the bracket is in this position, keep pressing the C part of the bracket to the relay side with your finger, and lift up to the left side and remove from the groove, as in the diagram at right.

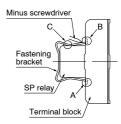


Mounting plate

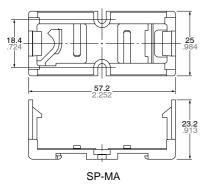

The SP-Relay with


SP-MA attached

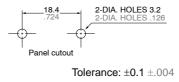



Direct chassis mounting possible, and applicable to DIN rail. [DIN 46277 (35 mm width) is applicable.]

Method for mounting on DIN rail

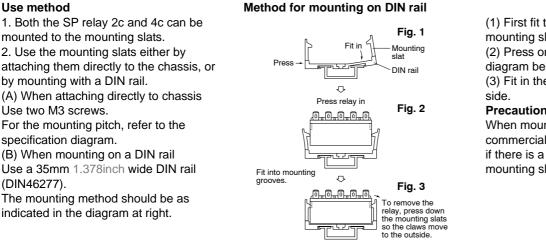

(1) First fit the arc shaped claw of the mounting slat into the DIN rail. (2) Press on the side as shown in the diagram below.

(3) Fit in the claw part on the opposite

Precautions for use

When mounting to a DIN rail, use a commercially available fastening bracket if there is a need to stop sliding of the mounting slat in the rail direction.

For Cautions for Use, see Relay Technical Information.