

Keysight 909A/D Coaxial Terminations



Operating
and Service
Manual

NOTICE: This document contains references to Agilent Technologies. Agilent's former Test and Measurement business has become Keysight Technologies. For more information, go to www.keysight.com.



Notices

© Keysight Technologies 2000 - 2014

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Manual Part Number

00909-90034

Edition

Edition 5, August 2014

Printed in Malaysia

Keysight Technologies
Phase 3 Bayan Lepas Free Industrial Zone
Bayan Lepas, Penang 11900 Malaysia

Certification

Keysight Technologies certified that this product met its published specifications at the time of shipment from the factory. Keysight Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (NIST, formerly NBS), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Keysight disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Keysight shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Keysight and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

U.S. Government Restricted Rights. Software and technical data rights granted to the federal government include only those rights customarily provided to end user customers. Keysight provides this customary commercial license in Software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data - Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

WEEE Compliance



This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as a “Monitoring and Control Instrumentation” product.

Do not dispose in domestic household waste.

To return unwanted products, contact your local Keysight office, or see www.keysight.com for more information.

Contacting Keysight

For more information, please contact your nearest Keysight office.

Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	81 426 56 7832
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

Europe

Austria	0820 87 44 11
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700
Germany	01805 24 6333
Ireland	1890 924 204
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland (French)	41 (21) 8113811 (Opt 2)
Switzerland (German)	0800 80 53 53 (Opt 1)
United Kingdom	44 (0) 118 9276201
Other European Countries:	www.keysight.com/find/contacts

Or, go to www.keysight.com/find/assist for more information.

Contents

1	Introduction	7
	Product Overview	8
	909A Coaxial Termination	8
	909D Coaxial Termination	9
2	Specifications	11
	Product Specifications	12
	Physical Specifications	13
	Pin Depth Specifications	13
3	Installation and Service	15
	Installation	16
	Initial Inspection	16
	Service Instructions	17
	Adjustment	17
	Repair	17
	Maintenance	17
	Cleaning Connectors	17
	Connections	19
	Handling and Storage	23

Contents

**Keysight 909A/D Coaxial Terminations
Operating and Service Manual**

1 Introduction

Product Overview 8

"909A Coaxial Termination" on page 8

"909D Coaxial Termination" on page 9

This chapter provides you the overview of Keysight 909A and 909D Coaxial Termination.

Product Overview

The Keysight 909A and 909D terminations are low-reflection loads for terminating 50Ω coaxial systems in their characteristic impedance. The Keysight 909A is extremely broadband, covering the frequency range from DC to 18GHz. The Keysight 909D is specified to 26.5GHz, and mode free to 34GHz. Both terminations find wide use as accessories for broadband measuring instrument and for coaxial instrumentation.

909A Coaxial Termination

The Keysight 909A is furnished with a Precision 7mm connector. This is a sexless connector with low RF leakage and clearly defined reference plane. As an option, the Keysight 909A can be furnished with either male or female Type-N connector interfaces per IEEE standard 287 GPC. The outer conductors of these Type-N interfaces are made of passivated stainless steel.

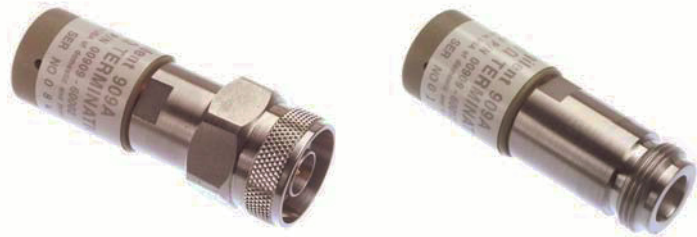


Figure 1-1 Keysight 909A with male and female Type-N connector

909D Coaxial Termination

The Keysight 909D has Precision 3.5mm connector interfaces per IEEE standard 287 GPC.



Figure 1-2 Keysight 909D Coaxial Terminations

2 Specifications

Product Specifications 12
Physical Specifications 13
Pin Depth Specifications 13

This chapter provides you the specifications of Keysight 909A and 909D coaxial terminations.

Product Specifications

Model Number	909A	909D
Frequency Range	DC to 18GHz	DC to 26.5GHz
Impedance	50Ω	50Ω
Connectors	Option 701 Precision 7mm Option 012 Type N (m) Option 013 Type N (f)	Option 011 3.5mm (f) Option 301 3.5mm (m) Option 040 3.5mm (m)
Reflection Coefficient	Option 701 <ul style="list-style-type: none"> • DC to 4GHz : 0.024 (1.05 SWR) • 4 to 12.4GHz : 0.048 (1.10 SWR) • 12.4 to 18GHz : 0.110 (1.25 SWR) Option 012 and 013 <ul style="list-style-type: none"> • DC to 4GHz : 0.029 (1.06 SWR) • 4 to 12.4GHz : 0.052 (1.11 SWR) • 12.4 to 18GHz : 0.130 (1.30 SWR) 	Option 011 and 301 <ul style="list-style-type: none"> • DC to 3GHz : 0.01 (1.02 SWR) • 3 to 6GHz : 0.02 (1.04 SWR) • 6 to 26.5GHz : 0.06 (1.12 SWR) Option 040 <ul style="list-style-type: none"> • DC to 4GHz : 0.01 (1.02 SWR) • 4 to 6GHz : 0.02 (1.04 SWR) • 6 to 26.5GHz : 0.06 (1.12 SWR)
Power Rating	2W average 300W peak	2W average* 100W peak (10ps max. pulse width) at 20°C

* Derated to 1W average at 75°C

Physical Specifications

Keysight 909A Physical Specifications

	Option 701	Option 012	Option 013
Length	45mm (1.77in)	52mm (2.05in)	52mm (2.05in)
Diameter	22mm (0.87in)	21mm (0.83in)	18mm (0.71in)
Weight	59g (2.08oz)	52g (1.83oz)	50g (1.76oz)
Shipping Weight	0.45kg (0.99lb)	0.45kg (0.99lb)	0.45kg (0.99lb)

Keysight 909D Physical Specifications

	Option 011	Option 301 and 040
Length	23mm (0.91in)	24mm (0.94in)
Diameter	8mm (0.16in)	9mm (0.35in)
Weight	7g (0.25oz)	7g (0.25oz)
Shipping Weight	0.45kg (0.99lb)	0.45kg (0.99lb)

Pin Depth Specifications

Keysight 909A Pin Depth in Micrometers (10^{-4} inches)

Option 701	Option 012	Option 013
-7.9 to -98.4 (-2 to -25)	0 to -157.5 (0 to -40)	0 to -118.1 (0 to -30)

Keysight 909D Pin Depth in Micrometers (10^{-4} inches)

Option 011	Option 040	Option 301
0 to -78.8 (0 to -20)	0 to -78.8 (0 to -20)	0 to -78.8 (0 to -20)

Environmental Specifications

Parameter	Required Values/Ranges
Temperature	
• Operation	+15°C to +35°C (+59°F to +95°F)
• Storage	-40°C to +75°C (-40°F to +167°F)
Altitude	
• Operation	< 4,500m (15,000ft)
• Storage	< 15,000m (50,000ft)
Relative humidity	Always non-condensing
• Operation	0% to 80% (26°C maximum dry bulb)
• Storage	0% to 95%
Vibration	0.015", 5-55-5Hz, 15min, 3 axes
Shock	100g, 1-2ms, 3 times each plane

3

Installation and Service

Installation 16
"Initial Inspection" on page 16
Service Instructions 17
"Adjustment" on page 17
"Repair" on page 17
Maintenance 17
"Cleaning Connectors" on page 17
"Connections" on page 19
"Handling and Storage" on page 23

This chapter provides you installation and service information.

Installation

Initial Inspection

- 1** Unpack and inspect the shipping container and its contents thoroughly to ensure that nothing was damaged during shipment. If the shipping container or cushioning material is damaged, the contents should be checked both mechanically and electrically.
- 2** If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, contact the nearest Keysight Technologies Sales and Service office. Refer to the Service and Support information in the front matter of this manual. Keysight Technologies will arrange for repair or replacement of the damaged or defective equipment. Keep the shipping materials for the carrier's inspection.
- 3** If you are returning the instrument under warranty or for service, repackaging the instrument requires original shipping containers and materials or their equivalents. Keysight Technologies can provide packaging materials identical to the original materials. Refer to Service and Support information in the front matter of this manual for the Keysight Technologies nearest to you. Attach a tag indicating the type of service required, return address, model number, and serial number. Mark the container **FRAGILE** to insure careful handling. In any correspondence, refer to the instrument by model number and serial number.

Service Instructions

Adjustment

The coaxial terminations does not have internal adjustments and should not be opened.

Repair

The coaxial terminations are not recommended for repair. In case your coaxial terminations require repair services, please contact your nearest Keysight Sales and Service Center.

Maintenance

The connectors, particularly the connector faces, must be kept clean. Keysight recommends that the connectors be periodically inspected and cleaned if necessary.

Cleaning Connectors

Clean connectors are essential for ensuring the integrity of RF and microwave coaxial connectors.

1 Use Compressed Air or Nitrogen

WARNING

Always use protective eyewear when using compressed air or nitrogen.

Use compressed air (or nitrogen) to loosen particles on the connector mating plane surfaces.

You can use any source of clean, dry, low- pressure compressed air or nitrogen that has an effective oil- vapor filter and liquid condensation trap placed just before the outlet hose.

Ground the hose nozzle to prevent electrostatic discharge, and set the air pressure to less than 414kPa (60psi) to control the velocity of the air stream. High- velocity streams of compressed air can cause electrostatic effects when directed into a connector. These electrostatic effects can damage the device.

2 Clean the Connector Threads

WARNING

Keep isopropyl alcohol away from heat, sparks and flame. Store in a tightly closed container. It is extremely flammable. In case of fire, use alcohol foam, dry chemical or carbon dioxide; water may be ineffective.

Use isopropyl alcohol with adequate ventilation and avoid contact with eyes, skin and clothing. It causes skin irritation, may cause eye damage and is harmful if swallowed or inhaled. It may be harmful if absorbed through the skin. Wash thoroughly after handling.

In case of spill, soak up with sand or earth. Flush spill are with water.

Dispose of isopropyl alcohol in accordance with all applicable federal, state and local environmental regulations.

Use a lint- free swab or cleaning cloth moistened with isopropyl alcohol to remove any dirt or stubborn contaminants on a connector that cannot be removed with compressed air or nitrogen.

- a** Apply a small amount of isopropyl alcohol to a lint- free cleaning swab.
- b** Clean the connector threads.
- c** Let the alcohol evaporate, then blow the threads dry with a gentle stream of clean, low- pressure compressed air or nitrogen. Always completely dry a connector before you reassemble or use it.

3 Clean the Mating Plane Surfaces

- a** Apply a small amount of isopropyl alcohol to a lint-free cleaning swab.
- b** Clean the center and outer conductor mating plane surfaces. When cleaning a female connector, avoid snagging the swab on the center conductor contact fingers by using short strokes.
- c** Let the alcohol evaporate, then blow the connector dry with a gentle stream of clean, low-pressure compressed air or nitrogen. Always completely dry a connector before you reassemble or use it.

4 Reinspect

Inspect the connector again to make sure that no particles or residue are present.

Connections

Good connections require a skilled operator. The most common cause of measurement error is bad connections. The following procedures illustrate how to make good connections.

How to Make a Connection

Preliminary Connection

- 1** Ground yourself and all devices. Wear a grounded wrist strap and work on a grounded, conductive table mat. Wear a heel strap when working in an area with conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.
- 2** Visually inspect the connectors.
- 3** If necessary, clean the connectors.
- 4** Use a connector gage to verify that all center conductors are within the observed pin depth values in "**Pin Depth Specifications**" on page 13.

- 5 Carefully align the connectors. The male connector center pin must slip concentrically into the contact finger of the female connector.
- 6 Push the connectors straight together.

CAUTION

Do *not* turn the device body. Only turn the connector nut. Damage to the center conductor and outer conductor can occur if the device body is twisted.

Do *not* twist or screw the connectors together. As the center conductors mate, there is usually a slight resistance.

- 7 The preliminary connection is tight enough when the mating plane surfaces make uniform, light contact. Do not overtighten this connection.
A connection in which the outer conductors make gentle at all points on both mating surfaces is sufficient. Very light finger pressure is enough to accomplish this.
- 8 Make sure the connectors are properly supported. Relieve any side pressure on the connection from long or heavy devices or cables.

Final Connection Using a Torque Wrench

- 1 Use a torque wrench to make a final connection. [Table 3-1](#) provides information about the torque wrench. Using torque wrench guarantees that the connection is not too tight, preventing possible connector damage. It also guaranteed that all connections are equally tight each time.

Table 3-1 Torque Wrench Information

Connector Type	Torque Setting	Keysight Torque Wrench Number
7mm	135N- cm (12in- lb)	8710- 1766
Type- N*	135N- cm (12in- lb)	8710- 1766
3.5mm	90N- cm (8in- lb)	8710- 1765

* Type-N connectors can be tightened hand tight, but for better repeatability they should be torqued to 135N-cm (12in-lb)

- 2 Prevent the rotation of anything other than the connector nut that you are tightening. It may be possible to do this by hand if one of the connectors is fixed (as on a test port). In all situations, however, it is recommended that you use an open-end wrench to keep the body of the device from turning.
- 3 Position both wrenches within 90 degrees of each other before applying force. See [Figure 3-3](#). Wrenches opposing each other (greater than 90 degrees apart) will cause a lifting action which can misalign and stress the connections of the devices involved. This is especially true when several devices are connected together.

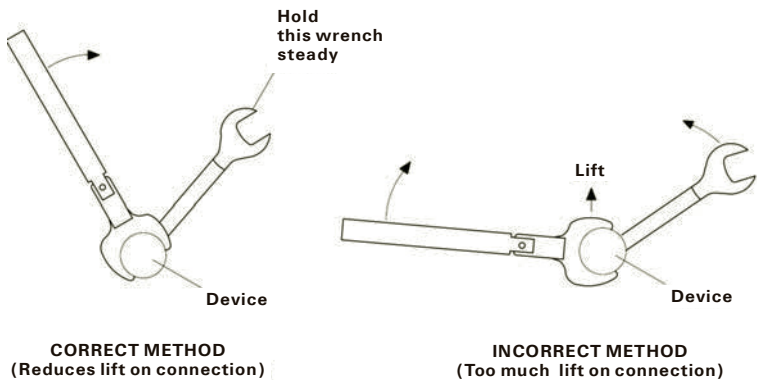


Figure 3-3 Wrench Positions

- 4 Hold the torque wrench lightly, at the end of the handle only (beyond the groove). See [Figure 3-4](#).

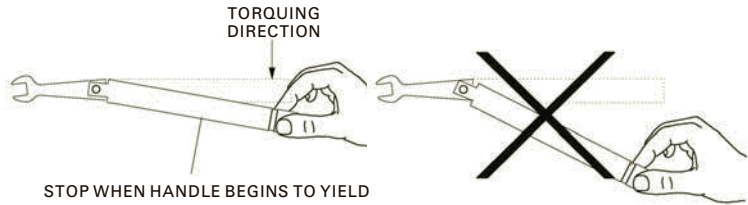


Figure 3-4 Using the Torque Wrench

- 5 Apply downward force perpendicular to the wrench handle. See [Figure 3-4](#). This applies torque to the connection through the wrench.

Do not hold the wrench so tightly that you push the handle straight down along its length rather than pivoting it, otherwise you apply an unknown amount of torque.

- 6 Tighten the connection just to the torque wrench break point. The wrench handle gives way at its internal pivot point. See [Figure 3-4](#). Do not tighten the connection further.

CAUTION

You don't have to fully break the handle of the torque wrench to reach the specified torque; doing so can cause the handle to kick back and loosen the connection. Any give at all in the handle is sufficient torque.

Do not pivot the wrench handle on your thumb or other fingers, otherwise you apply an unknown amount of torque to the connection when the wrench reaches its break point.

Do not twist the head of the wrench relative to the outer conductor mating plane. If you do, you apply more than the recommended torque.

How to Separate a Connection

To avoid lateral (bending) force on the connector mating plane surfaces, always support the devices and connections.

CAUTION

Turn the connector nut, *not* the device body. Major damage to the center conductor can occur if the device body is twisted.

- 1 Use an open-end wrench to prevent the device body from turning.
- 2 Use another open-end wrench to loosen the connector nut.
- 3 Complete the separation by hand, turning only the connector nut.
- 4 Pull the connectors straight apart without twisting, rocking or bending either of the connectors.

Handling and Storage

- Install the protective end caps and store the calibration devices in the foam-lined storage case when not in use.
- Never store connectors loose in a box, desk or bench drawer. This is the most common cause of connector damage during storage.
- Keep connectors clean.
- Do not touch mating plane surfaces. Natural skin oils and microscopic particles of dirt are easily transferred to a connector interface and are very difficult to remove.
- Do not set connectors contact-end down on a hard surface. The plating and the mating plane surfaces can be damaged if the interface comes in contact with any hard surface.

This information is subject to change without notice.
© Keysight Technologies 2000 - 2014
Edition 5, August 2014



00909-90034
www.keysight.com