







Model Number

UB200-12GM-I-V1


Single head system

Features

- Analog output 4 mA ... 20 mA
- Very small unusable area
- Measuring window adjustable
- **Program input**
- **Temperature compensation**

Diagrams

Characteristic response curve

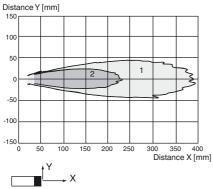

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

Technical data

General specifications	
Sensing range	15 200 mm
Adjustment range	20 200 mm
Dead band	0 15 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 400 kHz
Response delay	approx. 30 ms
Indicators/operating means	

LED yellow solid yellow: object in the evaluation range yellow, flashing: program function, object detected I FD red solid red: Error

red, flashing: program function, object not detected **Electrical specifications**

Operating voltage U_B 10 ... 30 V DC , ripple 10 $\%_{SS}$

No-load supply current I₀ \leq 30 mA Input

1 program input Input type

lower evaluation limit A1: -U $_{\rm B}$... +1 V, upper evaluation limit

A2: +4 V ... +U_B input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

Output Output type 1 analog output 4 ... 20 mA

Resolution 0.17 mm

Deviation of the characteristic curve ± 1 % of full-scale value ± 0.5 % of full-scale value Repeat accuracy

 $0 \dots 200 \Omega$ Load impedance

Temperature influence ± 1.5 % of full-scale value **Ambient conditions**

Ambient temperature

-40 ... 85 °C (-40 ... 185 °F) Storage temperature Mechanical specifications

Connector M12 x 1, 4-pin Connection type

Degree of protection IP67

Material Housing brass, nickel-plated

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT Transducer

-25 ... 70 °C (-13 ... 158 °F)

25 g

Compliance with standards and

directives Standard conformity

Mass

EN 60947-5-2:2007 + A1:2012 Standards

IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003 IEC 60947-5-7:2003


Approvals and certificates

UL approval cULus Listed, General Purpose CSA approval cCSAus Listed, General Purpose

CCC approval CCC approval / marking not required for products rated ≤36 V


www.pepperl-fuchs.com

Dimensions

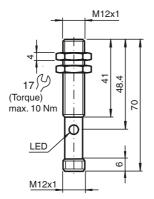


Additional Information

Programming the analog output mode

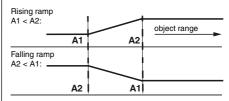

Electrical Connection

Standard symbol/Connections: (version I)

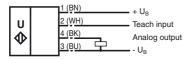

Core colors in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown
2	WH	(white)
3	BU	(blue)
4	BK	(black)

FPEPPERL+FUCHS

Accessories

UB-PROG2

Programming unit

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

BF 12

Mounting flange, 12 mm

BF 12-F

Mounting flange with dead stop, 12 mm

V1-G-2M-PVC

Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

UVW90-M12

Ultrasonic -deflector

Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with $-U_B$, A2 with $+U_B$.

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)

TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with UB
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + UB

TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U_B
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with UR

Default setting

A1: unusable area

A2: nominal sensing range

Mode of operation: rising ramp

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

www.pepperl-fuchs.com