



Technical Data Sheet

Theta 60M



Transmitter **Theta 60M** in housing S17 clipped onto a top-hat rail



Transmitter **Theta 60M** in housing S17 screw hole mounting brackets pulled out.

Special Features

- Electric insulation between measured variable, analogue output signal and power supply / Safe isolation acc. to EN 61 010
- Provision for either snapping the transmitter onto top-hat rails or securing it with screws to a wall or panel
- Housing only 17.5 mm wide (size S17 housing)/ Low space requirement
- All programming operations by IBM XT, AT or compatible PC running the self-explanatory, menu-controlled programming software, if necessary, during operation / No ancillary hand-held terminals needed
- Digital measured variable data available at the programming interface/ Simplifies commissioning, measured variable and signals can be viewed on PC in the field

Application

Theta 60M The universal transmitter Theta 60M (Figures 1 and 2) converts the input variable – a DC current or voltage, or a signal from a thermocouple, resistance thermometer, remote sensor or potentiometer – to a proportional analogue output signal.

The analogue output signal is either an impressed current or superimposed voltage which is processed by other devices for purposes of displaying, recording and/or regulating a constant. A considerable number of measuring ranges including bipolar or spread ranges are available. Input variable and measuring range are programmed with the aid of a PC and the corresponding software. Other parameters relating to specific input variable data, the analogue output signal, the transmission mode, the operating sense and the open-circuit sensor supervision can also be programmed.

The open-circuit sensor supervision is in operation when the Theta 60M is used in conjunction with a thermocouple, resistance thermometer, remote sensor or potentiometer.

The transmitter fulfils all the important requirements and regulations concerning electromagnetic compatibility EMC and Safety (IEC 1010 resp. EN 61 010). It was developed and is manufactured and tested in strict accordance with the quality assurance standard ISO 9001.

Production QA is also certified according to guideline 94/9/EG.

Principle of operation

The measured variable M is stepped down to a voltage between -300 and 300 mV in the input stage (1). The input stage includes potential dividers and shunts for this purpose. A constant reference current facilitates the measurement of resistance. Depending on the type of measurement, either one or more of the terminals 1, 2, 6, 7 and 12 and the common ground terminal 11 are used.

The constant reference current which is needed to convert a variation of resistance such as that of a resistance thermometer, remote sensor or potentiometer to a voltage signal is available at terminal 6. The internal current source (2) automatically sets the reference current to either 60 or 380 A to suit the measuring range. The corresponding signal is applied to terminal 1 and is used for resistance measurement.

Terminal 2 is used for "active" sensors, i.e. thermocouples or other mV generators which inject a voltage between -300 and 300 mV. Small currents from the open-circuit sensor supervision (3) are superimposed on the signals at terminals 1 and 2 in order to monitor the continuity of the measurement circuit. Terminal 2 is also connected to the cold junction compensation element which is a Ni 100 resistor built into the terminal block.

Terminals 7 and 12 are also input terminals and are used for measuring currents and for voltages which exceed 300 mV.

An extremely important component of the input stage is the EMC filter which protects the transmitter from interference or even destruction due to induced electromagnetic waves.

From the input stage, the measured variable (e.g. the voltage of a thermocouple) and the two auxiliary signals (cold junction compensation and the open-circuit sensor supervision) go to the multiplexer (4), which controlled by the micro-controller (6) applies them cyclically to the A/D converter (5).

The A/D converter operates according to the dual slope principle with an integration time of 20 ms at 50 Hz and a conversion time of approximately 38 ms per cycle. The internal resolution is 12 Bit regardless of measuring range.

The micro-controller relates the measured variable to the auxiliary signals and to the data which were loaded in the micro-controller's EEPROM via the programming connector (7), when the transmitter was configured. These settings determine the type of measured variable, the measuring range, the transmission mode (e.g. linearised temperature/thermocouple voltage relationship) and the operating sense (output signal directly or inversely proportional to the measured variable). The measured signal is then filtered again, but this time digitally to achieve the maximum possible immunity to interference. Finally the value of the measured variable for the output signal is computed. Apart from normal operation, the programming connector is also used to transfer measured variables on-line from the transmitter to the PC or vice versa. This is especially useful during commissioning and maintenance.

Depending on the measured variable and the input circuit, it can take 0.4 to 1.1 seconds before a valid signal arrives at the optocoupler (8). The different processing times result from the fact that, for example, a temperature measurement with a four-wire resistance thermometer and open-circuit sensor supervision requires more measuring cycles than the straight forward measurement of a low voltage.


Principle of operation

The main purpose of the opto-coupler is to provide electrical insulation between input and output. On the output side of the optocoupler, the D/A converter (9). transforms the digital signal back to an analogue signal which is then amplified in the output stage (10). and split into two non-electrically isolated output channels. A powerful heavy-duty output is available at A1 and a less powerful output for a field display unit at A2. By a combination of programming and setting the 8 DIP switches in the output stage, the signals at A1 and A2 can be configured to be either a DC current or DC voltage (but both must be either one or the other). The signal A1 is available at terminals 9 and 4 and A2 at terminals 8 and 3.

If the micro-controller (6) detects an open-circuit measurement sensor, it firstly sets the two output signals A1 and A2 to a constant value. The latter can be programmed to adopt a preset value between -10 and 110% or to maintain the value it had at the instant the open-circuit was detected. In this state, the micro-controller also switches on the red LED (11). and causes the green LED (12). to flash. Via the opto-coupler (8), it also excites the relay driver (13) which depending on configuration switches the relay (14) to its energised or de-energised state. The output contact is available at terminals 13, 14 and 15. It is used by safety circuits. In addition to being able to program the relay to be either energised or de-energised, it can also be set to "relay disabled". In this case, an open circuit sensor is only signalled by the output signal being held constant, the red LED being switched on and the green LED flashing. The relay can also be configured to monitor the measured variable in relation to a programmable limit.

The normal state of the transmitter is signalled when the green LED (12) is continuously lit. As explained above, it flashes should the measurement sensor become open-circuit. It also flashes, however, if the measured variable falls 10% below the start of the measuring range or rises 10% above its maximum value and during the first five seconds after the transmitter is switched on. The push-button S1 is for automatically calibrating the leads of a two-wire resistance thermometer circuit. This is done by temporarily shorting the resistance sensor and pressing the button for at least three seconds. The lead resistance is then automatically measured and taken into account when evaluating the measure variable.

The power supply H is connected to terminals 5 and 10 on the input block (15). The polarity is of no consequence, because the input voltage is chopped on the primary side of the power block (16) before being applied to a full-wave rectifier. Apart from the terminals, the input block (15) also contains an EMC filter which suppresses any electromagnetic interference superimposed on the power supply. The transformer block (17) provides the electrical insulation between the power supply and the other circuits and also derives two secondary voltages. One of these (5 V) is rectified and stabilised in (18) and then supplies the electronic circuits on the input side of the transmitter. The other AC from block (17) (-16 V / + 18 V) is rectified in (19) and used to supply the relay driver and the other components on the output side of the transmitter.

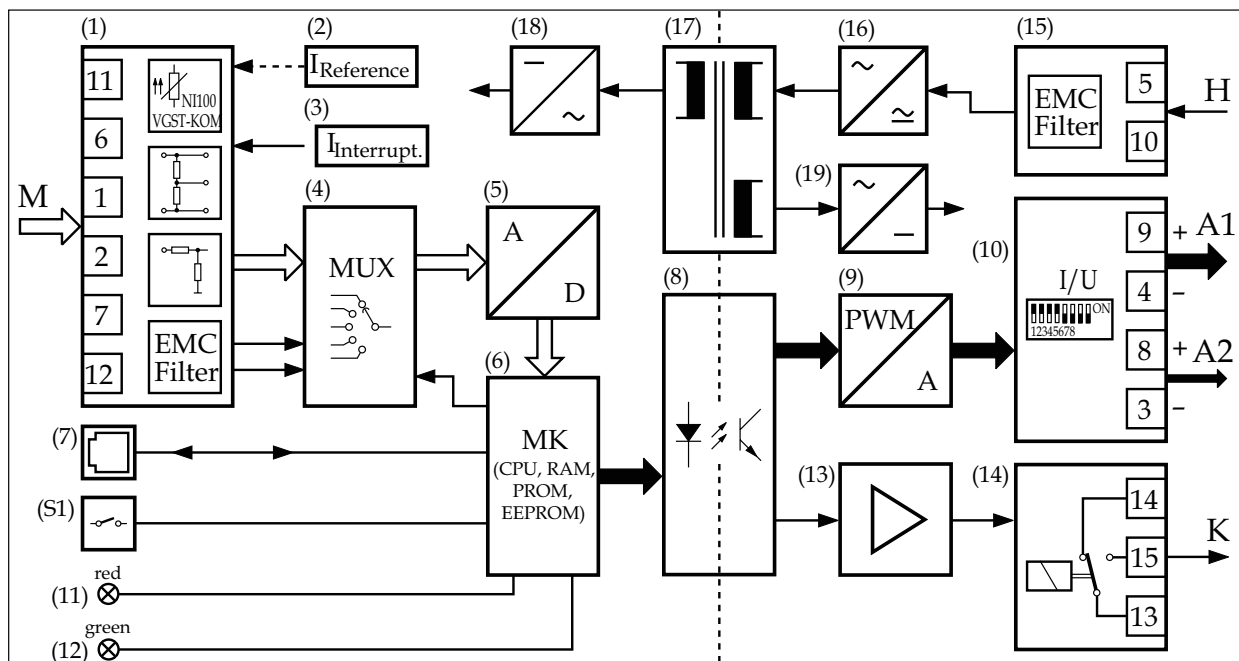

Technical Data

Programmable universal transmitter

Table 8: Temperature measuring ranges

Measuring range [°C]	Resistance thermometer		Thermocouple									
	Pt100	Ni100	B	E	J	K	L	N	R	S	T	U
0... 20												
0... 25	X	X										
0... 40	X	X		X	X		X					
0... 50	X	X		X	X	X	X				X	X
0... 60	X	X		X	X	X	X				X	X
0... 80	X	X		X	X	X	X				X	X
0... 100	X	X		X	X	X	X	X			X	X
0... 120	X	X		X	X	X	X	X			X	X
0... 150	X	X		X	X	X	X	X			X	X
0... 200	X	X		X	X	X	X	X			X	X
0... 250	X	X		X	X	X	X	X			X	X
0... 300	X			X	X	X	X	X	X	X	X	X
0... 400	X			X	X	X	X	X	X	X	X	X
0... 500	X			X	X	X	X	X	X	X		X
0... 600	X			X	X	X	X	X	X	X		X
0... 800			X									
0... 900			X	X	X	X	X	X	X	X		
0... 1000			X	X	X	X		X	X	X		
0... 1200			X		X	X		X	X	X		
0... 1500			X						X	X		
0... 1600			X						X	X		
50... 150	X	X		X	X	X	X	X			X	X
100... 300	X			X	X	X	X	X			X	X
300... 600	X			X	X	X	X	X	X	X		X
600... 900			X	X	X	X	X	X	X	X		
600... 1000			X	X	X	X		X	X	X		
900... 1200			X		X	X		X	X	X		
600... 1600			X						X	X		
600... 1800			X									
-20... 20	X	X		X	X		X					
-10... 40	X	X		X	X	X	X					X
-30... 60	X	X		X	X	X	X	X			X	X
Measuring range limits [°C]	-200 to 850	-60 to 250	0 to 1820	-270 to 1000	-210 to 1200	-270 to 1372	-200 to 900	-270 to 1300	-50 to 1769	-50 to 1769	-270 to 400	-200 to 600
	ΔR min 8 at full-scale ≤ 740 ΔR min 40 at full-scale > 740 to 5000		ΔU min 2 mV									

Technical Data

Reference conditions

Ambient temperature	23°C, ± 2 K
Power supply	24 V DC ± 10% and 230 V AC ± 10%
Output burden	Current: 0.5 · R _{ext} max. Voltage: 2 · R _{ext} min.
Influencing factors	
Temperature	< ± 0.1 ... 0.15% per 10 K
Burden	< ± 0.1% for current output < 0.2% for voltage output, providing R _{ext} > 2 R _{ext} min.
Long-time drift	< ± 0.3% / 12 months
Switch-on drift	< ± 0.5%
Common and transverse mode influence	< ± 0.2%
+ or - output connected to ground	< ± 0.2%

Accuracy data (acc. to DIN/IEC 770)

Basic accuracy	Max. error < ± 0.2% Including linearity and repeatability errors for current, voltage and resistance measurement
----------------	---

DC voltage

Measuring range	See Table 1
Direct input	Wiring diagram No. 1 ¹
Input resistance	R _i > 10 MΩ Continuous overload max. - 1.5 V, + 5 V
Input via potential divider	Wiring diagram No. 2 ¹
Input resistance	R _i = 1 MΩ Continuous overload max. ± 100 V

DC current

Measuring range	See Table 1
Low currents	Wiring diagram No. 3 ¹
Input resistance	R _i = 24.7Ω Continuous overload max. 150 mA
High currents	Wiring diagram No. 3 ¹
Input resistance	R _i = 24.7Ω Continuous overload max. 150 mA

Ambient conditions

Commissioning temperature	- 10 to + 55 °C
Operating temperature	- 25 to + 55 °C, Ex - 20 to + 55°C
Storage temperature	- 40 to + 70 °C
Relative humidity	
annual mean	≤ 75% standard climatic rating ≤ 95% enhanced climatic rating

Measuring input →

Measured variable M The measured variable M and the measuring range can be programmed Table 1: Measured variables and measuring ranges			
Measured variables	Measuring ranges		
	Limits	Min. span	Max. span
DC voltages directinput	±300 mV ¹	2 mV	300 mV
via potential divider ²	± 40 V ¹	300 mV	40 V
DC currents low currentrange	± 12 mA ¹	0.08 mA	12 mA
high currentrange	-50 to + 100 mA ¹	0.75 mA	100 mA
T emperature monitored by two,three or four-wire resistance thermometers low resistance range	-200 to 850 °C 0...740 ¹	8	740
high resistance range	0...5000 ¹	40	5000
Temperature monitored by thermocouples	-270 to 1820 °C	2 mV	300 mV
Variation ofresistance ofremote sensors / potentiometers low resistance range	0...740 ¹	8	740
high resistance range	0...5000 ¹	40	5000

¹Note permissible value of the ratio "full-scale value/span < 20".

Power supply H →

DC, AC power pack (DC and 45...400 Hz) Table 3: Nominal voltage and tolerance	
Nominal voltage U _N	Tolerance
24... 60 V DC / AC	DC -15...+ 33%
85...230 V ³ DC / AC	AC ± 15%
Power consumption	< 1.4 W resp.< 2.7 VA

Programming connector

Interface	RS 232 C
FCC-68 socket	6/6 pin
Signal level	TTL (0/5 V)
Power consumption	Approx. 50 mW

Technical Data

Resistance thermometer	
Measuring range	See Tables 1 and 8
Resistance types	Type Pt 100 (DIN IEC 751) Type Ni 100 (DIN 43 760) Type Pt 20/20°C Type Cu 10/25°C Type Cu 20/25°C See "Table 6: Specification and ordering information", feature 6 for other Pt or Ni.
Measuring current	≤0.38 mA for measuring ranges 0...740Ω or ≤0.06 mA for measuring ranges 0...5000Ω
Standard circuit	1 resistance thermometer: - two-wire connection, wiring diagram No. 4 ¹ - three-wire connection, wiring diagram No. 5 ¹ - four-wire connection, wiring diagram No. 6 ¹
Summation circuit	Series or parallel connection of 2 or more two, three or four-wire resistance thermometers for deriving the mean temperature or for matching other types of sensors, wiring diagram Nos. 4 - 6 ¹
Differential circuit	2 identical three-wire resistance thermometers for deriving the mean temperature RT1-RT2, wiring diagram No. 7 ¹
Input resistance	Ri > 10 MW
Lead resistance	≤30 Ω per lead

Open-circuit sensor circuit supervision

Potentiometer input circuits are supervised. The circuits of DC voltage resistance thermometers, thermocouples, remote sensors and current inputs are not supervised.

Pick-up/reset level	1 to 15 kW acc. to kind of measurement and range
---------------------	--

Cold junction

compensation	Internal or external
Internal Permissible variation of the internal cold junction compensation	Incorporated Ni 100
External	± 0.5 K at 23 °C, + 0.25 K/10 K
	0...70°C, programmable

¹See "Table 7: Measuring input".

Resistance sensor, potentiometer	
Measuring range	See Table 1
Resistance sensor types	Type WF Type WF DIN Potentiometer see "Table 6: Specification and ordering information" feature 5.
Measuring current	≤0.38 mA for measuring range 0...740 W or ≤0.06 mA for measuring range 0...5000 W
Kinds of input	1 resistance sensor WF current measured at pick-up, wiring diagram No. 12 ¹ 1 resistance sensor WF DIN current measured at pick-up, wiring diagram No. 13 ¹ 1 resistance sensor for two, three or four-wire connection, wiring diagram No. 4-6 ¹ 2 identical three-wire resistance sensors for deriving a differential, wiring diagram No. 7 ¹
Input resistance	Ri > 10 MΩ
Lead resistance	≤30 Ω per lead

Trip point setting



using PC for GW	Programmable - between -10 and 110% ¹ (of the measured variable) - between + 1 and + 50% ¹ /s (of the rate-of-change of the measured variable)
Reset ratio	Programmable - between 0.5 and 100% ¹ (of the measured variable) - between 1 and 100% ¹ /s (of the rate-of-change of the measured variable)
Operating and resetting delays	Programmable - between 1 to 60 s
Operating sense	Programmable - Relay energized, LED on - Relay energized, LED off - Relay de-energized, LED on - Relay de-energized, LED off (once limit reached)
Relay status signal	GW by red LED ()

Table 4: Contact arrangement and data

Symbol	Material	Contact rating
	Gold flashed silveralloy	AC: ≤2A / 250 V (500 VA) DC: ≤1A / 0.1...250 V (30 W)

Relay approved by UL, CSA, TÜV, SEV

Technical Data

Output signal $\ominus \rightarrow$	
Output signals A1 and A2 The output signals available at A1 and A2 can be configured for either an impressed DC current I_A or a superimposed DC voltage U_A by appropriately setting DIP switches. The desired range is programmed using a PC. A1 and A2 are not DC isolated and exhibit the same value.	
Standard ranges for I	A 0...20 mA or 4...20 mA
Non-standard ranges	Limits -22 to + 22 mA Min. span 5 mA Max. span 40 mA
Open-circuit voltage	Neg. -13.2...-18 V, pos. 16.5...21 V
Burden voltage I_{A1}	+ 15 V, resp. -12 V
External resistance I_{A1}	Rext max. [k] = 15 V I_{AN} [mA] I_{AN} = full-scale output current < 0.3 V resp. = $\frac{-12 \text{ V}}{I_{AN} [\text{mA}]}$ I_{AN} = full-scale output current
Burden voltage I_{A2}	< 0.3 V
¹ See "Table 7: Measuring input". ² In relation to analogue output span A1 resp. A2.	
External resistance I_{A2}	Rext max. [k Ω] = $\frac{0.3 \text{ V}}{I_{AN} [\text{mA}]}$
Residual ripple	< 1% p.p., DC ... 10 kHz < 1.5% p.p. for an output span < 10 mA
Standard ranges for U	A 0...5, 1...5, 0...10 or 2...10 V
Non-standard ranges	Limits -12 to + 15 V Min. span 4 V Max. span 27 V
Open-circuit voltage	$\leq 40 \text{ mA}$
Load capacity U_{A1} / U_{A2}	20 mA
External resistance	
U_{A1} / U_{A2}	Rext [k Ω] $\geq \frac{U_A [\text{V}]}{20 \text{ mA}}$
Residual ripple	< 1% p.p., DC ... 10 kHz < 1.5% p.p. for an output span < 8 V

Supervising a limit GW (\square)

This Section only applies to transmitters which are not configured to use the output contact K in conjunction with the open-circuit sensor supervision (see Section "Open-circuit sensor circuit supervision- \rightarrow ").

This applies ...

... in all cases when the measured variable is a DC voltage or current ... when the measured variable is a resistance thermometer, a thermocouple, a remote sensor or a potentiometer and the relay is set to "Relay disabled"

Limit:	Programmable - Disabled - Lower limit value of the measured variable (see Fig. 6, left) - Upper limit value of the measured variable (see Fig. 6, left) - Maximum rate of change of the measured variable Slope = $\frac{\Delta \text{measured variable}}{\Delta t}$
--------	---

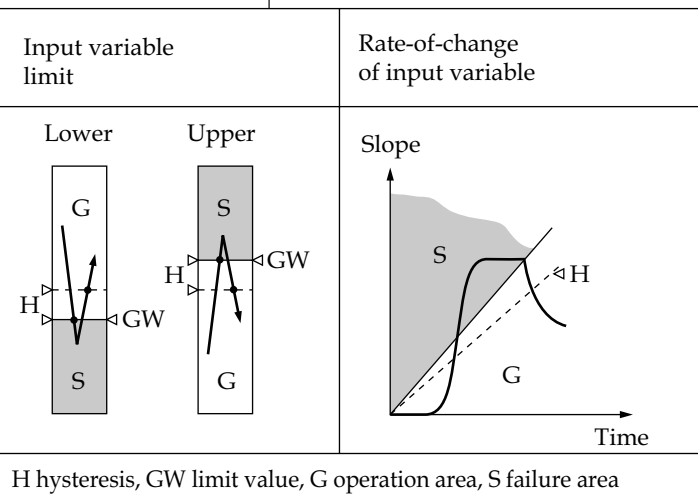
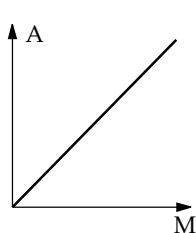
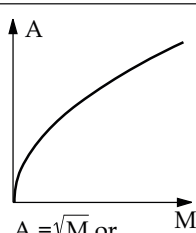
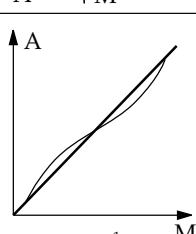
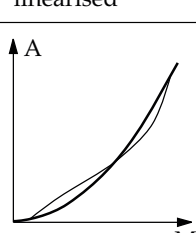


Fig6. Switching function according to limit monitored

Additional error (additive)

- < $\pm 0.3\%$ for linearised characteristic
- < $\pm 0.3\%$ for measuring ranges
- < 5 mV, 0.3...0.75 V,
- < 0.2 mA or < 20V
- < $\pm 0.3\%$ for a high ratio between full-scale value and measuring range > factor 10, e.g. Pt 100
- 175.84 ...194.07 Ω
- 200 0C...250 $^{\circ}$ C
- < $\pm 0.3\%$ for current output
- < 10 mA span
- < $\pm 0.3\%$ for voltage output
- < 8 V span
- < 2 \cdot (basic and additional error) for two-wire resistance measurement

Technical Data

Programmable universal transmitter	
Output characteristic Characteristic: Programmable Table 2: Available characteristics (acc. to measured variable)	
Measured variables	Characteristic
DC voltage DC current Resistance thermometer (linear variation of resistance) Thermocouple (linear variation of voltage) Sensor or potentiometer	 <p>$A = M$</p>
DC voltage DC current	 <p>$A = \sqrt{M}$ or $A = \sqrt[3]{M^3}$</p>
DC voltage DC current Resistance thermometer (linear variation with temperature) Thermocouple signal (linear variation with temperature) Sensor or potentiometer	 <p>$A = f(M)^1$ linearised</p>
DC voltage DC current Sensor or potentiometer	 <p>$A = f(M)^2$ quadratic</p>
Operating sense	Programmable output signal directly or inversely proportional to measured variable
Setting time (IEC 770)	Programmable from 2 to 30 s

Special characteristics

¹25 input points M given referred to a linear output scale from -10% to + 110% in steps of 5%.

Fixed settings for the output signals A1 and A2

After switching on	A1 and A2 are at a fixed value for 5 s after switching on (default). Setting range -10 to 110% ² programmable, e.g. between 2.4 and 21.6 mA (for a scale of 4 to 20 mA). The green LED ON flashes for the 5 s
--------------------	---

When input variable out of limits

A1 and A2 are at either a lower or an upper fixed value when the input variable... ..falls more than 10% below the minimum value of the permissible range ... exceeds the maximum value of the permissible range by more than 10%. Lower fixed value = -10%², e.g. -2 mA (for a scale of 0 to 20 mA). Upper fixed value = 110%², e.g. 22 mA (for a scale of 0 to 20 mA). The green LED ON flashes Open-circuit sensor: A1 and A2 are at a fixed value when an open- circuit sensor is detected (see Section "Sensor and open- circuit lead supervision"). The fixed value of A1 and A2 is configured to either maintain their values at the instant the open- circuit occurs or adopt a preset value between -10 and 110%², e.g. between 1.2 and 10.8 V (for a scale of 2 to 10 V). The green LED ON flashes and the red LED lights continuously

Signalling modes

Output signals A1 and A2	Programmable fixed values. The fixed value of A1 and A2 is configured to either maintain their values at the instant the open-circuit occurs or adopt a preset value between - 10 and 110% ⁴ , e.g. between 1.2 and 10.8 V (for a scale of 2 to 10 V)
Front plate signals	The green LED ON flashes and the red LED lights continuously
Output contact K	Relay 1 potentially-free changeover contact (see Table 4) Operating sense programmable The relay can be either energised or de-energised in the case of a disturbance. Set to "Relay inactive" if not required!

²25 input points M given referred to a quadratic output scale from -10% to + 110%. Pre-defined output points: 0, 0, 0, 0.25, 1, 2.25, 4.00, 6.25, 9.00, 12.25, 16.00, 20.25, 25.00, 30.25, 36.00, 42.25, 49.00, 56.25, 64.00, 72.25, 81.00, 90.25, 100.0, 110.0, 110.0%.

³An external supply fuse must be provided for DC supply voltages > 125 V.
⁴In relation to analogue output span A1 resp. A2.

Technical Data

Thermocouples	
Measuring range	See Tables 1 and 8
Thermocouple pairs	Type B:Pt30Rh-Pt6Rh (IEC 584) Type E: NiCr-CuNi (IEC 584) Type J: Fe-CuNi (IEC 584) Type K: NiCr-Ni (IEC 584) Type L: Fe-CuNi (DIN 43710) Type N: NiCrSi-NiSi (IEC 584) Type R: Pt13Rh-Pt (IEC 584) Type S: Pt10Rh-Pt (IEC 584) Type T: Cu-CuNi (IEC 584) Type U: Cu-CuNi (DIN 43710) Type W5-W26 Re Other thermocouple pairs on request
Standard circuit	1 thermocouple, internal cold junction compensation, wiring diagram No. 8 ¹ 1 thermocouple, external cold junction compensation, wiring diagram No. 9 ¹
Summation circuit	2 or more thermocouples in a summation circuit for deriving the mean temperature, external cold junction compensation, wiring diagram No. 10 ¹
Differential circuit	2 identical thermocouples in a differential circuit for deriving the mean temperature TC1 - TC2, no provision for cold junction compensation, wiring diagram No. 11 ¹
Input resistance	Ri > 10 MΩ

Standards

Electromagnetic	
Compatibility	The standards DIN EN 50 081-2 and & DIN EN 50 082-2 are observed
Intrinsically safe Protection (acc. to IEC 529)	Acc. to DIN EN 50 020: 1996-04
resp. EN 60 529)	Housing IP 40 Terminals IP 20
Electrical design	Acc. to IEC 1010 resp. EN 61 010
Operating voltages	Measuring input < 40 V Programming connector, measuring outputs < 25 V Output contact, power supply < 250 V
Rated insulation voltages	Measuring input, programming connector, measuring outputs, output contact, power supply < 250 V
Pollution degree	2
Installation category II	Measuring input, programming connector, measuring outputs, output contact
Installation category III	Power supply
Test voltages	Measuring input and programming connector to: - Measuring outputs 2.3 kV, 50 Hz, 1 min. - Power supply 3.7 kV, 50 Hz, 1 min. - Output contact 2.3 kV, 50 Hz, 1 min. Measuring outputs to: - Power supply 3.7 kV, 50 Hz, 1 min. - Output contact 2.3 kV, 50 Hz, 1 min. Serial interface for the PC to: - everything else 4 kV, 50 Hz, 1 min. (PRKAB 600)

Installation data

Housing	Housing type S17 Refer to Section "Dimensional drawings" for dimensions
Material of housing	Lexan 940 (polycarbonate). Flammability Class V-0 acc. to UL 94, self-extinguishing, non-dripping, free of halogen
Mounting	For snapping onto top-hat rail (35 x 15 mm or 35 x 7.5 mm) acc. to EN 50 022 or directly onto a wall or panel using the pull-out screw hole brackets
Mounting position Terminals	Any DIN/VDE 0609 Screw terminals with wire guards for light PVC wiring and max. 2 x 0.75 mm ² or 1 x 2,5 mm ²

Permissible vibrations	2 g acc. to EN 60 068-2-6 10 ... 150 ... 10 Hz 10 cycles
Choc	3 x 50 g 3 shocks each in 6 directions acc. to EN 60 068-2-27
Weight	Approx. 0.25 kg
Electrical insulation	All circuits (measuring input/ measuring outputs/ power supply/ output contact) are electrically insulated. Programming connector and measuring input are connected. The PC is electrically insulated by the programming cable PRKAB 600.


Programming

A PC with RS 232 C interface (Windows 3.1x, 95, 98, NT or 2000), the programming cable PRKAB 600 and the configuration software VC 600 are required to program the transmitter. (Details of the programming cable and the software are to be found in the separate Data sheet: PRKAB 600 Le.)

The connections between

“PC ↔ PRKAB 600 ↔ Theta 60M” can be seen from Fig. 4. The power supply must be applied to Theta 60M before it can be programmed.


The software VC 600 is supplied on a CD. The programming cable PRKAB 600 adjusts the signal level and provides the electrical insulation between the PC and Theta 60M. The programming cable PRKAB 600 is used for programming both standard and Ex versions. Of the programmable details listed in section “Features / Benefits” one parameter – the output signal – has to be determined by PC programming as well as mechanical setting on the transmitter unit ... the output signal range by PC... the type of output (current or voltage signal) has to be set by DIP switch (see Fig. 5).

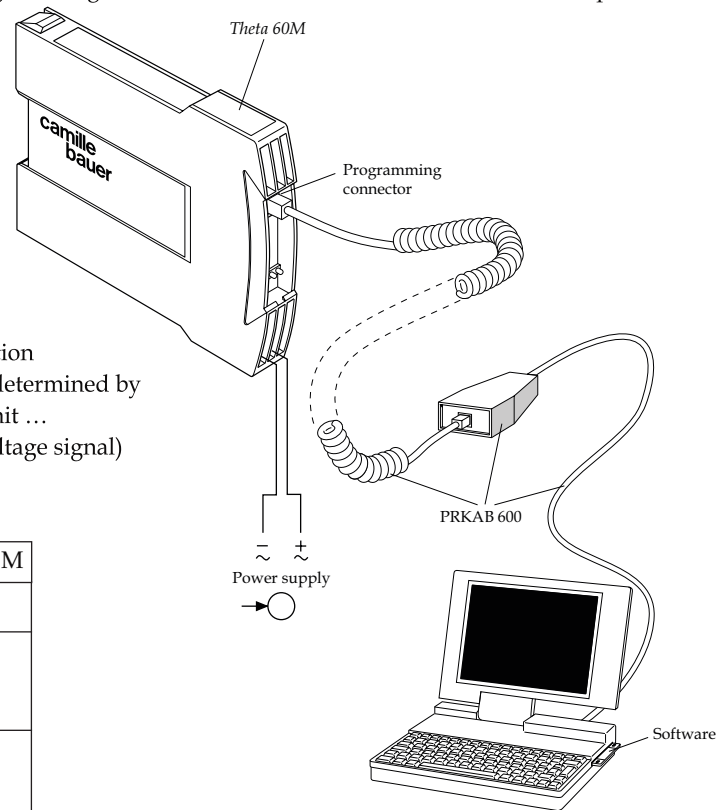


The eight pole DIP switch is located on the PCB in the Theta 60M

DIP switches	Type of output signal
	load-independent current
	load-independent voltage

Electrical Connections

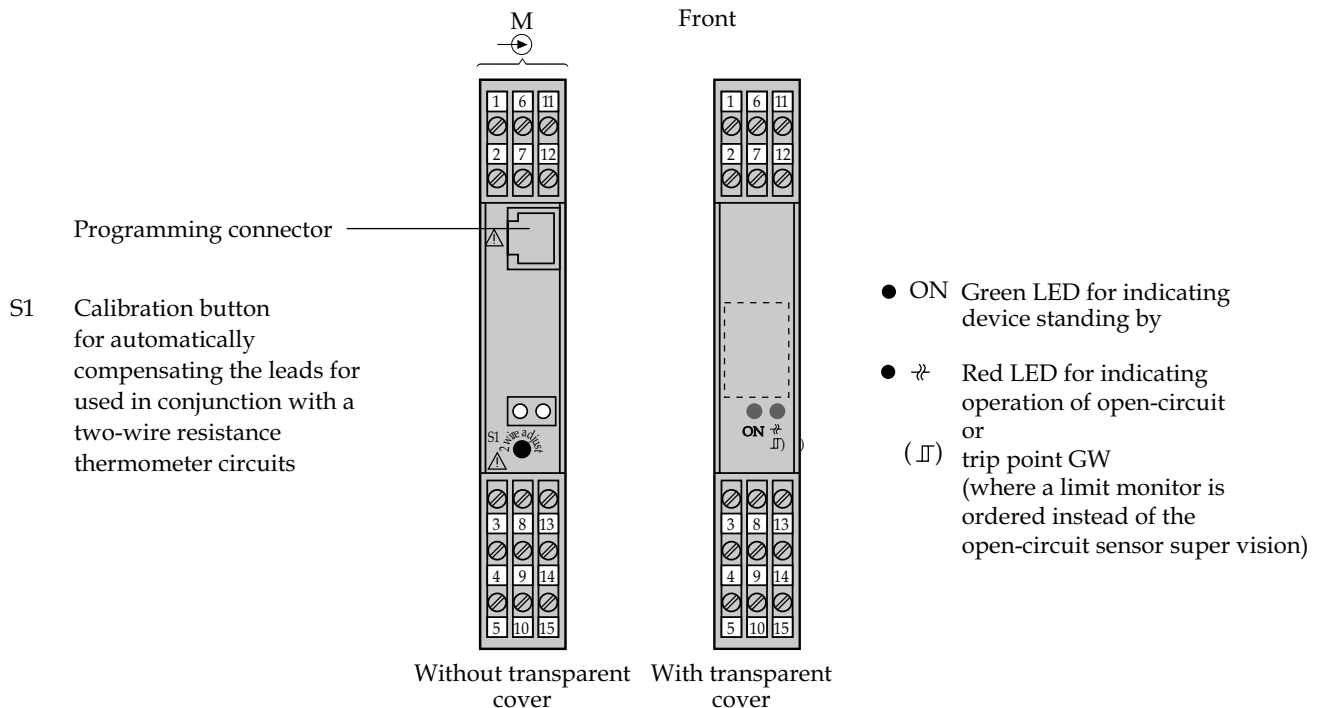

Electrical Connections

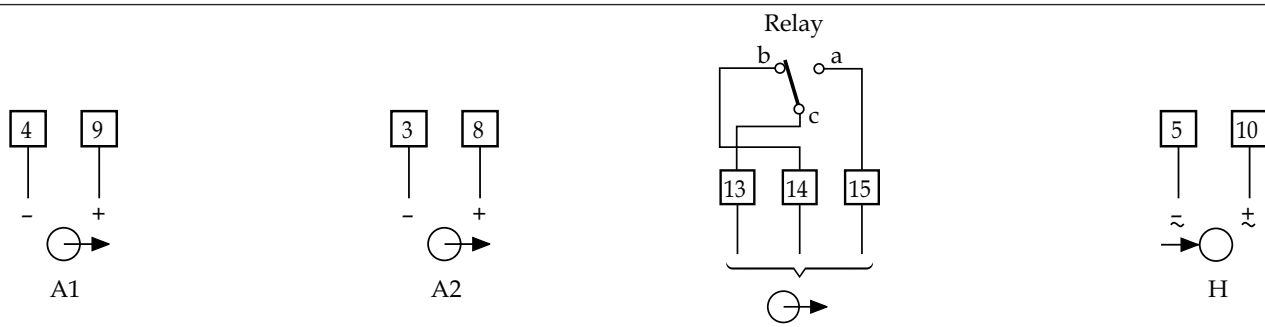

- M = Measured variable / measuring input,
Terminal allocation acc. to the measuring mode and application see "T able 7: Measuring input"
- A1 = Output signal / measuring output
- A2 = 2nd output (field indicator)
(Only brief use permitted in the case of the Ex version)
- K = Output contact for open-circuit sensor supervision or for monitoring a limit GW
- H = Power supply

Measuring Input Table7

Measurement	Measuring range limits	Measuring span	No.	Wiring diagram Terminal arrangement
DC voltage (direct input)	- 300...0...300 mV	2...300 mV	1	
DC voltage (input via potential divider)	- 40...0...40 V	0.3...40 V	2	
DC current	- 12...0... 12 mA/ - 50...0...100 mA	0.08... 12 mA/ 0.75...100 mA	3	
Resistance thermometer RT or resistance measurement R, two-wire connection	0... 740 Ω / 0...5000 Ω	8... 740 Ω / 40...5000 Ω	4	
Resistance thermometer RT or resistance measurement R, three-wire connection	0... 740 Ω / 0...5000 Ω	8... 740 Ω / 40...5000 Ω	5	
Resistance thermometer RT or resistance measurement R, four-wire connection	0... 740 Ω / 0...5000 Ω	8... 740 Ω / 40...5000 Ω	6	

Measuring Input Table7

Measurement	Measuring range	Measuring		Wiring diagram
four-wire connection				
2 identical three-wire resistance transmitters RT for deriving the difference	RT1 - Rt2 0... 740 Ω / 0...5000 Ω	8... 740 Ω / 40...5000 Ω	7	
Thermocouple TC Cold junction compensation internal	- 300...0...300 mV	2...300 mV	8	
Thermocouple TC Cold junction compensation external	- 300...0...300 mV	2...300 mV	9	
Thermocouple TC in a summation circuit for deriving the mean temperature	- 300...0...300 mV	2...300 mV	10	
Thermocouple TC in a differential circuit for deriving the mean temperature	TC1 - TC2 - 300...0...300 mV	2...300 mV	11	
Resistance sensor WF	0... 740 Ω / 0...5000 Ω	8... 740 Ω / 40...5000 Ω	12	
Resistance sensor WF DIN	0... 740 Ω / 0...5000 Ω	8... 740 Ω / 40...5000 Ω	13	

Basic configuration	
The transmitter Theta 60 is also available already programmed with a basic configuration which is especially recommended in cases where the programming data is not known at the time of ordering (see "Table 6: Specification and ordering information" Feature 4.). Theta 60 supplied as standard versions are programmed for basic configuration (see "Table 5: Standard versions").	
Basic configuration	Measuring input 0...5 V DC Measuring output 0...20 mA linear, fixed value 0% during 5 s after switching on Setting time 0.7 s Open-circuit supervision inactive Mains ripple suppression 50 Hz Limit functions inactive

Standard versions Table 5:			
The following 8 transmitter versions are already programmed for basic configuration and are available as standard versions. It is necessary to quote the Order No.			
Cold junction compensation	Climatic rating	Instrument	Power supply
Included	standard	Standard version	24... 60 V DC / AC 85...230 V DC / AC
The complete Order Code 1 604-...0 and/or a description should be stated for other versions with the basic works configuration. ¹See "Table 6: Specification and ordering information".			

Ordering Information

Product Code	TT 62-	X	X	0000000000
Compensation	With Cold Junction CLD JUN	1		
	W/O Cold Junction W/O CLD JUN	2		
	With Cold + Alarm Func. CLD JUN	3		
Power Supply	24-60U		F	
	85-230U		J	



sifam tinsley
PRECISION INSTRUMENTATION

Sifam Tinsley Instrumentation Inc.
3105, Creekside Village Drive,
Suite No. 801, Kennesaw,
Georgia 30144 (USA)
E-mail Id : psk@sifamtinsley.com
Web : www.sifamtinsley.com
Contact No. : +1 404 736 4903

Sifam Tinsley Instrumentation Ltd
Unit 1 Warner Drive,
Springwood Industrial Estate
Braintree, Essex, UK, CM72YW
E-mail: sales@sifamtinsley.com
Web: www.sifamtinsley.com/uk
Contact: +44(0)1803615139