# **Mechanical Style Pressure Switch**

# Series IS1000

# **Specifications**

#### Long life: 5 million cycles




IS1000-01 IS1000-01-X202

| Model                         | IS1000-01 |
|-------------------------------|-----------|
| Proof pressure                |           |
| Max. pressure                 |           |
| Operating pressure range      |           |
| Hysteresis                    |           |
| Repeatability                 |           |
| Contact                       |           |
| Electrical entry              |           |
| Fluid                         |           |
| Ambient and fluid temperature |           |
| Port size                     |           |
| Weight                        |           |


# **Switch Characteristics**

| Max. contact capacity  | 2V AC, 2W DC      |           |            |
|------------------------|-------------------|-----------|------------|
| Voltage                | 24V AC/DC or less | 48V AC/DC | 100V AC/DC |
| Max. operating current | 50mA              | 40mA      | 20mA       |
| Shock resistance       | 30G               |           |            |


#### **Electrical Circuit**

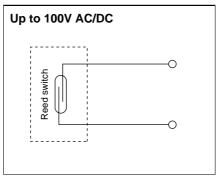


# **Operating Pressure Range**

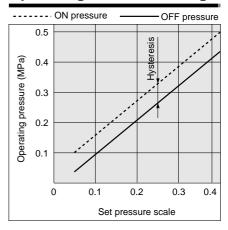

#### **How to Order**

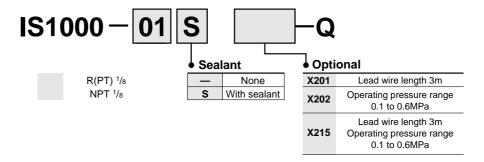

#### Construction

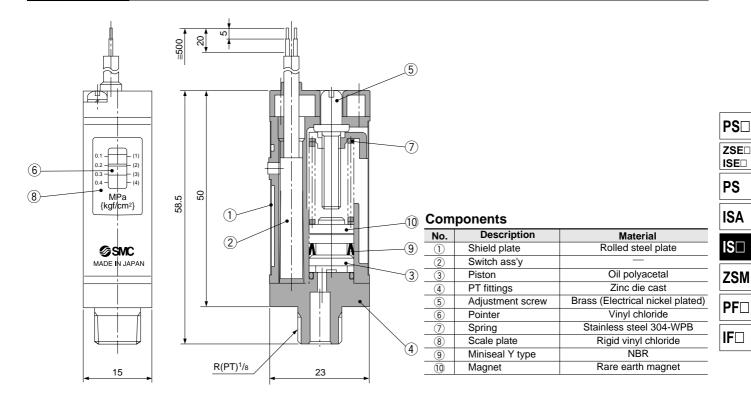

# **Precautions**

Be sure to read before handling.

Refer to p.0-26 and 0-27 for Safety Instructions and common precautions, on the products mentioned in this catalogue and refer to p.3.0-7 to 3.0-9 for precautions on every series.


#### Wiring

#### **⚠** Warning

- 1)Connect load before connecting with power source.
- 2In the case of induction load or lead wire exceeding 5m long, the following contact protection box should be used.

| Part No. | Voltage | Lead wire length  |
|----------|---------|-------------------|
| CD-P11   | 100V AC | Switch side: 0.5m |
| CD-P12   | 24V DC  | Load side: 0.5m   |

#### 3Internal circuit of contact protection box

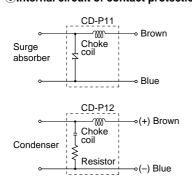

## 4 How to connect contact protection box Connect the lead wires from the body and


the contact protective box side indicated "SWITCH".

Lead wire should be as short as possible, within 1m

#### Installation/Piping

### **∆Warning**

- 1)When changing piping by hand, hold body.
  - Electrical wire must not be subjected to excessive force.
- 2Do not drop nor apply an excessive force.
- 3 Tighten IS1000-01 applying the spanner on the PT fitting part.

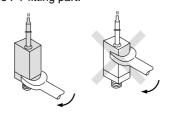

#### **Air Supply**

#### ⚠Warning

- 1)Do not use with corrosive gases or fluids.
- ②Avoid use in vacuum applications. Switch may implode.

#### **Pressure Setting**

#### ∕.\Caution

- 1)Set pressure scale at the value of the Pressure drop.
- 2)When detecting ON-pressure signal, note that set pressure on scale plate plus ON-OFF differencial (Hysteresis) will be ON-pressure signal.

#### **Environment**

#### **\_**Marning

- 1) Avoid using a switch in a magnetic environment. It may cause a malfunction.
- 2Do not use in an environment with water or splashing oil to avoid malfunction or damage to switch caused by corrosion of the electric circuit.

