


**Ultrasonic Sensor M30 - Straight or 90° angled version**

Plastic .....: **XXA30P1PM12**  
 Ni-plated Brass : **XX●30B1PM12**  
 Stainless steel ...: **XX●30S1PM12**

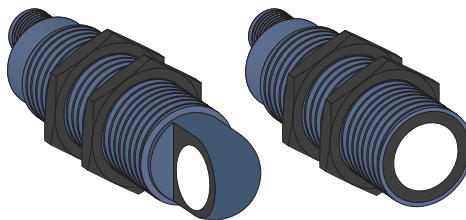



**⚠ WARNING**

**UNINTENDED EQUIPMENT OPERATION**


Do not use this product to detect objects within the deadband (blind zone) or outside the sensing window.  
 Failure to follow these instructions can result in death, serious injury, or equipment damage.

<http://qr.tesensors.com/XX0003>


**Dimensions**

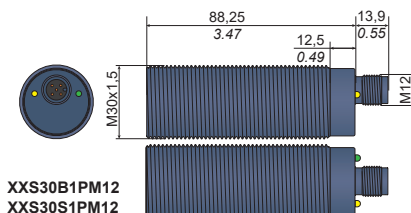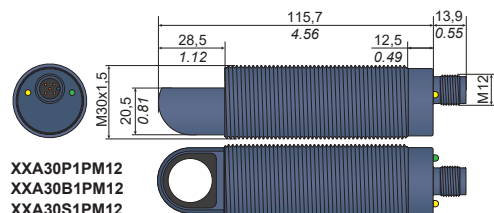


**LEDs**

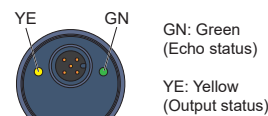

**Connectors wiring**

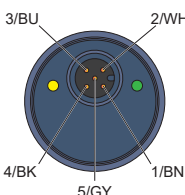


Pin Number	Wire Color	Description
①	BN: Brown	+12...24 Vdc
②	WH: White	Input teach
③	BU: Blue	0 Vdc
④	BK: Black	Output (PNP)
⑤	GY: Grey	Synchronization

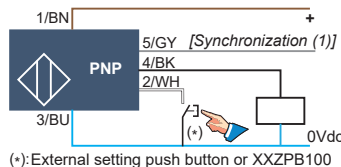


**Note :**  
 (1): See synchronization section

**Tightening torque**

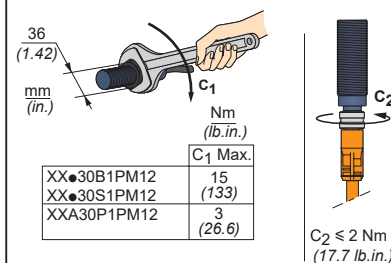


**Wiring diagrams**

**Digital Output (NO or NC)**

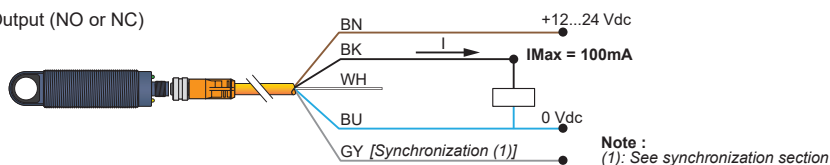

**Note :**  
 (1): See synchronization section


**Synchronization (side by side application)**

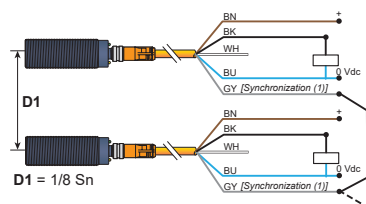

**Synchronization operation**

Up to 8 sensors can be synchronized to operate side by side by electrically connecting all pin no.5 (grey) wires together. To synchronize more than 8 sensors a PLC output can be used (the pins no.5 must be simultaneously driven by the rising edge of a pulse).  
**NOTE (1):** The pulse must be at a high level of 12 to 24 Vdc and a low level of 0 to 2Vdc. All sensors should be the same model and have the same cycle time setting. The high pulse width should be 1 ms, and the low should be at least as long as the sensor cycle time setting (default cycle times: 1m sn= 15 ms).  
**NOTE (2):** When the pin no.5 is at low level or at high level, object sensing is suspended and the sensor output holds the last valid output state before suspension.


**Multiplexing (face to face application)**

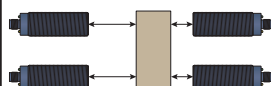

This function can be used to avoid disturbances when operating sensors face to face. A unique address must be assigned to each sensor (or group of sensors) with the use of the XX Configuration Software (prior to wiring the sensors), and all pin no.5 (grey) wires must be connected together. For sequencing with a PLC, please contact your local Telemecanique Sensors Technical Support Group.


Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.  
 No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.  
 © 2019 Schneider Electric. "All Rights Reserved."

Tilt angle

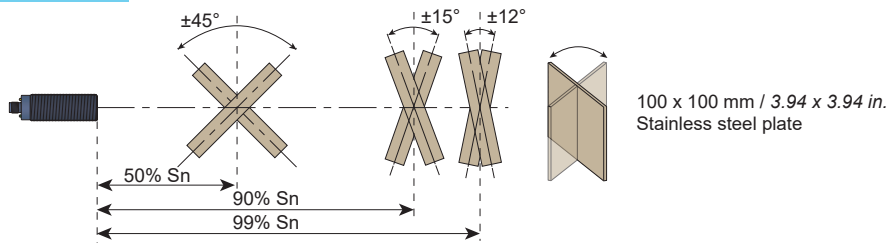

Detection curves for different objects

Detection curve with 100 x 100 mm square target

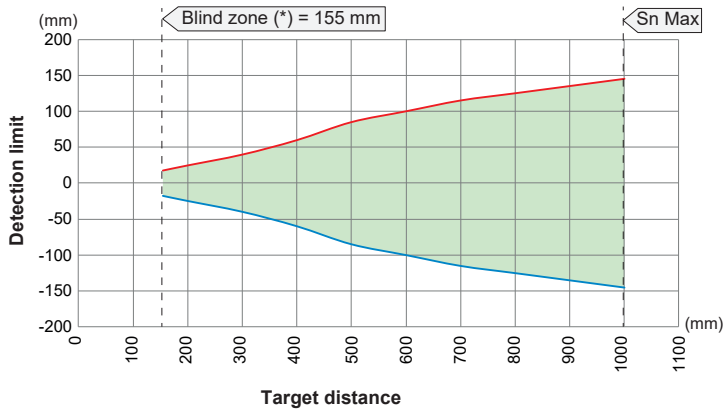


(\*) : Blind zone

100 x 100 mm / 3.94 x 3.94 in.  
Stainless steel plate




Detection curve with round bar

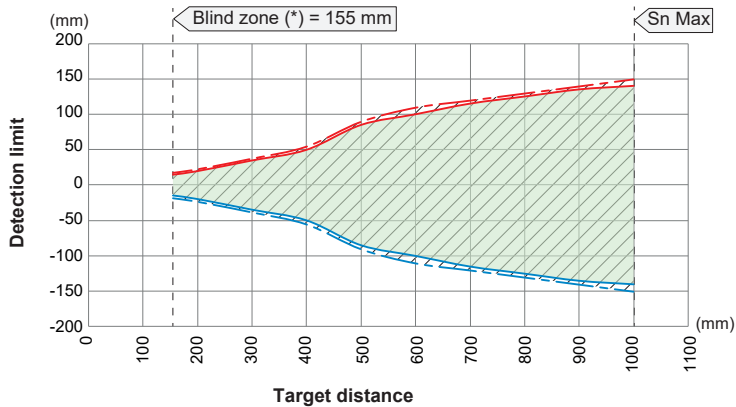


Ø 10 mm / 0.394 in.  
Stainless steel cylinder



Ø 25 mm / 0.984 in.  
Stainless steel cylinder

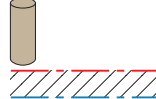


Wiring accessory

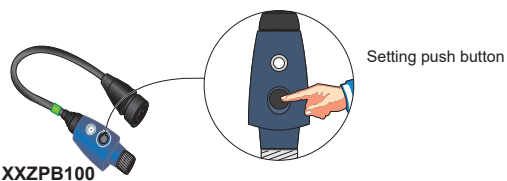


Cables

5-pin, 5-wire  
(for synchronization)

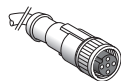

XZCPV11V12L2 (2 m / 6.6 ft)  
XZCPV11V12L5 (5 m / 16.4 ft)  
XZCPV11V12L10 (10 m / 32.8 ft)

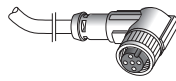


XZCPV12V12L2 (2 m / 6.6 ft)  
XZCPV12V12L5 (5 m / 16.4 ft)  
XZCPV12V12L10 (10 m / 32.8 ft)

5-pin, 4-wire  
(no synchronization)

XZCP1141L2 (2 m / 6.6 ft)  
XZCP1141L5 (5 m / 16.4 ft)  
XZCP1141L10 (10 m / 32.8 ft)

XZCP1241L2 (2 m / 6.6 ft)  
XZCP1241L5 (5 m / 16.4 ft)  
XZCP1241L10 (10 m / 32.8 ft)

M12 connectors

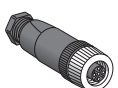


XZCC12FDM50B




XZCC12FCM50B


Mounting accessory

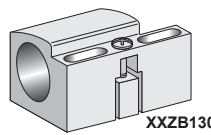

Recommended to use for sensor applications at  
operating temperatures -25 ... 0 °C (-13...32 °F)

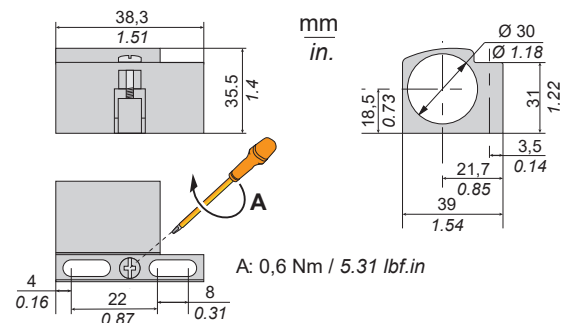

Sensor setting with teach procedure

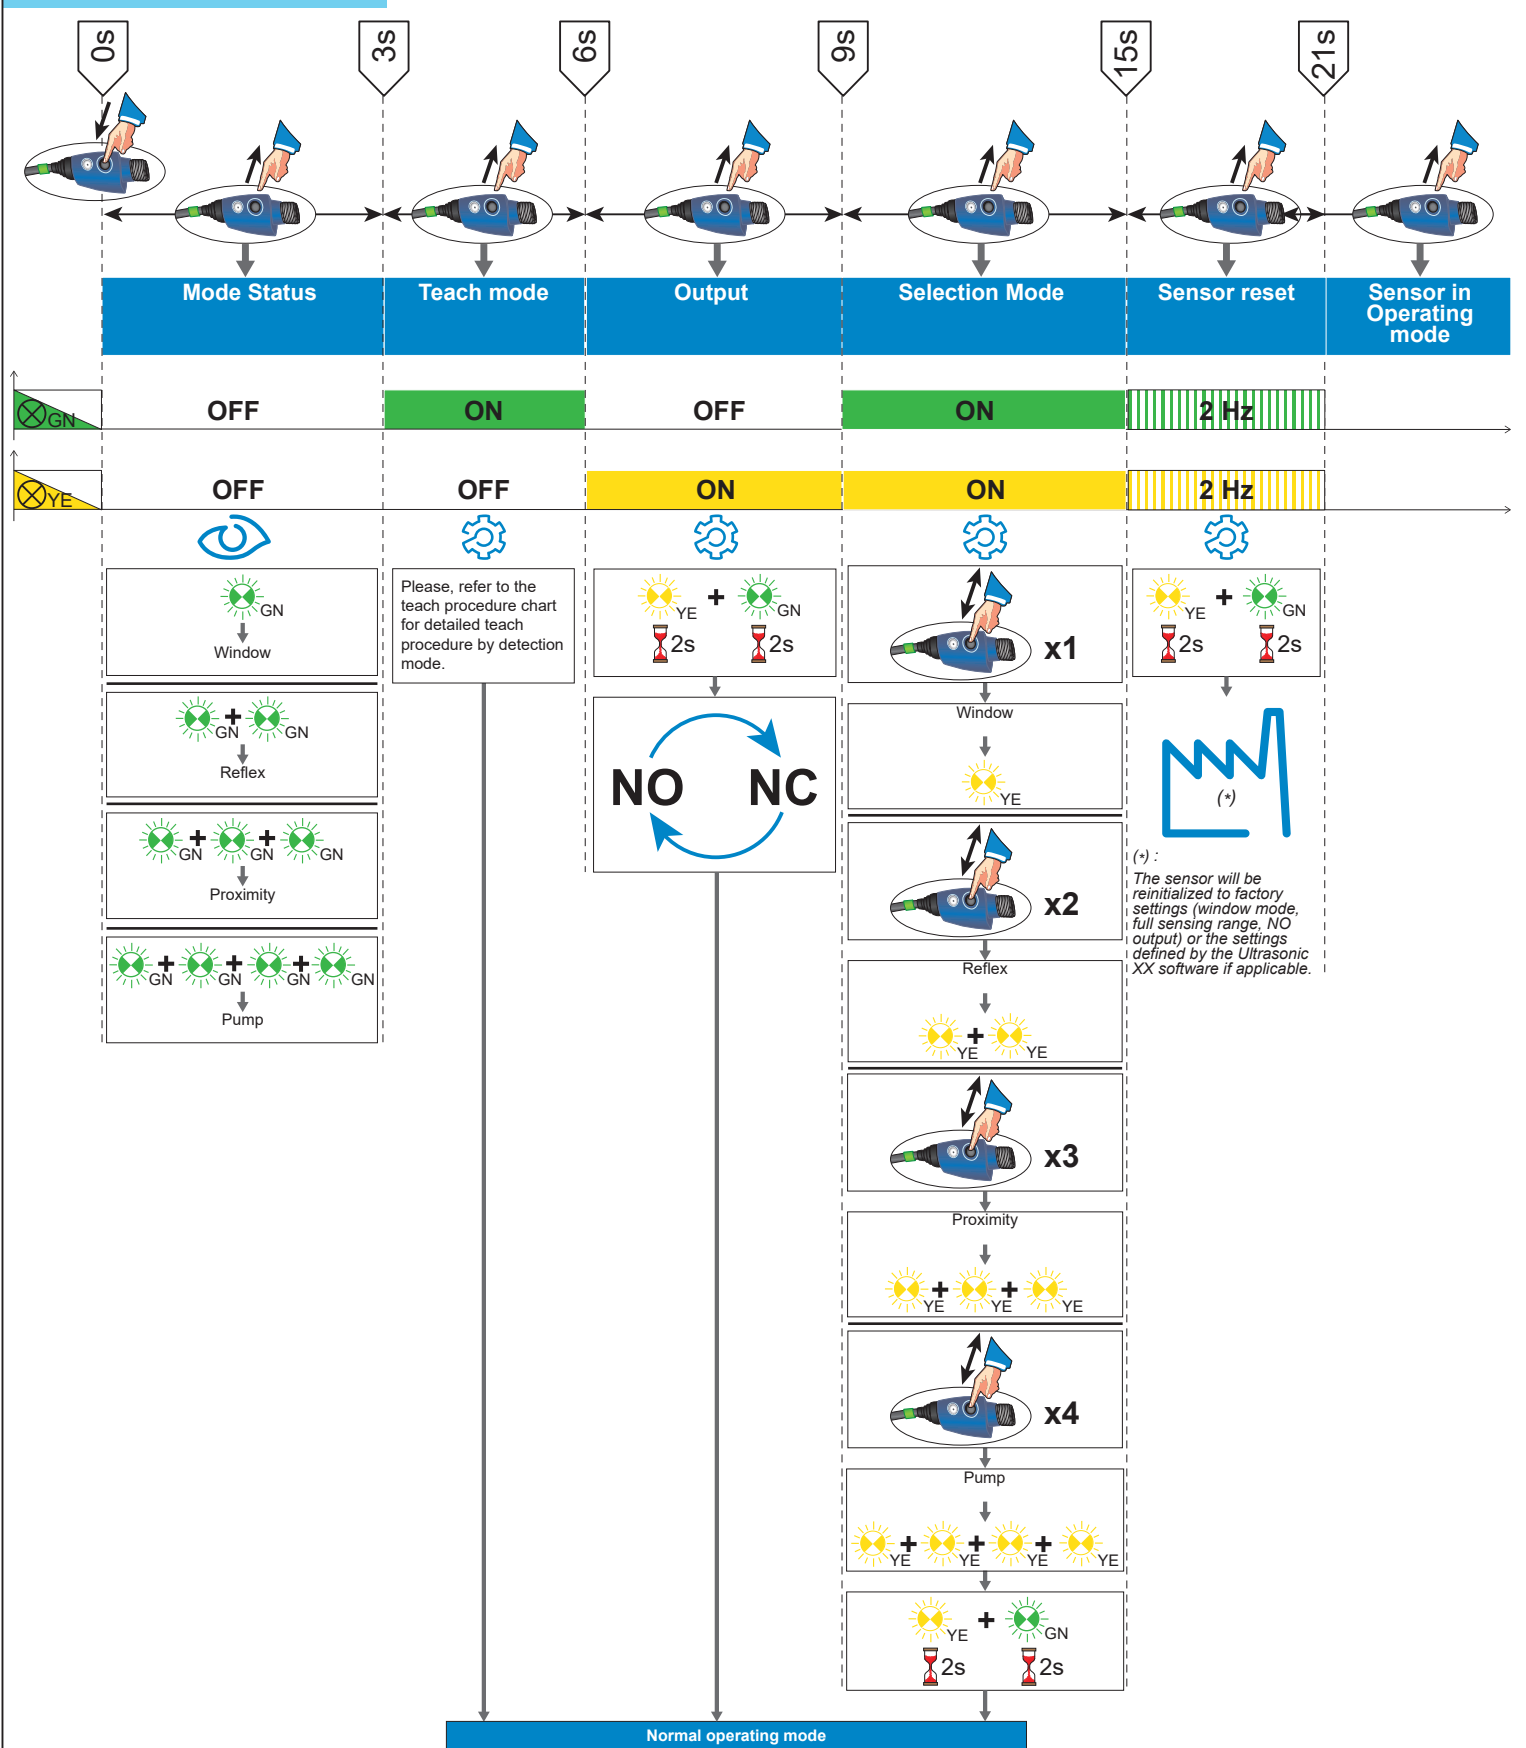


Please, refer to the teach procedure chart for detailed teach procedure by detection mode.

(+): The sensor will be reinitialized to factory settings (window mode, full sensing range, NO output) or the settings defined by the Ultrasonic XX software if applicable.

<p><b>Legend:</b></p> <ul style="list-style-type: none"> <li>⊗ OFF</li> <li>● ON</li> <li>⚡ Flashing</li> <li>GN: Green</li> <li>YE: Yellow</li> <li>⚡ + ⚡ Processing</li> <li>⌚ 2s</li> <li>⚡ Setting error</li> <li>⌚ 2s</li> </ul>	<ul style="list-style-type: none"> <li>① Near limit</li> <li>② Far limit</li> </ul>	<ul style="list-style-type: none"> <li> Press the teach button</li> <li> Release the teach button</li> <li> Press and release briefly</li> <li> Setting</li> </ul>	<ul style="list-style-type: none"> <li> Visualization</li> <li> Factory setting (+)</li> <li> Object / Objet</li> <li> Reflector</li> </ul>
---	---	--	---

Teaching procedure by detection mode

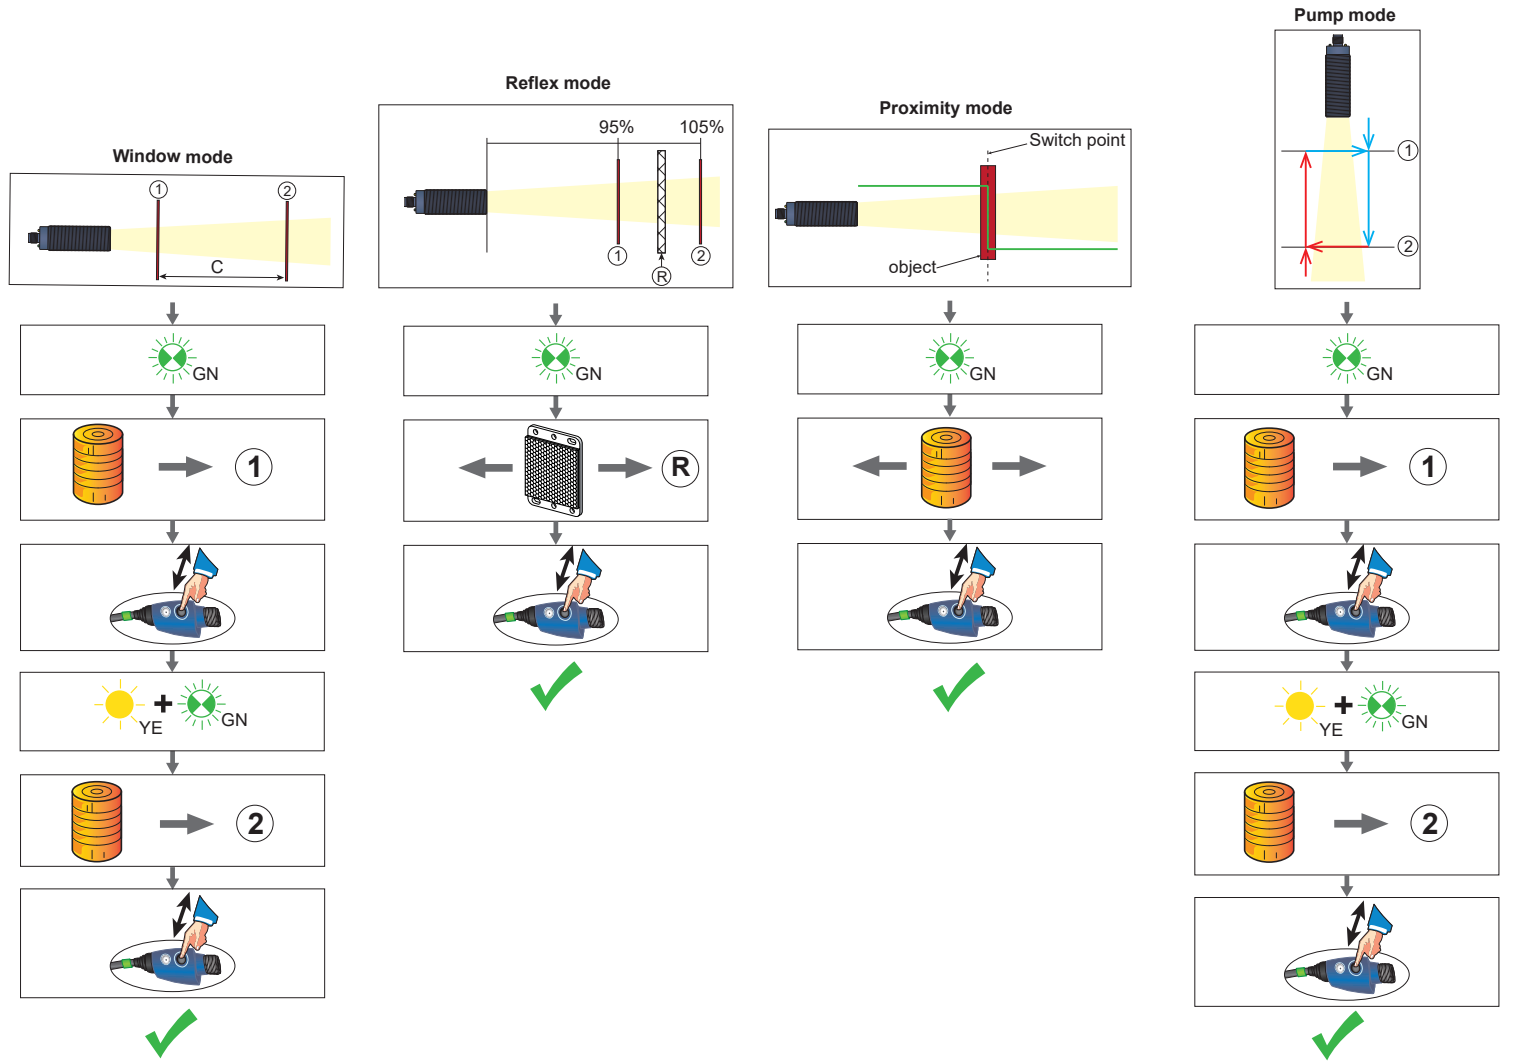

Scan the Qr-code to access this Instruction Sheet in different languages.



**Note :**  
 You can download this Instruction Sheet in different languages from our website at: [www.tesensors.com](http://www.tesensors.com)  
 We welcome your comments about this document. You can reach us by e-mail at: [customer-support@tesensors.com](mailto:customer-support@tesensors.com)