



TECHNOLOGY... SINCE 1937

[www.antiference.co.uk](http://www.antiference.co.uk)

## ASM02

Digital Signal Meter for Satellite & Terrestrial with DSCR Mode & Data Logging

# User Guide



## Important Safety Notice

**Thank you for purchasing this Antiference signal analyser product. Please read the following instructions carefully, retain for future reference and read the following safety considerations:**

1. Do not place any items on the device
2. Ensure no liquids are on or near the device as splashes may damage the unit
3. For cleaning, use a damp cloth only without solvents
4. Do not attempt to open the case as there is a danger of electric shock
5. Repairs should be carried out by a qualified technician
6. Keep the protective jacket in place while using the meter
7. Store the meter in the carry case when not in use to protect the screen from damage
8. Use only the supplied power supply as 3rd party products may damage the product

# Table of Contents

Page	Contents
4	1. Introduction
4	2. Features
5	3. Package Contents
5	4. Front & Top Panel Layouts
5	4.1 Top Panel Layout
6	4.2 Front Panel Layout
7	5. Main Menu
7	6. DVB-S/S2 Mode
7	6.1 Measurement
10	6.2 Spectrum
11	6.3 Constellation
12	6.4 Dish Setup
13	6.5 Motor Settings
15	6.6 Angle Calculation
16	6.7 TP Control
18	6.8 Datalog
19	6.9 DSCR
20	7. DVB-T/T2 Mode
20	7.1 Measurement
22	7.2 Spectrum
23	7.3 Constellation
24	7.4 Scope
25	7.5 Datalog
26	8. DVB-C Mode
26	8.1 Measurement
28	8.2 Spectrum
29	8.3 Constellation
30	8.4 Scope
31	8.5 Datalog
32	9. DAB/DAB+
33	10. DiSEqE Monitor
34	11. Settings
34	12. Help
35	13. Memory
35	14. LNB/RF Overload
36	15. Program Play Menu
37	16. Technical Specifications
39	17. Declaration of Conformity

## 1. Introduction

The Antiference ASM02 is an advanced signal analyser for satellite and terrestrial signals. It features an 8.9 inch touch screen display and simple to use menu system. It supports DVB-S/S2/DVB-T/T2/DVB-C/C2, **DAB/DAB+**. Also included is a DSCR mode for analysis of SKY Q systems and a data logging function allowing the user to download logs to a USB drive and view in an Excel spreadsheet. Supplied in a protective holder and carry case, this meter is ideal for use in the field for professional installers.

## 2. Features

- 8.9 inch touch screen display
- Supports DVB-S/S2/DVB-T/T2/DVB-C/C2, **DAB/DAB+**
- Video decoding: MPEG-1, MPEG-2, MPEG-4, H.263, H.264, HVEC/H.265(up to 4K@60fps), AVS, VC-1, VP8, MVC
- Audio decoding: MPEG-1, MPEG-2, ISO/IEC 13818-3 LAYER I&II
- Measurement values MER, dB $\mu$ V, VBER, CBER, LBER
- LNB & RF short circuit protection
- Signal lock audible notification
- Data log function
- USB interface for data log download & firmware updates
- HDMI output
- LED flashlight
- Li-ion battery 5000mAh@7.4V with fast charging function
- OSD with multi-languages
- Internal storage
- Protective case
- Power supply 100-240V/50/60Hz 12V 2000mA


### 3. Package contents

1. ASM02 Signal Meter
2. 12V 2000mA Mains Charger with 3 Pin UK Plug
3. 12V In-Car Charger
4. Soft Carry Case
5. Rubber/Plastic ASM02 Protective Jacket
6. F Connector Adaptors
7. 4 Point Shoulder Strap




### 4. Front & Top Panel Layouts

#### 4.1. Top Panel Description

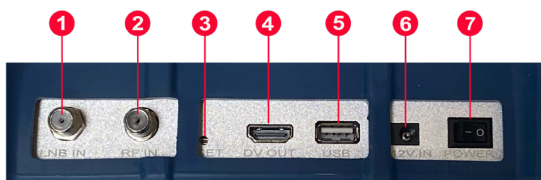

1. Satellite LNB Input
2. Terrestrial RF Input
3. Reset Button
4. HDMI Output
5. USB Interface
6. 12V DC Input
7. On/off Switch

## 4.2. Front Panel Description

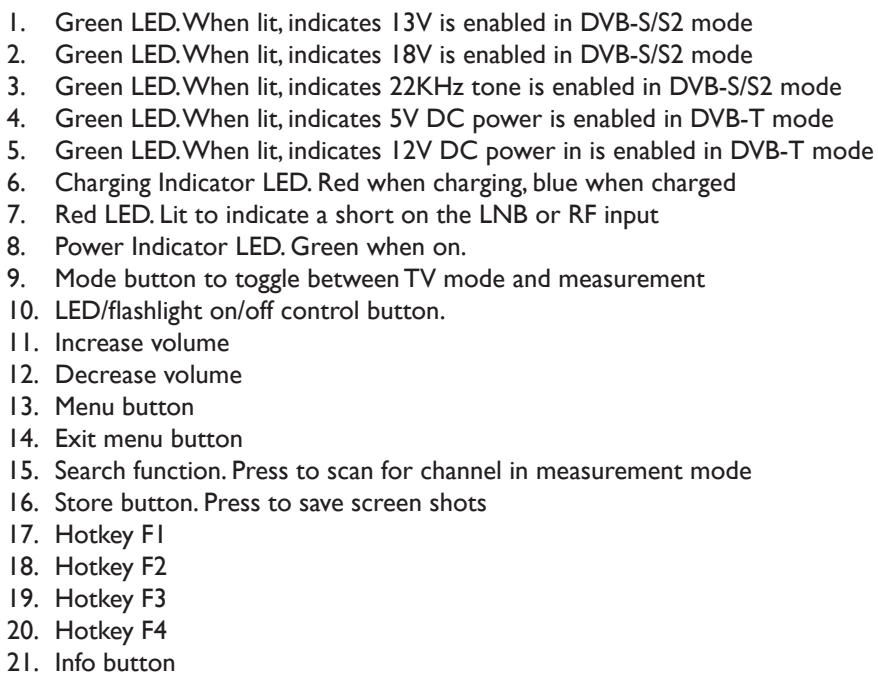

## 5. Main Menu

When the ASM02 has booted, the main menu will appear. To navigate to the sub-menu's, simply tap the icon of the mode you wish to operate and the menu for that function will appear.

To return to the previous menu, press [EXIT]



## 6. DVB-S/S2 Mode

### 6.1. Measurement Menu


Tap DVB-S/S2 icon to enter the satellite measurement menu. This menu shows all the analysis of the incoming satellite signal. The available satellite channel plans are listed down the left hand side of the screen and the measurement details on the right. Select the satellite required from the list to begin.

Once the satellite is selected, choose the transponder required from the next column by tapping the frequency value. Scroll to see additional transponders not in view.

Tap and hold the transponder value to enter manual edit mode. Pop up window will appear.

# 6. DVB-S/S2 Mode

## 6.1. Measurement Menu (cont)

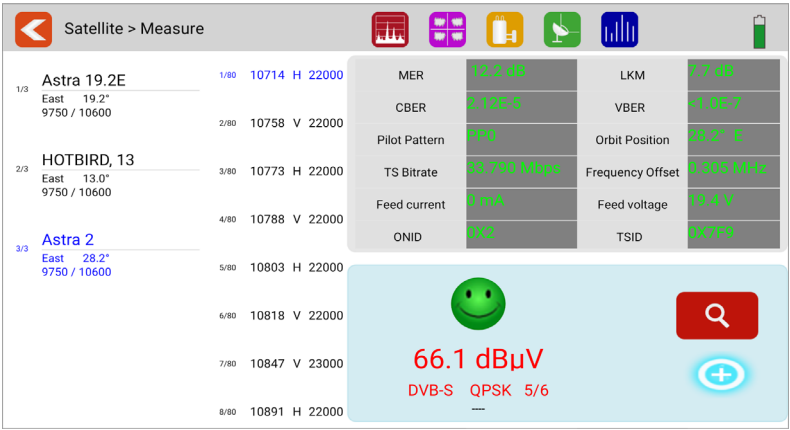


### Explanation of Functions in DVB-S/S2 Mode

- Tap the [BACK] icon to return to the main menu
- Tap the [SPECTRUM] icon to enter spectrum mode
- Tap the [CONSTELLATION] icon to enter constellation mode
- Tap the [DISH SETUP] icon to enter the dish setup menu
- Tap the [ANGLE SETTING] icon to view the angle calculation menu
- Tap the [TRANSPONDER] icon to enter the transponder control menu
- Tap the [ZOOM] icon to enter the zoom menu
- This icon indicates a signal lock
- This icon indicates a signal no lock
- Tap this icon to start a pop-up channel scan



# 6. DVB-S/S2 Mode

## 6.1. Measurement Menu (cont)

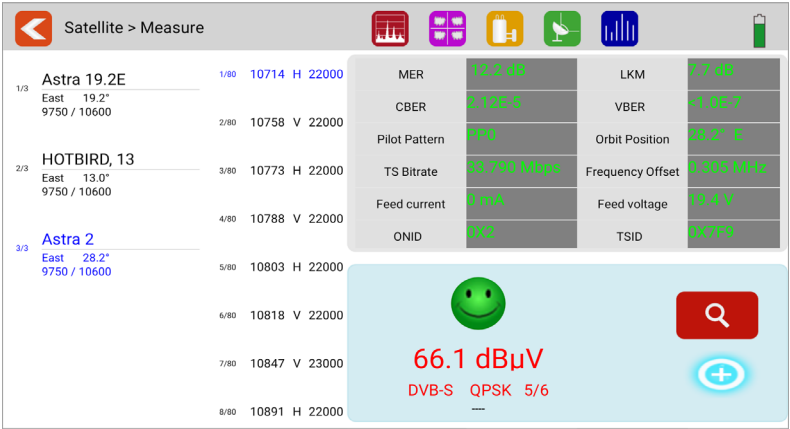

### Explanation of Elements

- MER - Modulation error ratio value
- LKM - Link margin test results
- CBER - CBER test results
- LBER - LBER test results
- Pilot Pattern - The pilot pattern of signal value
- Orbit Position - The orbit position of the TS in the NIT table
- TS Bit rate - The bit rate of the input TS
- Freq Offset - The offset value of the setting frequency and input signal
- Feed Current - The feed current of the LNB port
- Feed Voltage - The feed voltage of the LNB port
- ONID - The Original Network ID of the input transport stream
- TSID - The Transport Stream identification of the input stream
- 66.1dBμV - The power level of the input signal
- DVB-S QPSK 5/6 - DVB type, demodulation type & FEC value

### Hot Key Function in DVB-S/S2 Mode

- |             |            |      |      |
|-------------|------------|------|------|
|             |            |      |      |
| Dish Set Up | TP Control | Mute | Help |




Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.2. Spectrum

The ASM02 can display live spectrum from 950MHz to 2150MHz covering legacy satellite analysis and limited wideband frequencies.

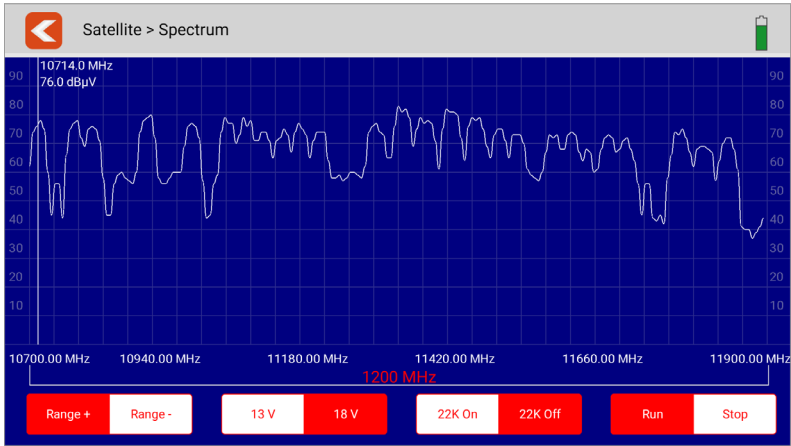

### Functions in Spectrum Mode

- Tap the spectrum chart to see more detail including the centre of the frequency and power level
- To return to the previous menu, press [EXIT]
- Tap [RANGE] segment to set the frequency scan range
- To set the LNB voltage output tap [13V/18V] segment
- Toggle 22kHz tone on and off by tapping the [22K ON/OFF] segment
- Start or stop the spectrum run process by tapping the [RUN/STOP] segment
- Tap and hold on the screen for fine setting of frequency

### Hot Key Function in Spectrum Mode

LO band	22K on/off	13V/18V	Mute	Help




Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.3. Constellation

This menu shows the constellation chart of the live stream. The transponder list is shown on the left hand side of the screen. Touch a transponder in the list to switch to it.

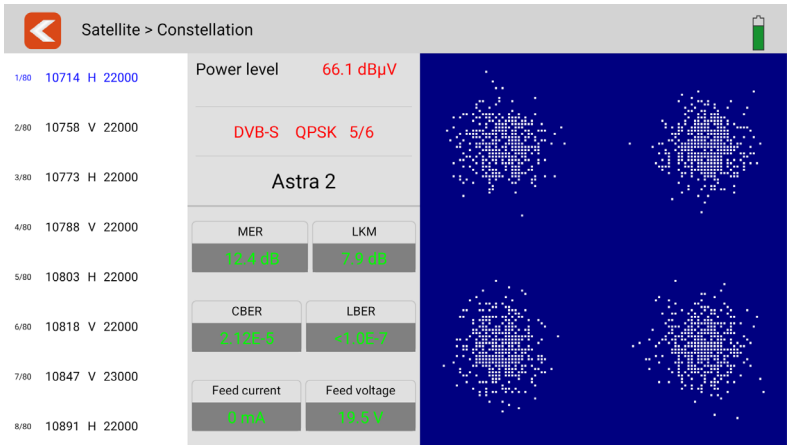

### Explanation of Elements

- |                |                                           |
|----------------|-------------------------------------------|
| Power level    | - The power level of the input signal     |
| Astra 2        | - Current satellite name                  |
| DVB-S QPSK 5/6 | - DVB type, demodulation type & FEC value |
| CNR            | - Carrier to noise ratio                  |
| LKM            | - Link margin test results                |
| CBER           | - CBER test results                       |
| LBER           | - LBER test results                       |
| Feed Current   | - The feed current of the LNB port        |
| Feed Voltage   | - The feed voltage of the LNB port        |



Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.4. Dish Setup

The dish setup menu allows the manual configuration of various parameters including LNB type, power, tone & switch type.

Satellite > Dish Setup > Astra 2

LNB Type	✓ Universal	9750/10750	5150	5750	9750
	10600	10750	11300	11475	10410
	Customised				

22K	On	Off	✓ Auto
-----	----	-----	--------

LNB Power	13V	18V	Off	✓ Auto
-----------	-----	-----	-----	--------

Switch type	✓ None	DiSEqC1.0	DiSEqC1.1	EN50494/SCR	EN50607/SCD2
	dSCR				

Moto Type	✓ Fixed	DiSEqC1.2	USALS
-----------	---------	-----------	-------

### Explanation of Elements

- LNB Type
- Tap desired value to set. The edit pop up window allows the setting of the local oscillator value if required
- 22K
- Tap to adjust the 22KHz tone status
- LNB Power
- Tap to set the LNB voltage
- Switch Type
- Tap 'NONE' to disable all switch types. Tap DiSEqC 1.0 or 1.1 to select DiSEqC option. Adjust port selection via pop up. Tap SCR or DSCR options and user band selection via pop up window
- Motor Type
- Tap to select motor type




Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.5. Motor Settings

The motor setting menu allows changes to be made to a motorised satellite system.A dish can be controlled in this menu as part of the set up process.

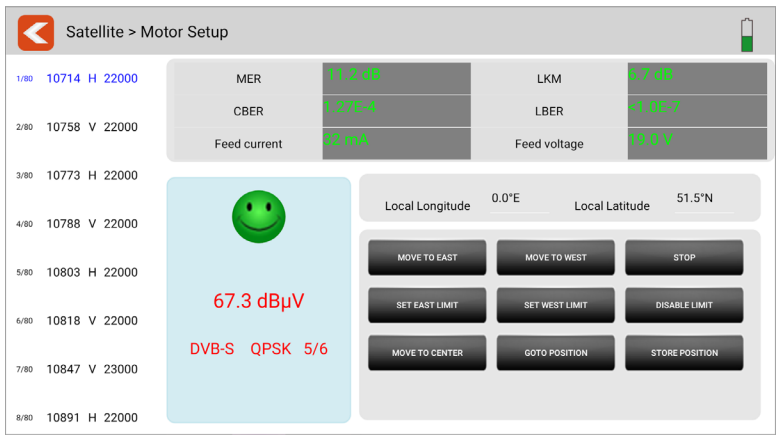

### Explanation of Elements

67.3 dBμV  
DVBS QPSK 5/6  
MER  
LKM  
CBER  
LBER  
Feed Current  
Feed Voltage  
Local Longitude  
Local Latitude


- The power level of the input signal
- DVB type, demodulation type & FEC value
- Modulation error ratio value
- Link margin test results
- CBER test results
- LBER test results
- The feed current of the LNB port
- The feed voltage of the LNB port
- Testing local longitude.Tap value to edit
- Testing local latitude.Tap value to edit



Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.5. Motor Settings (cont)

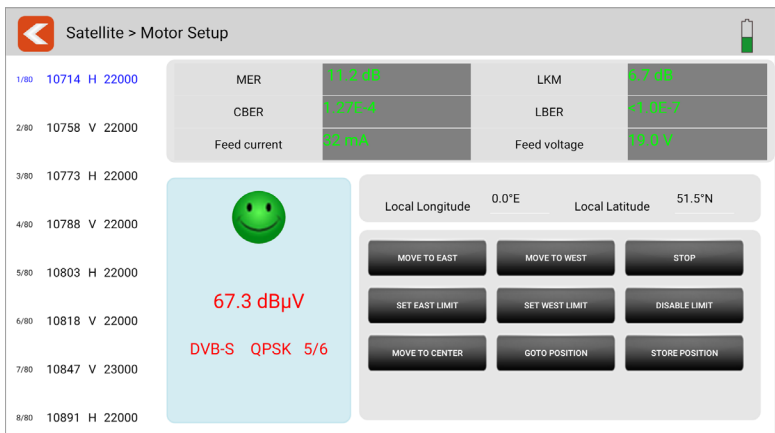

### DiSEqC Command Buttons

<b>MOVE TO EAST</b>	Tap to send MOVE TO EAST command
<b>MOVE TO WEST</b>	Tap to send MOVE TO WEST command
<b>STOP</b>	Tap to send STOP MOVING command
<b>SET EAST LIMIT</b>	Tap to set the east limit command
<b>SET WEST LIMIT</b>	Tap to send the west limit command
<b>DISABLE LIMIT</b>	Tap to send the DISABLE LIMITATION command
<b>MOVE TO CENTER</b>	Tap to centre the dish position
<b>GOTO POSITION</b>	Tap to send command to saved position
<b>STORE POSITION</b>	Tap to save position




Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.6.Angle Calculation

This menu calculates the azimuth & elevation of the satellite dish via the current satellite settings and local position.The ASM02 can monitor the alignment process helping the user to get the dish in the correct position.

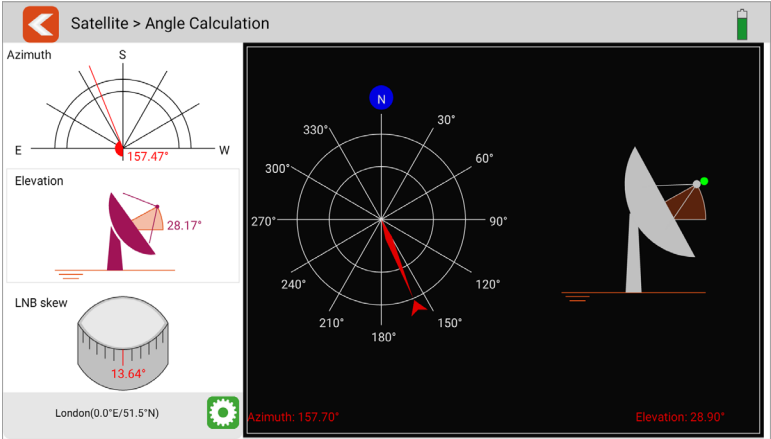

Tap this icon or press [EXIT] to return to the previous menu

# 6. DVB-S/S2 Mode

## 6.7.TP Control

Within the transponder (TP) control menu, more detail can be seen on each transponder being received. This includes the frequencies, MER, signal strength & quality in percentages.

In this menu it is possible to create and download a data log of the signals being received by transponder.

Satellite > TP Control						
14/77	11082 H 22000	Power level	MER	Strength		93%
	TP 65 DVB-S	69.3 dBµV	6.9 dB	Quality		48%
15/77	11095 V 30000	Power level	MER	Strength		99%
	TP 708	77.4 dBµV	---	Quality		0%
16/77	11097 V 23000	Power level	MER	Strength		99%
	TP 66 DVB-S2	75.5 dBµV	14.4 dB	Quality		90%
17/77	11112 H 22000	Power level	MER	Strength		0%
	TP 67	0	0	Quality		0%
18/77	11126 V 22000	Power level	MER	Strength		0%
	TP 68	0	0	Quality		0%
19/77	11141 H 22000	Power level	MER	Strength		0%
	TP 69	0	0	Quality		0%
20/77	11171 H 22000	Power level	MER	Strength		0%
	TP 71	0	0	Quality		0%
21/77	11224 V 23000	Power level	MER	Strength		0%
	TP 106	0	0	Quality		0%



Tap this icon to edit the transponder list for this menu. See page 16.



Tap this icon to save the datalog in Excel format. See page 17. This can also be downloaded to a USB drive.



Adjust the speed between normal and fast or pause the scan



Tap this icon or press [EXIT] to return to the previous menu



## 6. DVB-S/S2 Mode

### 6.8.TP Control (cont)

The transponder list can be edited in this menu manually.The top list of transponders are already available in the TP control menu.The bottom list are the rest of the transponders which are not currently available in the TP control menu.

Tap an item to add it to the TP control menu.

When finished, tap **DONE** to return to the TP control menu.

It is also possible to remove or add all should this be required.

The transponders in scope

TP 41 10714 H 22000	TP 45 10773 H 22000	TP 46 10788 V 22000	TP 47 10803 H 22000
TP 50 10847 V 23000	TP 53 10891 H 22000	TP 54 10906 V 22000	TP 56 10936 V 22000
TP 57 10964 H 22000	TP 61 11023 H 23000	TP 62 11038 V 22000	TP 63 11053 H 23000
TP 64 11068 V 23000	TP 65 11082 H 22000	TP 708 11085 V 23000	TP 66 11087 V 23000

The rest transponders

TP 44 10758 V 22000	TP 48 10818 V 22000	TP 0 12441 V 29500
---------------------	---------------------	--------------------

DONE


REMOVE ALL


ADD ALL

## 6. DVB-S/S2 Mode

### 6.9. Datalogging

The ASM02 can save a datalog via the TP control menu. This can be done from the DVB-S mode or DVB-T mode, See page 15 (DVB-S) or page 23 (DVB-T) to view how this process is started. Once the datalog has been saved, this data can be downloaded to a USB drive.

From the TP control menu (DVB-S) or the datalog/scope menu (DVB-T), tap the  icon and the menu below will appear. Choose a file name and location for the datalog to be stored and then tap 'done'.

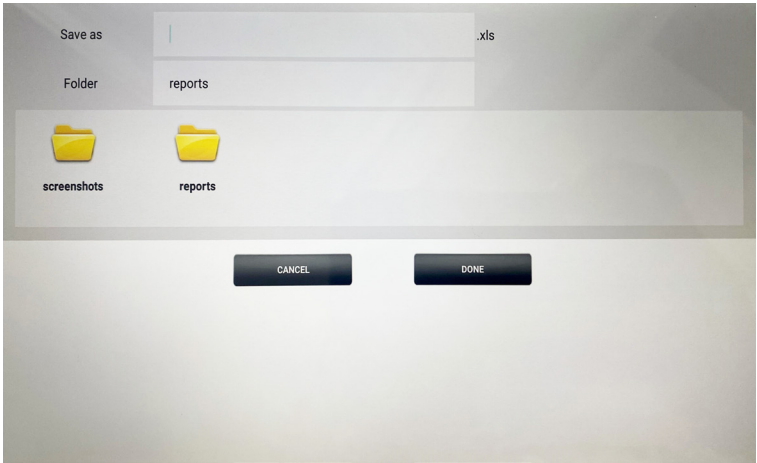

# 6. DVB-S/S2 Mode

## 6.10. DSCR Mode

The ASM02 is pre-programmed with the UK DSCR user bands for analysis of DSCR systems. To access this menu, navigate to the DVB-S/S2>dish setup>switch type menu (shown below) and select the user band required.

Satellite > Dish Setup > Astra 2

LNB Type

Universal

10600

Customised

9750/10750

10750

5150

11300

5750

11475

9750

10410

22K

On

Off

Auto

LNB Power

13V

18V

Off

Auto

Switch type

None

dSCR

DisEqc1.0

DisEqc1.1

EN50494/SCR

EN50607/SCD2

Moto Type

Fixed

DisEqc1.2

USALS

When the DSCR option is selected, the following menu will appear. Select the user band required and then click ‘done’.

1680 MHz  
User Band 3

1280 MHz  
User Band 9

1380 MHz  
User Band 11

1480 MHz  
User Band 14

980 MHz  
User Band 15

1030 MHz  
User Band 16

1080 MHz  
User Band 17

1130 MHz  
User Band 18

1530 MHz  
User Band 19

1580 MHz  
User Band 20

1630 MHz  
User Band 21

1730 MHz  
User Band 22

1780 MHz  
User Band 23

1830 MHz  
User Band 24

1880 MHz  
User Band 25

1930 MHz  
User Band 26

User Band

3

User Band Frequency

1680


DONE

# 7. DVB-T/T2 Mode

## 7.1. Measurement

From the main menu, tap the DVB-T/T2 icon to enter the terrestrial measurement menu. This menu shows all the analysis of the incoming terrestrial signal. The incoming terrestrial frequencies are listed on the left hand side of the screen and the measurement details on the right.

Select the frequency required by tapping to highlight. Tap and hold to toggle pop up window to change parameters such as bandwidth, frequency or system type.

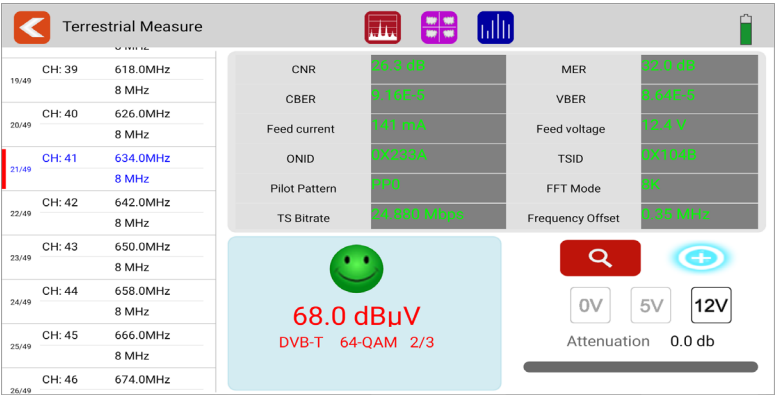

Tap the [BACK] icon to return to the main menu



Tap the [SPECTRUM] icon to enter spectrum mode



Tap the [CONSTELLATION] icon to enter constellation mode



Tap the [SCOPE] icon to enter the scope menu



Tap to zoom



This icon indicates a signal lock




This icon indicates a signal no lock



Tap this icon to start a pop-up channel scan

# 7. DVB-T/T2 Mode

## 7.1. Measurement (cont)

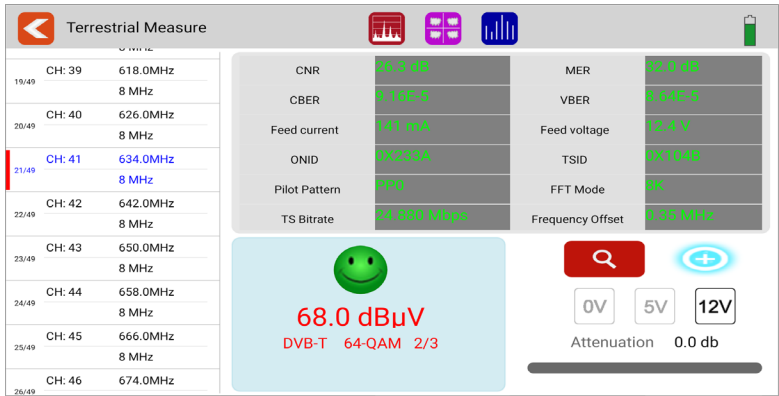

### Explanation of Elements

MER	- Modulation error ratio value
CBER	- CBER test results
LBER	- LBER test results
Feed Current	- The feed current of the RF input load
Feed Voltage	- The feed voltage of the RF input load
ONID	- The Original Network ID of the input transport stream
TSID	- The Transport Stream identification of the input stream
Pilot Pattern	- The pilot pattern value of the signal
FFT Mode	- The FFT carrier mode
TS Bit rate	- The bit rate of the incoming transport stream
Frequency Offset	- The offset value of the live input signal
68.0 dBμV	- Power level of input signal
DVB-T QPSK 5/6	- DVB type, demodulation type and FEC value

### Hot Key Function in Spectrum Mode

Range +	Range -	5V/12V/OFF	Mute	Help




Tap this icon or press [EXIT] to return to the previous menu

## 7. DVB-T/T2 Mode

### 7.2. Spectrum

The terrestrial spectrum can scan from 100MHz to 900MHz to show live analysis of the incoming signal.

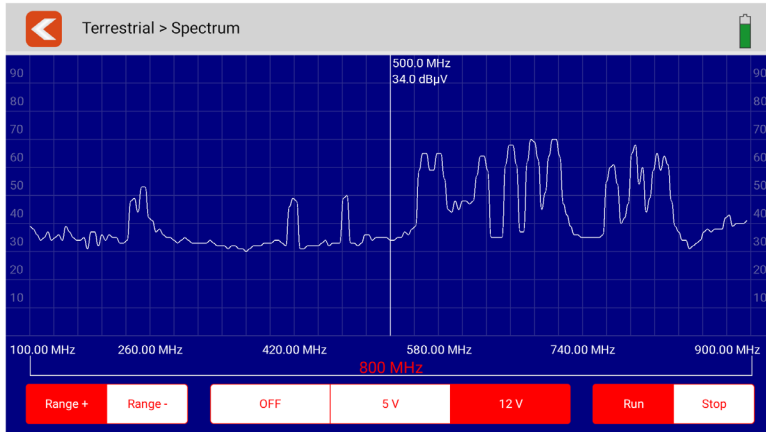

#### Functions in Spectrum Mode

- Tap the spectrum chart to see more detail including the detail of frequency and power level
- To return to the previous menu, press [EXIT]
- Tap [RANGE] segment to set the frequency scan range
- To set the antenna output voltage by tapping the [OFF/5V/12V] segment
- Start or stop the spectrum run process by tapping the [RUN/STOP] segment
- Tap and hold on the screen for fine setting of frequency




Tap this icon or press [EXIT] to return to the previous menu

# 7. DVB-T/T2 Mode

## 7.3. Constellation

The constellation menu shows the live transport stream on a constellation chart. the multiplex frequencies are shown on the left hand side of the screen with the detail on the middle and the constellation chart on the right. Tap a frequency to see details.

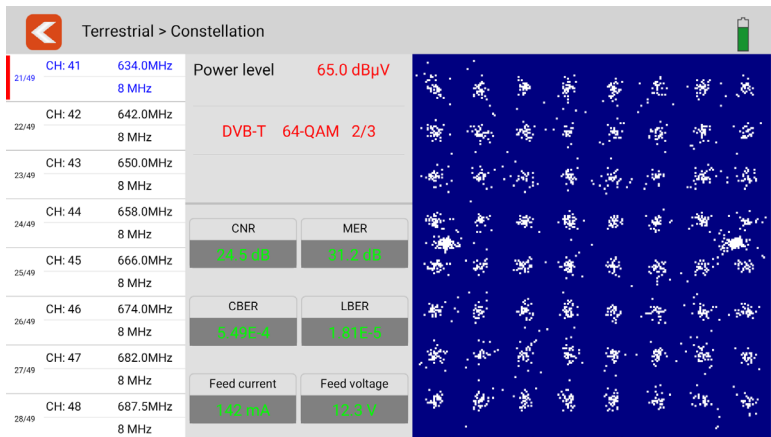

### Explanation of Elements

- |                 |                                           |
|-----------------|-------------------------------------------|
| Power level     | - The power level of the input signal     |
| DVB-T 64QAM 2/3 | - DVB type, demodulation type & FEC value |
| CNR             | - Carrier to noise ratio                  |
| CBER            | - CBER test results                       |
| LBER            | - LBER test results                       |
| Feed Current    | - The feed current of the RF input load   |
| Feed Voltage    | - The feed voltage of the RF input load   |



Tap this icon or press [EXIT] to return to the previous menu

# 7. DVB-T/T2 Mode

## 7.4. Scope

The scope menu shows signal lock and the various multiplex incoming signals. This menu shows power level, MER plus signal strength and quality in percentages. Tap the mux you want to view on the left hand side.

Terrestrial > Scope		0V		5V	12V				
1/6	538.0 MHz	Power level	MER	Strength	<div><div></div></div>		89%		
	CH: 29 DVB-T	65.0 dBμV	30.0 dB	Quality	<div><div></div></div>		99%		
2/6	554.0 MHz	Power level	MER	Strength	<div><div></div></div>		89%		
	CH: 31 DVB-T	65.0 dBμV	31.7 dB	Quality	<div><div></div></div>		99%		
3/6	602.0 MHz	Power level	MER	Strength	<div><div></div></div>		90%		
	CH: 37 DVB-T	66.0 dBμV	31.2 dB	Quality	<div><div></div></div>		99%		
4/6	634.0 MHz	Power level	MER	Strength	<div><div></div></div>		93%		
	CH: 41 DVB-T	69.0 dBμV	32.4 dB	Quality	<div><div></div></div>		99%		
5/6	658.0 MHz	Power level	MER	Strength	<div><div></div></div>		94%		
	CH: 44 DVB-T	70.0 dBμV	30.0 dB	Quality	<div><div></div></div>		99%		
6/6	682.0 MHz	Power level	MER	Strength	<div><div></div></div>		95%		
	CH: 47 DVB-T2	71.0 dBμV	27.1 dB	Quality	<div><div></div></div>		99%		



Tap this icon to edit the multiplex list for this menu See page 24.



Tap this icon to save the datalog in Excel format. See page 17. This can also be downloaded to a USB drive.



Pause the scan



Tap this icon or press [EXIT] to return to the previous menu



# 7. DVB-T/T2 Mode

## 7.5. Datalog

The multiplex list can be edited in this menu manually. The top list of multiplexes are already available in the scope menu. The bottom list are the rest of the multiplexes which are not currently available in the scope menu.

Tap an item to add it to the scope menu.

When finished, tap **DONE** to return to the scope menu.

It is also possible to remove or add all should this be required.

The frequency channels in scope

CH: 29 538.0 MHz

CH: 31 554.0 MHz

CH: 37 602.0 MHz

CH: 41 634.0 MHz

CH: 44 658.0 MHz

CH: 47 682.0 MHz

The rest frequency channels

CH: 21 474.0 MHz

CH: 22 482.0 MHz

CH: 23 490.0 MHz

CH: 24 498.0 MHz

CH: 25 506.0 MHz

CH: 26 514.0 MHz

CH: 27 522.0 MHz

CH: 28 530.0 MHz

CH: 30 546.0 MHz

CH: 32 562.0 MHz

CH: 33 570.0 MHz

CH: 34 578.0 MHz

CH: 35 586.0 MHz

CH: 36 594.0 MHz

CH: 38 610.0 MHz

CH: 39 618.0 MHz

CH: 40 626.0 MHz

CH: 42 642.0 MHz

CH: 43 650.0 MHz

CH: 45 666.0 MHz

CH: 46 674.0 MHz

CH: 48 687.500 MHz

CH: 49 698.0 MHz

CH: 50 706.0 MHz

DONE

REMOVE ALL


ADD ALL

## 8. DVB-C Mode

### 8.1. Measurement

From the main menu, tap the DVB-C icon to enter the cable TV measurement menu. This menu shows all the analysis of the incoming cable TV signal. The incoming frequencies are listed on the left hand side of the screen and the measurement details on the right.

Select the frequency required by tapping to highlight. Tap and hold to toggle pop up window to change parameters such as bandwidth, frequency or system type.

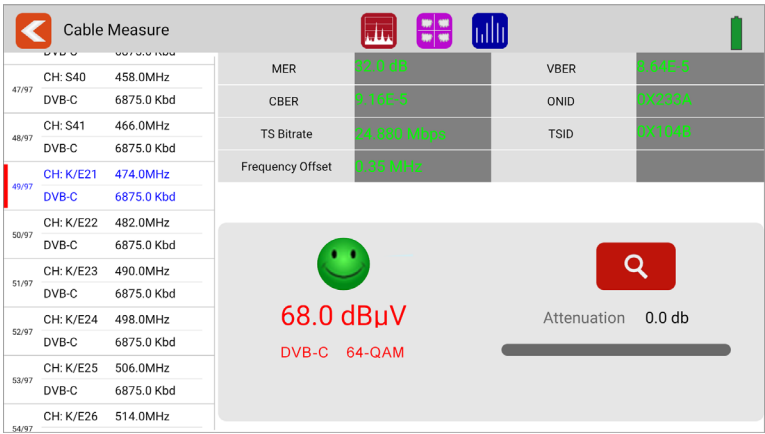

Tap the [BACK] icon to return to the main menu



Tap the [SPECTRUM] icon to enter spectrum mode



Tap the [CONSTELLATION] icon to enter constellation mode



Tap the [SCOPE] icon to enter the scope menu



Tap to zoom



This icon indicates a signal lock




This icon indicates a signal no lock



Tap this icon to start a pop-up channel scan

# 8. DVB-C Mode

## 8.1. Measurement (cont)

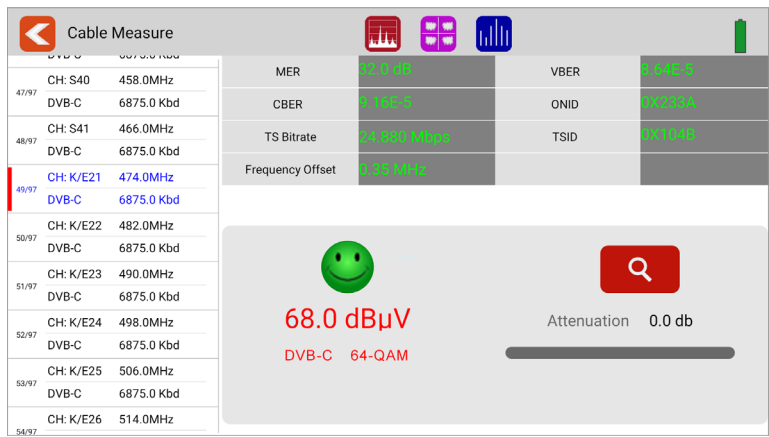

### Explanation of Elements

MER	- Modulation error ratio value
CBER	- CBER test results
LBER	- LBER test results
ONID	- The Original Network ID of the input transport stream
TSID	- The Transport Stream identification of the input stream
TS Bit rate	- The bit rate of the incoming transport stream
Frequency Offset	- The offset value of the live input signal
68.0 dBμV	- Power level of input signal
DVB-C X-QAM 5/6	- DVB type, demodulation type and FEC value

### Hot Key Function in Spectrum Mode

Range +	Range -	5V/12V/OFF	Mute	Help



Tap this icon or press [EXIT] to return to the previous menu

## 8. DVB-C Mode

### 8.2. Spectrum

The cable spectrum can scan from 100MHz to 900MHz to show live analysis of the incoming signal.

#### Functions in Spectrum Mode

- Tap the spectrum chart to see more detail including the detail of frequency and power level
- To return to the previous menu, press [EXIT]
- Tap [RANGE] segment to set the frequency scan range
- Start or stop the spectrum run process by tapping the [RUN/STOP] segment
- Tap and hold on the screen for fine setting of frequency



Tap this icon or press [EXIT] to return to the previous menu

# 8. DVB-C Mode

## 8.3. Constellation

The constellation menu shows the live transport stream on a constellation chart. the channel frequencies are shown on the left hand side of the screen with the detail on the middle and the constellation chart on the right. Tap a frequency to see details.

### Explanation of Elements

Power level	- The power level of the input signal
DVB-C 64QAM 2/3	- DVB type, demodulation type & FEC value
CNR	- Carrier to noise ratio
CBER	- CBER test results
LBER	- LBER test results



Tap this icon or press [EXIT] to return to the previous menu

## 8. DVB-C Mode

### 8.4. Scope

The scope menu shows signal lock and the various incoming signals. This menu shows power level, MER plus signal strength and quality in percentages.

Tap the mux you want to view on the left hand side.



Tap this icon to edit the multiplex list for this menu See page 24.



Tap this icon to save the datalog in Excel format. See page 17. This can also be downloaded to a USB drive.



Pause the scan



Tap this icon or press [EXIT] to return to the previous menu

## 8. DVB-C Mode

### 8.5. Datalog

The frequency list can be edited in this menu manually. The top list of frequencies are already available in the scope menu. The bottom list are the rest of the frequencies which are not currently available in the scope menu.


Tap an item to add it to the scope menu.

When finished, tap **DONE** to return to the scope menu.

It is also possible to remove or add all should this be required.

## 9. DAB/DAB+ Mode

The ASM02 can analyse DAB & DAB+ signals via the DAB menu. From the main menu, tap the DAB/DAB+ tile to navigate to the measurement menu.

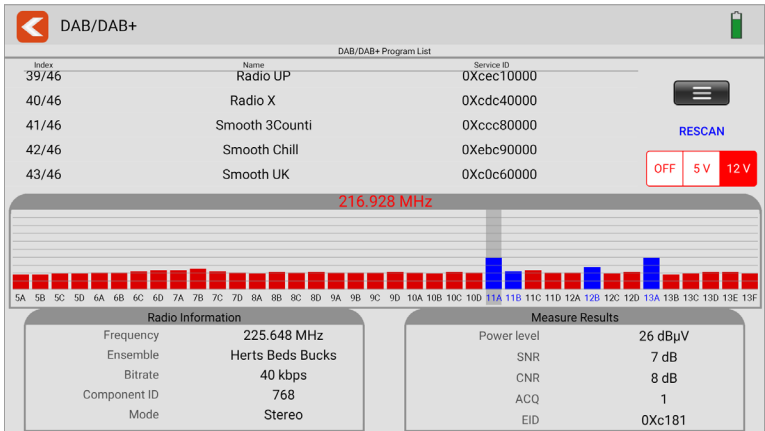

### Functions in DAB/DAB+ Mode

- Tap the RESCAN button to re-start a scan on all frequency channels
- Set antenna power output voltage via OFF/5V/12V segment
- Available programs are shown on the top of the screen with colour set to blue when the program is playing.
- Tap the blue bar to play/hear the program




Tap this icon or press [EXIT] to return to the previous menu



# 10. DiSEqC Monitor


This menu for DiSEqC monitoring can detect DiSEqC commands on the LNB input of the meter. This can be used to fault find DiSEqC issues from another meter or set-top box.

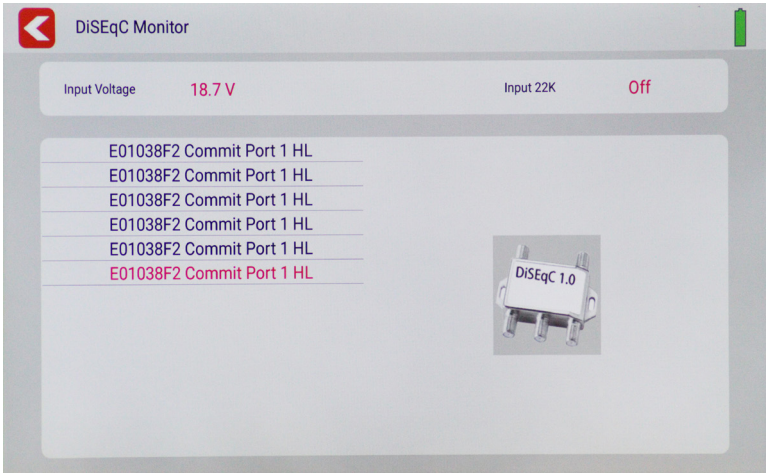

# 11. System Settings

## General Settings & Parameters

This menu allows the adjustment of general meter settings such as volume, brightness, attenuation etc and shows the current software version of the device.

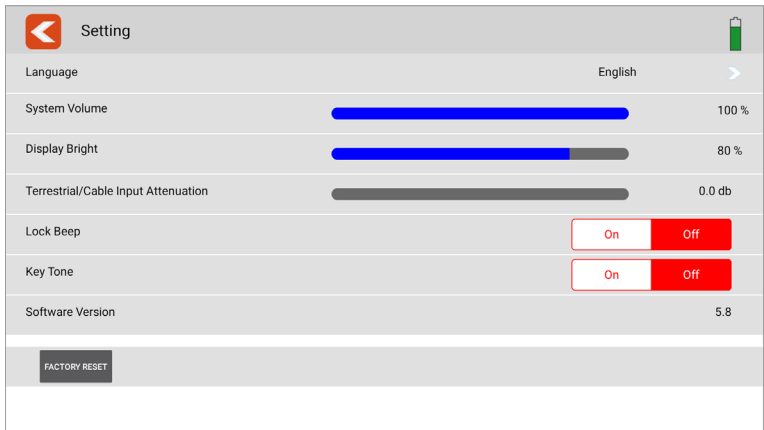



# 12. Help

From the main menu, tap the 'help' button to access this user guide



## 13. Memory


From the main menu, tap the 'memory' button to access the saved screenshots of the meter. From this menu, it is possible to edit the name of the screenshot, delete or copy to USB.

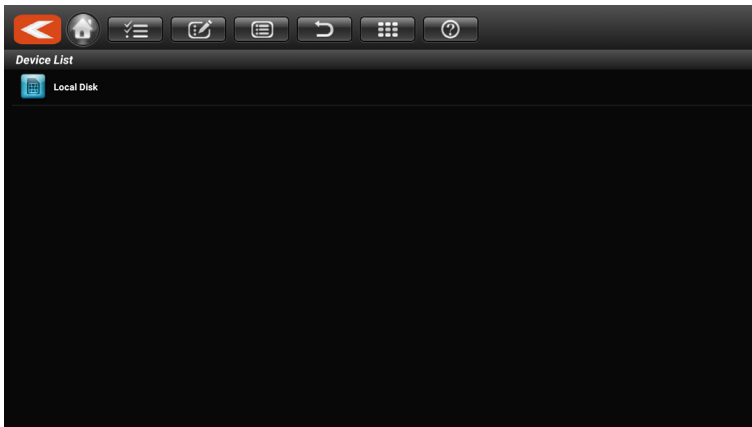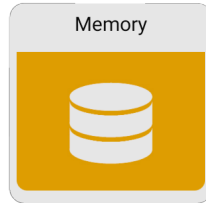

## 14. LNB/RF Overload


If an LNB or RF overload appears, a dialogue box will appear informing of the short or overload. Check the connections and once complete, tap 'YES' to try and lock signal again

# 15. Channel Scan & View

From the measurement screen in any mode, click  to perform a channel scan. Scan options include single channel, all channels or blind scan. The screen below will appear while the scan is carried out.



Once the scan is complete, the video can be viewed as below. Information on the channel is shown on the info bar below the video.

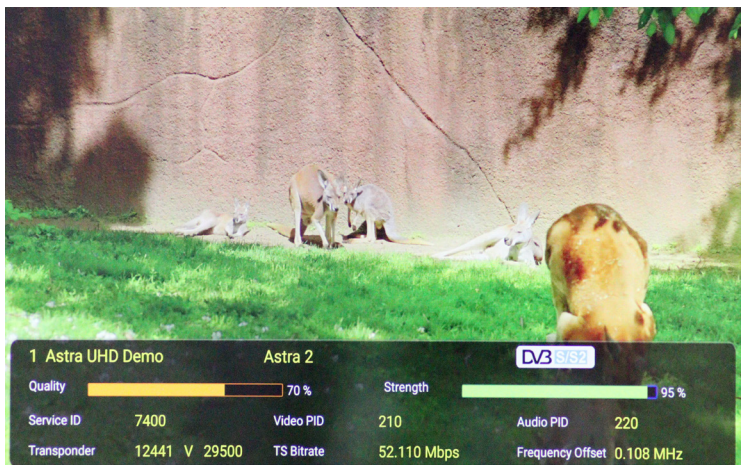

# 16. Technical Specifications

## DVB-S/S2

Identification	DVB-S	DVB-S2
Frequency Range	250MHz ~ 2300MHz	
Demodulation	QPSK	QPSK, 8QPSK
Code Rate	1/2, 2/3, 3/4, 5/6, 7/8,	1/4, 1/3, 2/5, 1/2, 3/5, 2/3, 3/4, 5/6, 8/9, 9/10,
Symbol Rate	2~45MSPS	
Input Impedance	75Ω	
Min.level in	35dBuV (noise)	
Max.level in	100dBuV	
LNB Power and Pol	Vertical 13V, Horizontal 18V,300mA	
Bandwidth	C/Ku-band selectable	

## DVB-T/T2

Identification	DVB-T	DVB-T2
Frequency Range	42MHz ~ 1002MHz	
Antenna Power	5V, 12V	
Carriers	2k, 4k, 8k	1k, 2k, 4k, 8k, 8k+E, 16k, 16k+EXT, 32k,32k+EXT
Guard Interval	1/4, 1/8, 1/16, 1/32	1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128
Code Rate	1/2, 2/3, 3/4, 5/6, 7/8	1/2, 3/5, 2/3, 3/4, 4/5, 5/6
Modulation	QPSK,16-QAM,64-QAM	16, 32, 64, 128, 256QAM
Bandwidth	6, 7 and 8 MHz	1.7,5, 6,7 and 8 MHz

## DVB-C/C2

Identification	DVB-C	DVB-C2
Frequency Range	42MHz ~ 1002MHz	
Symbol Rate	1.7~7.2	-----
Bandwidth	-----	6, 8MHz
Modulation	16, 32, 64, 128, 256QAM	16, 64, 256, 1024, 4096QAM

# 16. Technical Specifications

## 17. Declaration of Conformity

We, ANTIFERENCE LIMITED herewith declare that the HDMI extender kit complies with all essential requirements and any other applicable conditions set forth on directive 2014/30/EU.

According to the WEEE (Waste Electrical and Electronic Equipment) EU Directive, do not dispose of this product as household waste or commercial waste. Waste Electrical and Electronic Equipment should be appropriately collected and recycled as required by practices established for your country. For information on recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.

A full declaration document can be found on our website [www.antiference.co.uk](http://www.antiference.co.uk)



[www.antiference.co.uk](http://www.antiference.co.uk)



TECHNOLOGY... SINCE 1937

[www.antiference.co.uk](http://www.antiference.co.uk)