

ECOFLOW

SOLAR PANEL

Contact Us:
ecoflow.com

NA/LA/APAC/MEA: support@ecoflow.com

EU: support.eu@ecoflow.com

AU: support.au@ecoflow.com

In The Box



Protective Case
and kickstand




Solar Panel




Snap Hook
x 4



User Manual
& Warranty Card




Solar Charging Cable



MC4 Output Controller

How It Works




Solar Panel



Solar Charging Cable




XT60
INPUT PORT



EcoFlow DELTA
(Sold Separately)



EcoFlow RIVER
(Sold Separately)



Solar Panel



EcoFlow DELTA
(Sold Separately)




EcoFlow RIVER
(Sold Separately)




Your Solar Setup


1

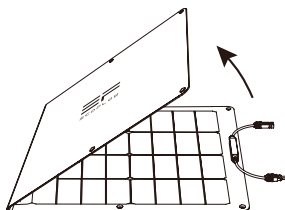


2

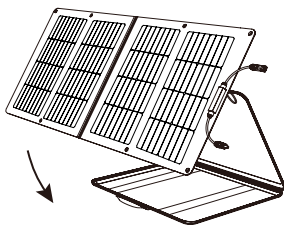

3

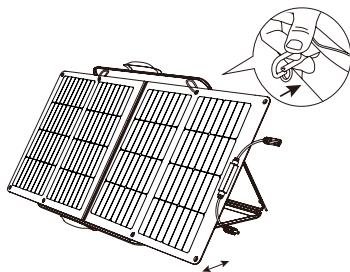


4

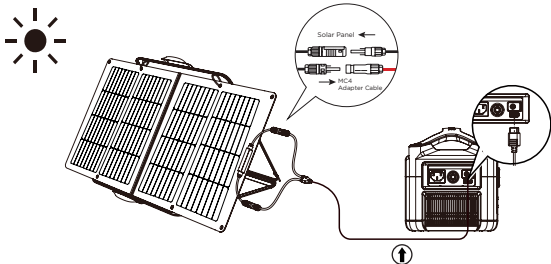


This cable can only be used for connection between solar panels and energy storage. It is prohibited to be used for interconnection between solar panels or other connection purposes.

5

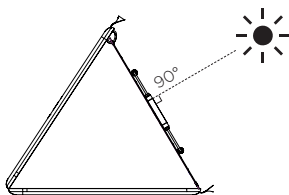


In order to increase the efficiency of the EcoFlow 160W Solar Panel, use it in direct sunlight, position it perpendicular to the sunlight, and make sure the solar panels are unobstructed.

6 Adjust the angle

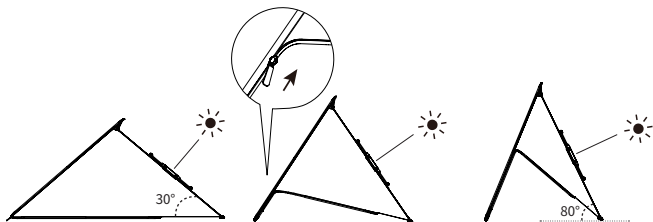

For improved charging results, the Protective Case can also be used as a kickstand to prop up the solar panel at a 30°-80° angle.

7

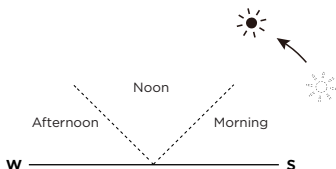


The kickstand feature should only be used before 10:00 am or after 2:00 pm. To use the product during the midday sun, simply place the solar panel flat on the ground.

Speed Up Solar Charging

Wire solar panels in parallel
(refer to the figure below)

1. Connect the positive poles of the two solar panels with the MC4 parallel cable and repeat the step for the negative poles.
2. Connect the parallel cable connectors (output side) with the MC4 connectors of the Solar Charging Cable (MC4 to XT60 cable) respectively.
3. Connect the XT60 connector on the Solar Charging Cable (MC4 to XT60 cable) to the XT60 port on the portable power station to recharge the unit.

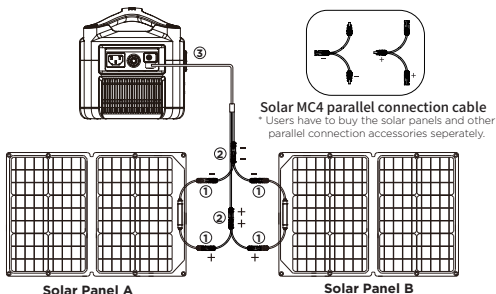


*For more information and methods about solar charging, please refer to the user manual of the specific portable power station.

Wire solar panels in series



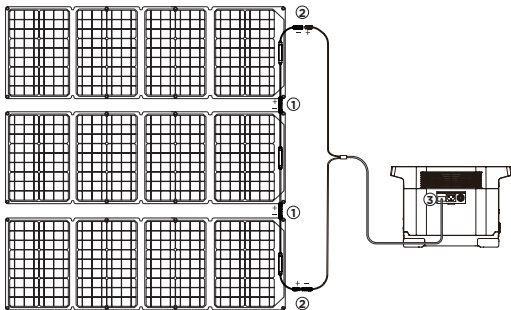


(refer to the figure below)






1. Snap the male connector of one solar panel into the female connector of the other respectively to wire the three solar panels in series.
2. Wire the two connectors that are unwired in step 1 with the Solar Charging Cable (MC4 to XT60 cable) respectively.
3. Connect the XT60 connector on the Solar Charging Cable (MC4 to XT60 cable) to the XT60 port on the portable power station to recharge the unit.



*For more information and methods about solar charging, please refer to the user manual of the specific portable power station.

Technical Specifications

160W Solar Panel
Rated Power: 160W(+/-5W)*
Open Circuit Voltage: 21.4V
Running Voltage: 18.2 V
Short Circuit Current: 9.6A
Running Current: 8.8A
Efficiency: 21%-22%
Cell Type: Monocrystalline silicon
Connector type: MC4
General
Solar Panel: Approx. 12.3 lbs(5.6KG)
Unfolded Dimensions: 26.9*62.6*1.0 in(68.5*159.0*2.5cm)
Folded Dimensions: 26.9*16.9*1.0 in(68.5*43.0*2.5cm)
Warranty: 12 months
Tested And Certified
    

60W Solar Panel
Rated Power: 60W(+/-5W)*
Open Circuit Voltage: 21.6V
Running Voltage: 18.2 V
Short Circuit Current: 3.5A
Running Current: 3.3A
Efficiency: 21%-22%
Cell Type: Monocrystalline silicon
Connector type: MC4
General
Solar Panel: 5.5 lbs(2.5KG)
Unfolded Dimensions: 21.1*32.4*1.0 in(53.5*82.2*2.5cm)
Folded Dimensions: 21.1*16.7*1.0 in(53.5*42.5*2.5cm)
Warranty: 12 months
Tested And Certified
    

*Standard Test Conditions:1000W/m2, AM1.5, 25°C

Temperature Coefficient Specifications

TKPower	- (0.39+/-0.02)%/k
TKVoltage	- (0.33+/-0.03)%/k
TKCurrent	+ (0.06+/-0.015)%/k